 


REMOTE CONTROL CAR FUNCTIONS AND REMOTE CONTROL BUTTON INSTRUCTIONS:

1. Move the vehicle and remote control switches to the ON position for automatic frequency matching. When preparing to turn on the remote control switch for frequency matching, ensure that the throttle trigger and steering wheel are in the neutral position without any operational intervention.
2. The vehicle has 2 gears for speed, which can be adjusted through the remote control buttons. The red indicator light on the remote control indicates a high speed gear of 100%, and the blue indicator light indicates a low speed of 70%.
3. If the vehicle is not driving in a straight line, it can be adjusted left and right using the bottom adjustment knob.
4. The ⑤ button on the remote control panel can achieve the effect of turning on and off the car lights. Click the ⑤ button to switch the light color, and double-click the ⑤ button to control the remote control car lights on/off or switch the light mode

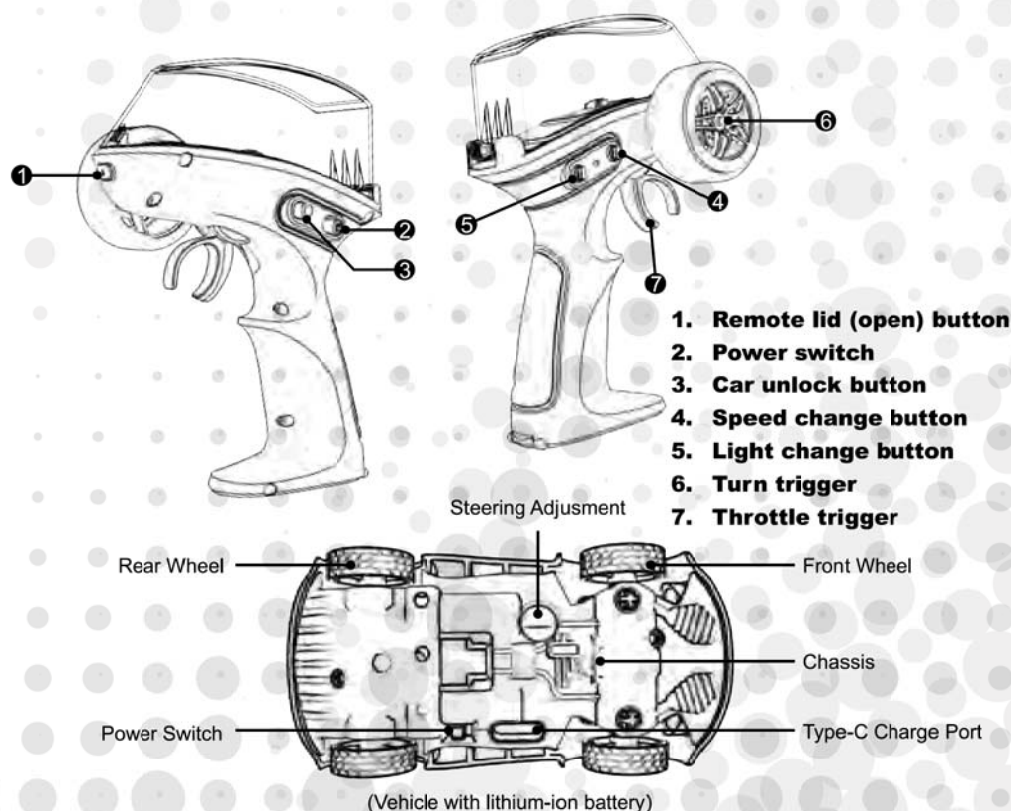 


OPERATION METHOD:

1. The maximum remote control distance is about 20 meters, exceeding this range will affect the sensitivity of operation
2. When fully charged, the vehicle can be used for 15-20 minutes.

OPERATING THE REMOTE-CONTROLLED CAR:

1. Pull the throttle trigger backwards to move the remote control car forward. The angle of the throttle trigger can control the forward speed of the remote control car.
2. Turning the steering wheel left and right can control the remote control of the car

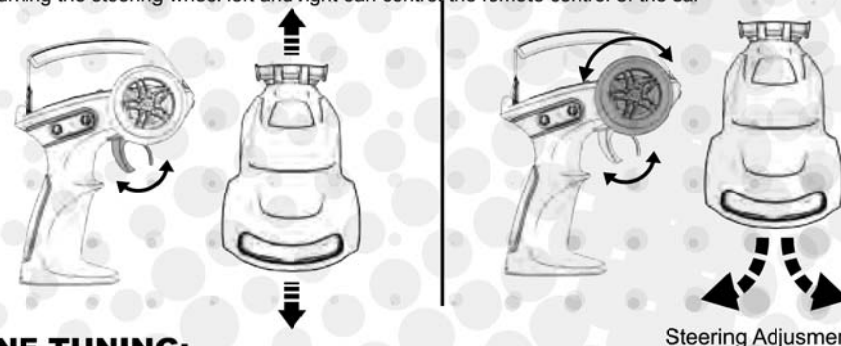

FINE TUNING:

 
If the vehicle deviates while driving in a straight line, turn the fine adjustment knob in the opposite direction to make adjustments. For example, if the vehicle deviates to the left, adjust the fine tuning knob to the right.



PRECAUTIONS FOR VEHICLE CHARGING:

Use provided cable to charge the vehicle through the matching Type-C charging cable. The charging time is about 30 minutes. If the vehicle indicator light goes out, it means that the vehicle battery is fully charged. Please unplug the charging cable in a timely manner and do not connect the charger for a long time. Before charging, it is necessary to ensure that the vehicle power switch is in the OFF state.

*During the use of the vehicle, if the steering response is slow, unresponsive, or the vehicle operation is unresponsive, and the lights continue to flash short, it indicates that the remote control vehicle has insufficient power and the vehicle power needs to be turned off for charging operation.

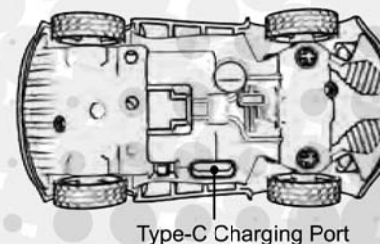

Be careful:

the power of the mobile phone charging head cannot exceed 25 watts. If a high-power mobile phone charging head is used to charge the vehicle, it is highly likely to damage the vehicle's circuit board and battery.

 
MATTERS NEEDING ATTENTION:

1. Charging must be operated by adults and children should not be allowed to charge on their own.
2. This product is only suitable for players over 6 years old.
3. The product does not have waterproof function, and the components should be kept dry at all times.
4. Ensure that all chemicals, small parts, and other electronic components are kept out of the reach of children.
5. The battery in the car is a 100mAh 3.7V lithium battery. Please do not puncture or forcefully remove the battery to avoid the risk of fire.
6. Do not use high-power mobile phone chargers to charge the vehicle, otherwise there may be safety hazards such as fire.
7. Before charging, check whether the wires, plugs. If any damage is found, stop using them until they are repaired.
8. When installing the battery on the remote control, please pay attention to the polarity.
9. The remote control car's internal battery is a 100mAh 3.7V high-performance lithium battery, and the remote control uses two 2 X AAA 1.5V batteries.

VEHICLE REMOVAL/FIXATION:

Vehicle removal: Press and hold the unlock/lock button, and push the vehicle forward.

Vehicle fixing: Press and hold the unlock/lock button, align the bottom of the vehicle with the remote control and push it in, then release the unlock/lock button to fix it.

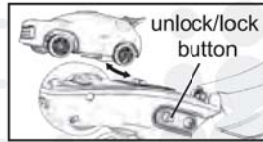

Common problems and malfunctions	Reason for malfunction and troubleshooting method
The battery power indicator light on the remote control does not light up or flashes slowly after successful frequency matching	1. Remove the AAA batteries and check if the positive and negative poles are connected incorrectly. 2. Check if the battery is charged. If the indicator light flashes slowly, it indicates that the battery is low and needs to be replaced with a new one. 3. The battery cover is not installed properly. Check if the battery cover is installed properly and tighten the screws of the battery cover after ensuring that it is installed properly.
The vehicle cannot travel in a straight line	1. Use the remote control steering adjustment button to make minor adjustments until the vehicle can walk in a straight line normally. 2. Check if there are any foreign objects stuck on the four wheels and clean them up in a timely manner.
After the vehicle is connected to the remote control, there is no operation on the remote control and the wheels are still running	Turn off the remote control and ensure that the throttle trigger and steering wheel are in the center position. Open the remote control again to recalibrate the frequency.
Vehicle steering failure or power outage, flashing lights	The vehicle is out of battery, please charge it promptly.
When the vehicle is in motion, there is a strong sense of resistance or it cannot be driven at all	1. Check if the four tires are displaced and stuck under the car. 2. Check if there are any foreign objects stuck on the four wheels and clean them up in a timely manner.
No response or delayed steering throttle when remotely controlling the vehicle	1. The remote control battery is low, replace the remote control battery in a timely manner. 2. If the vehicle exceeds the remote control range, ensure that the vehicle is remotely controlled within a range of 20 meters. 3. There may be strong signal interference sources nearby, it is recommended to change the location to operate the remote control car.

HYPER TOY CO.

ENGLISH INSTRUCTION MANUAL

6+

RC MICRO DRIFT

4-WHEEL DRIVE FULL PROPORTION

PRODUCT CONFIGURATION:

- 1 x RC car
- 1 x Remote control
- 1 x User Manual
- 1 x Type-C charging cable

NOT INCLUDED:

- 2 x AAA 1.5V batteries

BATTERY PRECAUTIONS:

1. It is recommended to use 2x 1.5V AAA alkaline battery inside the remote control.
 2. Do not mix alkaline batteries or rechargeable batteries.
 3. Ensure that the battery is inserted with the correct polarity.
 4. Do not short-circuit the power terminals.
 5. Battery replacement can only be carried out by adults.
- *After successful frequency matching between the remote control and the vehicle, if the remote control indicator light flashes slowly during the operation, it indicates that the remote control battery is low and needs to be replaced.

MAINTENANCE:

1. Avoid prolonged exposure to sunlight or heat for the product.
2. Check all screws for looseness.
3. When not in use for a long time, please remove the battery from the remote control and place it separately.

REMOTE CONTROL BATTERY ASSEMBLY:

 
1. Loosen the fixing screws.
2. Open the battery compartment and install 2 X 1.5V AAA batteries with the correct polarity (+/-).
3. Cover the battery cover and tighten the screws.



Step1



Step2

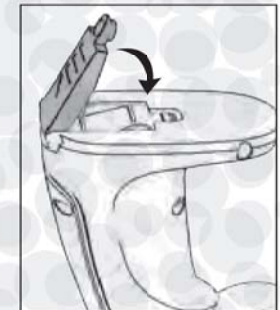

Step3



This device complies with the Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Safety Precautions:

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not submerge car or controller in water.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in a confined or crowded area and do not use people or animals as obstacles.
- Do not run your car into furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight.
- Dampness is harmful to interior components.



WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals.

This product contains a battery that is non-replaceable.

⚠ CALIFORNIA PROPOSITION 65 WARNING:
This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



⚠ WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

DISTRIBUTED BY:
HYPER TOY COMPANY
1-866-204-9737 Toll Free
177 Malaga Park Dr. Malaga, NJ 08328

HYPER TOY CO
help@hypertoys.com

© Copyright 2025. HyperToys

MADE IN CHINA

