


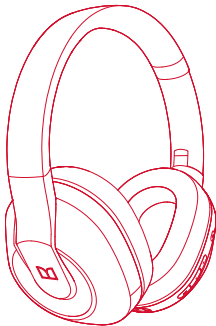


WIRELESS HEADPHONES



Quick Start Guide / 快速指南

Please read this Quick Start Guide carefully and keep it for future use.
请仔细阅读本快速指南并妥善保存以备将来使用。

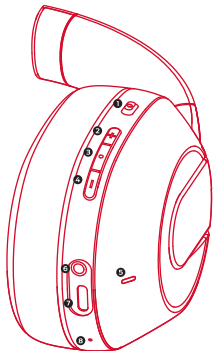

Product Content

Headphones

3.5mm audio cable

Type-C charging cable

User's manual

- ❶ Power On/Off
- ❷ Volume Up/Next Song
- ❸ Multi Function Button (MFB): Answer/Hang Up/Play/Pause/Last Number Redial...
- ❹ Volume Down/Previous Song
- ❺ Bluetooth Indicator
- ❻ 3.5mm Audio Port
- ❼ Type-C Charging Port
- ❽ Microphone

Power On/Off

Press **①** to turn on the headphones, ice blue indicator flashes and voice prompt “Power On” will be heard.

Note: Headphone will automatically connect to the last connected device.

Press **①** again to turn off headphones, red indicator flashes and voice prompt “Power Off” will be heard.

Pairing

When power on, press **①** , turn on Bluetooth function on the smart device and search for “Monster Storm XKH01” for pairing, when successful voice prompt “Connected” will be heard.

Note: First time “power on”, the headphone will enter pairing mode automatically.

Volume Control

Short press **②** to increase volume or **④** to decrease volume , a prompt tone will be heard when maximum is reached.

Phone Call

Answer/End Call: short press the MFB

Reject Call: long press the MFB about 2 seconds

Redial: quick double press the MFB to call the last dialed number.

Music

Play/Pause: during playback, press the MFB.

Backward: press ④ for 2 seconds for the previous song.

Forward: press ② for 2 seconds for the next song.

Voice Assistant (SIRI command)

Triple press the MFB (depends on mobile phone feature).

Reset Paired Device List

After power on, no Bluetooth device is connected, press and hold the Volume Up and Volume Down Button simultaneously for about 5 seconds.

Audio Cable Operation

The audio cable connects the device and the Bluetooth headset, and the headset automatically shuts down;

Unplug the audio cable, you need to reboot, and then follow the above steps to pair and connect.

LED Indicator Guide

Mode	Description	Voice Prompt
Power On	The ice blue indicator light is flashing	"Power On"
Power Off	Light out	
Pairing	Disconnected: red, ice blue indicator lights flashing alternately (automatically shuts down after 5 minutes)	"Pairing"
Connected	Ice blue LED flashes quickly	"Connected"
Charging status	Red indicator light on	
Charging completed	Light out	
Low battery alarm status	Red indicator flashes quickly	"Battery low"

Listen Responsibly

To avoid hearing damage, make sure that the volume on your music player is turned down before connecting your headphones. After placing headphones in/on your ears, gradually turn up the volume until you reach a comfortable listening level.

Noise levels are measured in decibels (dB), exposure to any noise at or above 85 dB can cause gradual hearing loss.

Monitor your use; hearing loss is a function of loudness versus time. The louder it is, the less time you can be exposed to it. The softer it is, the more time you can listen to it.

Get the most out of your equipment and enjoy great audio performance even at safe levels. Our headphones will allow you to hear more details at lower volume levels than ever before.

Learn how to establish a safe listening level and review other important safety guidelines from the Consumer Electronics Association at www.ce.org. Important information on how to prevent Noise-Induced Hearing Loss (NIHL) and a comprehensive list of which noises can cause damage can be found on the Deafness Research Foundation's website, www.drf.org.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID:2A8PV-QSMXKH01

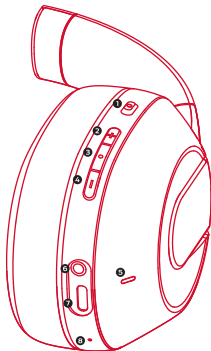

产品概述

耳机

音频线

充电线

快速指南与保修单

- ❶ 开机/关机按键
- ❷ 音量加按键,下一曲目
- ❸ 多功能按键 (MFB按键) (接听/挂断/播放/暂停/末号重拨/呼叫SIRI...)
- ❹ 音量减按键,上一曲目
- ❺ 蓝牙指示灯
- ❻ 音频线接口
- ❼ 充电Type-C插口
- ❽ 麦克风

电源开/关

关机状态下,拨动开关机键,冰蓝色指示灯闪烁,同时有“Power on”提示音,耳机开机。开机状态下,拨动开关机键,红色指示灯闪烁,同时有“Power off”提示音,耳机关机。

配对

拨动开机按键,开启智能设备蓝牙并搜索“Monster Storm XKH01”耳机进行配对,点击连接,当配对成功,你会听到“Connected”。

注意:首次使用并开机时,耳机将自动进入配对模式。

本产品有蓝牙记忆功能,再次使用只需开启耳机和设备,会自动回连

音量控制

调低音量:在音乐播放状态下,短按音量减键,最低音量时有提示音;

调高音量:在音乐播放状态下,短按音量加键,最高音量时有提示音。

通话

接听/结束通话:短按MFB键;

拒绝来电:长按MFB键约2秒;

末号重拨:双击MFB键,会重拨最后一个通话的电话号码。

音乐

播放/暂停:短按MFB键;

上一曲:长按音量减键2秒;

下一曲:长按音量加键2秒。

语音控制功能(呼叫SIRI)

三击MFB按键(手机支持此功能)

音频线操作

音频线连接设备和蓝牙耳机,耳机自动关机;
拔开音频线,需要重新开机,再按照以上步骤配对连接即可。

LED 指示灯指南

模式	描述	声音提示
开机	冰蓝色指示灯闪烁	“Power On”
关机	指示灯熄灭	
配对	未连接:红冰蓝指示灯交替闪烁 (等待时间5分钟,超时自动关机)	“Pairing”
连接	连接成功:冰蓝色指示灯闪烁	“Connected”
充电状态	红色指示灯亮	
充电完成	指示灯熄灭	
低电报警状态	红色指示灯快闪	“Battery low”

为您的听力负责

为避免听力受损,在接耳机前请先确保调低音乐播放器的音量。戴好耳机后,再慢慢将音量调整到适宜的水平。噪音位准计量单位为分贝 (dB)。曝露于 85 dB 或更高噪音位准环境可能造成听力逐渐丧失。监控使用情况;听力丧失是噪音太大加以时间双重作用的结果。声音越大,越要减少曝露在其中的时间。声音越柔和,就可以听更久一些。这个噪音位准 (dB) 表对一些常听到的声音以及这些声音可能会造成的听力受损情形做了比较,并依序排列。善加利用您的设备,在安全范围也能享受最棒的音效。我们的耳机使您以前所未有的低音量捕捉到更多音效细节。请透过消费电子协会网站 (www.ce.org) 了解如何建立安全收听等级及检视其他重要的安全指引。如何防止噪音性听力损失 (NIHL) 重要资讯及何种噪音会造成听力受损的完整清单,请参考听障研究基金会网站:www.drf.org。

电池使用注意

*如果电池更换不当,则存在爆炸危险。电池只能用相同类型或同等类型的电池更换。不建议未经许可更换电池,但可以退回制造商进行更换。

*电池[电池组或电池组合]不得暴露在照明,烘烤或类似过热的环境中。