 


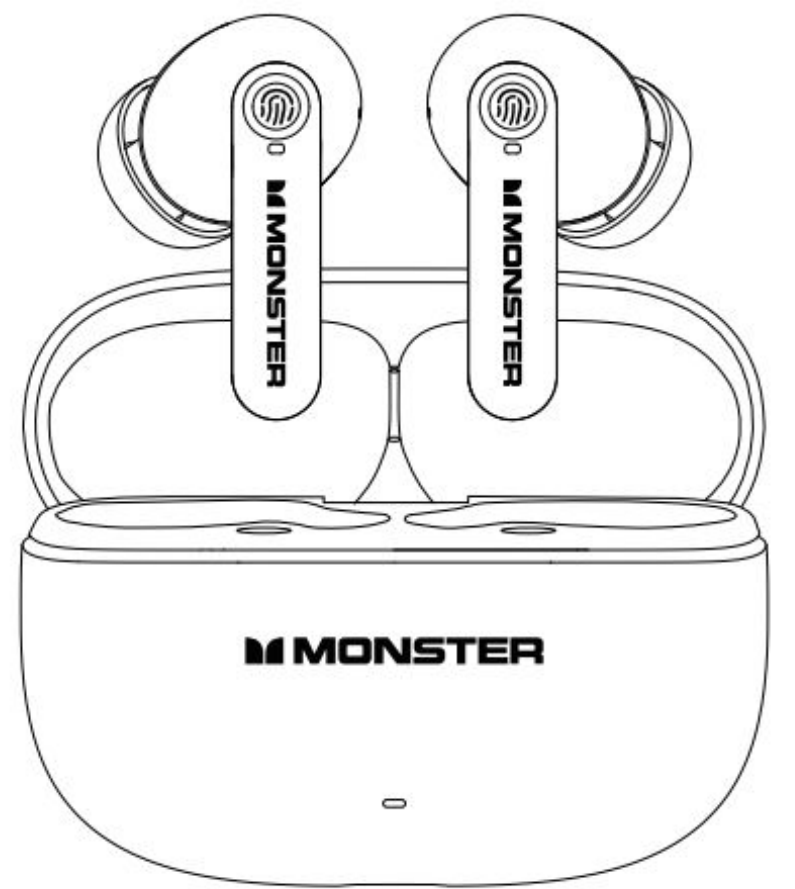

Monster Airmars XKT27

True Wireless Bluetooth headphone instruction manual


Product parameters

• Bluetooth version	V5.4
• Transmission distance	10m
• Driver diameter	φ10mm
• Driver impedance	32Ω±15%
• Sensitivity	96±3.0dB
• Frequency response range	20Hz-20kHz
• Battery capacity (charging case)	300mAh 3.7V
• Battery capacity (Headphone)	40mAh 3.7V
• Charging time (charging case)	≈1.5 hours
• Music playtime (headphone)	≈6 hours
• Music playtime with charging case	≈20 hours

Packing list


	Headphone *2		Charging Case *1
	Silicone Ear Tips S *2 Silicone Ear Tips L *2		Type-C Charging Cable *1
	Instructions Manual *1		

 Product Schematic Description

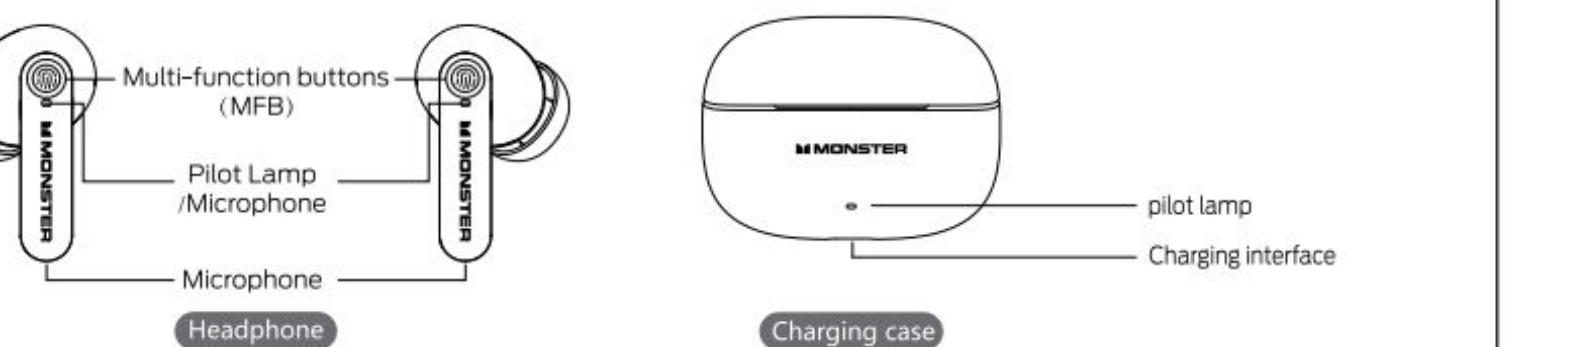

Charge the charging case

 Connect the charging case to the 5V power adapter with Type-C charging cable.

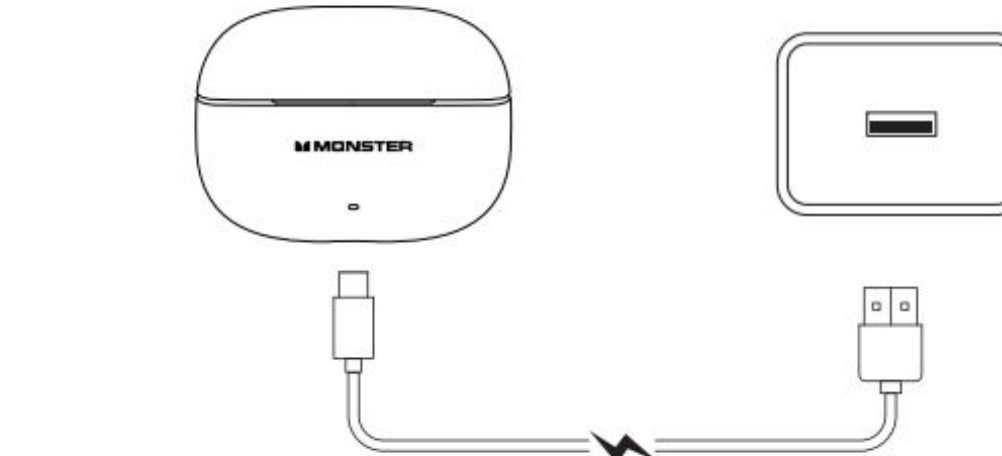

Rated input: 5V = 40mA(Headphone) Rated input: 5V = 200mA (charging case)

Indicator guide

Mode	Describe	Sound prompt
Power On	The ice blue light of the headset flashes 3 times	"Power on"
Power Off	The orange indicator of the headset is on for 1S and off	"Power off"
Pairing	The headphone's ice blue and orange lights flash alternately	"Pairing"
Connected	Headphone light off	"Connected"
Disconnected	The headphone's ice blue and orange lights flash alternately	"Disconnected"
Low Battery	Headphone orange light flashing fast	"Battery low"
Headphones placed in charging case	The orange light of the headset keeps on	—
Charging case low power	The ice blue indicator light on the charging case flashes and goes off	—
Charging case charging	The orange indicator light on the charging case is flashing	—
Charging case fully charged	The orange indicator light on the charging case is constantly on	—

Product operating instructions

1. Power on

Method 1: Open the charging case cover and remove the headphones. The headphones will automatically turn on.

Method 2: Press and hold the function touch button for 2 Seconds to turn on the headset.

2. Power off

Method 1: Put the earphones back in the charging case and close the charging case cover and turn off the earphones.


Method 2: If the connection is not successful after more than 3 minutes, the headphones will automatically shut down.

3. Pairing

Step 1: Open the charging case cover and remove the headphones. The headphones will automatically turn on and pair;

Step 2: Search and click for "Monster Airmars XKT27" on the bluetooth list of the smart device, and when connection is successful, "connected" will be heard.

 * Headphones will try reconnecting to the device within 3 minutes when connection is lost.

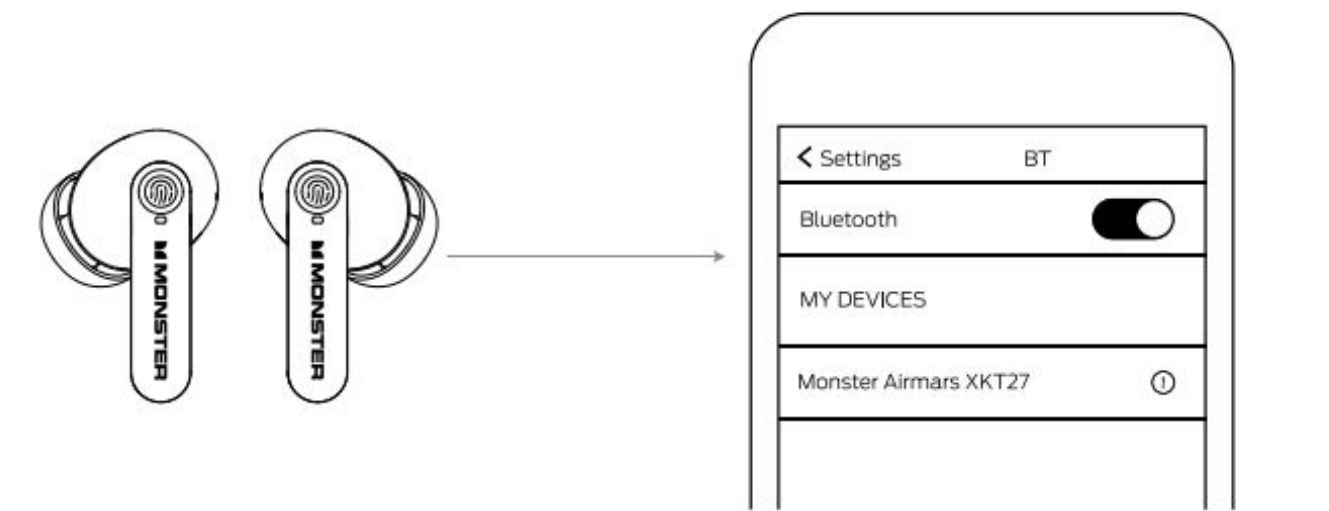

Note:

* Fully charge the headphones and power off before an intended not-in-use period.

* Unplug the charging cable after charging.

Operation

Normal



- Voice Assistant: Press and hold for 2 seconds for the left headphone MFB
- Volume up: Click on the right headphone MFB
- Volume reduction: Click on the left headphone MFB

Music playback



- Pause/Play: Double click on the left/right headphone MFB
- Previous track: Triple tap left headphone MFB
- Next track: Three clicks on the right earphone MFB

Phone



- Answer: Double click on the left/right headphone MFB
- Hang up: Double click on the left/right headphone MFB
- Reject: Press and hold for 2 seconds for left/right headphone MFB

Music/Game/Transparency /ANC switching: Device connected



- Press right MFB for 2 seconds to enter Game mode
- Press right MFB for 2 seconds to enter Transparency mode
- Press right MFB for 2 seconds to enter ANC mode
- Press right MFB for 2 seconds to enter Music mode

Restore Factory settings

Mode 1: Any earbud disconnect with the Bluetooth Device when turn on, click the MFB 5 times to clear the previous Pairing information and turn off.

Mode 2: Power-on Connection Status: Tap the left and right headset five times, and hold down 10S within 3S to clear the pairing between the headset and Bluetooth device. Power off after message.

Precautions

1. After the charging box is opened, the headphones automatically turn on, pair, and connect; Put the headphones into the charging box, close the cover, charge the headphones, and turn them off.

2. Charging every 15 days will extend battery life when not in use often. Cleaning off dirt on the charging contacts by cotton swabs with alcohol will maintain a good Contact for charging.

3. Keep battery (battery pack) away from inflammables or excessive heat such as direct sunlight. Do not disassemble, impact extrusion or put into the fire. If severe swelling occurs, do not continue to use. Do not expose to high temperatures. Do not use after soaking water.

4. Intermittent is normal during play back for wireless products due to environmental factors, device brand, users' behavior, etc.

Warnings

- Do not use headphones at high volume for an extended period of time.
- Keep the headphones away from dust and water.
- Do not disassemble the headphones and accessories, otherwise warranty will be voided.
- Keep headphones away from any impact or vibration.
- Do not use any chemical solvents or cleaning agent on the headphones.

Name of the Parts	Hazardous Substances					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Housing	○	○	○	○	○	○
Loudspeakers	○	○	○	○	○	○
PCBA	X	○	○	○	○	○
Accessories	X	○	○	○	○	○

This table is compiled according to SJ/T 11364.

O: Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

FCC Statement

This Equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide Reasonable Protection against Harmful Interference in a residential Installation. This Equipment generates uses and can radiate radio Frequency Energy and, if not installed and used in Accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2A8PV-QSMXKT27

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Environment Friendly Use Period (EFUP)

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical products will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User information

User name		Email	
Contact number		Postal code	
Mailing address			

Product information

Product name		Product number	
Product barcode / Serial number / Batch number			

Vendor information

Name	
Address	
Contact number	Postal code
Fecha de venta	Invoice number
Nota	

