 


X7 Wireless Earphones User manual

 
Imported Wireless 5.4 chips

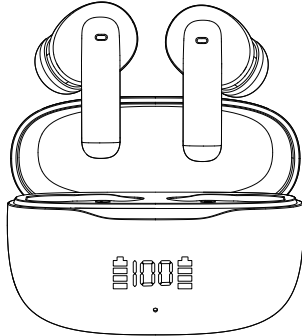

Compatibility:

This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android/Windows Phone), tablet PCs, smart watches, notebooks and desktop computers.

Product details:

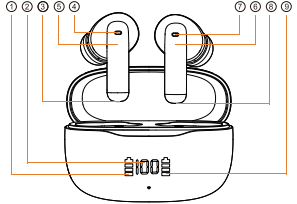

- ① ⑨ Earphone digital display
- ② charging case digital display
- ③ ⑧ Earphone charging port
- ④ ⑦ Earphone indicator
- ⑤ ⑥ Touch Button

Usage:

For the Best Audio experience, it is recommended your right size silicone earcaps and, please put your cellphones in the same side of left earphone during outdoor.




L




R

Powering ON:

 Method 1: Take out the earphones from the charging case, and they will "power on"



Method 2: When the earphones are OFF, keep the touch button of both earphones for 3-5 seconds. The LED light flashes once and with a sound prompt: "power on".

 

Powering OFF:

Method 1: The earphones will switch off when put into the charger case.

Method 2: Keep the earphones touch button pressed for 3-5 seconds, until the Blue LED flashes with a sound prompt: "power off".

Note: If the earphones were disconnected with the device, the earphones will be power off automatically after 5 mins.

 
Stereo Mode:

- ① Taking the earbuds out of the charging box, they will auto power on. After a few seconds, the left and right earbuds will auto connect each other. When the TWS earbuds are

connected to each other, the LED light will flash quickly. If they connect successfully, the earbuds LED light will flash slowly.



- ② Open the bluetooth devices page inside settings. Search for "X7" and select it to pair; the Earphone lights be off after the earphones connected with device.

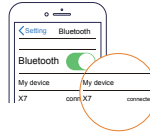

Note: If the earphones connected the device once, and the bluetooth functions of device was open, the earphones will be reconnected with last device automatically.

Play Music:

- ① Touch the button once to Pause/Play.
- ② Keep press the touch button for 1 seconds and release it ("L" for previous song, "R" for next song)
- ③ Touch the button twice to adjust the volume ("L" for decreasing, "R" for increasing)

Voice Assistant:

Touch the button three times to activate the Siri voice assistant

Calling:

- ① When a call comes in, short press one of the touch buttons in order to answer the call or long press it to reject it.
- ② During a phone call, short press the earphone button to end the call and the earphone will resume its previous working state.
- ③ During a call, the volume can be controlled via the mobile phone.
- ④ Stereo mode: both ears have voice.

Specifications:

- Bluetooth version: V5.4
- Voltage rating and energy capacity: 3.7V/400mAh
- Battery capacity: 2*3.7V/40mAh
- Earphone Charge time: Around 1.5hour
- Music playing time: About 8h
- Bluetooth profiles supported: HFP/A2DP/AVRCP
- Operating frequency: 2.40 GHZ-2.48 GHZ
- RF Sensitivity: -92dBm
- Working temperature range: -10+50°C
- Maximum transmission range: ≤15M

Packing list:

Earphones *2

USB cable *1

Earcaps*4(L\ S)

Charging case *1

User manual *1

Important:

- ① Host device is a connection between second device and your mobile phone. It is normal status under high power consumption.
- ② When not connected to any device, the earphones will power off automatically after 5 minutes.
- ③ On iPhones the battery level of the earphones will be displayed in real time.
- ④ When the earphones and the charger case are not used for long periods of time, it is recommended to keep them a dry place and to recharge them at least every 2 months.
- ⑤ It is recommended to gently wipe the spring needle and copper column with a cotton swab on a regular basis to achieve a cleaning effect. Never use liquids to clean the earbuds.



Note: When the earbuds are not charging, you can use a cotton swab to gently wipe the spring needle and copper post.

Fault:

Fault	Cause	Solutions
Can't power on	Earbuds are low battery/ Crash	Charge the Earbuds/Keep the earphones touch button pressed for 8 seconds
No charging indication	The Earbuds are not well put into/ There are foreign objects in the spring needle and copper column	Adjust Earbuds position/ Clean the spring needle and copper column
Automatically shut down	Earbuds are low battery	charge the Earbuds
The Earbuds have an echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The Earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position, or move closer to the mobile phone
Small sound	wearing Earbuds incorrectly or the volume is too low	Adjust the Earbuds position or the mobile phone volume
Signal intermittent	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R Earbuds	Put the earphones into the charger case

Warranty card

Warranty period:
12 months from the date of purchase

Free of charge service:

During the warranty period, if there is any breakdown caused by the products' build quality, please contact the seller and provide this warranty card together with the sales invoice. The product will be repaired or replaced by a new one.

The warranty does not apply under the following circumstances:

- 1, The product label is broken.
- 2, Damage caused due to the product being disassembled by a non-authorized repair agent.
- 3, Damage caused by external force or when there is visible deformation of any of the external parts.
- 4, The product has been improperly used or stored.
- 5, Damage or breakdown caused by force majeure.
- 6, Other situations similar to the above.

Customer service information:

Customer Name	
Customer Phone	
Customer Address	
Model Number	
Purchase Date	
Dealer	
Invoice number	

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.