

Diagram illustrating the components and controls of the HP DesignJet 5000C printer:

- Intercom Button
- Microphone
- Screen
- Speaker
- Paper Compartment Release Button
- Lock
- Paper Compartment Release Button
- Type-C Port
- Power Button
- Rear Button
- Charging Indicator
- Official Sliders
- User Manual

Product Name: Ogneer Magic Box
Model Number: SC-A119
FCC ID: 2ABWY-SC-A119
Resolution: 300dpi
Power: 5V=1A
Port: Type-C
Battery Capacity: 1500mAh
Weight: 0.84 pound
Dimensions: 3.9"3.5"3.3inch
Network Support: 2.4 GHz Wi-Fi

STEP1: Slide the release button backward to unlock the paper compartment cover.

Note: Do not lift upward with excessive force.

STEP2: Hold the small protrusions on both sides of the paper compartment with two fingers and pull firmly upward to open the cover.

Sticker side facing forward, pull out a small portion of the paper, close the cover, and ensure both sides are securely latched. This completes the installation of the sticker roll.

White side of thermal paper

Note: Make sure the white thermal printing side faces up when loading the paper (the blue side is the backing layer and should face down). If the paper is loaded incorrectly, the print will be dark.

Power On: Press and hold the **Power Button** for 3 seconds to turn on. The screen will light up, indicating it is on.

The diagram consists of two parts. The top part shows the back of the device with a circle and an arrow pointing to the power button, which is located near the bottom center. The bottom part shows the front of the device with the screen lit up, displaying the 'Ogineer' logo.

STEP1- Connect the printer to your smartphone via Bluetooth.




STEP2- Once connected, your Magic Box is ready to use.



STEP3- Print a photo: Tap "Print Photo," choose a photo, crop it, select either "Cartoon" or "Original" style, then print.



STEP4- Choose AI voice-to-image style: Tap "For characters style Settings" and select your preferred style.

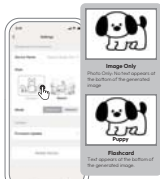

AI Voice-to-Image

Press and hold the top button, say your prompt (for example, "Generate a photo of a puppy"), then release the button.

Press to speak



Speak your desired Pattern



AI draws & prints



Image-generation time

AI image-generation process: Image-generation may take about 1 minute. Please wait patiently.

Human-image techniques

Cartoon-style images may not be generated due to copyright or technical limitations. Thank you for your understanding.

Bottom text rule

Only one English word can appear at the bottom of the generated image.

Warranty & Return Policy

Ogee provides a 12-month warranty from the delivery date against defects in material or workmanship under normal use. Defective products will be repaired/replaced free of charge if the issue arises from manufacturing flaws.

Exclusions

Damage from misuse, improper installation, unauthorized modifications, third-party components, or force majeure events.
Consumables (e.g., batteries, paper, adhesives, photoresist, ink, and oil of cartridges, and refills), or accessories from third-party suppliers.
Non-Ogee branded accessories, tampering, or MCG items.
Crash-related damage (e.g., Wi-Fi loss).
Unauthorized power plug.

Claim Process

Contact Customer Support (Support@ogee.com) or authorized service for troubleshooting and return instructions. The replacement process must be completed within 30 days of the date of purchase. The replacement process must be completed within 30 days of the date of purchase. The replacement process must be completed within 30 days of the date of purchase.

Refunds & Returns

Refunds are available within 30 days of receipt. Returns must be made within 30 days of receipt. Returns must be made within 30 days of receipt.

Helpful Tips

Thermal printing uses a chemical reaction to create images against heat-resistant paper. It is not permanent.

1. Do not expose the printed material to direct sunlight or high temperatures (e.g., inside your car) for extended periods.

2. After printing is complete, do not touch the print head directly. Thermal prints from overheating.

3. The paper tear-off blade is sharp. Please be careful not to touch the print head.

4. Please insert or unplug the charging cable gently to avoid damaging the port with excessive force.

5. For permanent storage, it is recommended to take a photo for digital backup or scan the print for archiving.

RF warning

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference, including interference from other authorized devices.
This printer has been tested and found to comply with the above Class B digital device limits. However, there is no guarantee that interference will not occur in a particular installation. If the printer does cause interference to radio communications, please turn it on and off to determine if the printer is the cause of the interference. If you are using the printer in a residential area, you may be asked to reduce the power or to stop using the printer.

Safety and Precautions

1. Do not charge or use the printer in places with high temperatures, such as near temperatures, high humidity, or excessive dust.

2. After printing is complete, do not touch the print head directly. Thermal prints from overheating.

3. The paper tear-off blade is sharp. Please be careful not to touch the print head.

4. Please insert or unplug the charging cable gently to avoid damaging the port with excessive force.

5. When charging is complete, it is recommended to unplug the charging cable. Improper charging may cause damage to the print head.

6. Do not touch the print head with hard objects.

7. Regularly clean the print head with a soft cloth to prevent carbon buildup, which can lead to poor print quality.

8. Place the product on a stable surface where it will not be disturbed by your hand.

RF exposure warning

The equipment complies with radio frequency limits set forth in the FCC rules. The equipment should be installed and operated with minimum distance. This distance is between the station and your body.

Warning

There is a risk of explosion if the battery is replaced with an incorrect type. Be sure to dispose of used batteries according to the instructions.

Caution

The paper tear-off blade has sharp edges. Please be careful not to touch it to prevent cuts.

Caution: Hot component

After printing is complete, do not touch the print head directly to avoid burns from overheating. Wait for half an hour after turning off the power before touching the print head.

Warning: Strangulation hazard

Choking hazard for children under 3. Keep this charging cable out of reach of children (more than 5 ft / 1.5 m away).

Cleaning and Maintenance

Please make sure the printer is turned off before performing any cleaning or maintenance.
If you encounter issues such as blank lines, blurry print, or missing characters, it may be caused by the print head. Please follow these steps:
1. If you have just finished printing, wait for at least 30 minutes for the print head to cool down completely.
2. Use a cotton swab dipped in alcohol or a print head cleaning pen to gently wipe the surface of the print head about 5 times to remove any dust and stains.
3. Wait 5-10 minutes for the alcohol to evaporate completely. Then, the cleaning is done, and you can continue using the printer.

Thermal print head: Please do not touch it.



Warning: The print head is a HOT component!

Touching it when hot can cause burns. Please wait for at least 30 minutes after turning off the power.

Ogee

Magic Box Manual



RoHS UK CE

RoHS UK CE