

Quick Start Guide

GTW8103


SKU1 : GTW8103(Standard)

Appearance



- ①Front camera
- ②Front camera indicator
- ③Light sensor
- ④Turn on the rear camera flash
- ⑤Volume down
- ⑥Volume up
- ⑦Brightness down
- ⑧Brightness up
- ⑨Home
- ⑩Power indicator
- ⑪Hard disk indicator
- ⑫Battery indicator
- ⑬35 pogo pins
- ⑭Power

Rear View

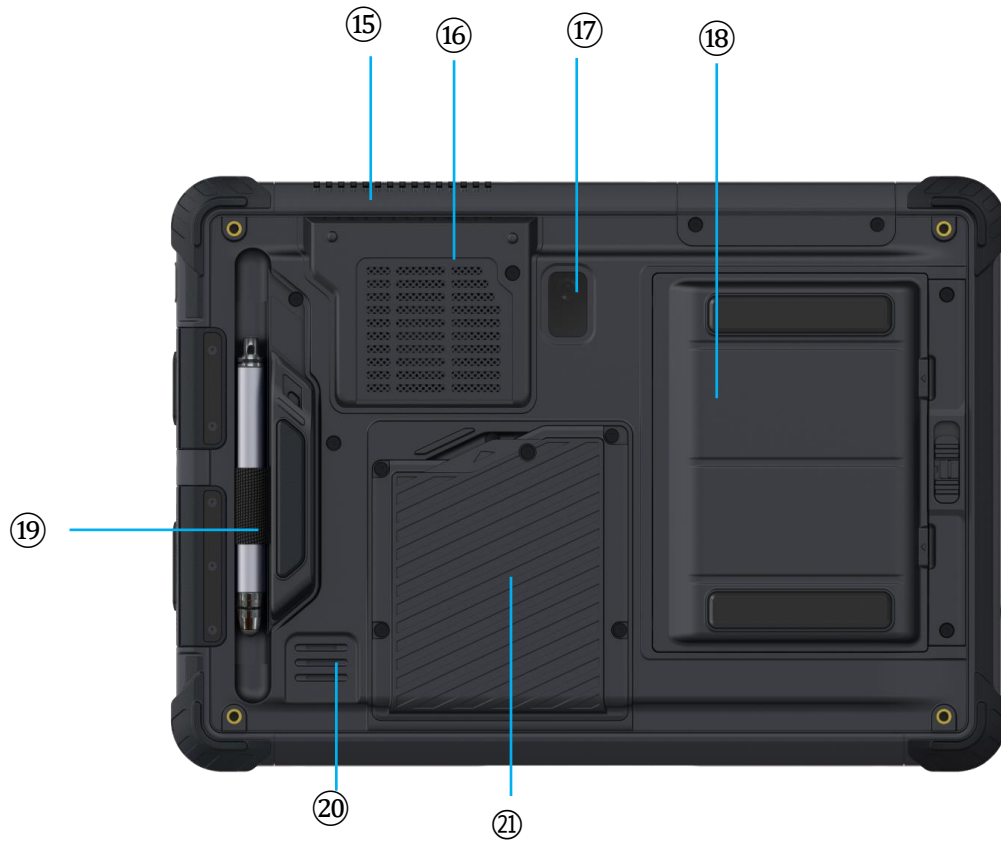

⑮Heat emission hole

⑯Fan

⑰Rear camera&Flash

⑱Battery

⑲Stylus

⑳Speaker


㉑Optional: 4G Module

Built-in: SIM Slot

Left Side View



Right Side View

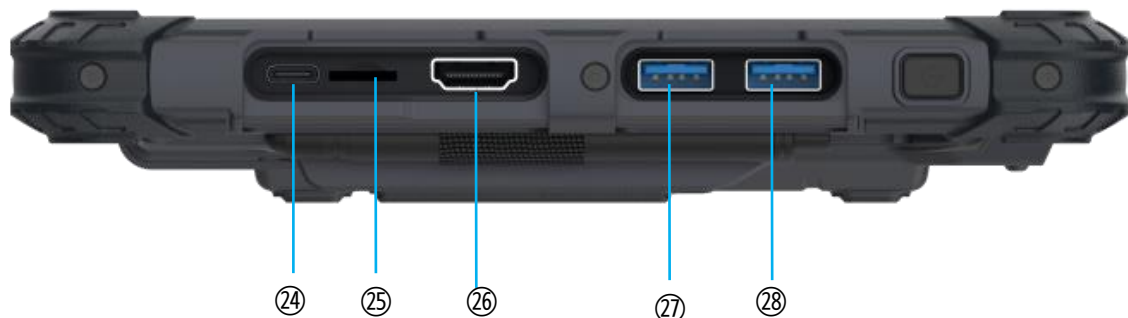

- ②②DC charging
- ②③Type-C Charging
- ②④USB 3.2 Type-C
- ②⑤MicroSD card slot
- ②⑥HDMI
- ②⑦USB 3.2 Type-A
- ②⑧USB 3.2 Type-A

Install a SD Card



SD Card Slot




SKU2 : GTW8103(Handle)

Appearance



- ①Front camera
- ②Front camera indicator
- ③Light sensor
- ④Turn on the rear camera flash
- ⑤Volume down
- ⑥Volume up
- ⑦Brightness down
- ⑧Brightness up
- ⑨Home
- ⑩Power indicator
- ⑪Hard disk indicator
- ⑫Battery indicator
- ⑬35 pogopins
- ⑭Power
- ⑮Handle

Rear View

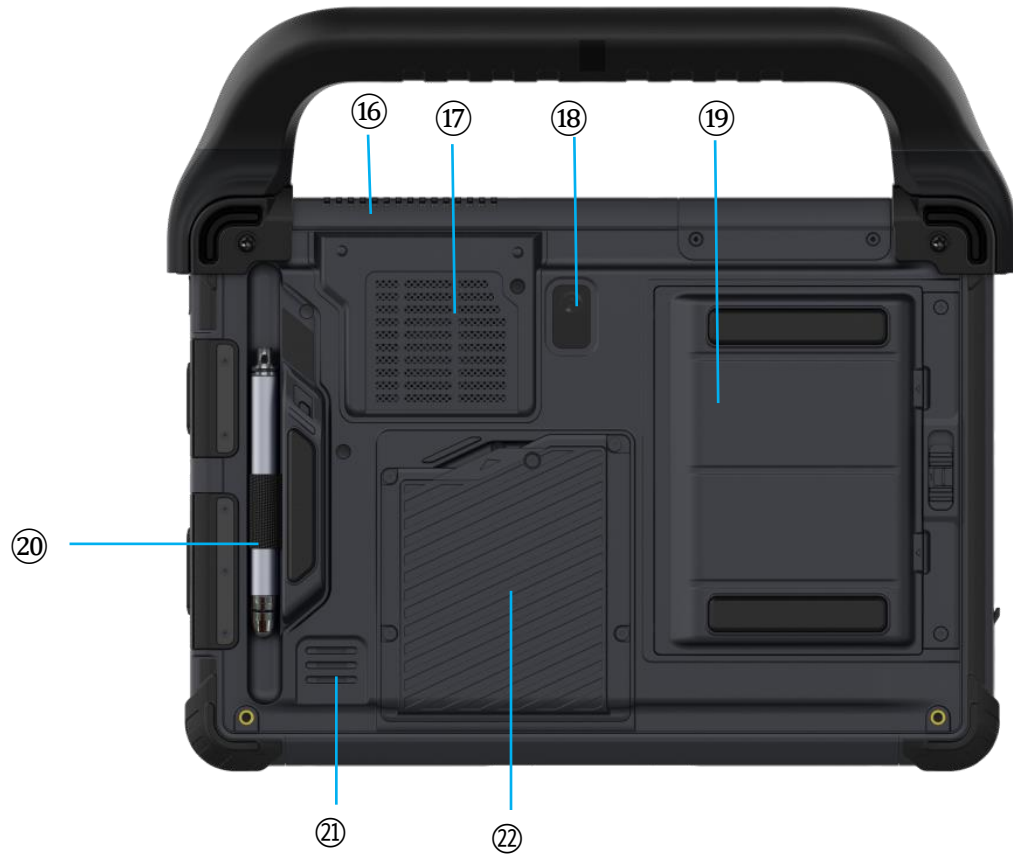

①⑥Heat emission hole

①⑦Fan

①⑧Rear camera&Flash

①⑨Battery

②⑩Stylus

②⑪Speaker

②⑫Optional: 4G Module


Built-in: SIM Slot

Left side view



Install a SD card

Right side view

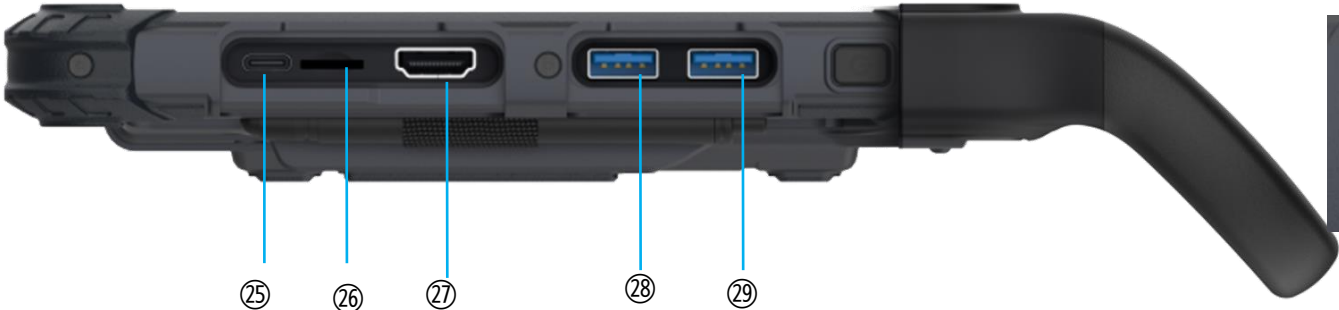

- ②③DC charging
- ②④Type-C Charging
- ②⑤USB 3.2 Type-C
- ②⑥MicroSD card slot
- ②⑦HDMI
- ②⑧USB 3.2 Type-A
- ②⑨USB 3.2 Type-A



SD Card Slot




SKU3: GTW8103(RJ45A)

Appearance



- ①Front camera
- ②Front camera indicator
- ③Light sensor
- ④Turn on the rear camera flash
- ⑤Volume down
- ⑥Volume up
- ⑦Brightness down
- ⑧Brightness up
- ⑨Home
- ⑩Power indicator
- ⑪Hard disk indicator
- ⑫Battery indicator
- ⑬35 pogopins
- ⑭Power

Rear View

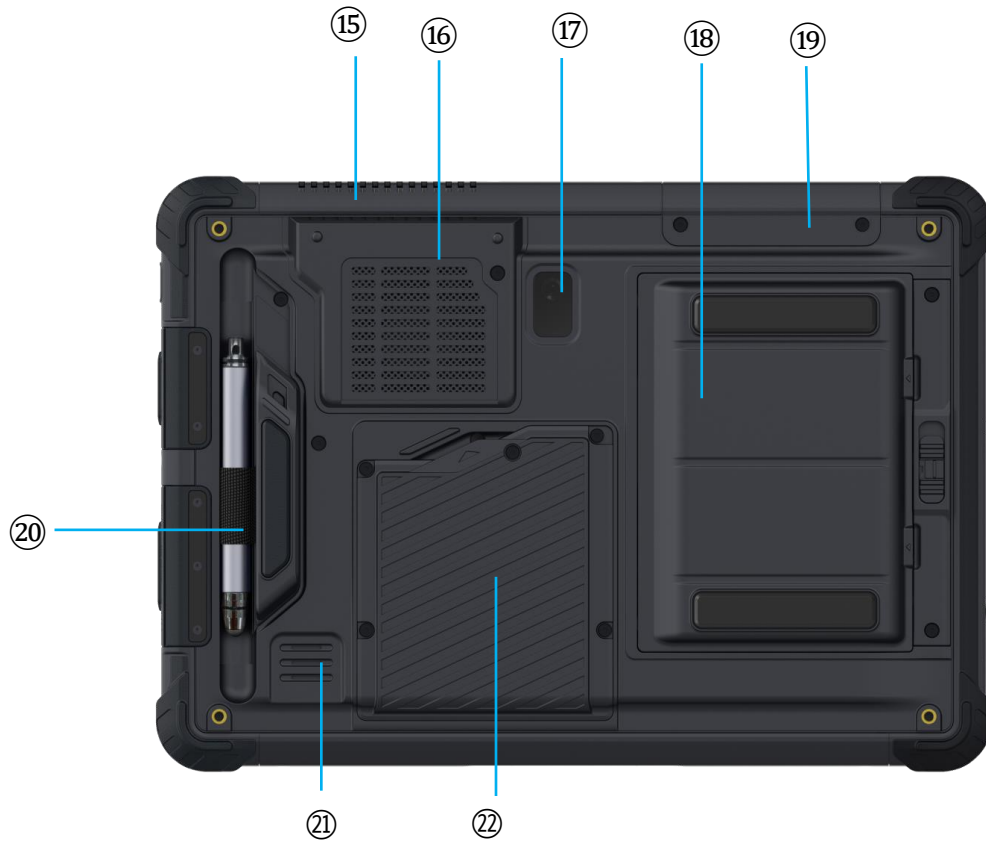

⑮Heat emission hole

⑯Fan

⑰Rear camera&Flash

⑱Battery

⑲RJ45+USB2.0

⑳Stylus

㉑Speaker

㉒Optional: 4G Module

Built-in: SIM Slot

Left Side View




Install a SD Card



SD Card Slot



Right Side View

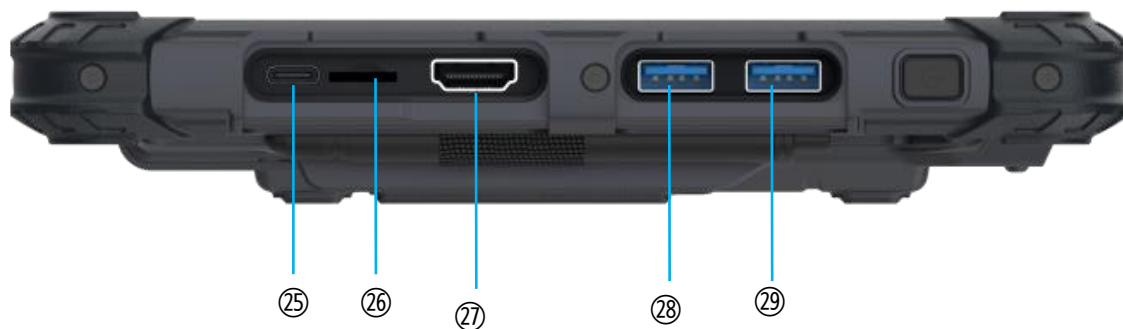

- ②③DC charging
- ②④Type-C Charging
- ②⑤USB 3.2 Type-C
- ②⑥MicroSD card slot
- ②⑦HDMI
- ②⑧USB 3.2 Type-A
- ②⑨USB 3.2 Type-A


SKU4 : GTW8103(RJ45AH)

Appearance



- ①Front camera
- ②Front camera indicator
- ③Light sensor
- ④Turn on the rear camera flash
- ⑤Volume down
- ⑥Volume up
- ⑦Brightness down
- ⑧Brightness up
- ⑨Home
- ⑩Power indicator
- ⑪Hard disk indicator
- ⑫Battery indicator
- ⑬35 pogopins
- ⑭Power
- ⑮Handle

Rear View

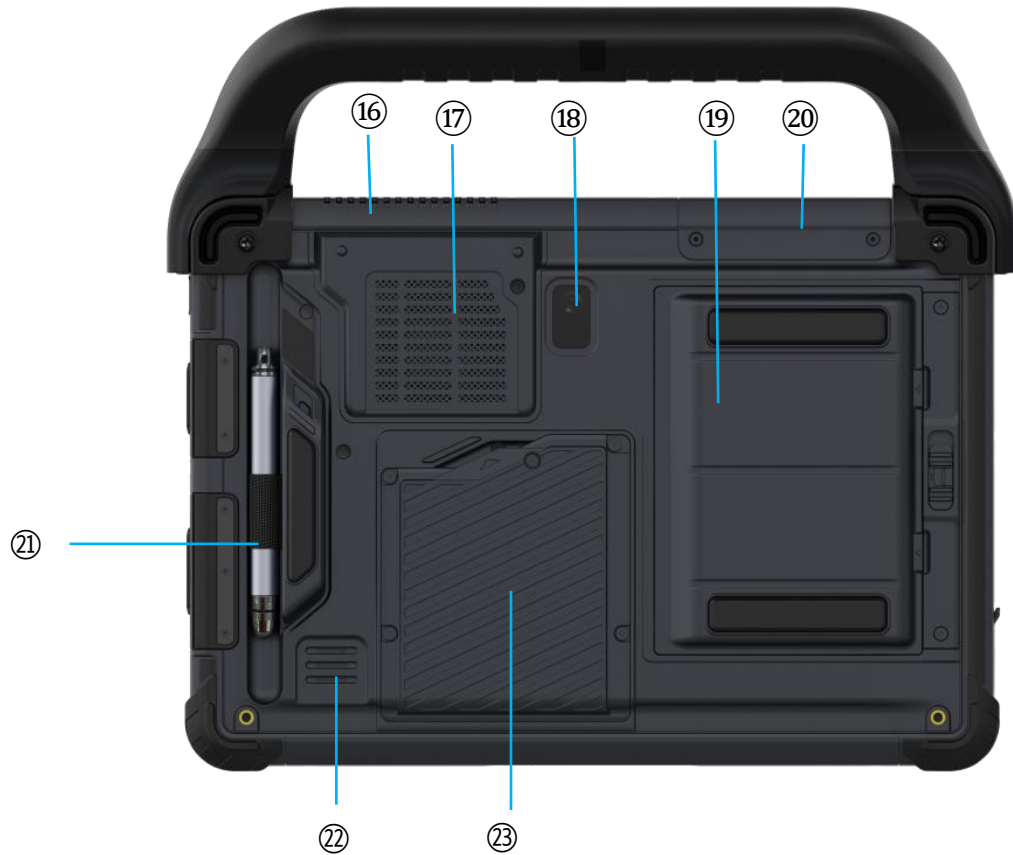

①⑥ Heat emission hole

①⑦ Fan

①⑧ Rear camera&Flash

①⑨ Battery

②⑩ RJ45+USB2.0

②⑪ Stylus

②⑫ Speaker

②⑬ Optional: 4G Module


Built-in: SIM Slot

Left side view



Install a SD card

Right side view

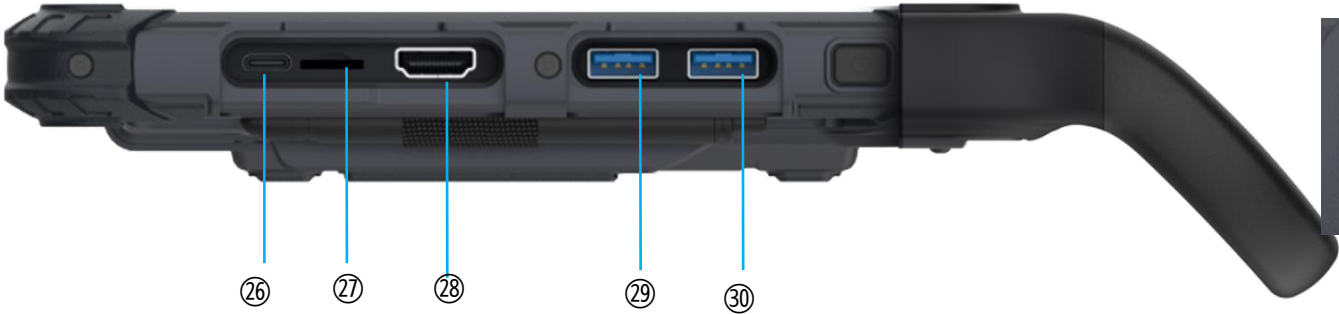

- ②④DC charging
- ②⑤Type-C Charging
- ②⑥USB 3.2 Type-C
- ②⑦MicroSD card slot
- ②⑧HDMI
- ②⑨USB 3.2 Type-A
- ③⑩USB 3.2 Type-A



SD Card Slot



Install Battery



Step 1

Make sure that the middle buckle is unlocked to the left



Step 2

Insert the battery into the connector from the left side and press down



Step 3

Push the middle buckle to the right to lock it

Remove Battery



Step 1

Make sure that the middle buckle is unlocked to the left



Step 2

Unlock the long lock upward, and the battery automatically springs up



Step 3

From the right side, flip the battery up and remove it

SKU5 : GTW8103


Appearance



- ①Front camera
- ②Front camera indicator
- ③Light sensor
- ④Turn on the rear camera light
- ⑤Volume down
- ⑥Volume up
- ⑦Brightness down
- ⑧Brightness up
- ⑨Home
- ⑩Power indicator
- ⑪Hard disk indicator
- ⑫Battery indicator
- ⑬35 pogopins
- ⑭Power
- ⑮Handle (Optional)

Comments:
You need to connect the power adapter for the first time.

Rear View

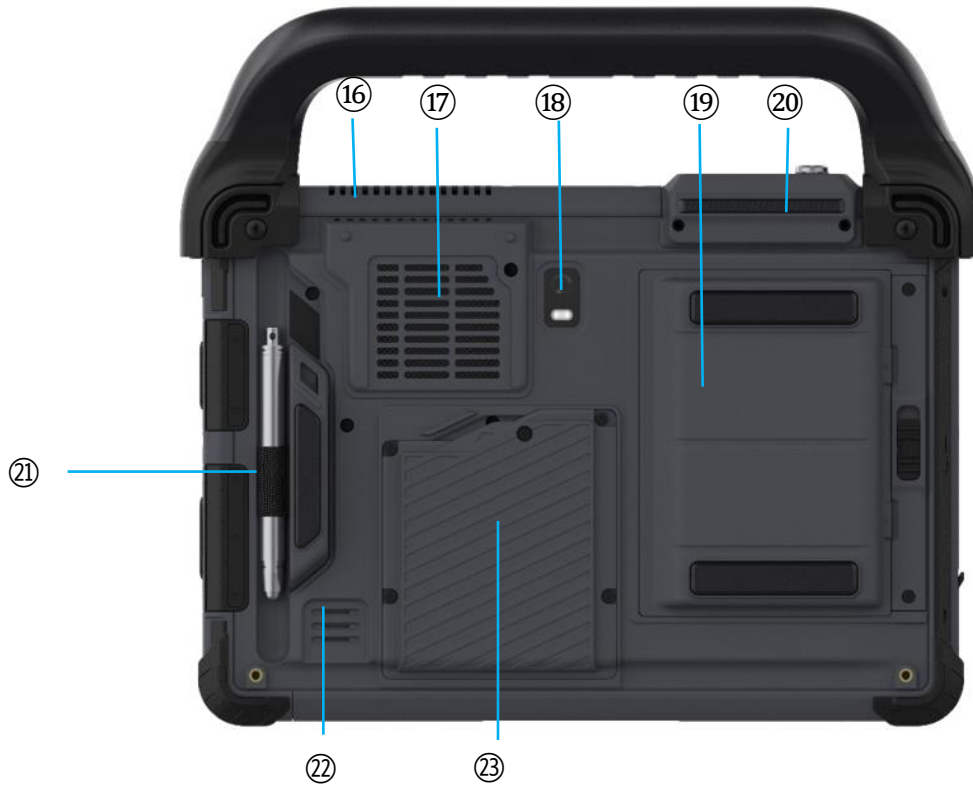


- ①⑥Heat emission hole
- ①⑦Fan
- ①⑧Rear camera& light
- ①⑨Battery
- ②⑩RJ45+USB3.0 (Circular Connector)
- ②⑪Stylus
- ②⑫Speaker
- ②⑬Optional: 4G Module

Left side view



Right side view

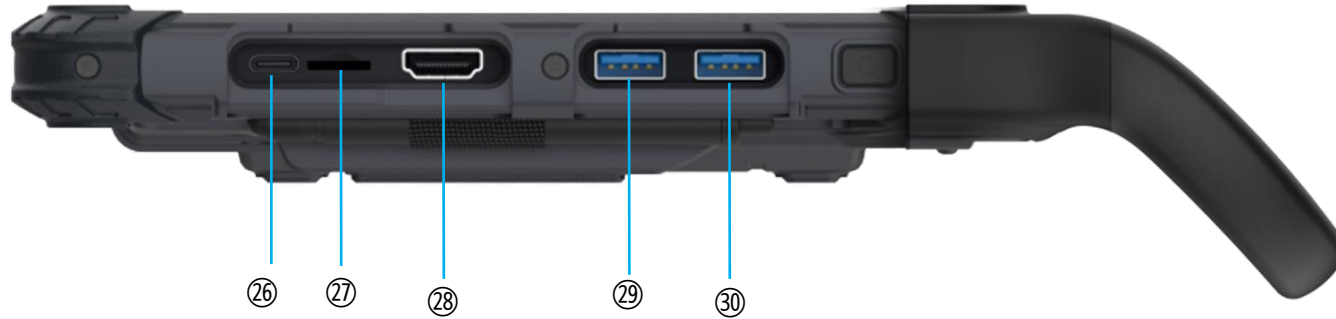


- ②④DC charging
- ②⑤Type-C Charging
- ②⑥USB 3.2 Type-C
- ②⑦MicroSD card slot
- ②⑧HDMI
- ②⑨USB 3.2 Type-A
- ③⑩USB 3.2 Type-A

Install a SD card



 SD Card Slot



Install battery



Step 1

Make sure that the middle buckle is unlocked to the left



Step 2

Insert the battery into the connector from the left side and press down



Step 3

Push the middle buckle to the right to lock it

Remove battery



Step 1

Make sure that the middle buckle is unlocked to the left



Step 2

Unlock the long lock upward, and the battery automatically springs up



Step 3

From the right side, flip the battery up and remove it

Configuration differences of GTW8103 series:

There are 5 SKUs in total. The main difference is expansion accessories.

	SKU1 GTW8103(Standard)	SKU2 GTW8103(Handle)	SKU3 GTW GTW8103(RJ45A)	SKU4 GTW8103(RJ45AH)	SKU5 GTW8103
Optional Accessory	NA	Handle	RJ45+USB 2 in 1 module	RJ45+USB 2 in 1 module + Handle	RJ45+USB 3 in 1 module + Handle
Picture					

SKU1: Only the host.

SKU2: Host with handle.

SKU3: Host with RJ45+USB 2 in 1 module.

SKU4: Host with handle and RJ45+USB 2 in 1 module.

SKU5: Host with handle and RJ45+USB 3 (Circular Connector) in 1 module.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Rugged Windows Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: GTW8103(Standard) (FCC ID: 2A96I-GTW8103) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.387W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips,

holsters, and similar accessories used by this device should not contain any metallic components.

Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.