

<QUICK START GUIDE>

Inserting or Replacing Batteries


1. Turn the battery cover at the bottom of the handle to remove the battery holder located inside from the product.
2. As shown in the figure, install three AAA alkaline batteries into the battery holder.
 - When assembling batteries, make sure to connect the + and - + and - terminals correctly.
3. After inserting the batteries, slide the battery holder in the direction of the arrow and completely close the battery cover at the bottom by turning it clockwise.

Turning On/Off

- Press and hold BUTTON ① to turn on the product.

Once turned on, the product automatically enters BASIC MODE.

- Press and hold BUTTON ① to turn off the product.

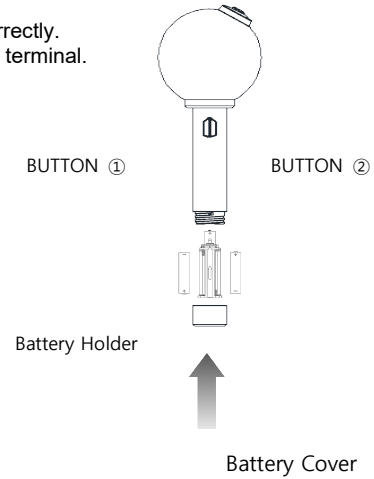

Using BASIC MODE

- To change the LED color, press BUTTON ① while the product is on.
- To change the flashing pattern of the LED, press BUTTON ② while the product is on.

The flashing pattern cycles in the following order: Slow > Normal > Fast > Rotate > Rising > Lightning > Random (Random instead of Wave for Multi A/B).

Using COLOR SHAKING MODE

- To switch to COLOR SHAKING MODE, press and hold BUTTON ② while the product is on.
- The LED color randomly changes every time you shake the product.
- To return to BASIC MODE, press and hold BUTTON ②.

Using BLUETOOTH MODE/SELF MODE

1. Enable Bluetooth in the Settings menu of your smart device.
2. Search for "Need to add app name" in the App Store or Play Store, depending on your smart device. Then, install and launch the app.
3. On the home screen of the official app, select SELF MODE.
4. Press and hold BUTTONS ① and ② together on the product for at least two seconds to switch it to BLUETOOTH MODE.
5. The product's LED light will flash blue, trying to connect to the smart device via Bluetooth.

6. Check if the LED color of the product changes to match the color displayed on the official app, and then select 'Yes' or 'OK.' (Selecting 'No' or 'Cancel' will disconnect the product).
7. Select a color you want from the color palette on the official app and make sure the product's LED changes to that color.
8. If the product's LED color changes to the selected color, Bluetooth is working properly and now you can use the app to adjust the product's LED color and brightness.

- Only Bluetooth 4.2 or higher is supported.
- With Bluetooth disabled on your smart device, you cannot connect to the product.
- The Bluetooth connection between your smart device and the product may disconnect intermittently.
- The product's buttons might not work while using Bluetooth, and this is normal.

CONCERT MODE

1. On the home screen of the official app, select CONCERT MODE.
2. Pair your smart device with the product using Bluetooth according to the instructions displayed on the official app.
3. Select the concert you are attending and enter the correct information for your seat.
4. Once paired, the product's LED automatically turns off.
5. Once pairing is complete, the product automatically switches to CONCERT MODE when powered on before the performance starts.
6. Check the concert details as seat pairing may not be available for all concerts.

Replacing Light Stick Head Deco

	How to Replace the Head of the Light Stick
	<Removing the Light Stick Deco>
	① Hold the head at the top and rotate the light stick deco counterclockwise to remove it from the light stick.
	<Attaching the Light Stick Deco>
	② Locate the protrusion on the bottom of the light stick deco head, align it with the guide groove on the circular projection of the light stick head, and insert it vertically.
	<Joining Area on the Light Stick's Circular Projection>
	<Bottom View of the Light Stick Deco>
	Inner Protrusion on the Cap
	BUTTON ①

	BUTTON ②
	③ With the light stick deco inserted vertically, rotate it clockwise until it clicks into place.

Handling Precautions

1. Avoid high temperatures and humidity and store at room temperature.
2. Avoid looking directly at the LED light up close.
3. Avoid dropping or causing severe damage to the product, as this may affect the LED color.
4. Avoid swallowing or putting any parts in your mouth.
5. Avoid exposure to strong shocks or contact with water to prevent malfunction.
6. Stop using the product when damaged, and avoid arbitrarily disassembling, repairing, or modifying the product.
7. Replace used-up batteries with new ones, and remove batteries when not in use for a long time.
8. Keep used batteries out of reach of children or discard them at a designated recycling site.
9. Make sure to use authorized alkaline AAA batteries and check the +/- terminals before inserting them.
 - Failure to do so may result in product damage, burns, or fire.
10. The product may cause interference while in wireless operation.

Warranty

1. This product has been manufactured following a rigorous quality control and inspection process.
2. If the product malfunctions despite proper user handling, it will be repaired free of charge during the warranty period.
3. Please present this warranty when requesting repairs.
4. The warranty lasts for six months from the date of purchase.
5. Repair for any damage caused by the customer's negligence will be subject to charges, even under warranty. (The charge will include the shipping cost)
6. Repair is only available when requested by the customer and communicated to our representative via email in advance.
7. When sending email requesting repair, please attach the purchase receipt (the date of purchase must be shown) and provide us with the details of the malfunction or damage.
8. Return the product to us only after your request is successfully submitted.
9. The following defects are subject to replacement during the warranty period (six months).

Defects Warranted for Replacement

- LED not working
 - Malfunctioning due to defective power button
 - Defects in the battery holder shipped with the product
- * For any product issues not covered by the warranty, repairs will be made at the customer's expense. (The charge will include the shipping cost)

Paid Repair

- Coverage period: Six months to one year from the date of purchase
- Damage to the product and its circuit board caused by the customer's negligence
- Damage caused by modification and incorrect assembly of the product
- Damage to the circuit board by the use of unauthorized batteries
- Damage to the circuit board or internal water ingress due to submersion or use in rainy conditions while the batteries are inserted

* This warranty free of charge does not cover malfunction caused by user's negligence or misuse.

Where to Request Repair [Requires Purchase Receipt]

light-stick.support@hybecorp.com

Warranty period: 6 months from the date of purchase

Product Specification

Product Name	BTS OFFICIAL LIGHT STICK VER.4
Model Name	HYBEBTSOLSV401
Size / Weight	93mm x 93mm x 218mm / 153.6g
Components	Light stick, dust bag, strap, user manual, and photo card
Power/Voltage	3x Alkaline AAA batteries (separately sold) / DC 4.5V
Operating Temperature	-20°C to 50°C (32°F to 122°F)
Operating Frequency	2.4GHz
Manufacturer	Elcomtec Co., Ltd.
FCC ID	2A9BA-BTSV401
IC	30000-BTSV401



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with RF exposure requirement.

ISED Warning

This device contains licence-exempt transmitter(s)/receiver that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exempts de licence qui sont conformes aux RSS exempts de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes:

(1) Cet appareil ne doit pas provoquer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent provoquer un fonctionnement indésirable de l'appareil.

This device complies with RF exposure requirement.

Cet appareil est conforme à l'exigence d'exposition RF.