




Band Edge NVNT n20 5745MHz Low Ant1

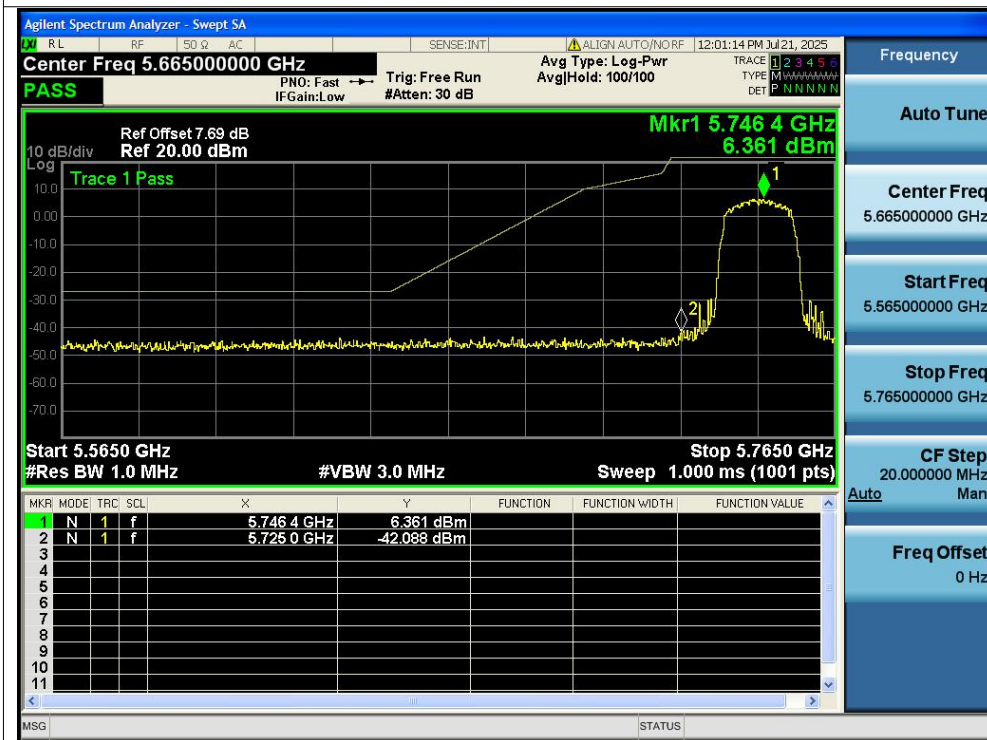


Band Edge NVNT n20 5825MHz High Ant1

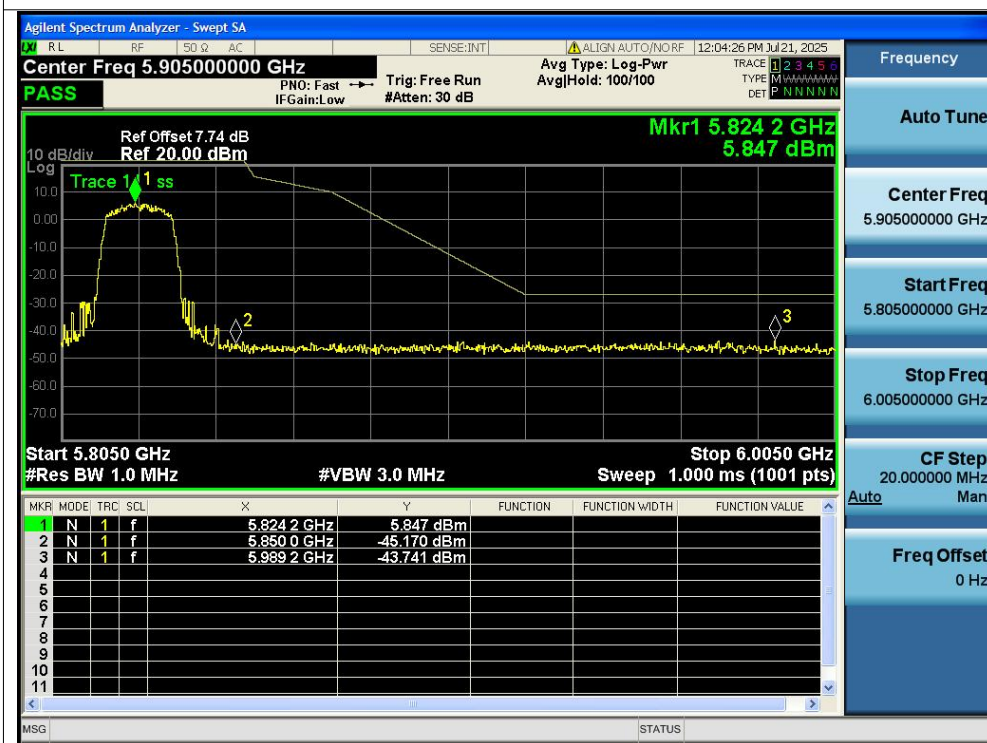

Band Edge NVNT n40 5190MHz Low Ant1

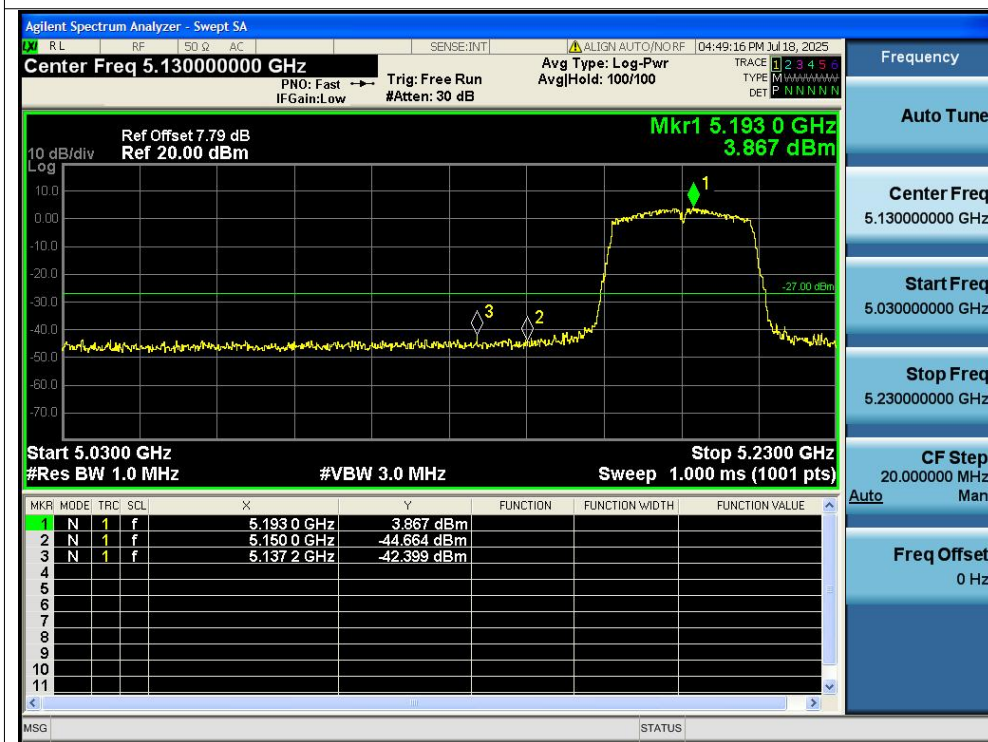


Band Edge NVNT n40 5230MHz High Ant1

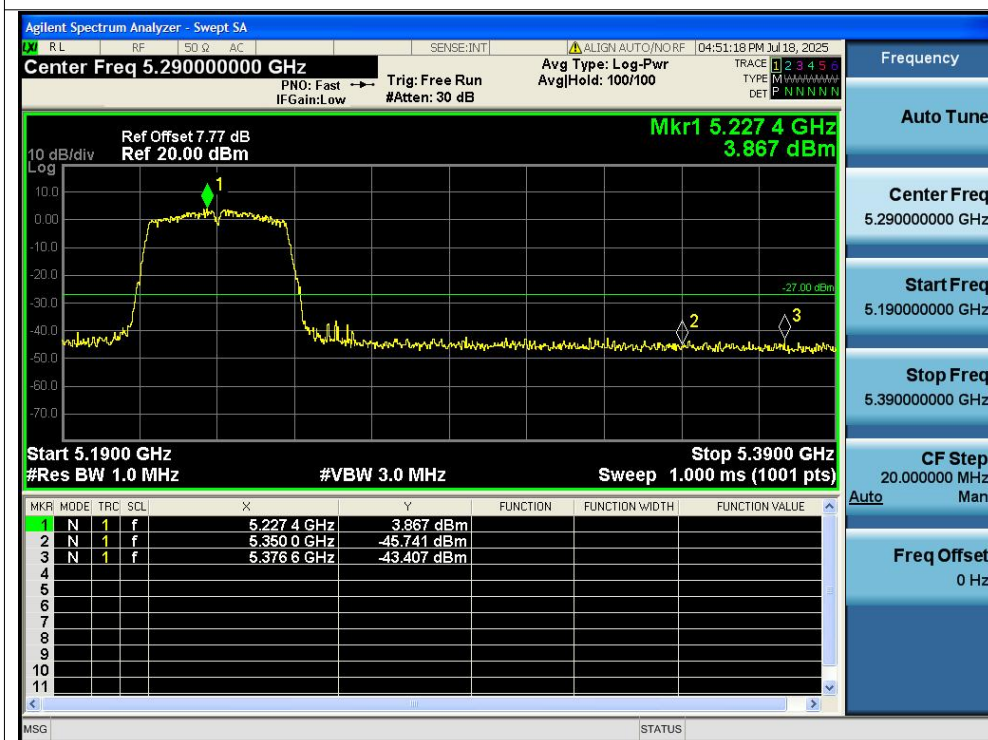





Band Edge NVNT n40 5755MHz Low Ant1

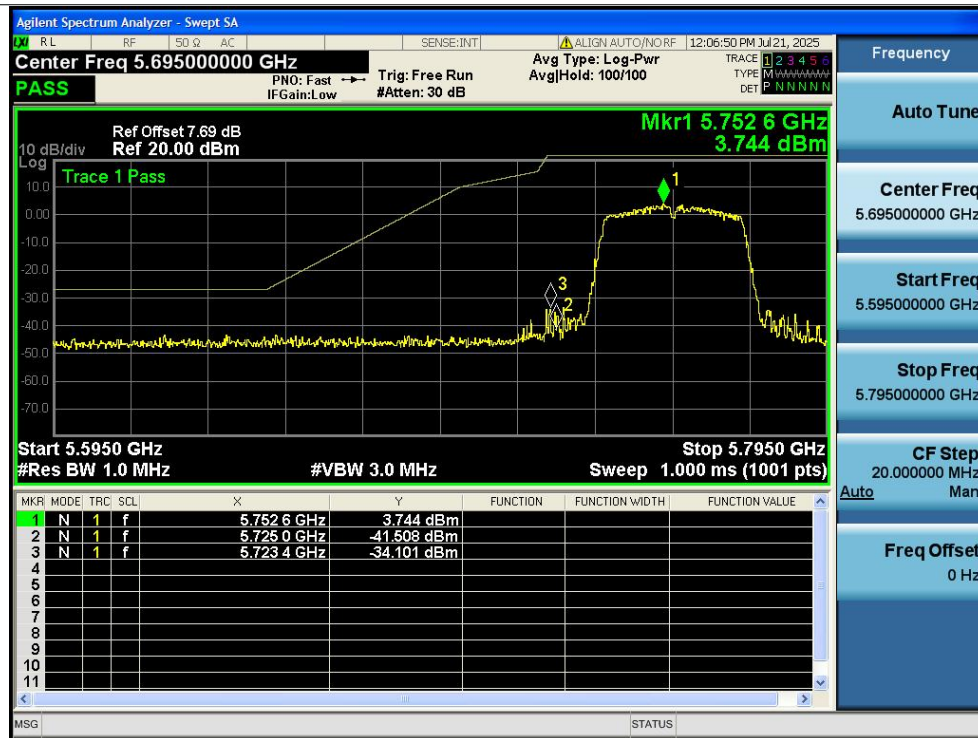


Band Edge NVNT n40 5795MHz High Ant1

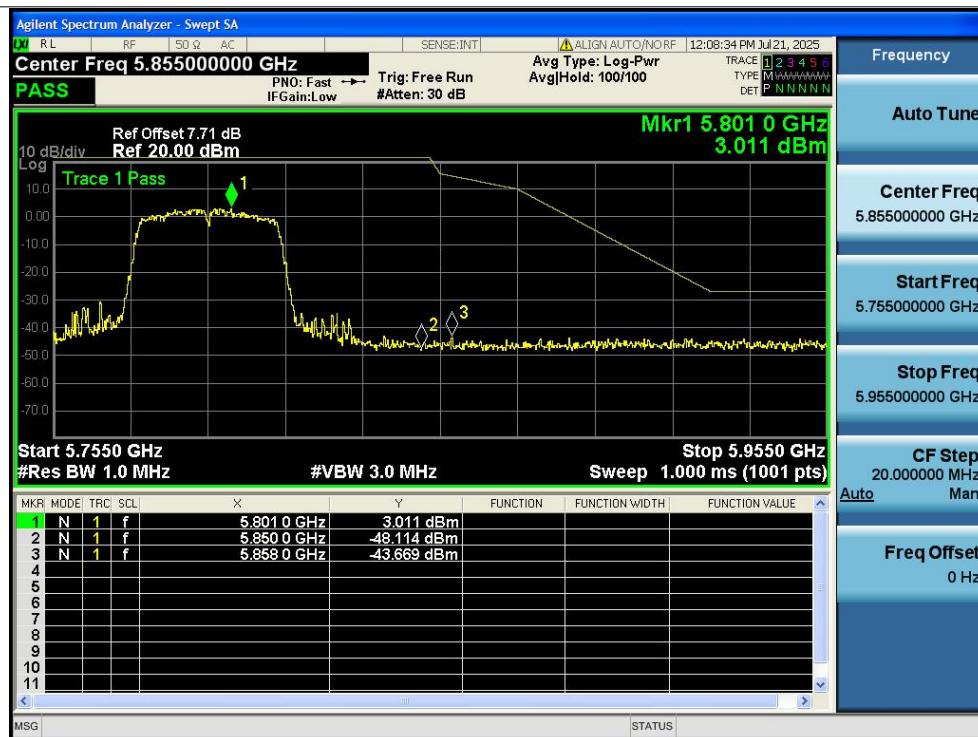


Band Edge NVNT ac20 5180MHz Low Ant1

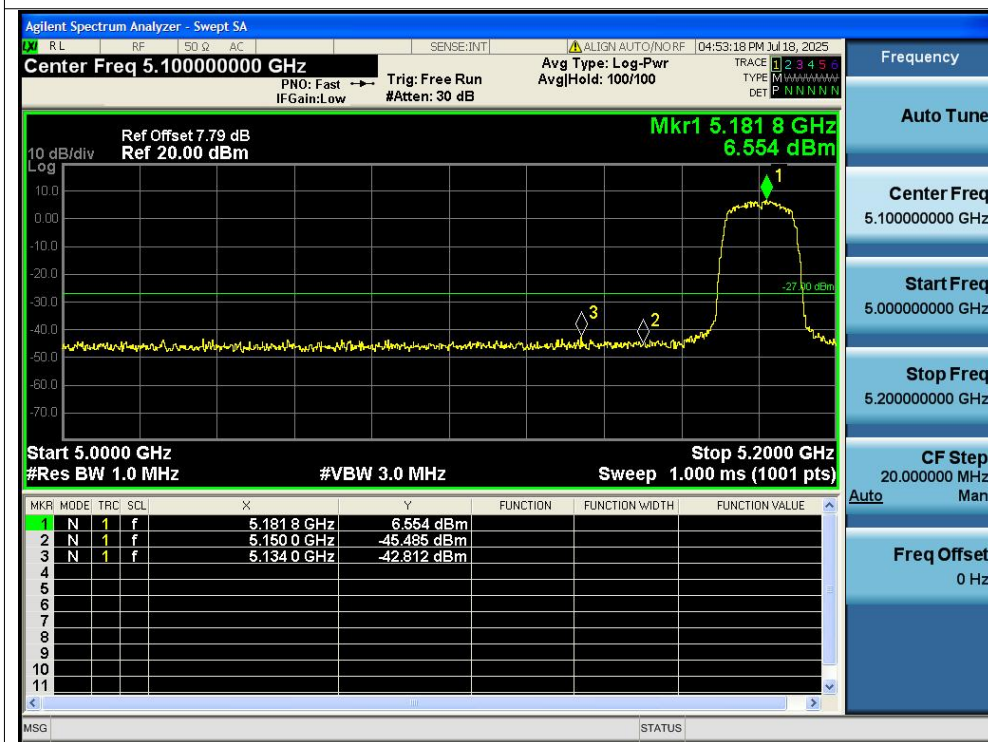


Band Edge NVNT ac20 5240MHz High Ant1

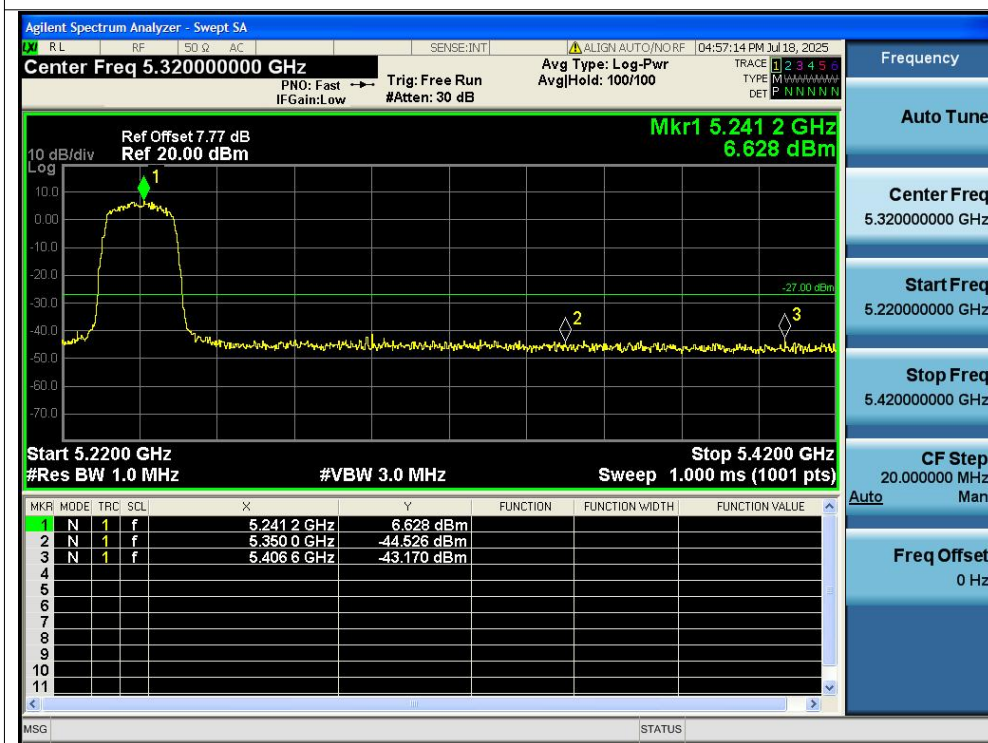


Band Edge NVNT ac20 5745MHz Low Ant1

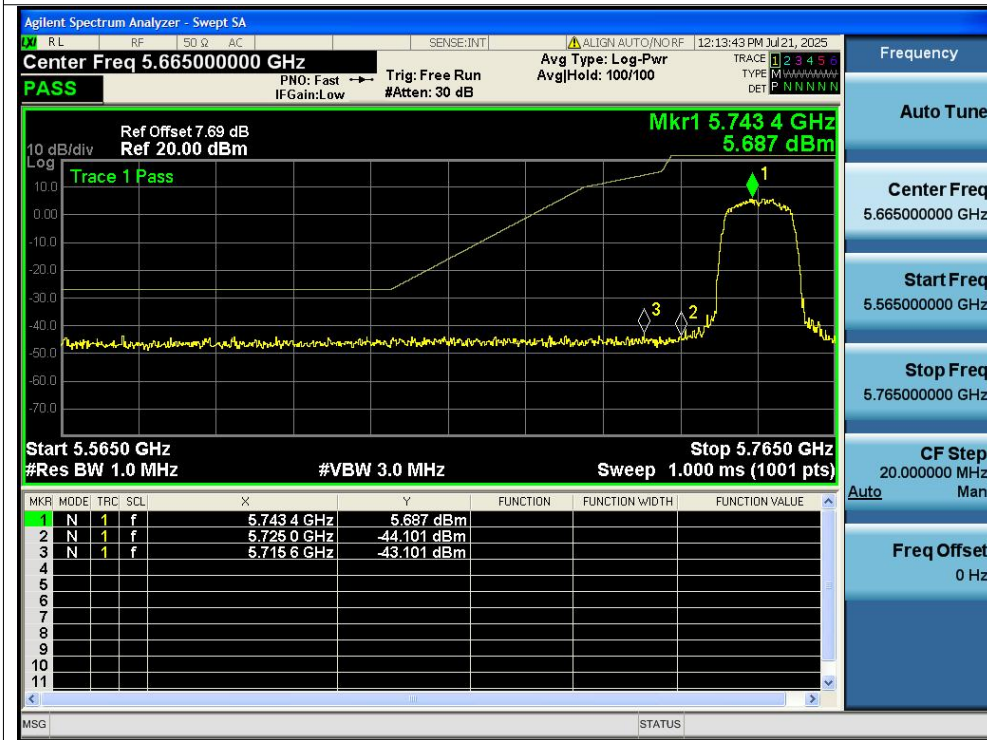


Band Edge NVNT ac20 5825MHz High Ant1

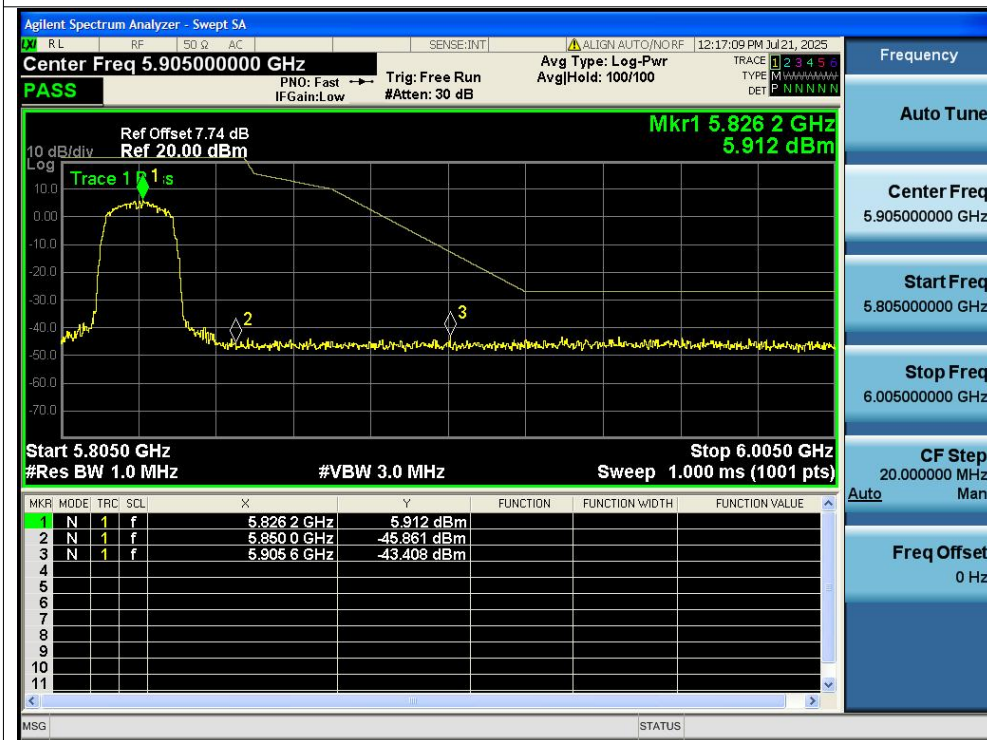


Band Edge NVNT ac40 5190MHz Low Ant1

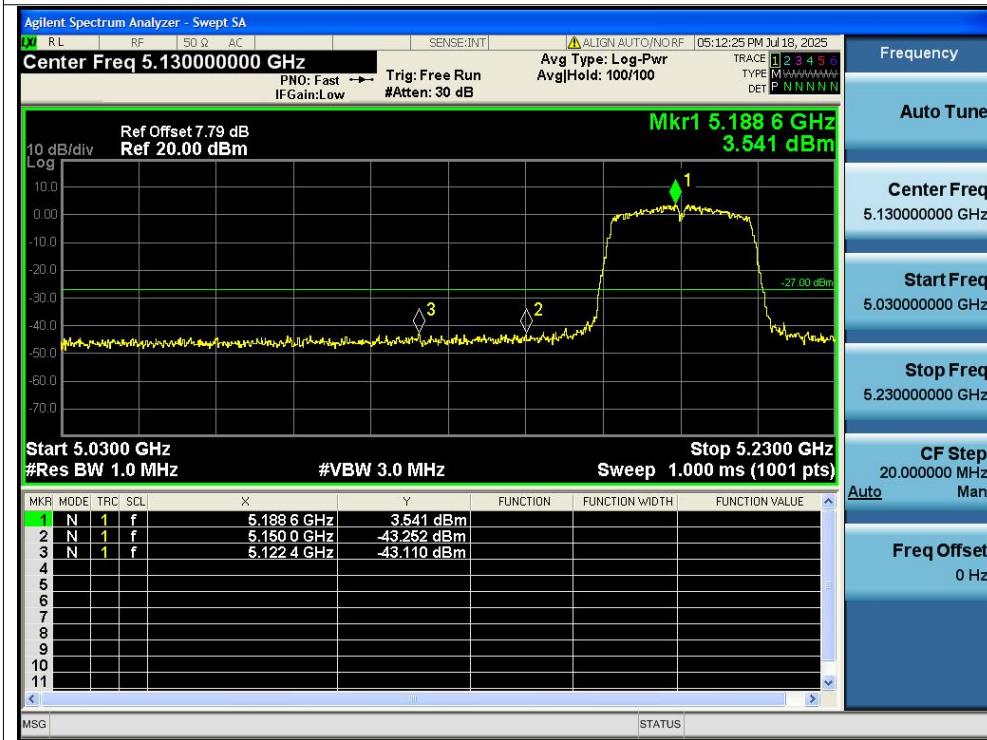


Band Edge NVNT ac40 5230MHz High Ant1

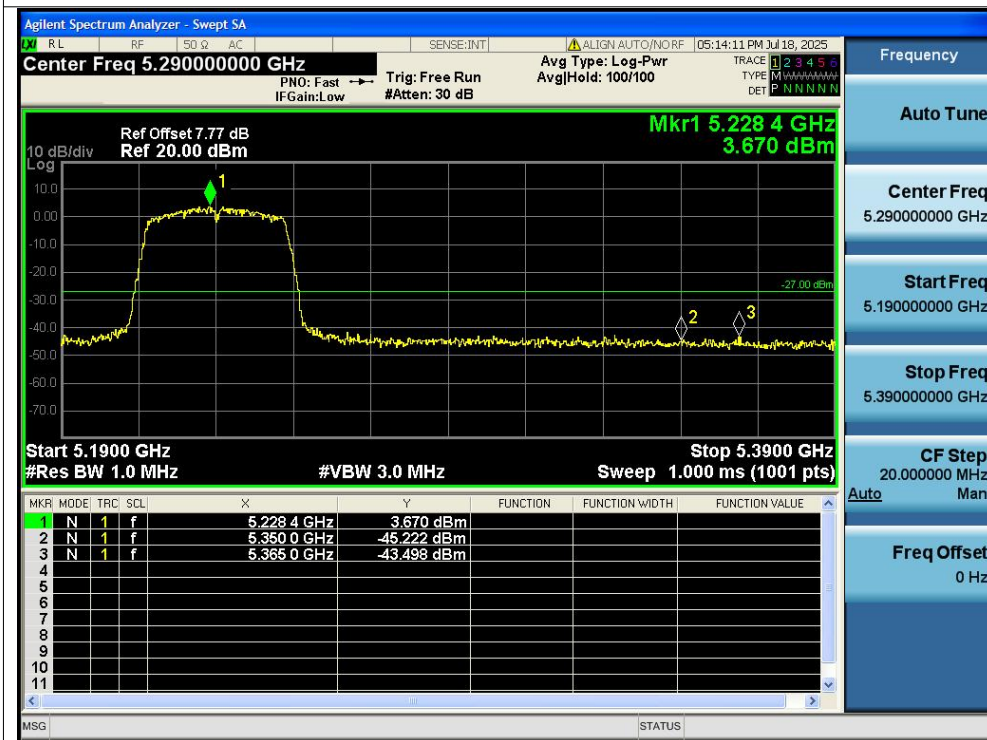


Band Edge NVNT ac40 5755MHz Low Ant1

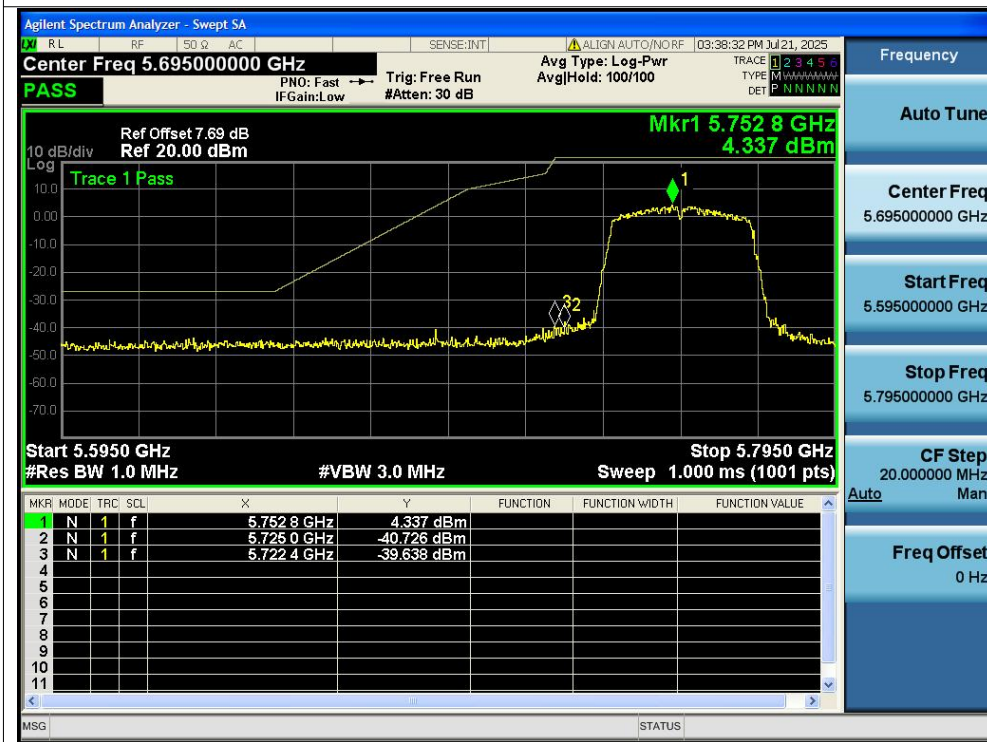

Band Edge NVNT ac40 5795MHz High Ant1

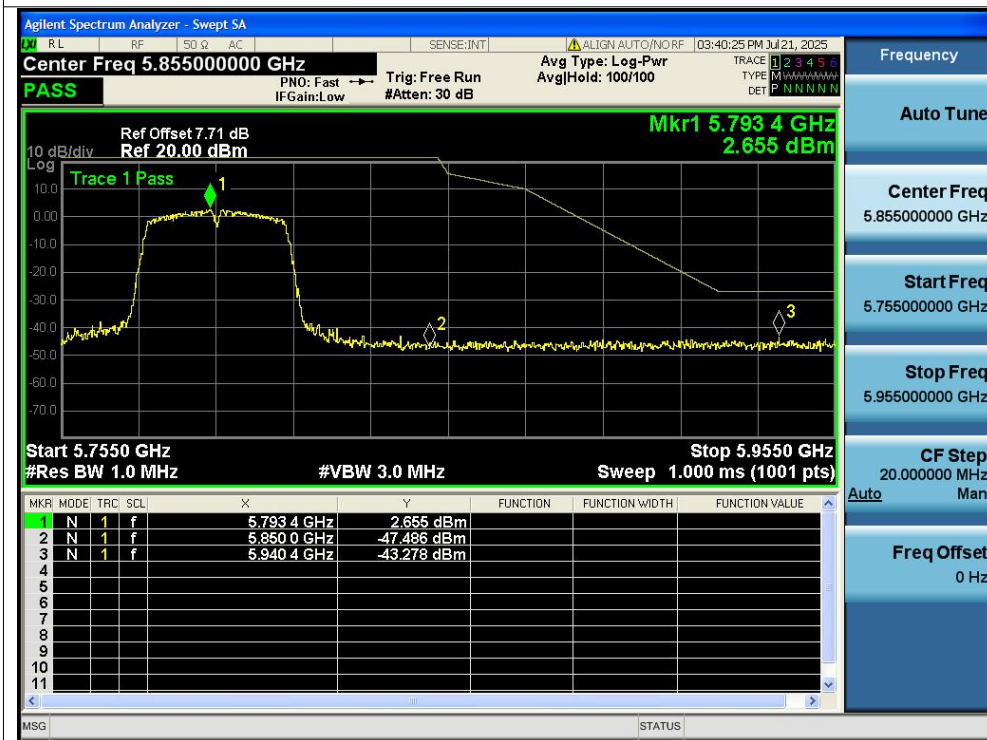

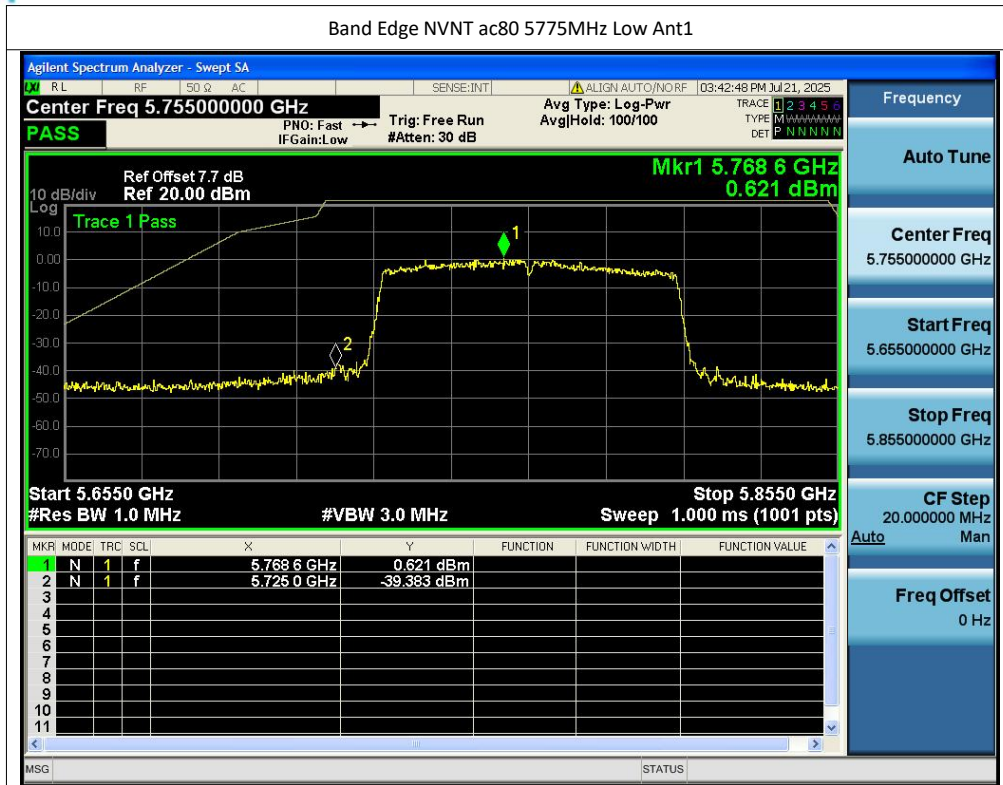




Frequency Stability


Condition	Mode	Time (mins)	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	0	5180	Ant1	5180.02	20000	3.86	25	Pass
NVNT	a	0	5200	Ant1	5200	0	0	25	Pass
NVNT	a	0	5240	Ant1	5240	0	0	25	Pass
NVNT	a	0	5745	Ant1	5745.02	20000	3.48	25	Pass
NVNT	a	0	5785	Ant1	5785	0	0	25	Pass
NVNT	a	0	5825	Ant1	5825	0	0	25	Pass
NVNT	n20	0	5180	Ant1	5180	0	0	25	Pass
NVNT	n20	0	5200	Ant1	5200	0	0	25	Pass
NVNT	n20	0	5240	Ant1	5240	0	0	25	Pass
NVNT	n20	0	5745	Ant1	5745.04	40000	6.96	25	Pass
NVNT	n20	0	5785	Ant1	5785	0	0	25	Pass
NVNT	n20	0	5825	Ant1	5825	0	0	25	Pass
NVNT	n40	0	5190	Ant1	5190	0	0	25	Pass
NVNT	n40	0	5230	Ant1	5230.04	40000	7.65	25	Pass
NVNT	n40	0	5755	Ant1	5755.04	40000	6.95	25	Pass
NVNT	n40	0	5795	Ant1	5795	0	0	25	Pass
NVNT	ac20	0	5180	Ant1	5180	0	0	25	Pass
NVNT	ac20	0	5200	Ant1	5200.02	20000	3.85	25	Pass
NVNT	ac20	0	5240	Ant1	5240	0	0	25	Pass
NVNT	ac20	0	5745	Ant1	5745	0	0	25	Pass
NVNT	ac20	0	5785	Ant1	5785	0	0	25	Pass
NVNT	ac20	0	5825	Ant1	5825	0	0	25	Pass
NVNT	ac40	0	5190	Ant1	5190	0	0	25	Pass
NVNT	ac40	0	5230	Ant1	5229.96	-40000	-7.65	25	Pass
NVNT	ac40	0	5755	Ant1	5755	0	0	25	Pass
NVNT	ac40	0	5795	Ant1	5795	0	0	25	Pass
NVNT	ac80	0	5210	Ant1	5210.08	80000	15.36	25	Pass
NVNT	ac80	0	5775	Ant1	5775	0	0	25	Pass

Test Graphs


Freq. Stability NVNT a 5180MHz Ant1 0 Minutes

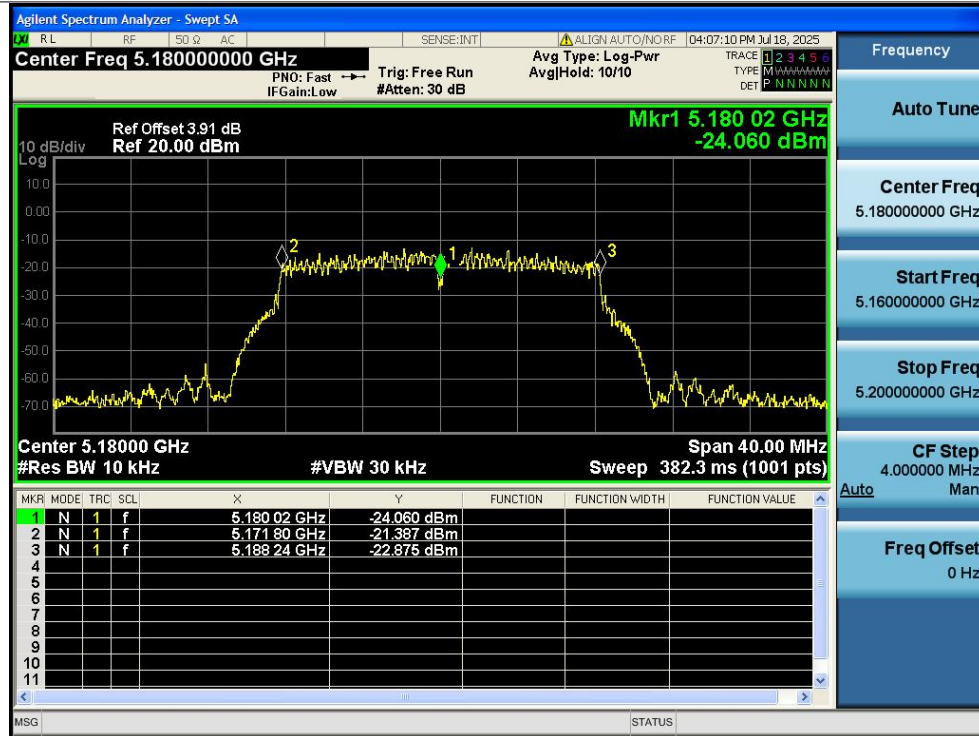


Freq. Stability NVNT a 5200MHz Ant1 0 Minutes

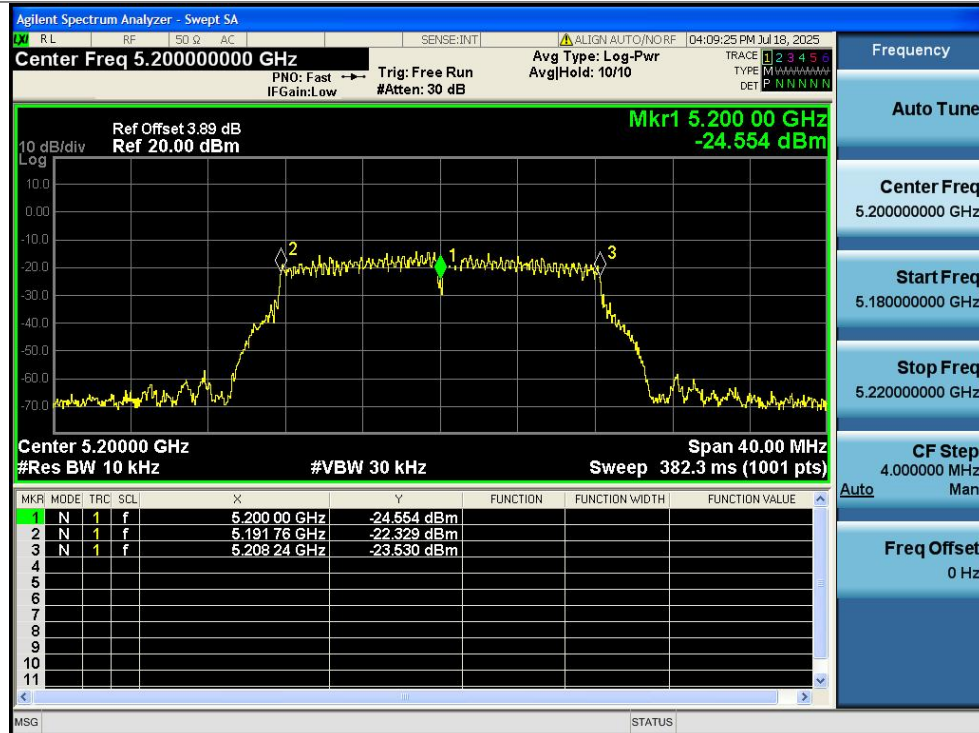


Freq. Stability NVNT a 5240MHz Ant1 0 Minutes

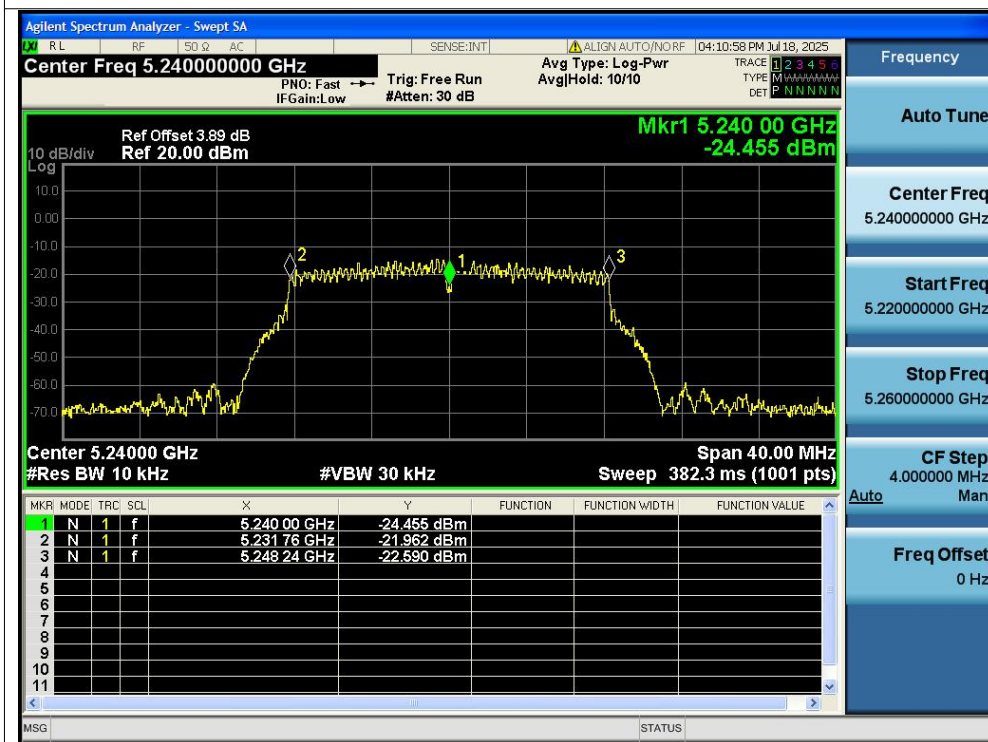


Freq. Stability NVNT a 5745MHz Ant1 0 Minutes

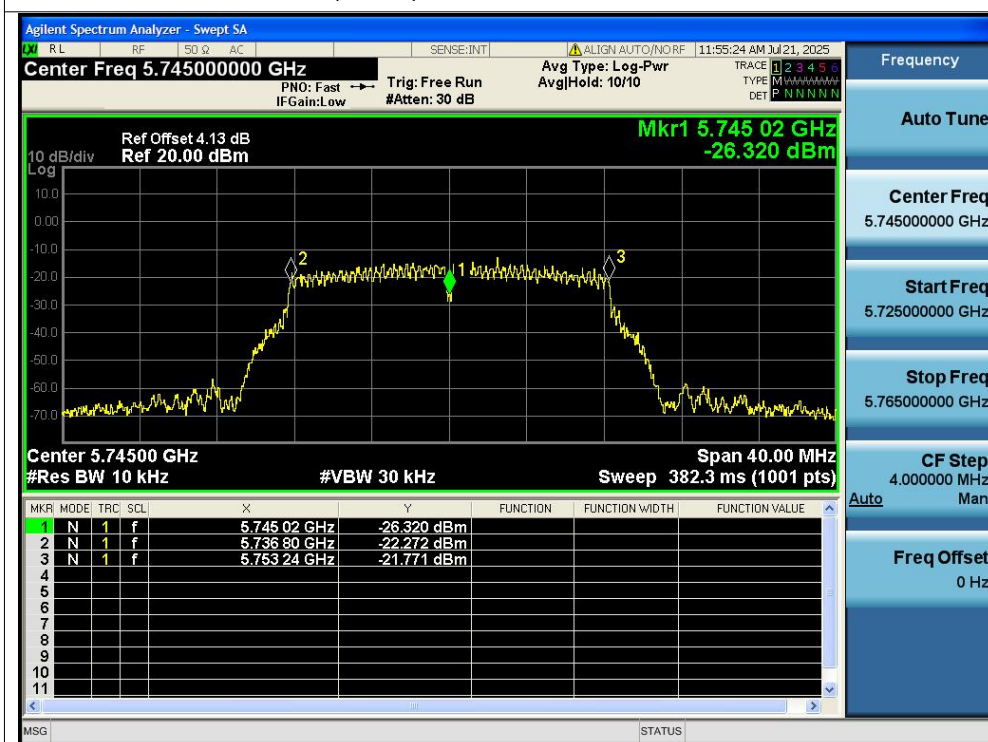

Freq. Stability NVNT a 5785MHz Ant1 0 Minutes

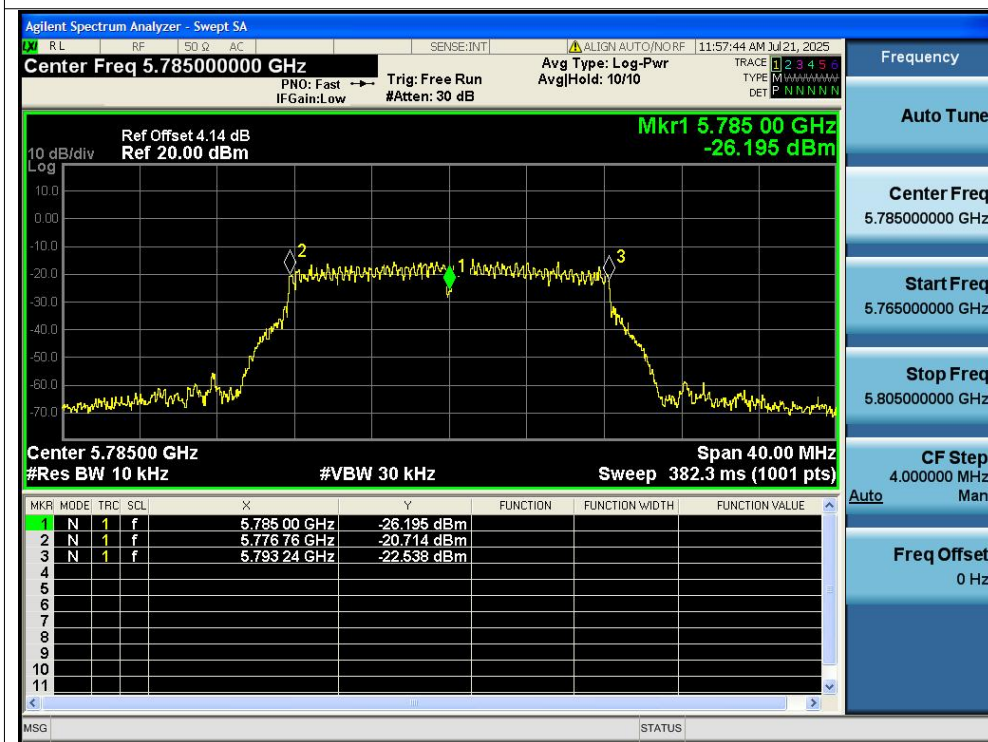


Freq. Stability NVNT a 5825MHz Ant1 0 Minutes

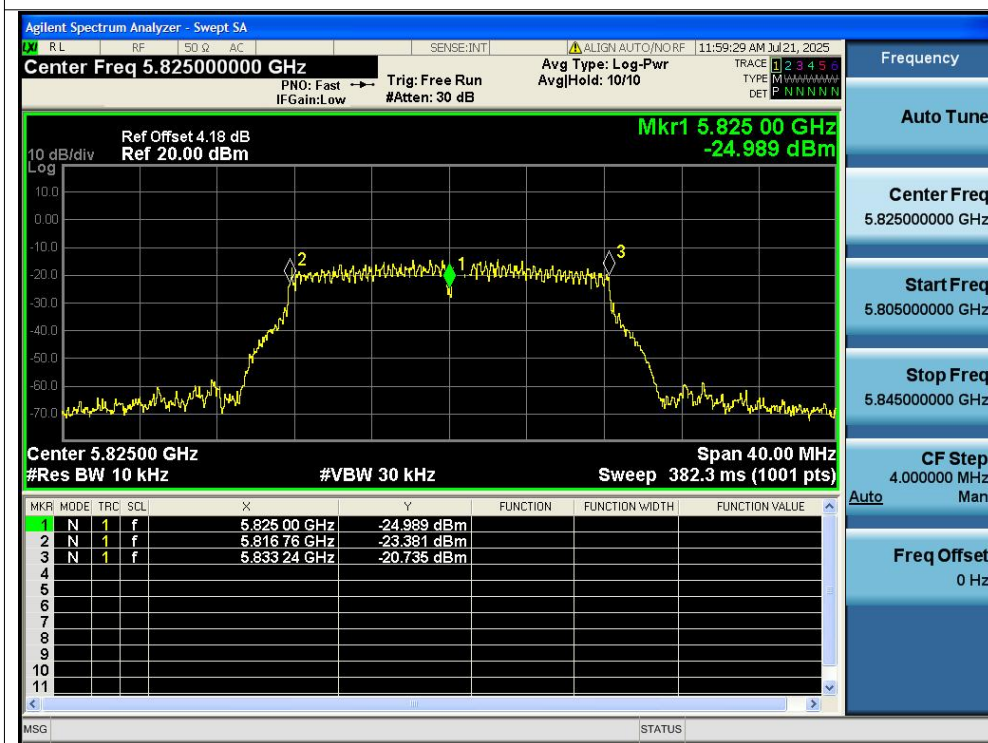





Freq. Stability NVNT n20 5180MHz Ant1 0 Minutes

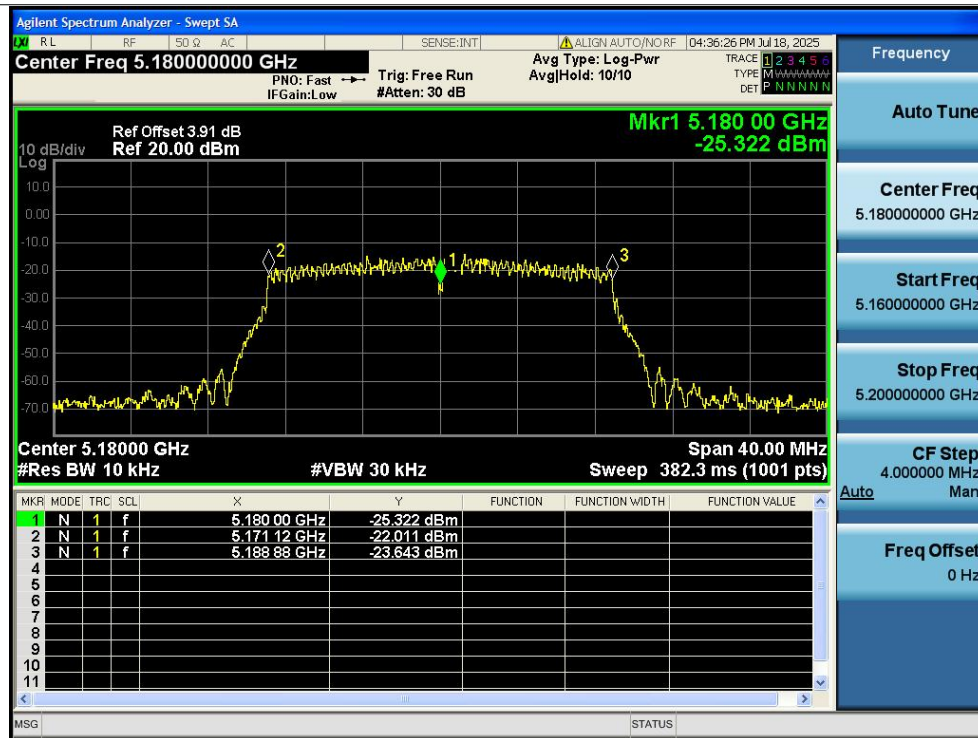


Freq. Stability NVNT n20 5200MHz Ant1 0 Minutes

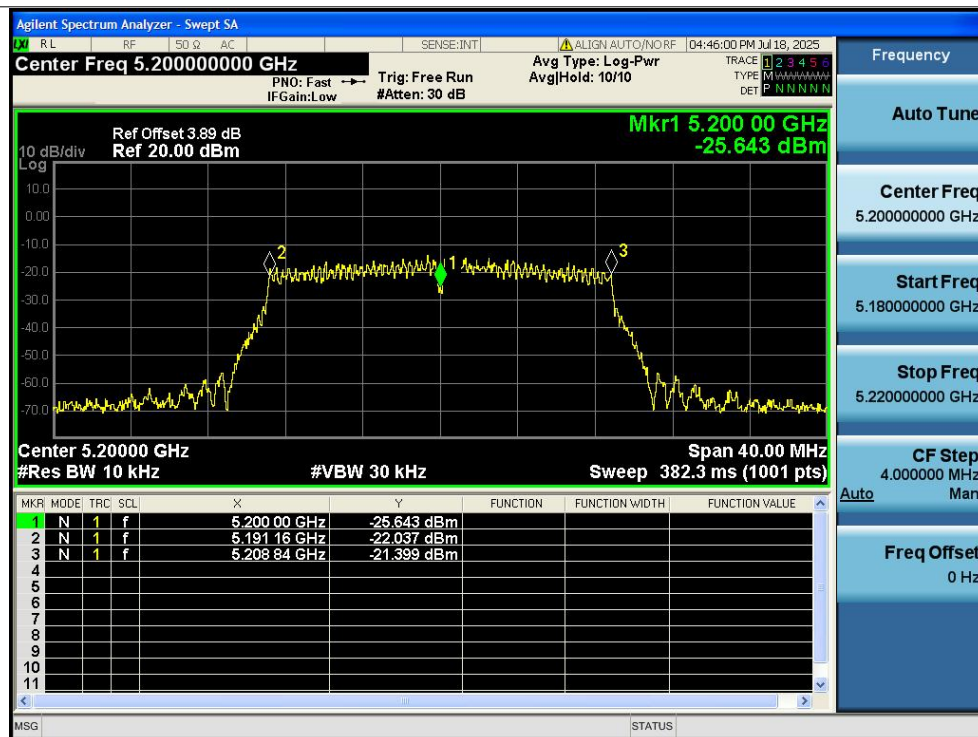

Freq. Stability NVNT n20 5240MHz Ant1 0 Minutes

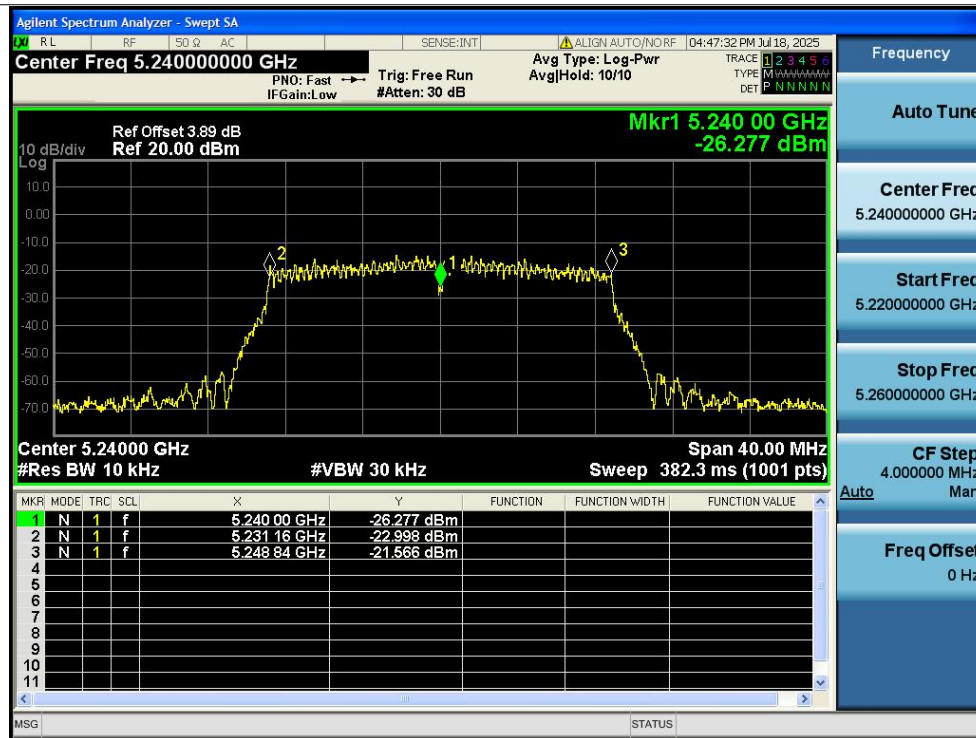


Freq. Stability NVNT n20 5745MHz Ant1 0 Minutes

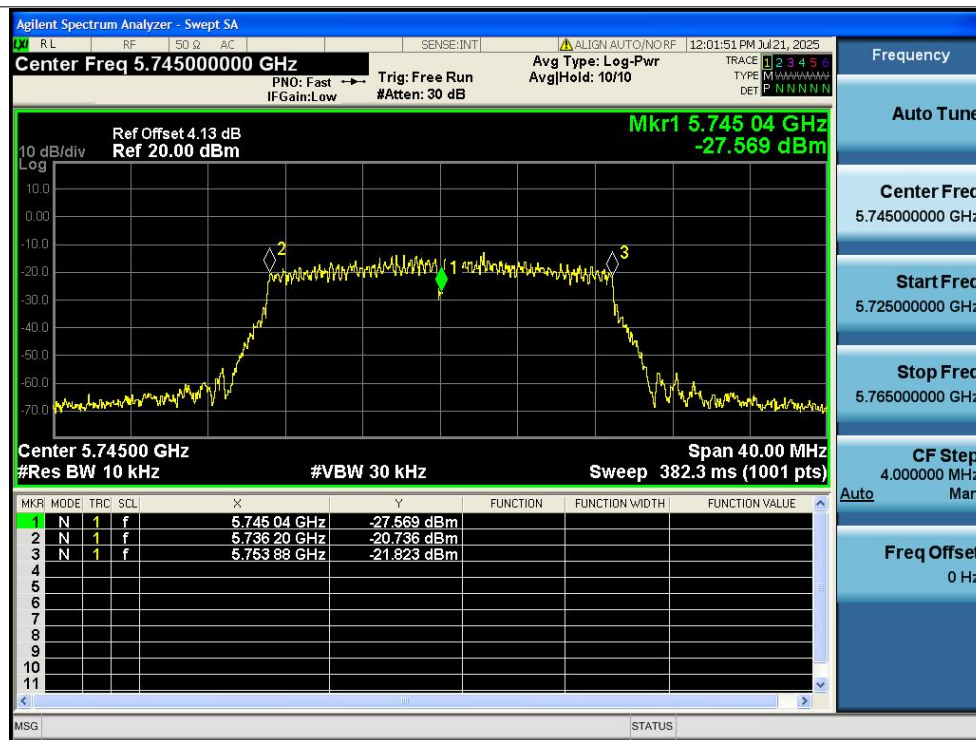





Freq. Stability NVNT n20 5785MHz Ant1 0 Minutes

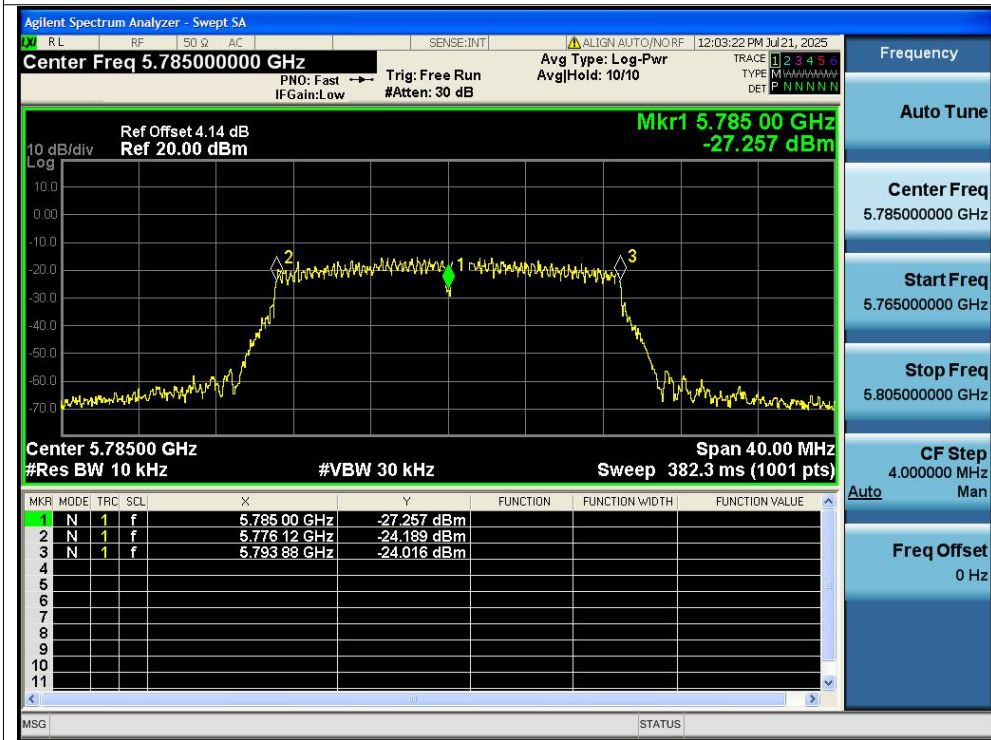


Freq. Stability NVNT n20 5825MHz Ant1 0 Minutes

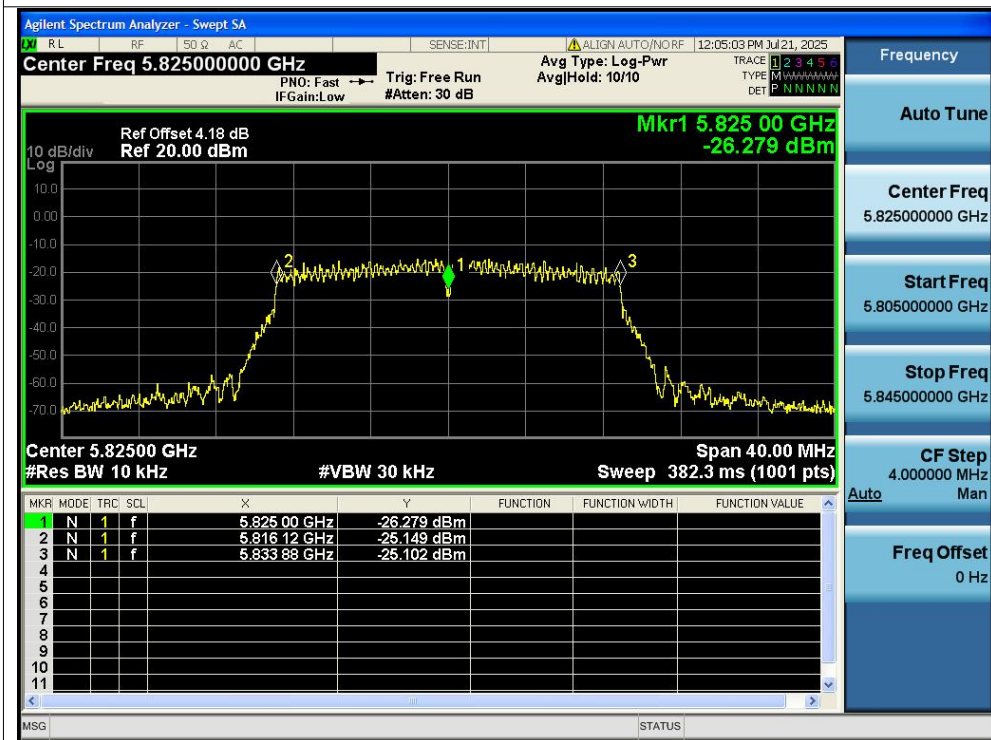

Freq. Stability NVNT n40 5190MHz Ant1 0 Minutes

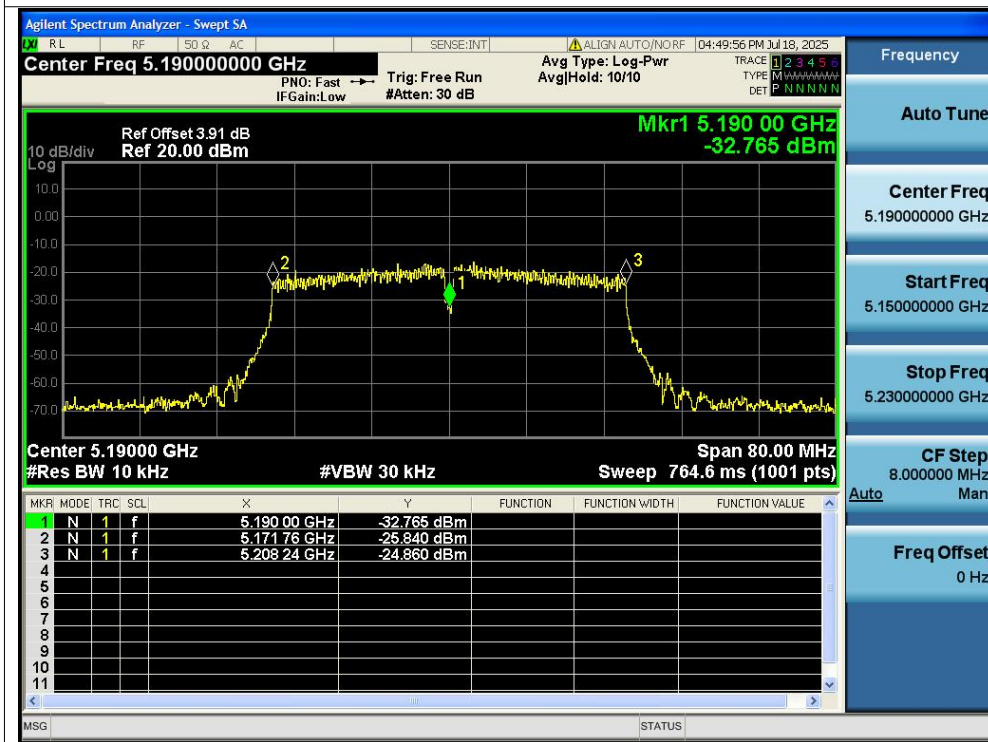


Freq. Stability NVNT n40 5230MHz Ant1 0 Minutes

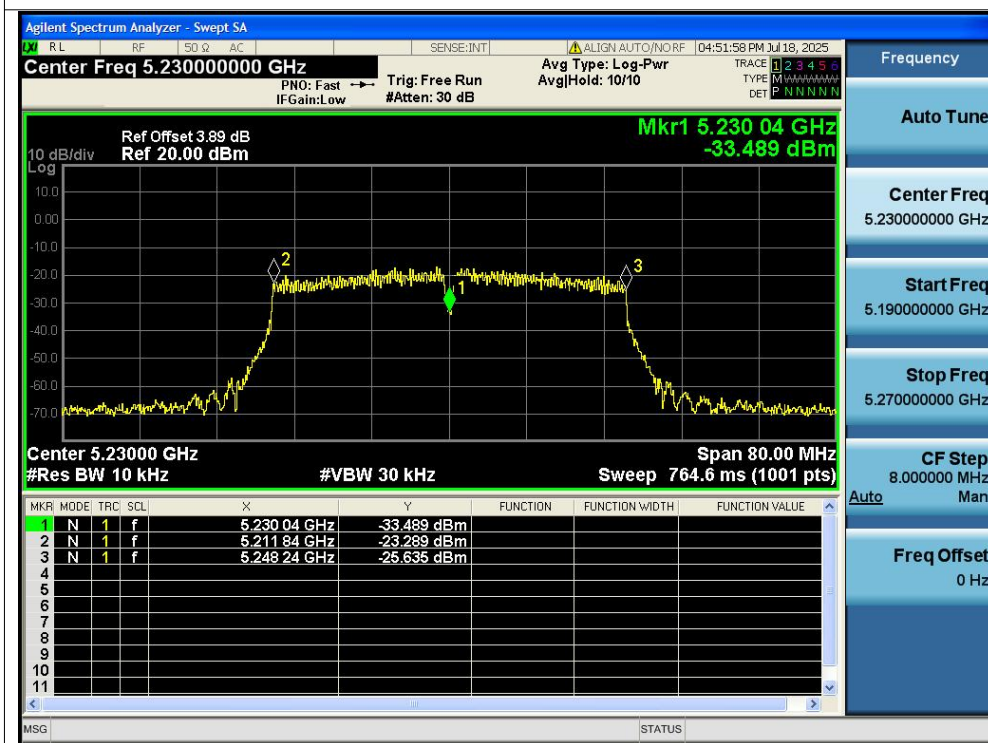





Freq. Stability NVNT n40 5755MHz Ant1 0 Minutes

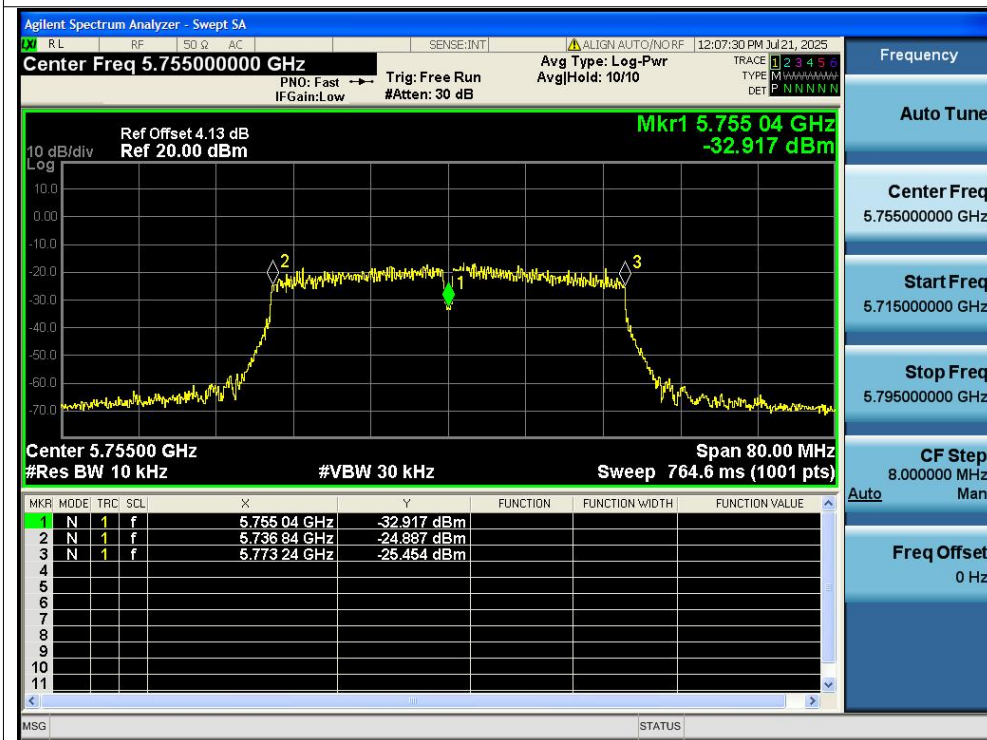


Freq. Stability NVNT n40 5795MHz Ant1 0 Minutes

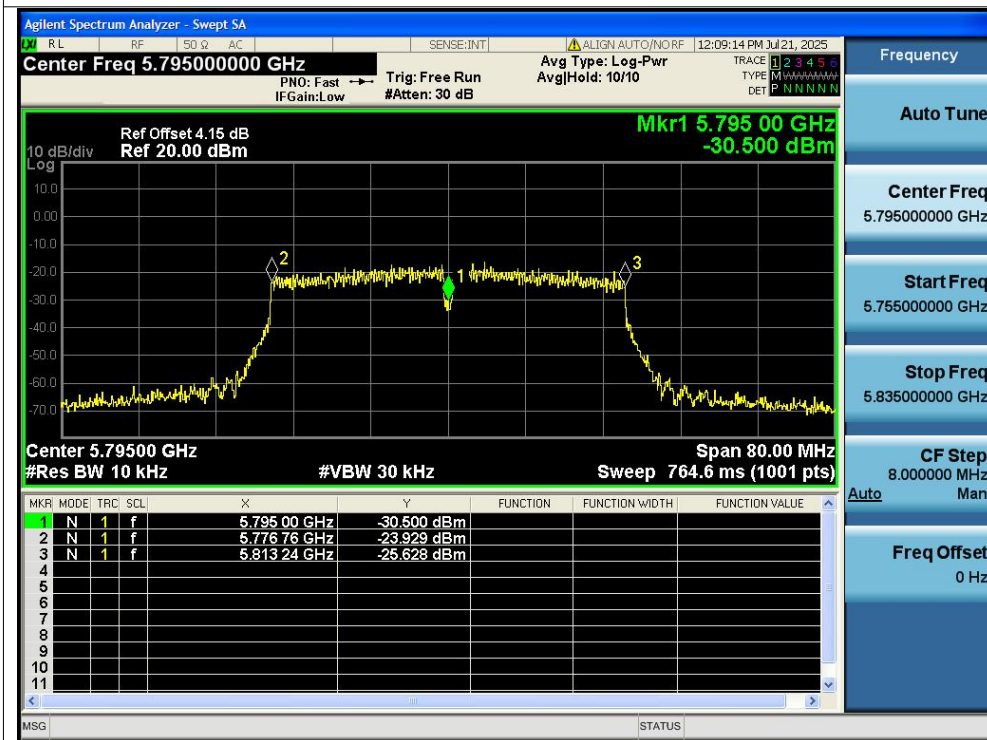


Freq. Stability NVNT ac20 5180MHz Ant1 0 Minutes

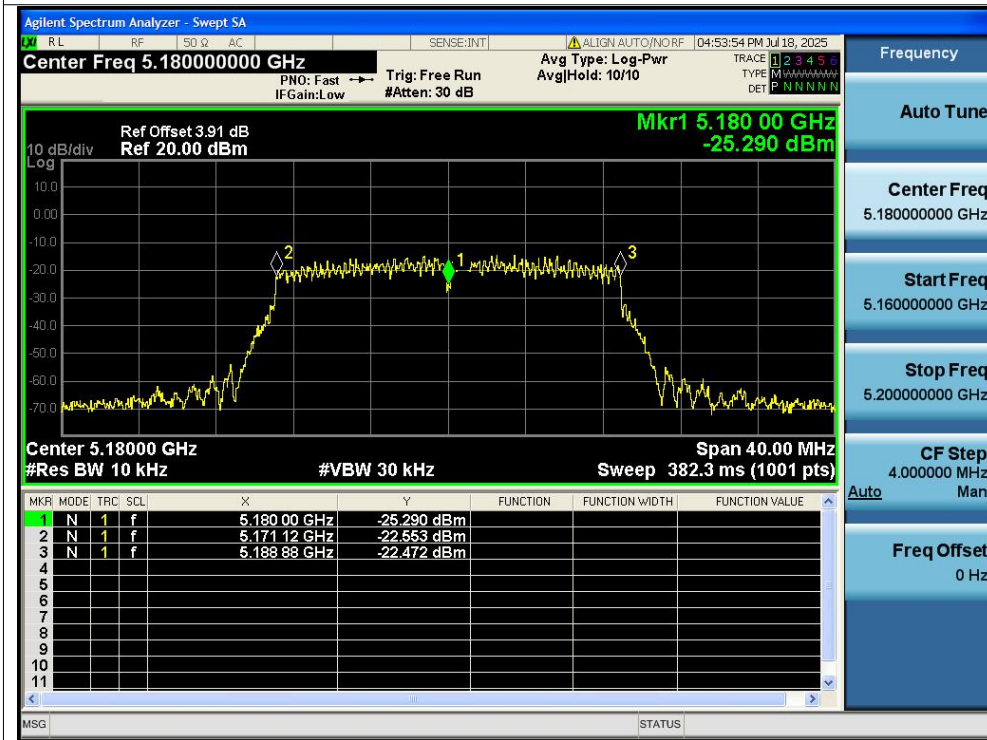


Freq. Stability NVNT ac20 5200MHz Ant1 0 Minutes

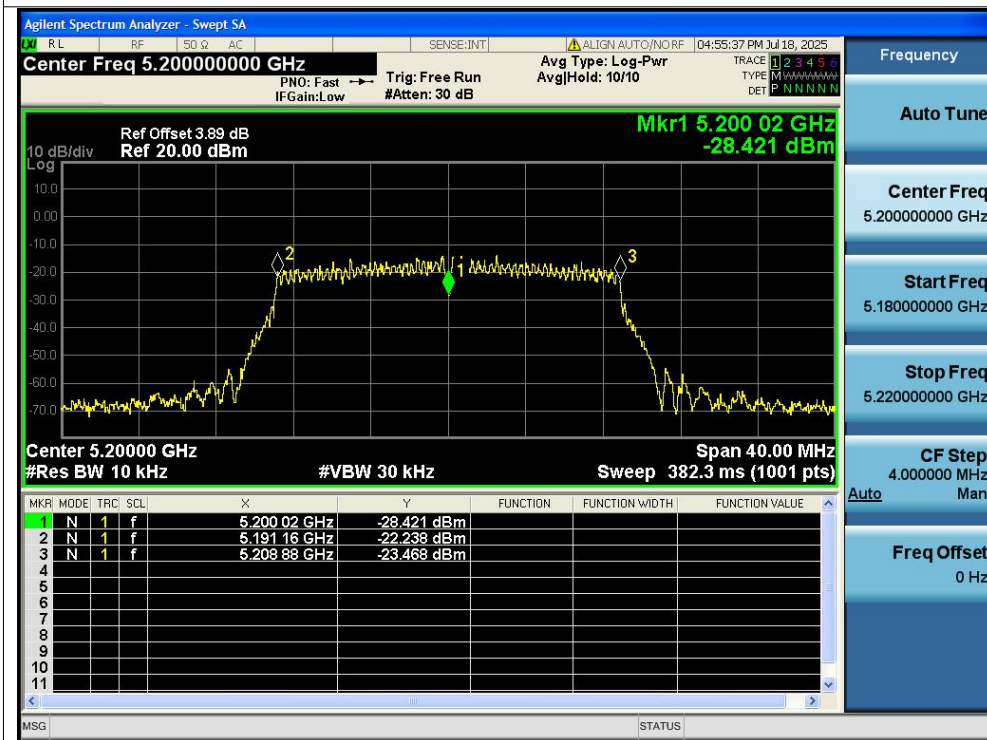

Freq. Stability NVNT ac20 5240MHz Ant1 0 Minutes

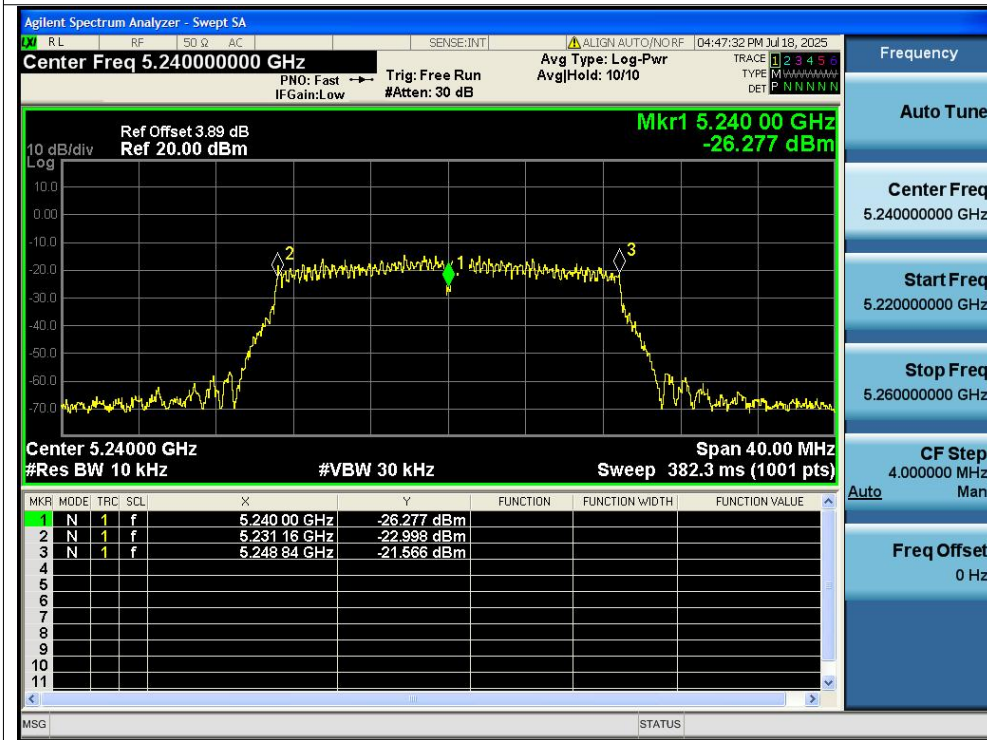


Freq. Stability NVNT ac20 5745MHz Ant1 0 Minutes

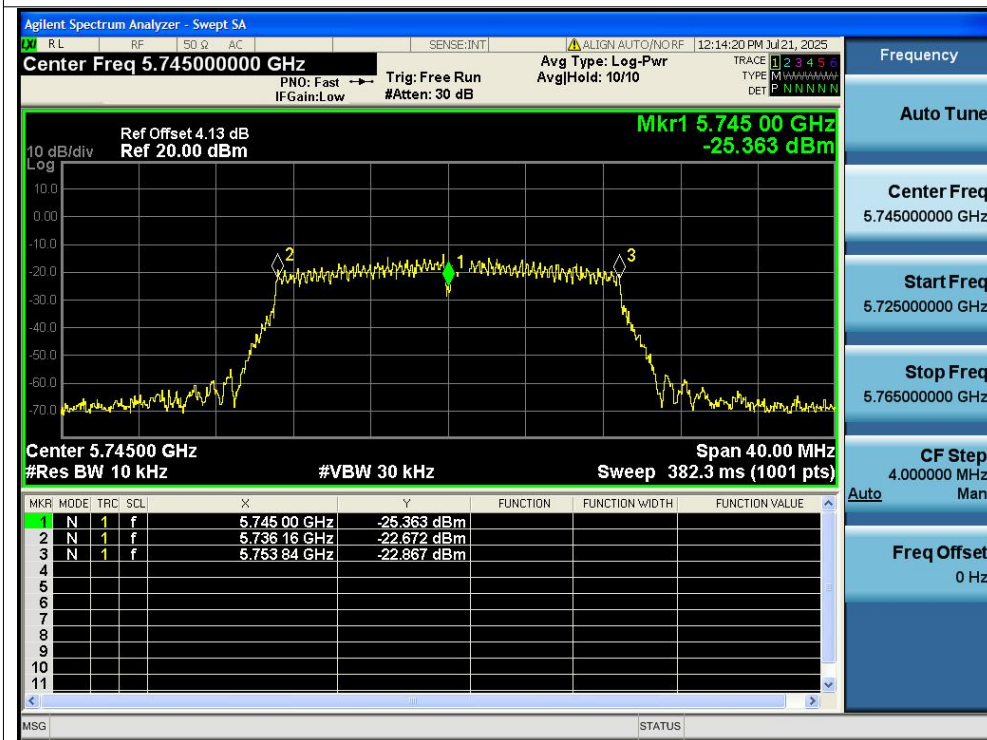



Freq. Stability NVNT ac20 5785MHz Ant1 0 Minutes

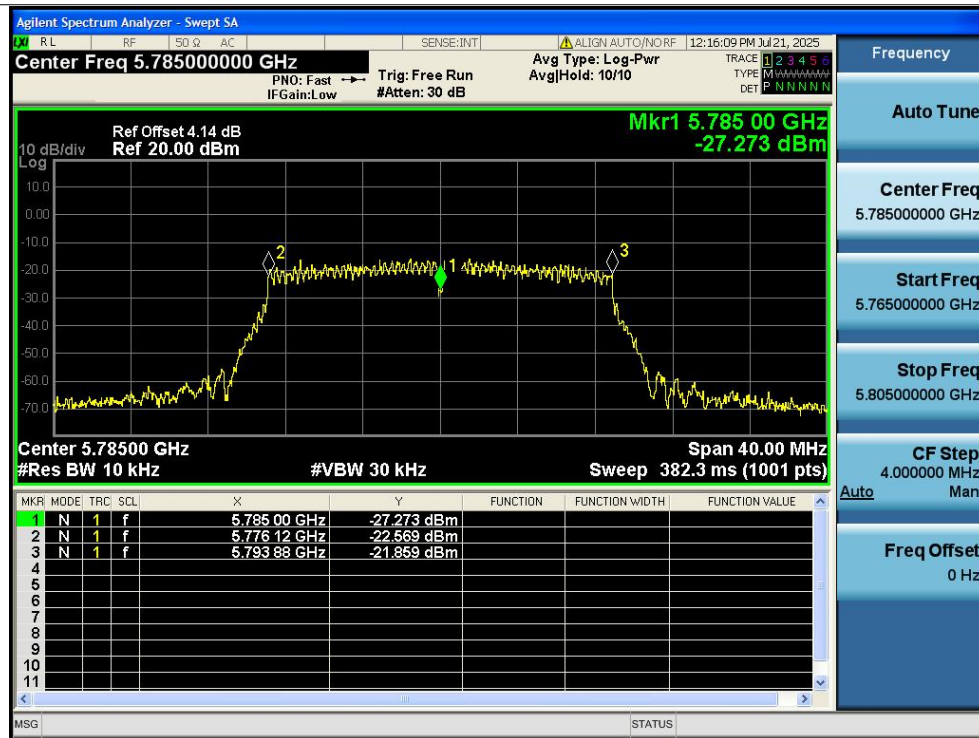

Freq. Stability NVNT ac20 5825MHz Ant1 0 Minutes

