

便携式音箱

使用手册

规格参数

产品型号	X8	输入电源	Type-C 5V/2A
显示版本	V5.1	响应频率	80Hz-18KHz
蓝牙范围	≥18M (无阻隔)	失真度	≤1%
喇叭功率	2*15W	播放时间	36H (随音量变化)
电源容量	3.7V/3600mAh	充电时长	≤5H

按键功能

- ① 音量加/下一曲
- ② 音量减/上一曲
- ③ 播放/暂停/快进/7WS互连
- ④ 播放/暂停, 播放/结束; 充电; 录音/充电
- ⑤ 开/关机
- ⑥ 开/关电源
- ⑦ 扬声器孔位置
- ⑧ 充电口
- ⑨ TF卡接口
- ⑩ 手电筒灯孔
- ⑪ 音频连接孔
- ⑫ USB/USB充电接口

按鍵功能

- ① 螢幕加/下一曲
- ② 螢幕減/上一曲
- ③ 播放/停止/快/慢/WS/BS
- ④ 播放/停止、快/慢、暫停、錄音/動手
- ⑤ 快/慢
- ⑥ 切換充電
- ⑦ 螢幕背光位置
- ⑧ 麥克風
- ⑨ T+T 卡槽
- ⑩ 手電筒開關
- ⑪ 重繞線插孔
- ⑫ USB/AV 充電接口

耳牙连接功能

- a. 开机后返回灯闪, 音箱进入耳牙特设状态;
- b. 打开耳牙连接, 音箱发出“X8”点音;
- c. 将键一按后音箱灯闪, 灯常亮, 耳牙连接成功。

TWS功能连接步骤

- a. 开机后返回灯闪, 音箱进入耳牙特设状态 (需两机距离 < 8m 且均已开机);
- b. 选择其中一个设备为主设备, 双击“M”键, 伴舞提示音后灯闪, 音箱进入TWS配对状态;
- c. 将键一按后音箱灯闪, 主音箱播放灯常亮, 主音箱显示内容, 此时只有一个“X8”耳牙特设点音, TWS配对成功;
- d. 手机播放音乐“X8”点音, 再次连接。

耳牙连接成功后的步骤, 再次开启会自动进行TWS连接。

TWS模式下, 遇此时只有主音箱响功能。

AUX插线连接

将AUX线连接至音和音箱后可继续听。

蓝牙播放 (最高支持64G)

将TWS耳机插入, 将键一按后音箱, 音箱自动连接手机, 此连接为蓝牙 (支持A2DP/L2CAP/WMP3格式播放)。

USB播放 (最高支持128G)

将USB插入, 将键一按后音箱, 音箱自动读取音乐, 此连接为USB (支持AFLAC/WMP3格式播放)。

图标	操作	功能说明
	短按	短按25秒/关机
	长按	音筒无电状态, 长按85位
	短按	音量加
	长按	长按25下一曲
	短按	音量减
	长按	长按25上一曲
	短按	播放模式切换: 按照 USB—TF—AUX 功能顺序切换
	长按	长按25蓝牙连接功能 长按55清除和记忆
	双击	进入/退出TW5模式
	短按	a. 播放/暂停音乐 b. 接听/来电铃声 c. 语音模式启动语音助手
	长按	长按25切换模式
	双击	蓝牙模式下 双击来电回拨
	手机电话开关	
	关机状态下: 短按开灯, 然后短按是 SOS 闪光 再短按短灯, 取消操作 开机状态下: 短按开灯, 然后短按是 SOS 闪光 再短按短灯, 取消操作	

为确保安全,请先详细阅读及遵守以下安全提示

1.设备符合GB8898-2011; GB13837-2012; GB17625.1-2012标准。

2.此产品不能服用,请放置于儿童不能拿取的地方以防意外;

3.请勿将机器放置在高湿环境,包括太阳直射;

4.请勿将机器放置在靠近火源或使其其他过热环境;

5.请勿将机器放置于潮湿或湿度太大的地方;

6.除了下提供的充电线以外,请勿使用其他的方法为机器充电;

7.请勿将机器拆开,禁止企图修理、改造机器的任何行为,

邮箱: support@birdie79store.com
 网址: www.birdie79store.com

维修记录	故障日期	故障原因及处理情况
产品型号		
购买版本号		
购买日期		
联系电话		
收货地址		

birdie79

X8

Portable Speaker



Manual

BUTTON FUNCTION

1 Volume plus/next track
 2 Volume down/previous track
 3 Playback mode switching / TWIS / record/repeat
 4 Play/Pause, Answering call, Redial, Voice assistant
 5 Power on/off
 6 Flashlight on/off
 7 Strap piercing position
 8 Charging port
 9 TF card socket
 10 Flashlight sensor
 11 Audio cable jack
 12 U disk/USB charging socket

- **A** wireless flasher after power on, and the speaker enters the blue light flashing state
- **B** turn on the blue light of the main machine, search for the blue light flasher, and the speaker enters the blue light flashing state
- **C** With a beep, the blue light of the BT is always on, and the Bluetooth connection is successful

• **TWS interconnect and playback**

- **1** Two "XS" enter the Bluetooth waiting state at the same time (Distance 1 meter and Bluetooth is turned on)
- **2** Select one of them as the main speaker. Double-click the "B" button on the main speaker. The main speaker enters the TWS master state, and the other will enter TWS for automatic pairing.
- **3** When the main speaker and the sub speaker are successfully connected, the blue light of the main speakers are flashing. At this time, there are only one "XS" in the TWS state is successful.
- **4** Press the BT name "XS" on the mobile phone and connect.
- **5** The machine that has been successfully paired by TWS will be the main speaker, and the other will be the sub speaker.
- **6** In TWS mode, only the main speaker has the function of fast forward, fast reverse, and play/pause.

• **AUX cable playback**

Connect the AUX cable (headphone and the speaker to play)

- **A** Micro SD card playback (up to 64G)
- **B** After inserting the Micro SD card into the slot, when a beep, the speaker will automatically read the card and play the blue light flasher (supports AUX playback and Micro SD playback)
- **C** USB disk playback (up to 128G)
- **D** After inserting the U disk into the speaker, supported by a prompt, the speaker will automatically read the U disk to play the blue light flasher (supports AUX playback and U disk playback)
- **E** The blue light flashing supports: `FILE/LANG/WMP/MP3` format playback

Button	Operating	Function Description
	Short press	Short press 2s to turn on/off
	Long press	The speaker crashes, long press 8s to reset
	Short press	Volume plus
	Long press	Long press 2s to the next song
	Short press	Volume minus
	Long press	Long press 3s to clear the music playing
	Short press	Playback mode switching: Follow BT → USB → AUX Feature under setting
	Long press	Long press 2s to disconnect the Bluetooth connection, 6s to clear the Bluetooth memory
	Double click	Switch to TWS mode
	Short press	a. Play/Pause music b. Answering the hanging calls c. Bluetooth mode is start the voice assistant
	Long press	Long press 2s to reject an incoming call
	Double click	LED mode, flexible to set the light color
	Flashlight switch	In the shutdown state, long press to turn on the light, then short press to turn the SOS, and then short Press to turn off the light. Cycle sequentially
	Flashlight switch	Power: Short press to turn on the light, then short press to turn the SOS, and then short press to turn off the light. Cycle sequentially

Within 12 months from the day after you sign for the Product, if there is a performance failure listed in the **Speaker Performance Failure Table**, it will be determined by the above-seller service center and you can enjoy free maintenance service.

Speaker Performance Failure Table

① The device is not charged, or cannot be turned on normally after charging.
 ② Power supply cannot be used normally.
 ③ The device can't make a sound.
 The device function cannot be used normally due to other External failures

No Three Guarantees Service:
 Unauthorized maintenance, misuse, collision, negligence, abuse, liquid ingresses, accident, fire, lightning, etc.
 Improper use of accessories other than this product, or tearing up (referring the label)
 The validity period of the three guarantees service has expired.
 Damage caused by force majeure such as fire, flood, lightning strikes, etc.
 Does not meet the performance failures listed in the **Speaker Performance Failure Table**.

For other reasons, this product and its accessories have performance failures listed in the **Speaker Performance Failure Table**.

The equipment comes with the standard ISO 8896-2012 <http://www.iso.org/obp/ui/#iso:code:381:8896:2012>,
The GTS 150 is to be taken, please be aware that the use of the much of children to prevent
accidents;
Do not place the machine in the high temperature environment, including direct sunlight
and the machine may fire from sources or other overheated environments;
Do not place the machine in a humid or high place;
In addition to the provided charging cable, please do not try to use other methods to
charge the machine;
Do not disassemble the machine, and prohibit any attempt to repair or modify the
machine;
Please pay attention to drops, impacts, scratches or other behaviors that affect the
function of the machine. If there is any damage, such as hot, high temperature
information, please stop using the product and equipment immediately
and contact the merchant;
If the machine produces abnormal sound, higher than normal temperature,
and equipment cannot be used for reducing the machine immediately
and contact the merchant;
If the battery is "correctly repaired", there is a risk of burn, and only the same type of
battery can be used for replacement;
Using the machine at high volume for a long time may cause damage to your hearing.

E-mail: support@birdie79.com
 Website: www.birdie79.com

3. Warranty equipment during the warranty period, in the state of normal use and maintenance, there are problems and failures in machine materials and parts. Upon verification, we will provide repair services free of charge.

4. During the warranty period, if the following events occur, the company reserves the right to refuse service or collect materials and service fees according to the situation

- (1) Cannot provide this warranty card valid proof of purchase
- (2) Product failure and damage caused by improper use by users
- (3) Man-made abnormal external force damage
- (4) Damage caused by assembly by maintenance service personnel not authorized by our company
- (5) Failure or damage caused by natural disasters or other force majeure factors
- (6) Others intentionally damaged

5. Our company reserves the right to modify and explain the content

Product information		
Maintenance Records	Date	Fault description
Product Model		
Customer Name		
Customer Phone		
Purchase Date		
Shipping Address		

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.