


Base Station Connection System


ESL Management

- Once the base station is connected to the system, the ESLs will automatically come online.
- You must select the store where the ESLs are located before performing any operations on them.

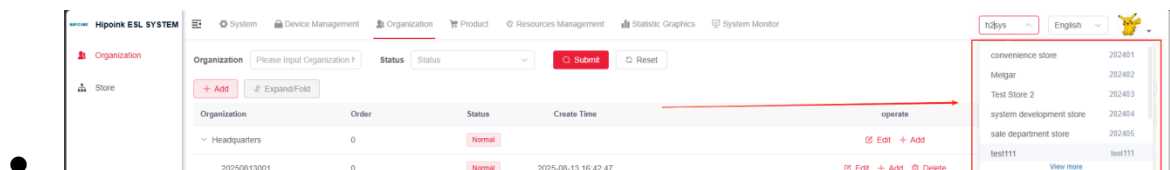


Bind ESL

- Select the corresponding template and enter the product code.

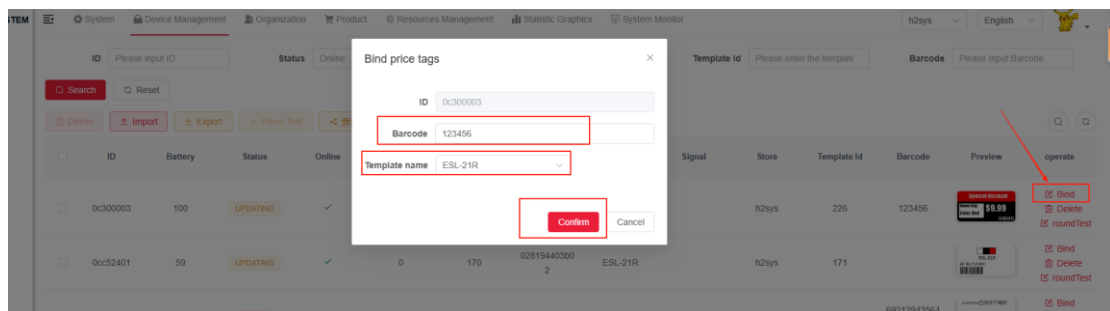

Unbind ESL


- Unlink the ESL from the product. After unbinding, price updates will no longer refresh on the ESL.

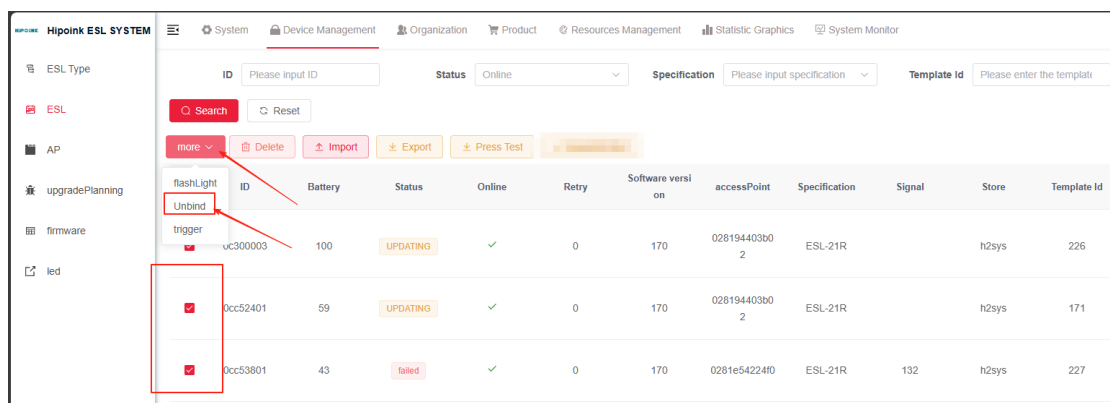

ESL Flashing Light


Add Flashing Light Type

- Click the Flashing Light menu (Device Management - led - add)

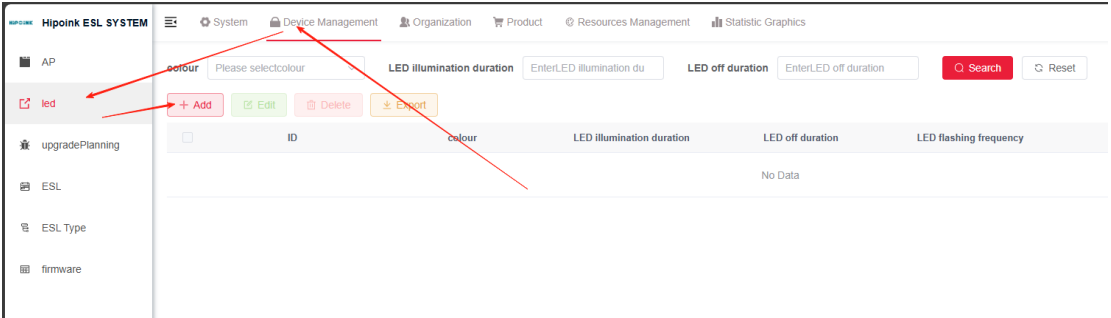


Product Management

Add Product

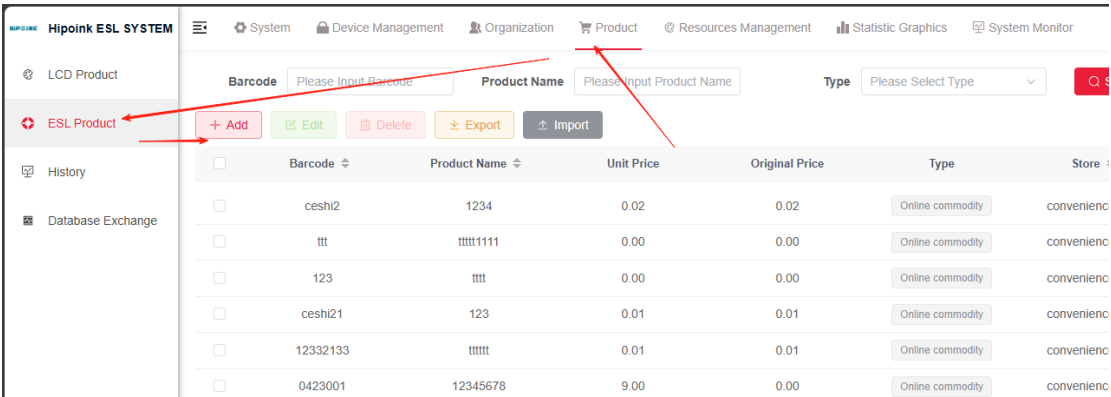

Edit Product

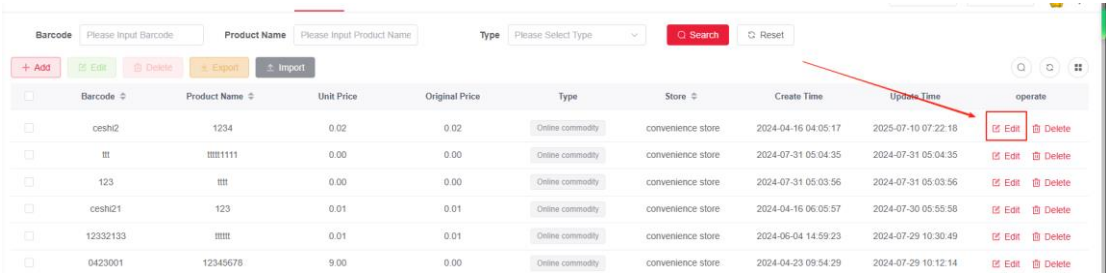

Import Products from Excel

- Export the template, fill in product information accordingly, and re-import.

A	B	C	D	E	F	G	H	I	
Barcode	Product Name	Specification	Grade	Unit Price	Unit	Original Price	MFRS	Origin	QR
ceshi2	1234			0.02		0.02	mfrs		
ceshi21	123			0.01		0.01	mfrs		
0423001	12345678			9.00		0.00	mfrs		
12332133	ttttt			0.01		0.01	mfrs		
123	tttt			0.00		0.00	v		
ttt	tttt1111			0.00		0.00	mfrs		

POS System Integration

- With scale integration: Select the “Dingjian Scale” directly in the POS configuration, and enter the system backend address.
- Without scale integration: Please contact IT support personnel.

Resource Management

Template Management

Add Template


- Click ADD, select Model number then submit

The screenshot shows the 'Hipoint ESL SYSTEM' interface. On the left, there is a sidebar with 'Template Manage' selected. The main area shows a table with columns 'Template Id', 'Template name', and 'Template'. A red arrow points from the 'Template Manage' sidebar to the 'Add' button in the top right. Another red arrow points from the 'Add' button to the 'Add' dialog box. The dialog box has the following fields:


- * Template name: Please enter a template name
- Template classification: Online commodity
- Model number: ESL-21R
- Direction: Horizontal
- * Usable: ☒ Normal ☐ Unused
- * default: ☒ not default ☐ default
- Submit button (highlighted with a red box)
- Cancel button

Template Design


- Click “Design” to start editing the template.

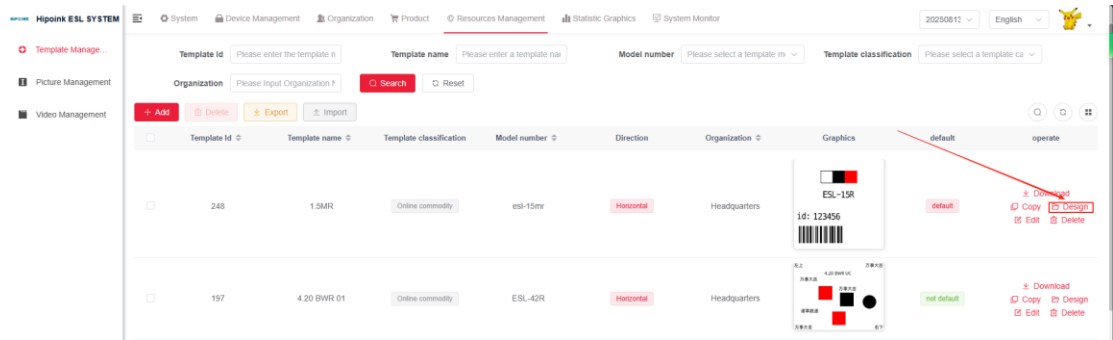

Bind Product Attributes

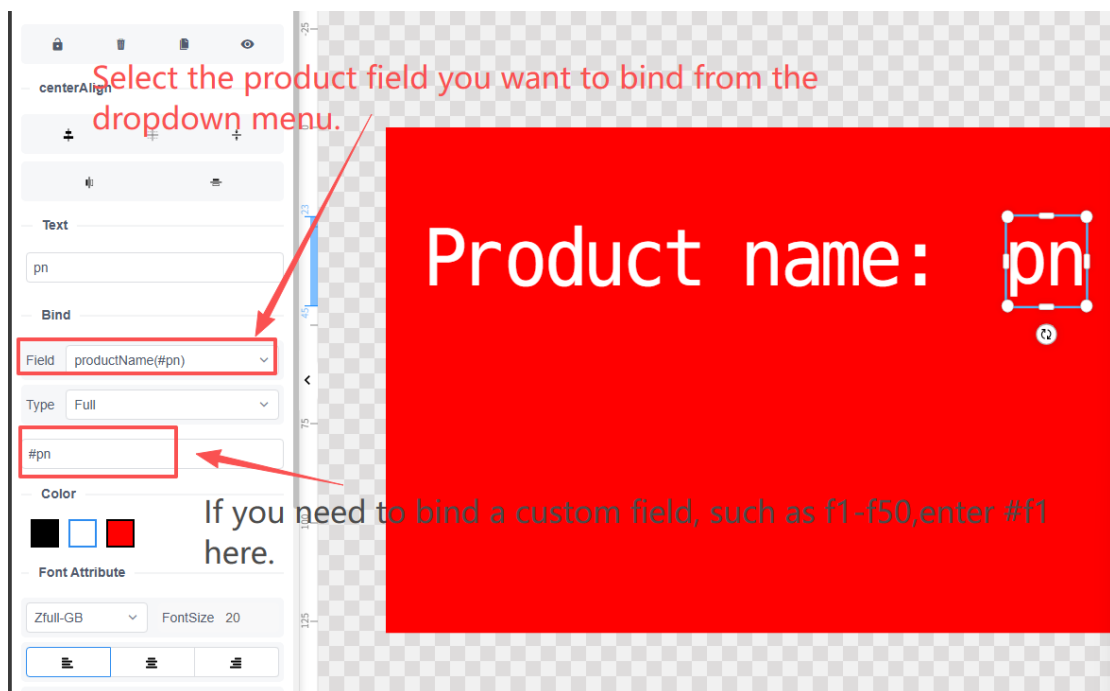

Product Attribute — Configure Different Font Sizes for Integer and Decimal Parts of Price

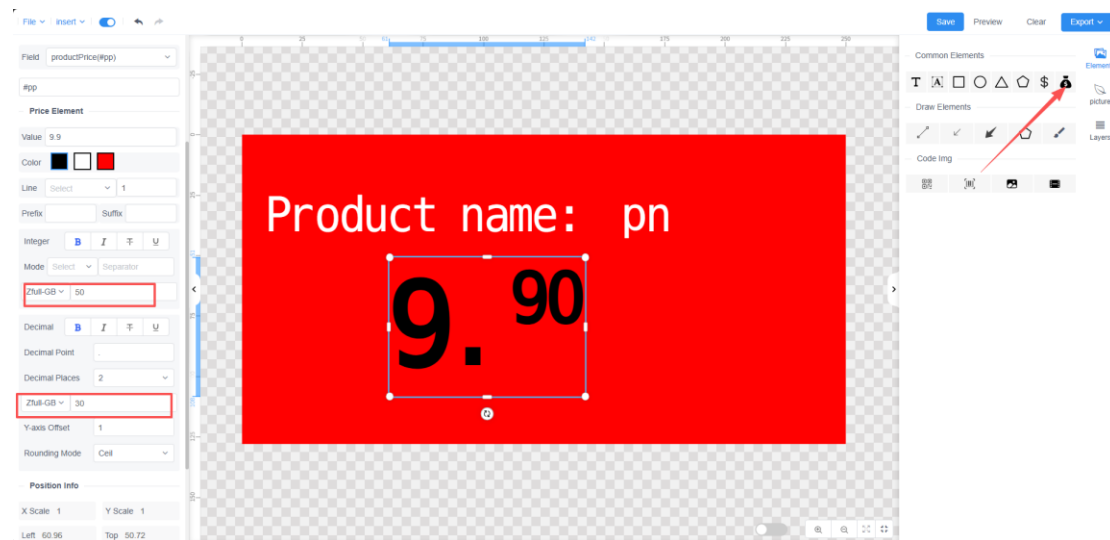

◆ **Price Element:** A commonly used component for displaying prices.

Full price display (supports integer + decimal parts).

Customizable decimal format:

Set the number of decimal places.

Apply rounding rules.

Flexible styling:


Different fonts/sizes for integer vs. decimal portions.

Add prefixes/suffixes (e.g., \$, €, /unit).


Alignment options: Center, right-align.

Additional formatting:

Thousand separators, Slash symbols

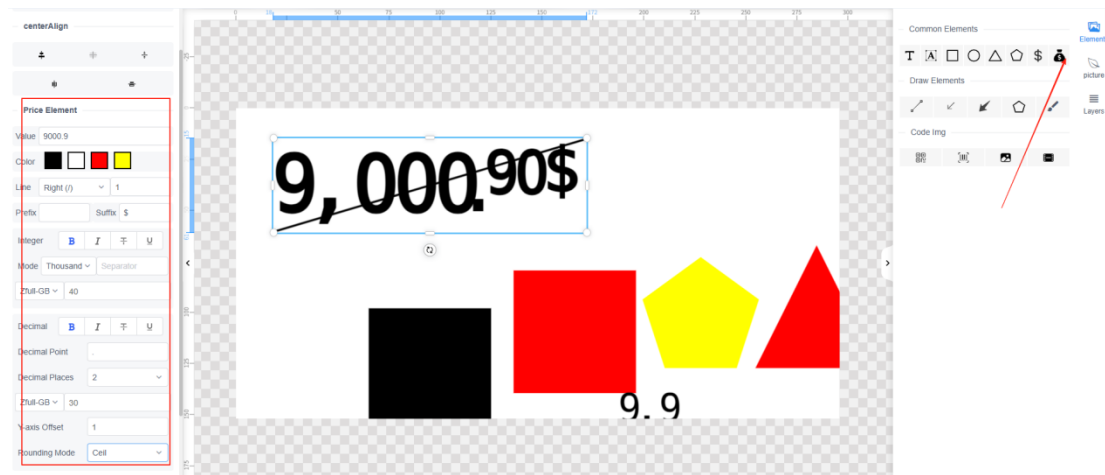

Product Attribute — Configure Product Barcode and QR Code

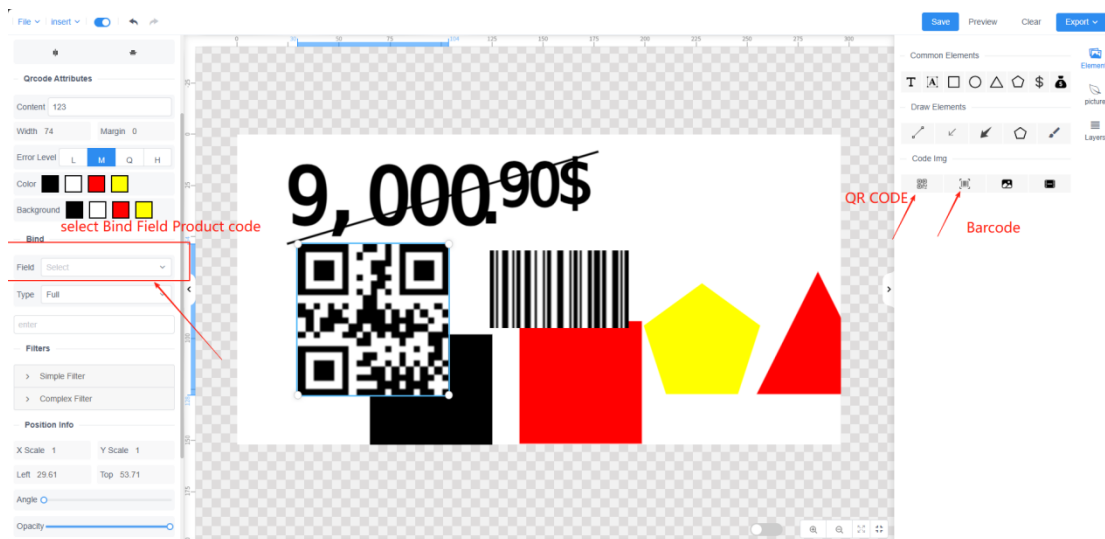

Product Attribute — Bind Product Image


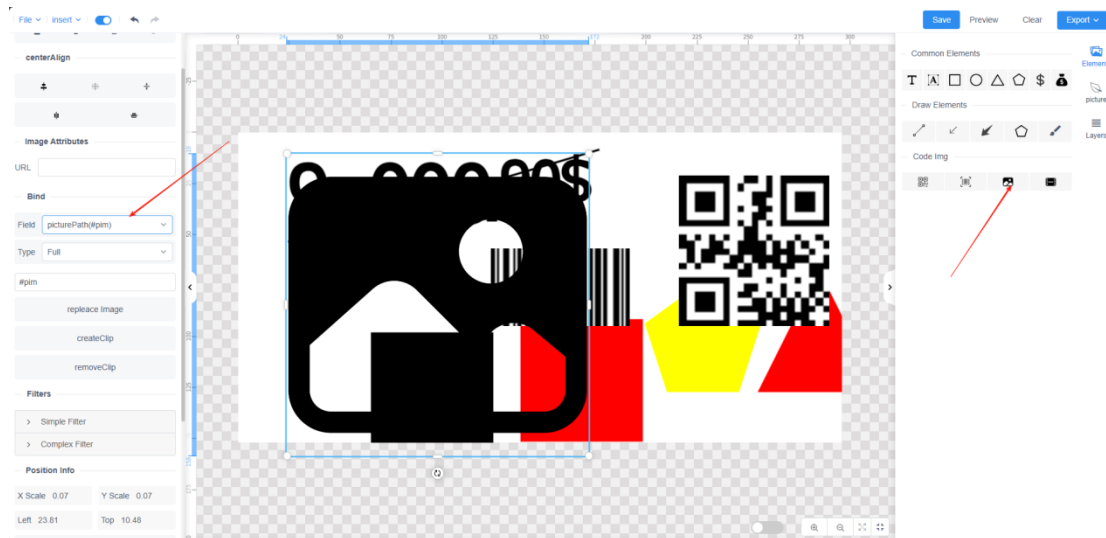



Image Management

Upload product images for selection and binding.

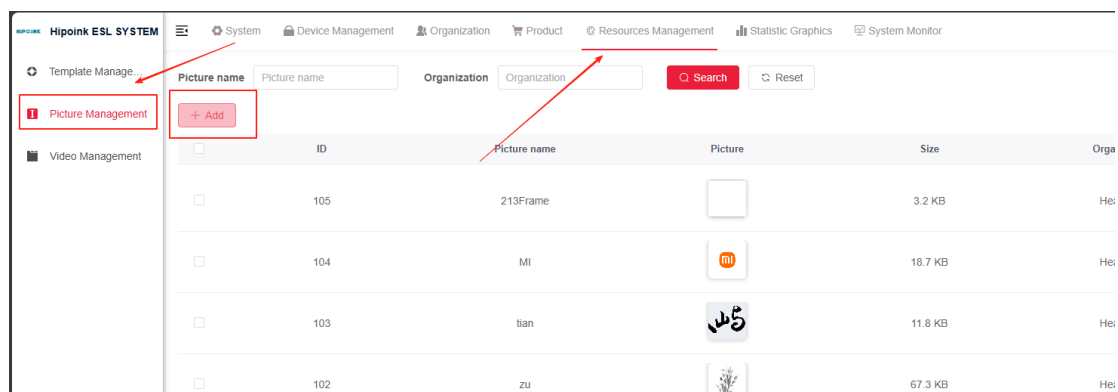


Video Management

Upload product videos for selection and display.

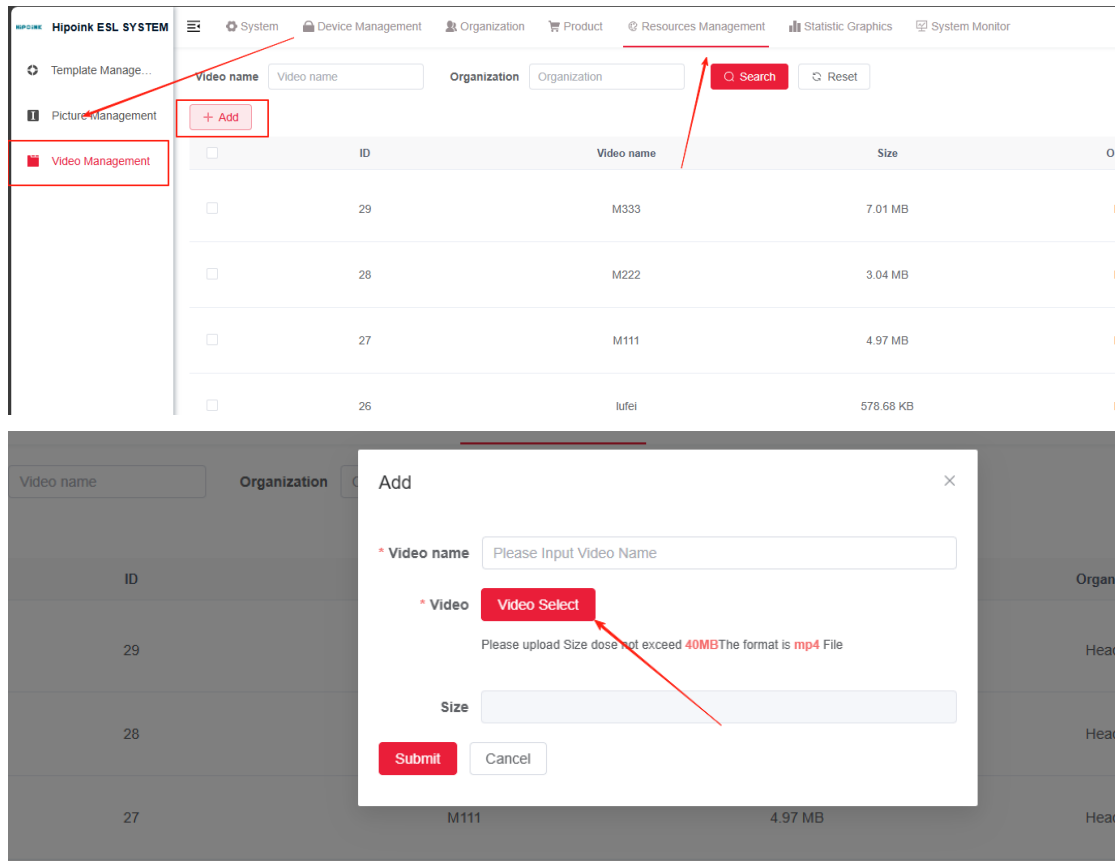

Organization Management

- Log in with an account to create an organization.

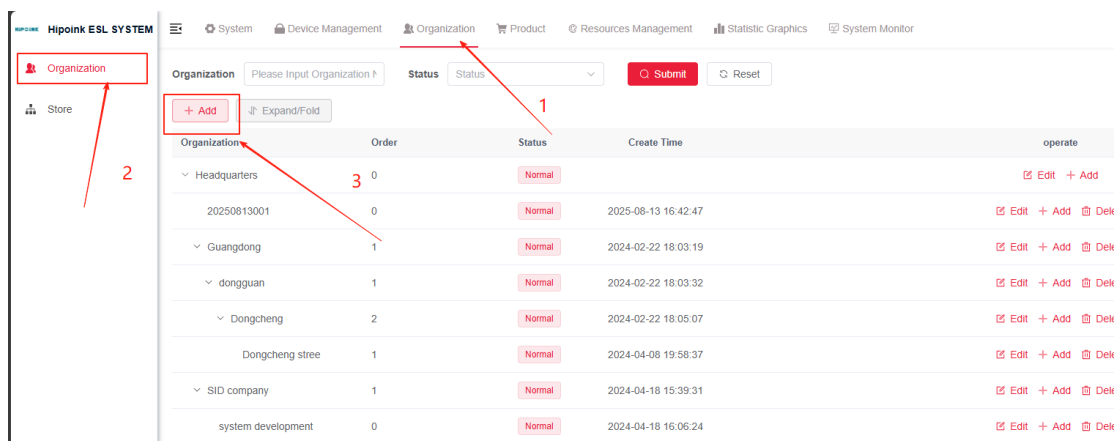

- Select a parent organization if applicable.

Add

* Superior organization: Headquarters

* Organization: Please Input Organization Name

Order: []

Status: ☒ Normal ☐ Unused

Submit Cancel

Normal 2024-02-22 18:05:07

Store Management

An organization can manage multiple stores (one-to-many relationship).

Add

* Store code: 1111

* Store: store name

Affiliated organization: Clear selection of affiliated

Store address: Please enter the store address

auto refresh: ☒ Yes ☐ No

Submit Cancel

User Management

Add new users and assign roles.

Path: System → User → Add User → Fill in user details (role, account, password, organization). One organization can have multiple users.

The screenshot shows a web application interface with a top navigation bar containing links for System, Device Management, Organization, Product, Resources Management, Statistic Graphics, and System Monitor. On the left, there is a tree view of the organization structure under the heading 'Please Input Organization Name'. The tree includes 'Headquarters' (20250813001), 'Guangdong' (dongguan), 'Dongcheng' (Dongcheng stree), 'SID company' (system development, sale department, h2sys), and 'JP' (Tokyo). A '+ Add' button is visible next to the tree. The main area displays a table with columns for 'Username' and 'Create Time'. A modal dialog titled 'Add' is open in the center, featuring the following fields and controls:

- * NickName**: Text input with placeholder 'Please input nick name'.
- * Organization**: Dropdown menu with 'Select Organization'.
- Phone**: Text input with a country code dropdown (+86) and a length indicator (0 / 11).
- E-mail**: Text input with placeholder 'Please Input Correct E-mail'.
- * Username**: Text input with placeholder 'Please Input Username'.
- * Password**: Text input with placeholder 'Please Input Password'.
- * Role**: Dropdown menu with 'Select'.
- Status**: Radio buttons for 'Normal' (selected) and 'Unused'.
- Remarks**: Text area.
- Submit**: Red button.
- Cancel**: Grey button.

Below the dialog, a table shows existing users with columns for Username, Create Time, and Status. The visible rows are:

Username	Create Time	Status
21	test123	测试
h2sys		

Role Management

System administrators can add, modify, or delete roles. Each organization can assign roles to its sub-organizations. For detailed steps, see the “User Management” section.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.