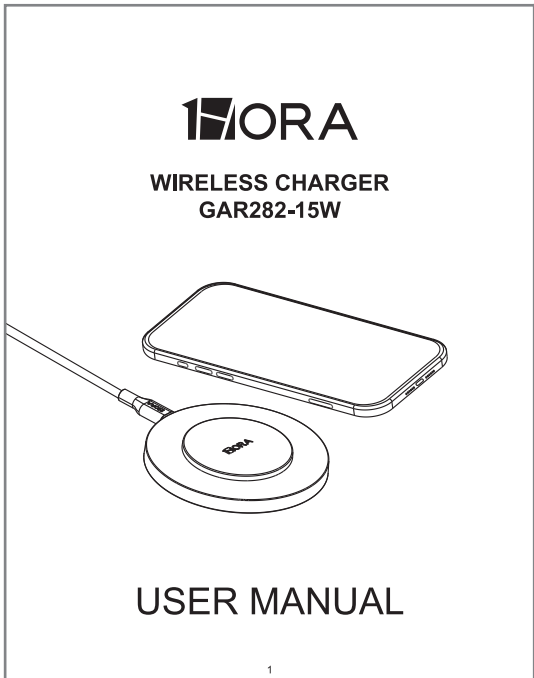


### OPERATING STATUS INDICATOR LIGHTS

- [illegible]

- PE** Ao ligar: A luz azul acende por 3 segundos e depois muda para verde fixa (Em espera)  
Em espera: Luz verde fixa  
Carregando: Luz azul fixa  
Totalmente carregado: Luz verde fixa  
FOD (Alarme de Detecção de Objeto Estranho): Luzes azul e verde piscando

- RU** Включение: синий индикатор горит в течение 3 секунд, затем переключается на зеленый свет, и так горит постоянно (режим ожидания)  
 Режим ожидания: зеленый свет горит постоянно  
 Зарядка: синий свет горит постоянно  
 Полностью заряжено: зеленый свет горит постоянно  
 Оповещение об обнаружении посторонних предметов (ПОД): синий и зеленый индикаторы мигают

## INSTRUCTIONS FOR USE

- EN** Connect the wireless charger to the power adapter and turn on the wireless charger. It is recommended to use a power adapter with a power of 10W or above to ensure a fast wireless charging experience.
- FR** 2. Branchez le chargeur sans fil horizontalement au centre du chargeur sans fil jusqu'à ce que la charge commence.
- DE** 2. Das Kabellos-Ladegerät an das Netzteil anschließen und einschalten. Für ein schnelles kabelloses Aufladen wird ein Netzteil mit einer Leistung von 10W oder mehr empfohlen.
- ES** 2. Conectar el cargador inalámbrico a un adaptador estándar, pulsar methodos sobre terminal.
- IT** 2. Collegare il caricatore senza fili all'adattatore di rete e accenderlo. Si consiglia di utilizzare un adattatore di rete da 10 W o più per ottenere una carica rapida e ottimale.
- PT** 2. Coloque o aparelho à horizontalmente ao centro do carregador sem fio, até que a carga comence.

- IT** 1. Collega il caricabatterie wireless all'adattatore di alimentazione a cassettoni, il cassettoni di d'alimentare un adattatore di alimentazione con una potenza di almeno 18W per garantire una ricarica wireless rapida.)  
2. Posiziona il dispositivo orizzontalmente al centro del caricabatterie wireless finché non inizia a caricare.
- ES** 1. Conecta el cargador inalámbrico al adaptador de corriente y enciende el cargador inalámbrico. (Se recomienda usar un adaptador de corriente con una potencia de 18W o superior para garantizar una experiencia de carga inalámbrica rápida)  
2. Coloque su dispositivo horizontalmente en el centro del cargador inalámbrico hasta que el dispositivo comience a cargarse.
- PT** 1. Conecte o carregador sem fio ao adaptador de energia com potência de carregador sem fio. (Recomendamos usar um adaptador de energia com potência de 18W ou superior para garantir uma experiência de carregamento sem fio rápida)  
2. Coloque o dispositivo horizontalmente no centro do carregador sem fio até que o dispositivo comence a carregar.

**FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF Exposure Information**  
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

## WARRANTY INFORMATION

Jinhuan Electronics (Shenzhen) Co., Ltd.  
A001, Building A, Galaxy WORLD, Bantian Avenue, Longgong District, Shenzhen, China

1Hora is committed to providing quality products. Our reliability does not end with the sales. 1Hora warrants this product against defects in material or workmanship. For 12 months from the original date of purchase.

## TERMS

The warranty covers only the original parts of the equipment (original equipment configuration) and the replacement and labor generated in the preparation process.

1. The warranty card is valid only if it is properly filled out and presented with a proof of purchase consisting of an original invoice or sales note indicating the date of purchase, the dealer's name, model number and serial number.
2. The company undertakes to repair or replace the products and their defective parts at no additional charge to the buyer.

THIS WARRANTY IS NOT VALID IN THE

A) When the product has been damaged by accident, disaster, neglect, transportation, misuse, abuse or failure to observe the warnings indicated in the user manual, and by modification or connection of an incompatible device to this device, or does not meet technical specifications,  
B) When the product has not been operated in accordance with the accompanying instructions for use.

C) When the product has been altered or repaired by persons not authorized by Jiatuan Electronics (Shenzhen) Co., Ltd.

Product: \_\_\_\_\_ Brand: 1 Hora  
Date of purchase: \_\_\_\_\_  
Reseller Name: \_\_\_\_\_  
Reseller address: \_\_\_\_\_ Phone: \_\_\_\_\_

Buyer address: \_\_\_\_\_ Phone: \_\_\_\_\_

Jiexuan Electronics (Shenzhen) Co., Ltd. in no event shall be liable for any damages, including lost profits or other consequential damages, resulting from the misuse or inability to use such equipment.

## CUSTOMER SERVICE

 [support@1hora.com](mailto:support@1hora.com)  [www.1hora.com](http://www.1hora.com)

## TERMS

The warranty covers only the original parts of the equipment (original equipment configuration) and the replacement and labor generated in the preparation process.

1. The warranty card is valid only if it is properly filled out and presented with a proof of purchase consisting of an original invoice or sales note indicating the date of purchase, the dealer's name, model number and serial number.

2. The company undertakes to repair or replace the products and their defective parts at no

**THIS WARRANTY IS NOT VALID IN THE FOLLOWING CASES:**

(C) When the product has been altered or repaired by persons not authorized by Jintan

Electronics (Shenzhen) Co., Ltd.  
Product: \_\_\_\_\_ Brand: HORA  
Date of purchase: \_\_\_\_\_  
Reseller Name: \_\_\_\_\_

Reseller address: \_\_\_\_\_ Phone: \_\_\_\_\_  
Buyer address: \_\_\_\_\_ Phone: \_\_\_\_\_

Jiuxian Electronics (Shenzhen) Co., Ltd. in no event shall be liable for any damages, including lost profits or other consequential damages, resulting from the misuse or inability to use such equipment.

## PRECAUTIONS

1. Before using this product, please read the instruction manual in detail and familiarize yourself with its usage to avoid risks.
2. When using this product near children, please pay close attention to the usage.
3. Please use the product in a ventilated and dry environment, away from water or other liquids.
4. When the product is not in use, please unplug the power adapter from the socket.
5. It is prohibited to disassemble, modify and repair this product without authorization. If you encounter any problems, please contact after-sales service.
6. It is recommended that the ambient temperature is  $-5^{\circ}\text{C} \sim 45^{\circ}\text{C}$ . Please do not drop or knock this product hard to avoid damage and danger.
7. Do not put magnets and metal accessories or cards on the charger.

