

Remote Control Setup Guide



CONTENTS

Remote Control

- Features 1-3
- Install The Battery 4
- Group Control Setting 5-7
- Timing Schedule 8-14

Motor Features


- Battery Motor 15
- Hardwired Motor 16

Programming

- Restart Motor 17
- Enter Setting Mode 18
- Pair Motor 19
- Check the Up/Down Direction 20
- Set Top Limit Position 21-22
- Set Bottom Limit Position 23-24
- Set Your Favorite Position 25
- Delete Favorite Limit Position 26
- Reset Top Limit Position 27
- Reset Bottom Limit Position 28
- Adjust Running Speed 29

Remote Control

Features

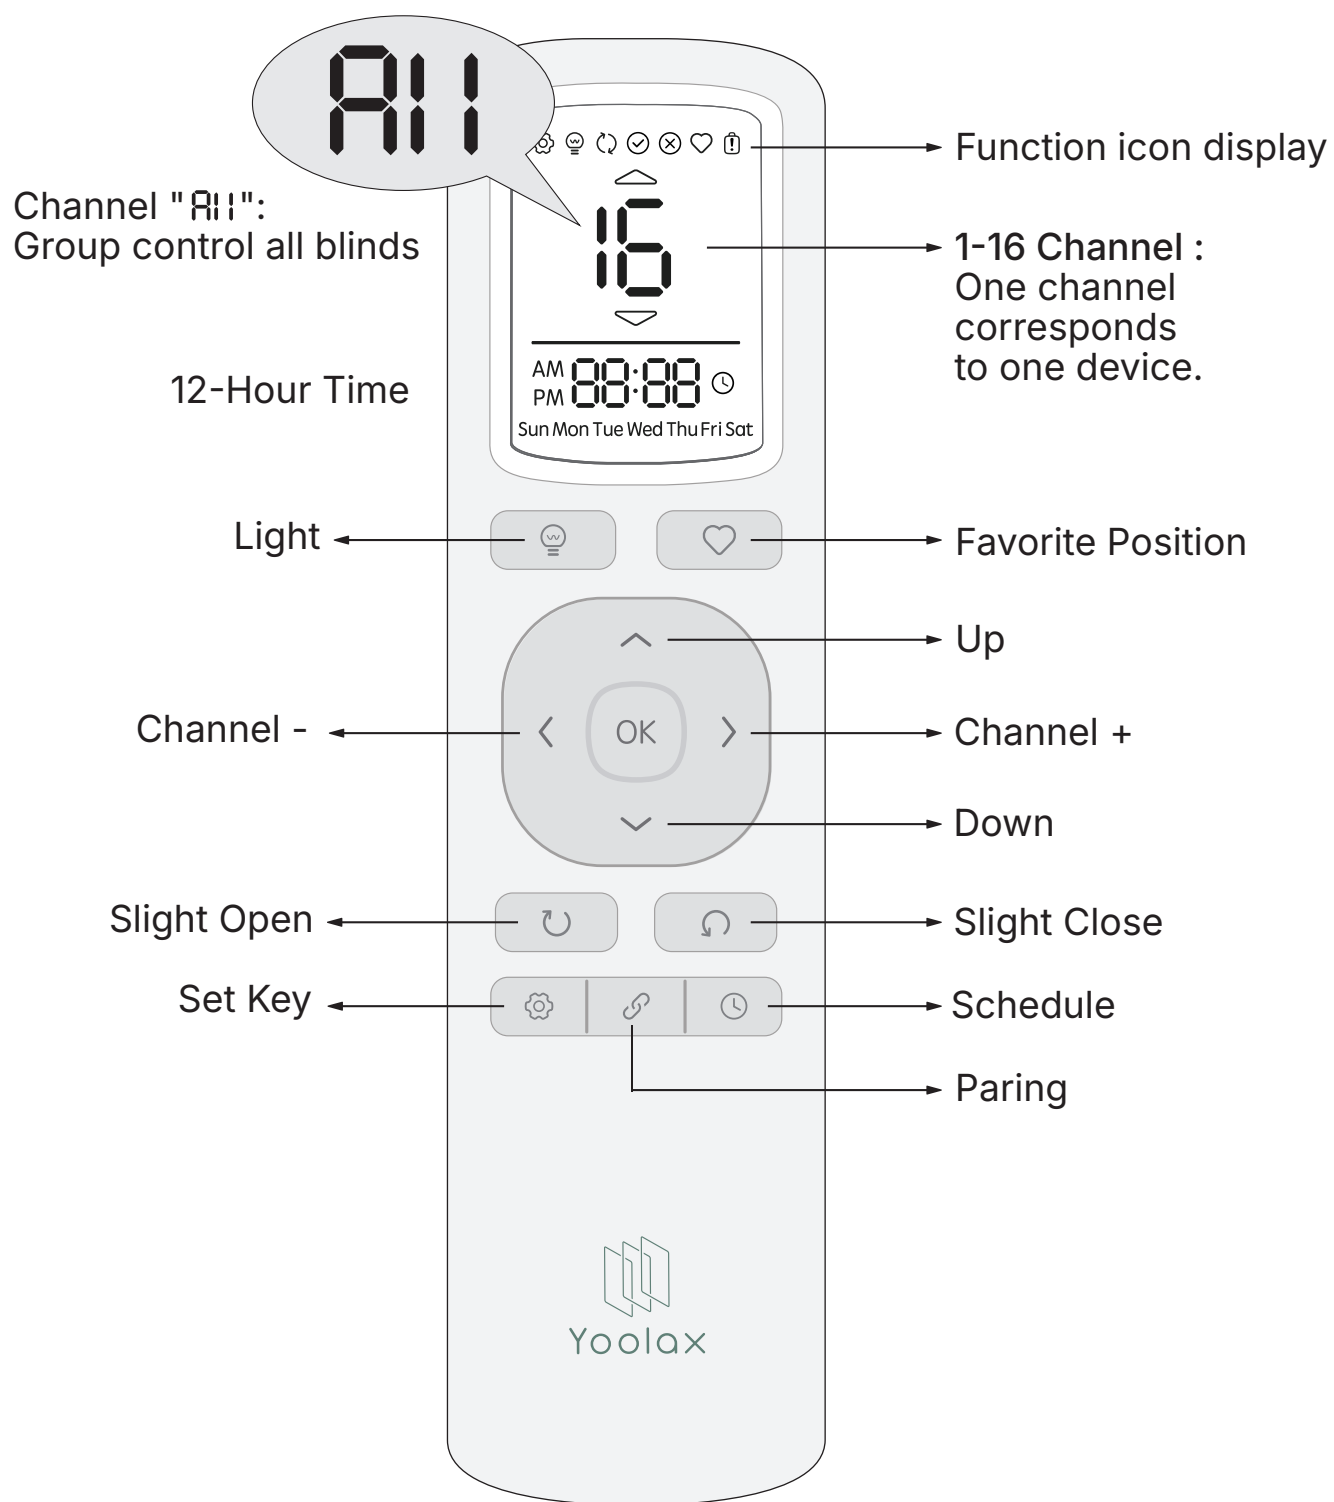


Remote Control Features

For Shangri-la Shades:



Press "↻" or "↺"

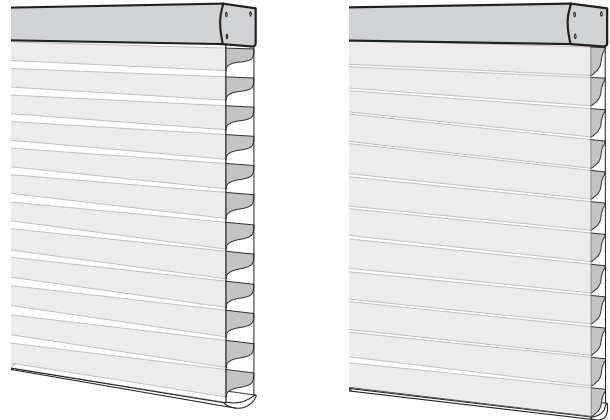

Tilt vanes




Only when Shangri-la Shades reach the bottom limit can slats be adjusted.

For Zebra Blinds:



Press "↻" or "↺"


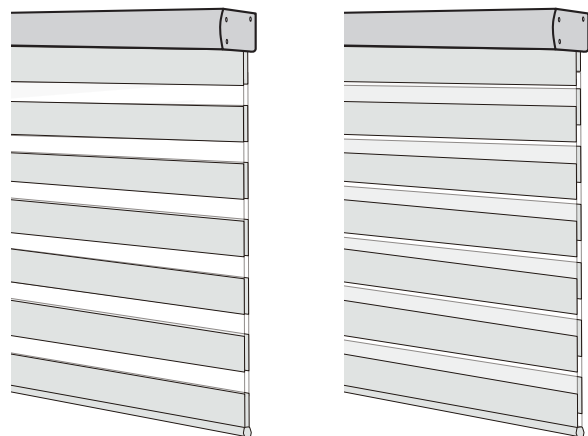


Adjust the overlap of stripes

Remote Control


Features

Group Control:

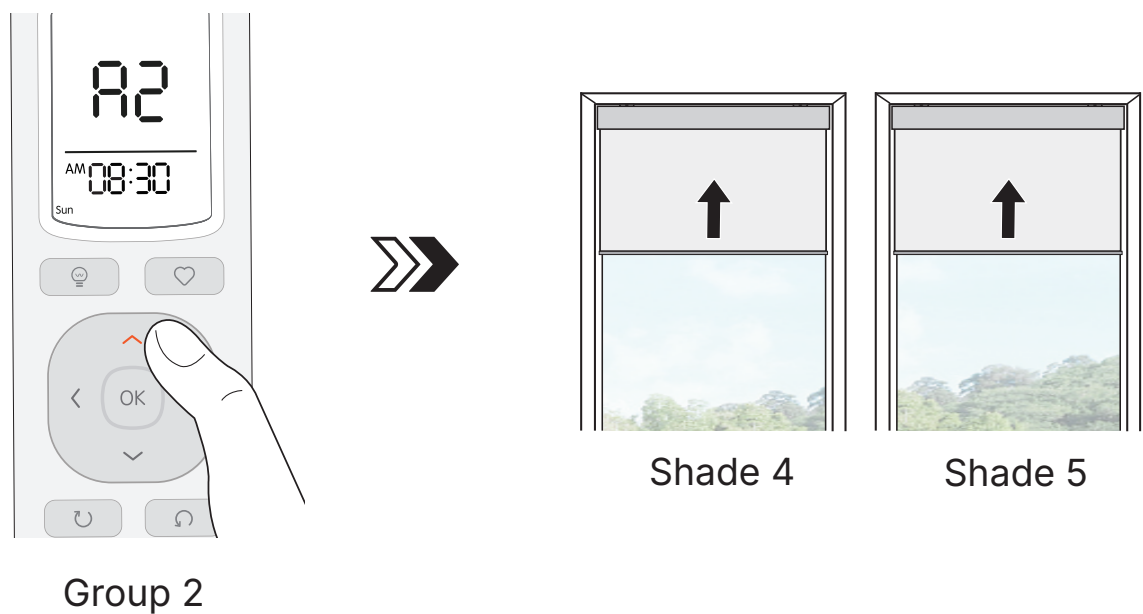
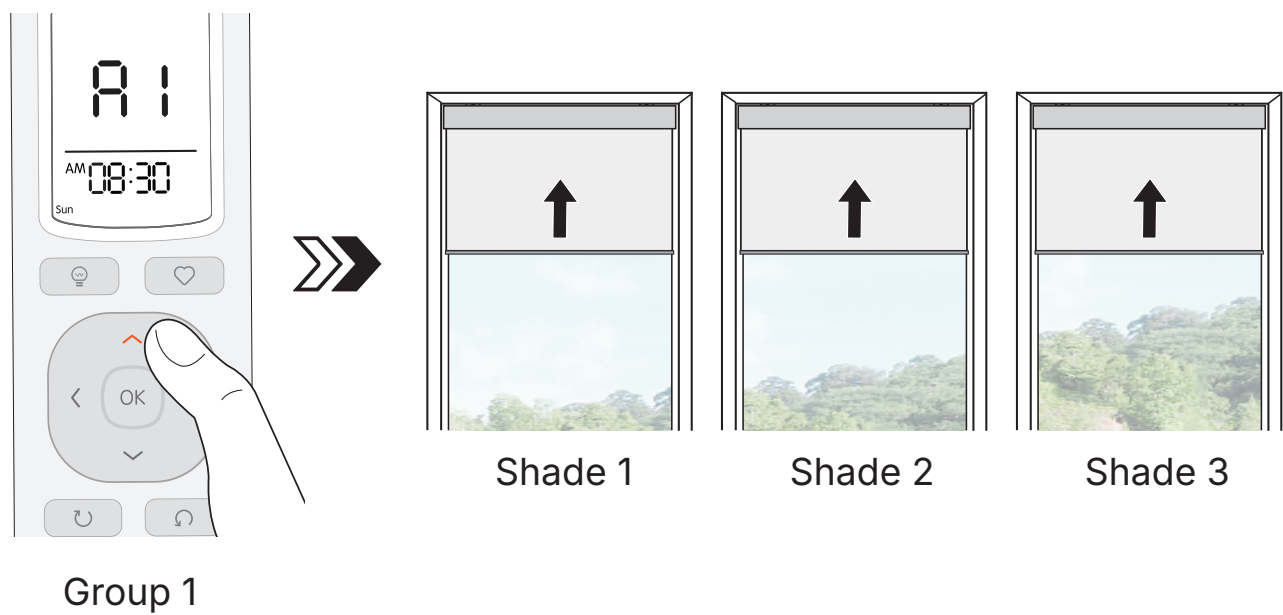


Remote Control

Install The Battery

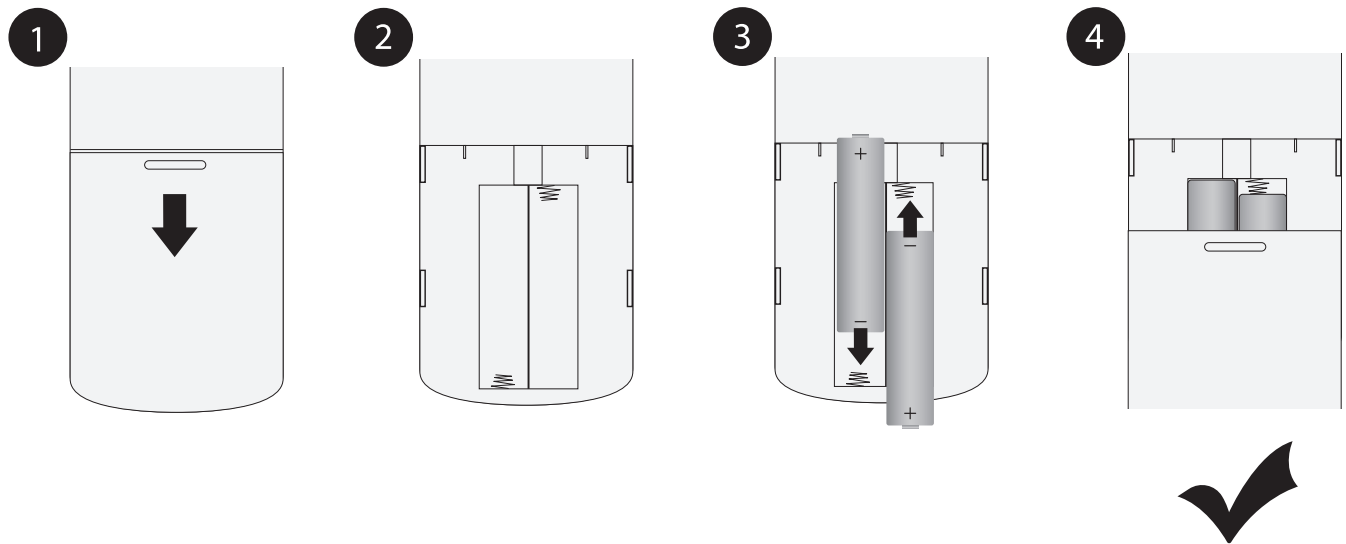

! Congratulations! Remove the sleeping blocker, choose the channel number (attached to the bottom rod) to control the shade. If it cannot work, please refer to page 17-25.

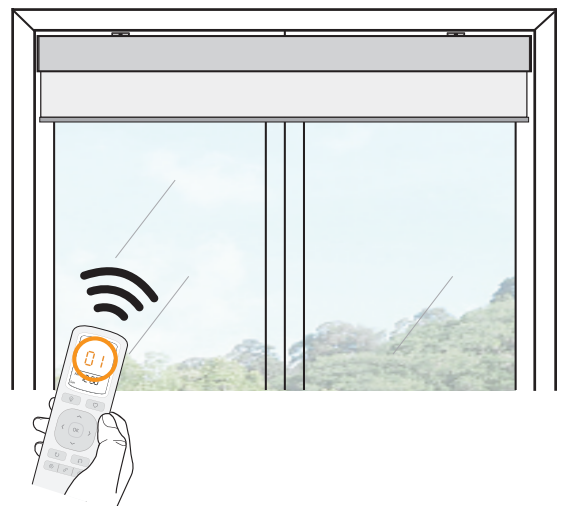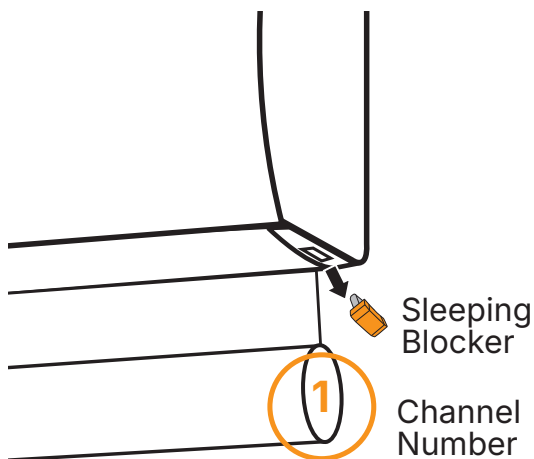


Remote Control

Group Control Setting



Please ensure your remote is in setting mode ("⚙️" shows up).
If not, please refer to page 18.


- 1 Enter grouping mode.

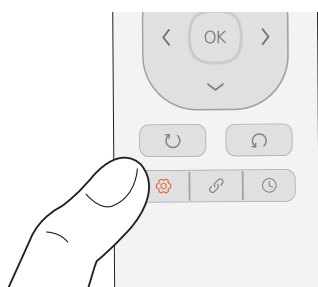

Press "⚙️"



- 2

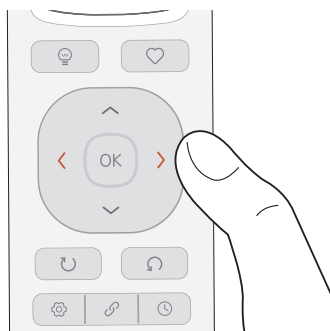

Press "<" or ">" to select the group number.



For example "A1"

- 3 Set up group control.



Press "❤️"



Remote Control

Group Control Setting

4



Hold " ♥ " for 3s



" 01 " flash and " A1 " keeps flashing. Press " < " or " > ", select channel number. Press " OK " to confirm, for example " 01 ".

5



Press " > " to select other channel numbers.

Press " OK " to confirm, press again to cancel.



For example " 02 "

6



Hold " ♥ " for 3s



Exit the grouping mode



6

Remote Control

Group Control Setting

Check group:

 Please ensure your remote is in setting mode ("⚙️" shows up). If not, please refer to page 18.



Press "♥"



Press "<" or ">",
check channel.
Press "^" or "v",
check group.

Modify group:

 Please referred by step1-3(P5)

4



Hold "♥" for 5s



Press "<" or ">", choose the channel
number you want to cancel, for example
"01". Press "OK" to cancel. "01" will flash.

Press "<" or ">", choose the channel
number you want to modify. for example
"03". Press "OK" to confirm, "03" will not
flash.




Remote Control

Timing Schedule

Clock Setting:

 Please ensure your remote is in setting mode ("⚙️" shows up). If not, please refer to page 18.

1

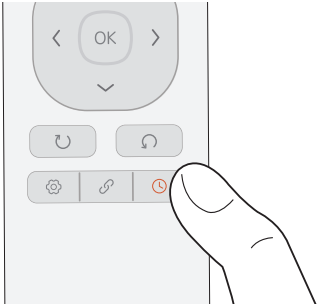






Hold "⌚" for 3s

"|" flashes

2

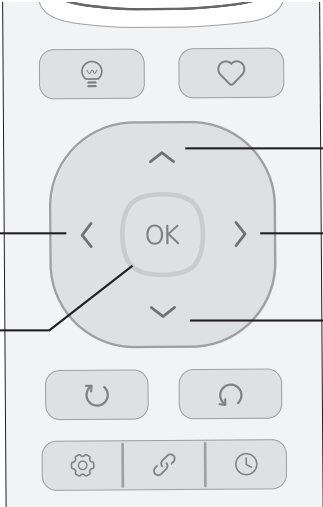

Select time,
AM/PM, week

Adjust time, AM/PM

Select time,
AM/PM, week

Adjust time, AM/PM

Confirm

3

 After you select the day for clock, please press "OK" to confirm.
Hold "⌚" for 3s to exit clock setting.




Remote Control

Timing Schedule

! Please ensure your remote is **not** in setting mode ("⚙️" is **not** shows up).
If not, please refer to page 18 to exit setting mode.

1 Enter schedule setting.

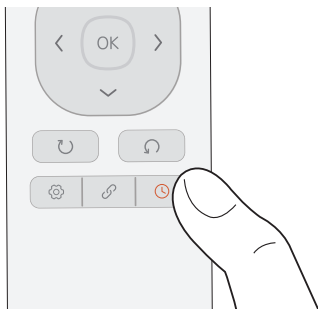


Hold "⌚" for 3s



"1" flashes and
"⌚" keeps flashing

2 Set schedule.

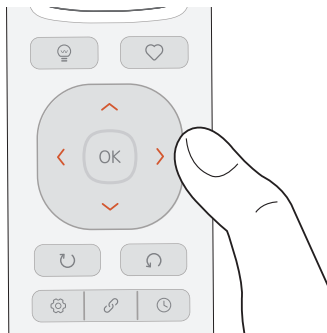

Press " < " or " > " to switch
between hr and min,
Press " ^ " or " v " to
select the timer numbers.
the selected one will flash.




For example " 08:30 "

Remote Control

Timing Schedule

3 Set AM/PM.

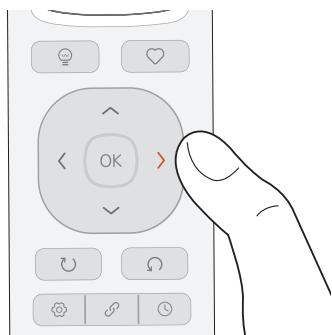

Press " > "

" AM " flashes

4




Press " ^ " or " v " to
select "AM" or "PM".

For example " AM "

Remote Control


Timing Schedule

5 Set day.

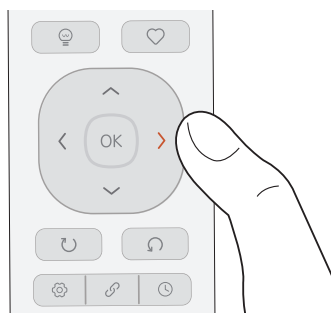

Press " > " to select day.
The selected one will flash.



6

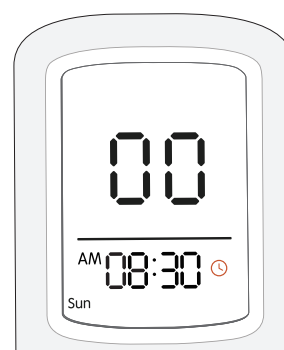

Press " OK " to confirm,
press again to cancel.

For example " Sun "

7 Multi-choice.

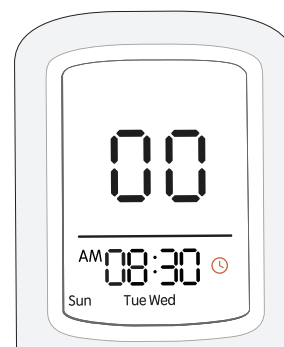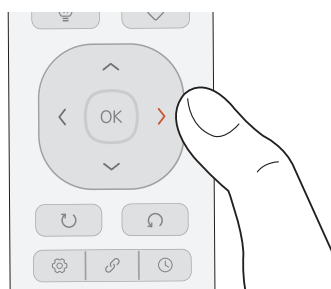


Press " > " to select other days.
Press " OK " to confirm,
press again to cancel.

For example " Sun,Tue,Wed "


Remote Control

Timing Schedule

8 Set channel.

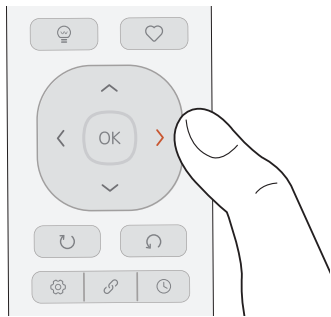

Press " > "

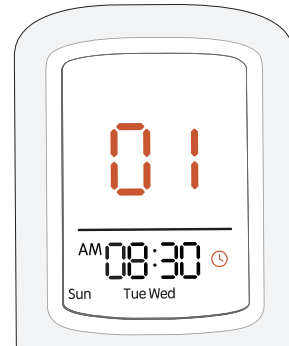


"01" flashes

9



Press " OK " to confirm,
press again to cancel.

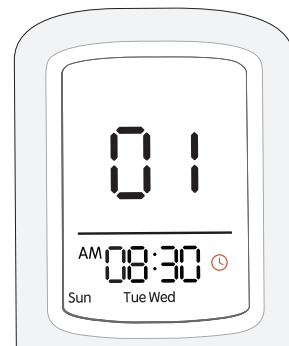


For example "01"

10 Multi-choice.



Press " ^ " to select other channels.
Press " OK " to confirm,
press again to cancel.

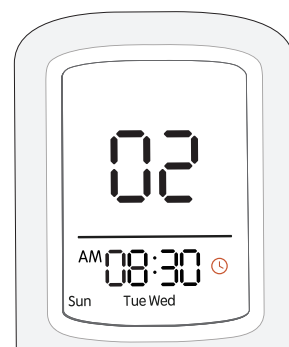


For example "02"


Remote Control

Timing Schedule


11 Set open/close.

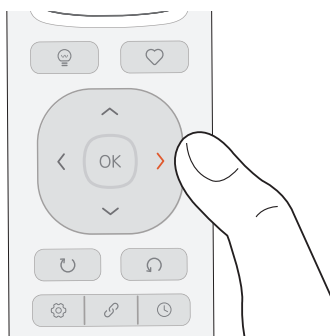

Press " > "

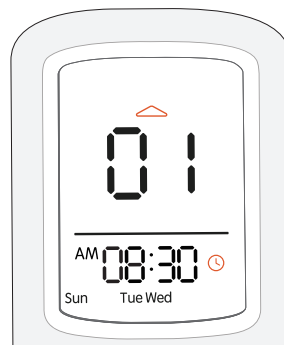


" ^ " flashes

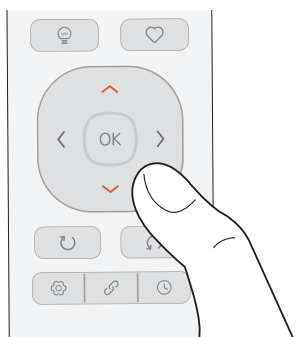

Press " ^ " or " v " to switch open or close, the selected one will flash.

Press " OK " to confirm, press again to cancel.

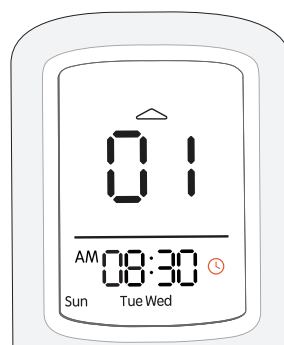

For example " ^ "



Hold " ⌚ " for 3s to exit setting mode.

If there is no operation, the setting mode will automatically exit after 3 minutes.



Click the " ⌚ " button to view the timer schedules.


Press " < " or " > " to view other timer schedules.

Remote Control

Timing Schedule

Set Timer for the Group:

! Please ensure your remote is **not** in setting mode ("⚙️" is **not** shows up). If not, please refer to page 18 to exit setting mode.

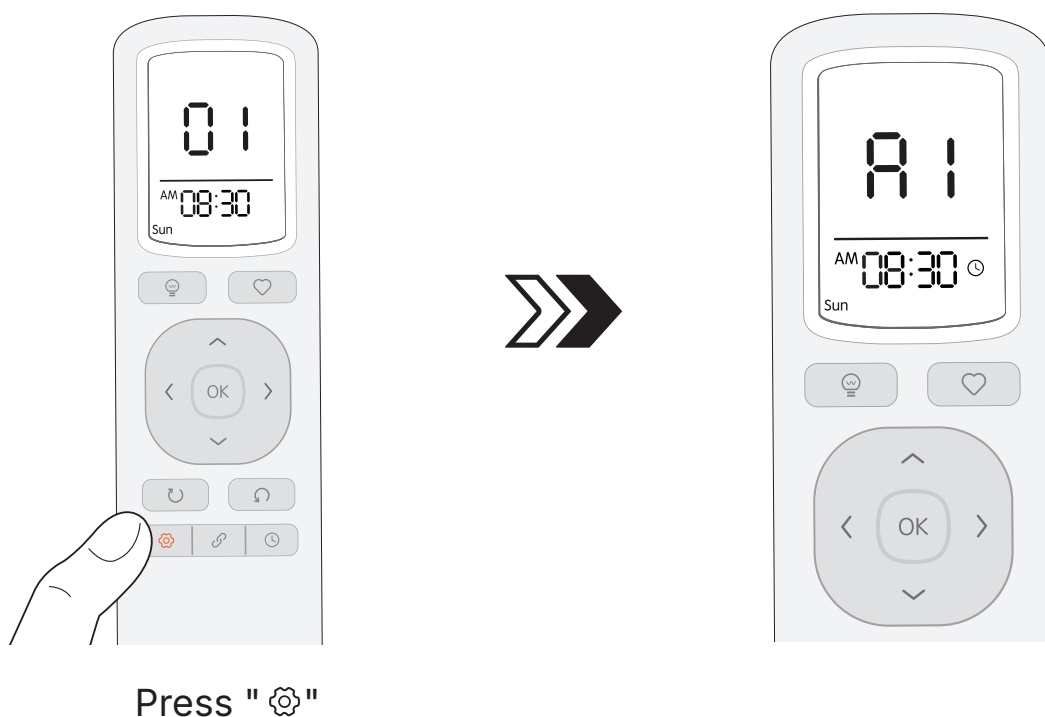


! For setting group timers, please refer to pages 9 to 13.

Motor Features

Battery Motor



When received, the blocker prevents the motor receiving signal. To activate it, please remove the sleeping blocker. If the motor is left idle for over 6 months, please insert the sleeping blocker into the charging port to reduce battery consumption.

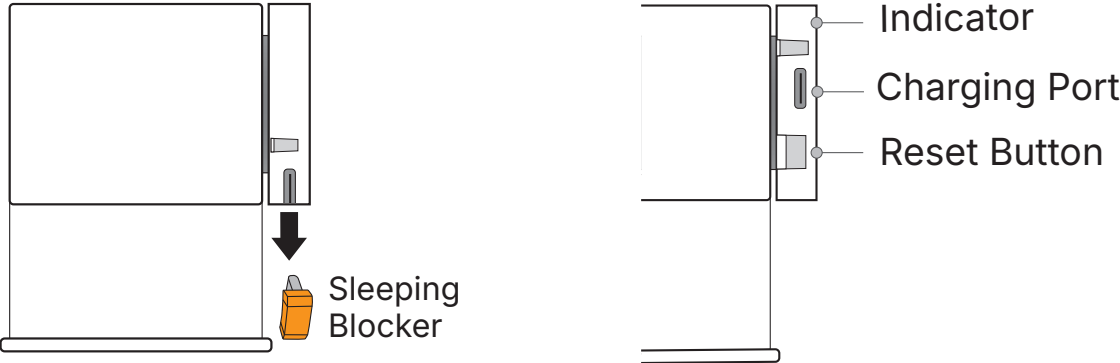

Please fully charge the motor for more than 8 hours before the first use. Once fully charged, it can be used for 3-6 months depending on the frequency of use.







Low battery:




Under Charging:



Fully Charged:

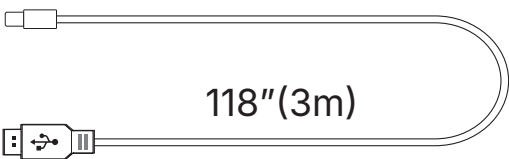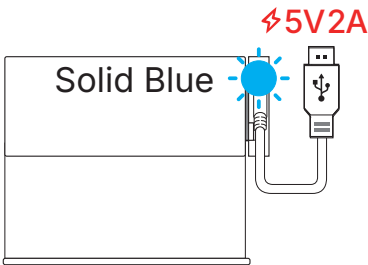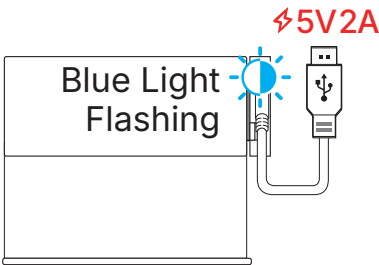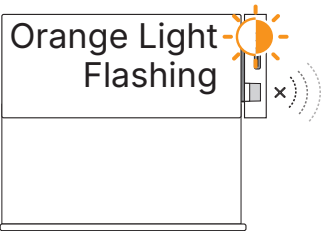



Type-C Cable x1

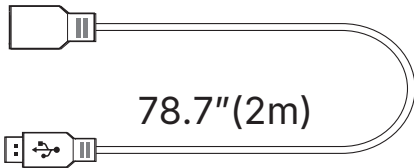

Extension Cable x1
(Optional)

Motor Features

Hardwired Motor

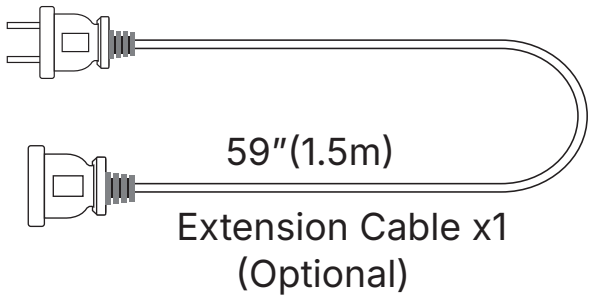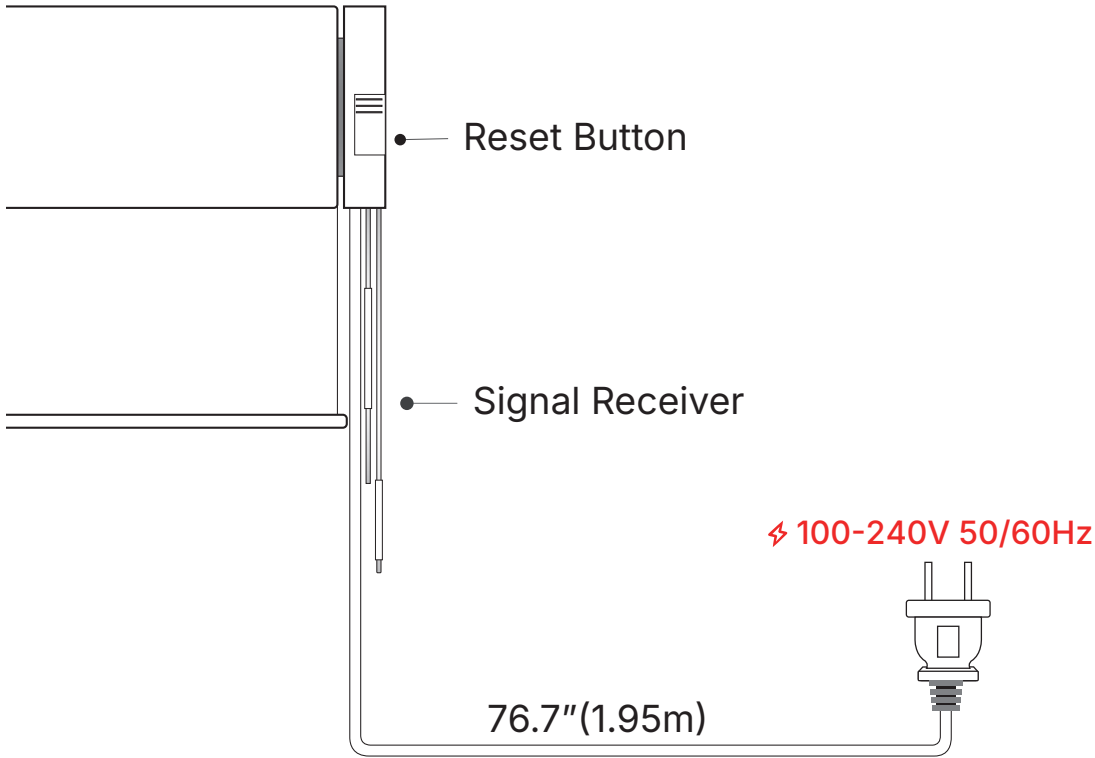


Programming


Restart Motor



Be cautious, reset may reverse up&down direction and will delete top&bottom limits, which impact remote control and APP control. Please follow below steps thoroughly to finish re-pairing.

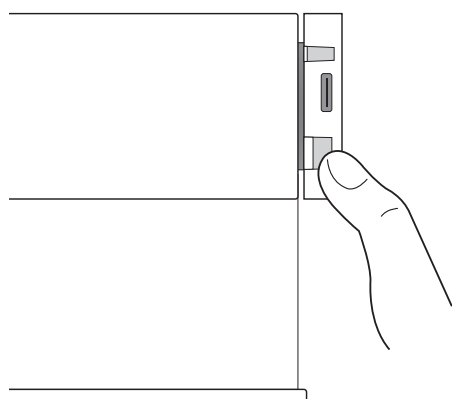

Hold for **16s**

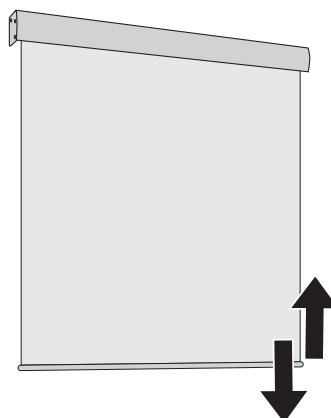

Blind jogs **4x**



Programming


Enter Setting Mode

1




Hold "⚙" for 7s

2

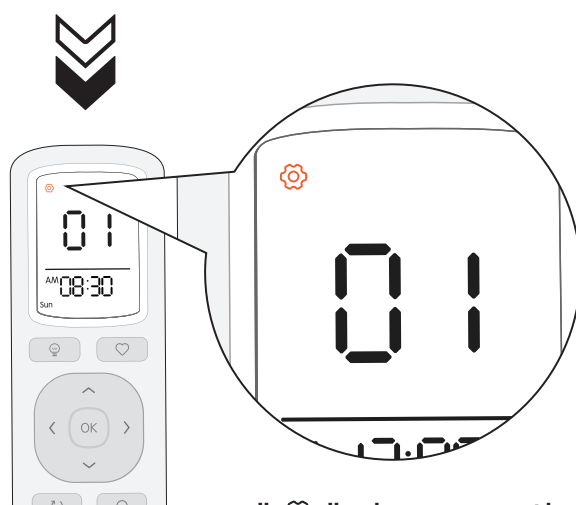

"⚙" shows on the screen,
enter setting mode.

3

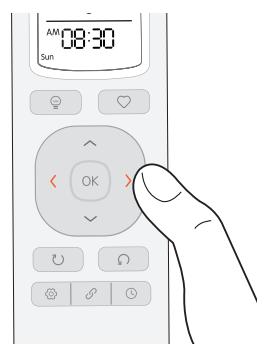

Press "<" or ">",
choose the channel you
want to set from "1-16"




1. It will exit setting mode if hold "⚙" for 7s.
2. It will exit setting mode if there is no operation for 3 mins.


Programming

Pair Motor

1

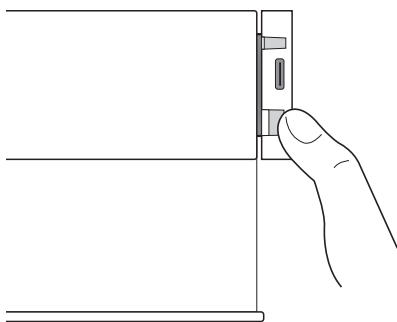

Hold for **2s**

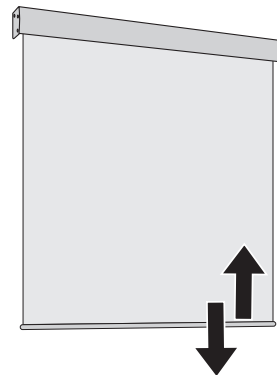

Blind jogs **1x**




2



Please press "  " within 10 seconds after blind jogg once.



Press "  " **1x**

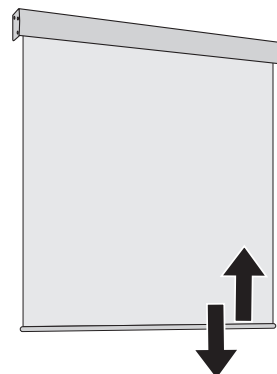



Blind jogs **2x**




Programming

Check the Up/Down Direction

! Use " ^ " and " v " to check directions.

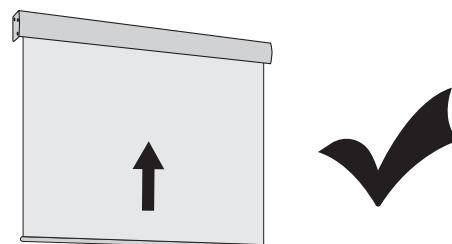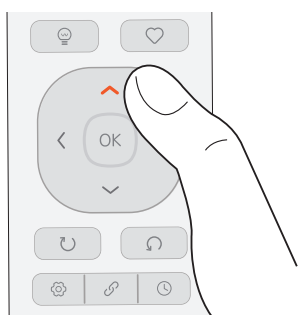


Press " ^ "

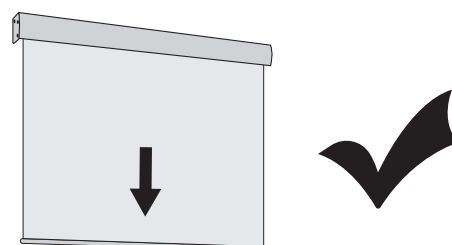

Press " v "

! If it is reversed, please follow below steps.
Please ensure your remote is in setting mode (" ⚙ " shows up).
If not, please refer to page 18.

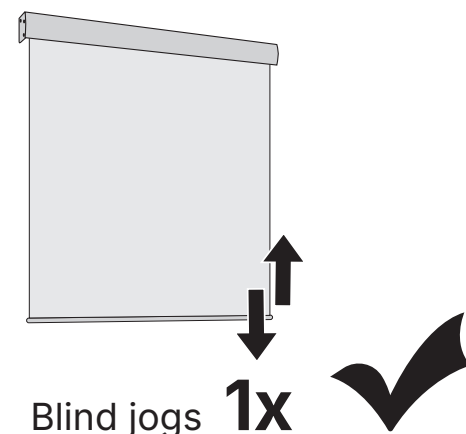

Hold " ↻ " for 3s

Blind jogs **1x**

Programming

Set Top Limit Position



Please ensure your remote is in setting mode ("⚙️" shows up).
If not, please refer to page 18.

1





Choose your desired channel
(Take channel 1 for example)

2



Press " ^ "

3

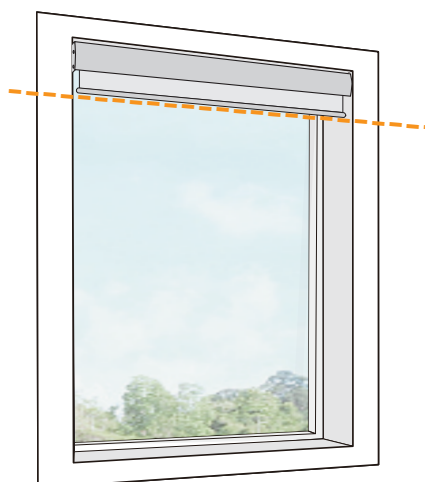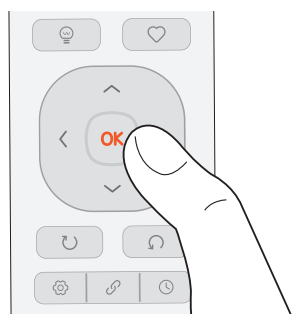


Press " OK "


Programming

Set Top Limit Position


4

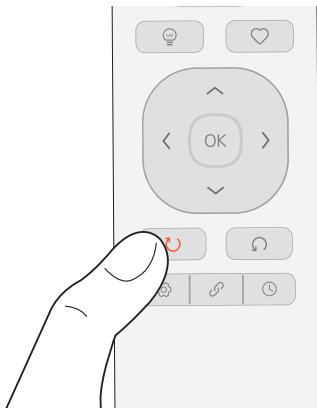


Press "U" to have a precise limit.

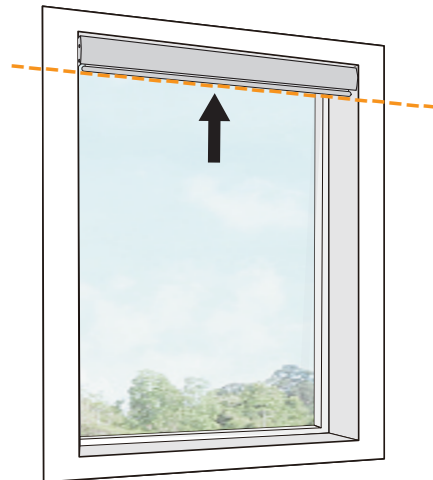

5

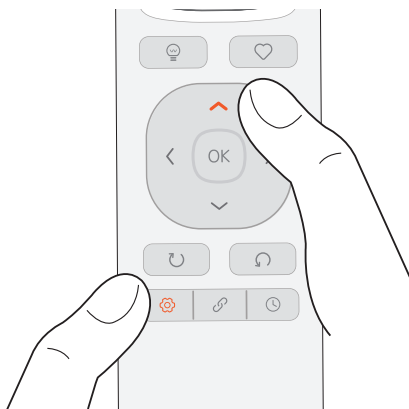

Hold "U" & "U" for 3s

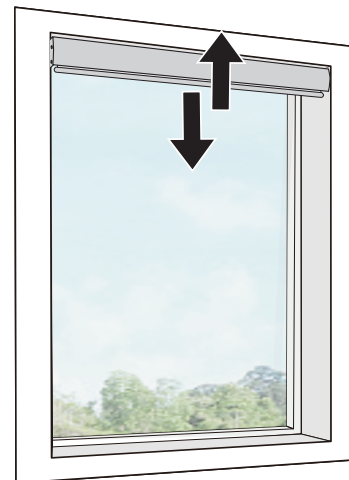

Blind jogs **2x**




Programming

Set Bottom Limit Position



Please ensure your remote is in setting mode ("⚙️" shows up).
If not, please refer to page 18.

1

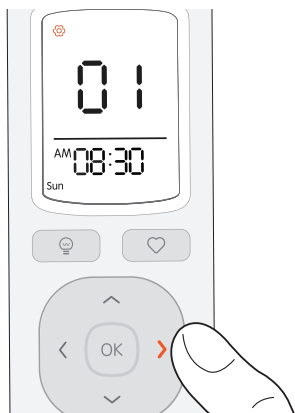


Choose your desired channel
(Take channel 1 for example)


2




Press "▼"

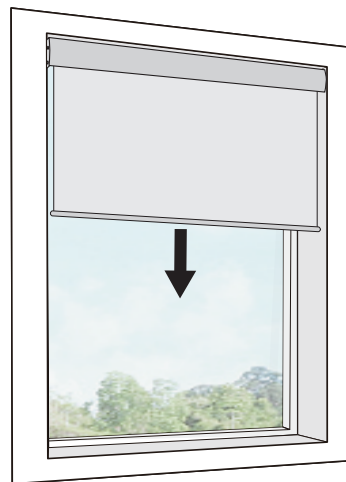

3

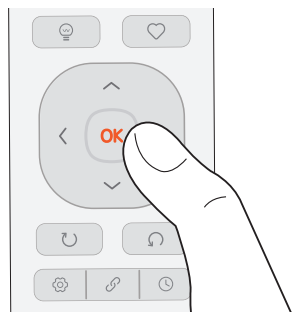


Press "OK"

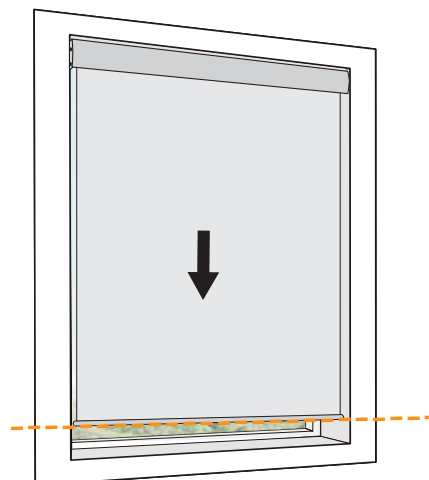


Programming

Set Bottom Limit Position


4

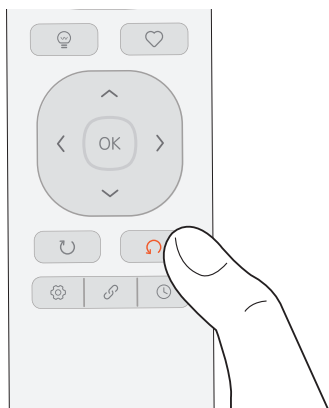


Press "Q" to have a precise limit.

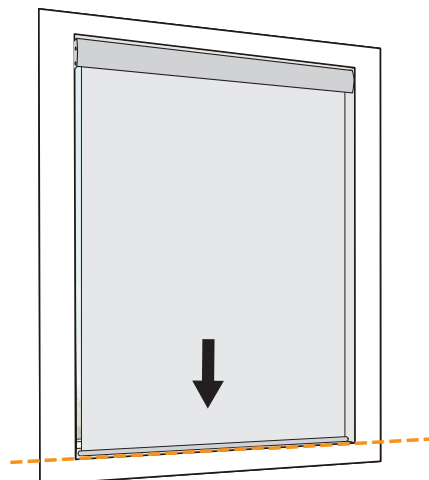

5

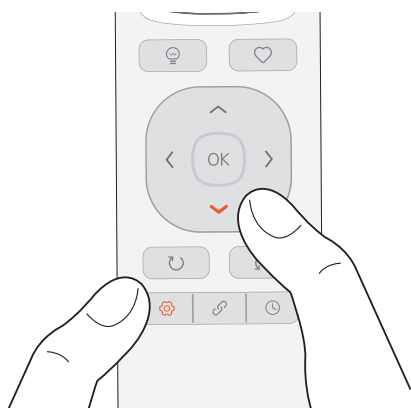

Hold "Q" & "V" for 3s

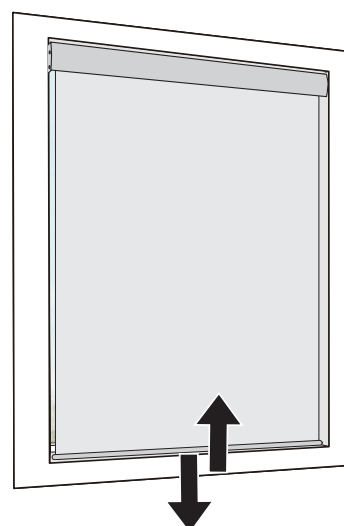

Blind jogs **2x**




Programming

Set Your Favorite Position

1. The favorite position is not set at factory.
2. Before setting the favorite running position, please ensure that the top and bottom limit positions have been set.
3. Please ensure your remote is **not** in setting mode ("⚙️" is **not** shows up). If not, please refer to page 18 to exit setting mode.




Press " ^ " or " v "

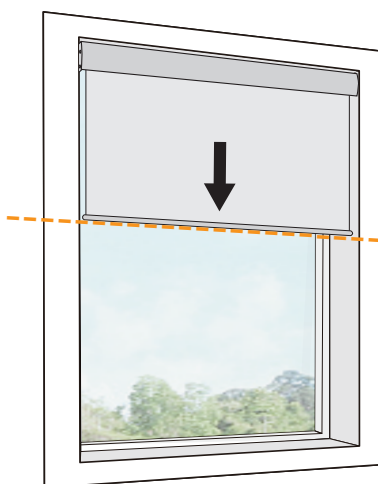

Your Favorite Position



Hold " ♥ " for 3s

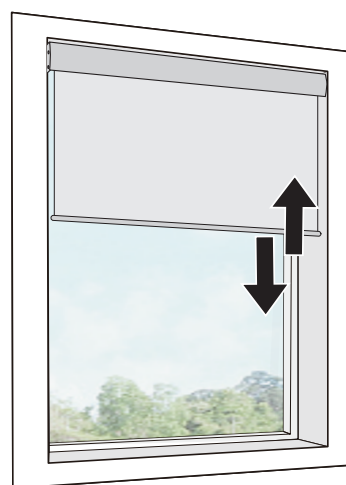

Blind jogs **2x**



1. After successful setup, " ♥ " shows on the screen. Press " ♥ " and the shade will go to the favortie position.


Programming

Delete Favorite Limit Position

❗ Please ensure your remote is **not** in setting mode ("⚙️" is **not** shows up).
If not, please refer to page 18 to exit setting mode.



Hold " ♥ " for 3s

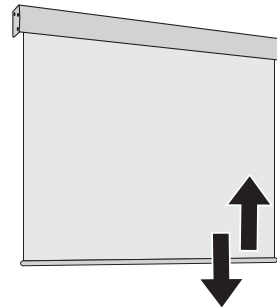

Blind jogs **1x**



" ♥ " goes away




Programming

Reset Top Limit Position

! Please ensure your remote is in setting mode ("⚙️" shows up).
If not, please refer to page 18.

Delete Old :

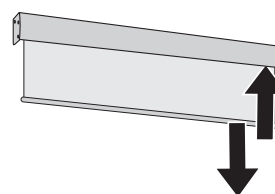

Blind jogs **1x**



Hold "⚙️" & "⤴️" for 3s

Set New:


! Please refer to page 21-22 to reset the top limit position.

Programming

Reset Bottom Limit Position

! Please ensure your remote is in setting mode ("⚙️" shows up).
If not, please refer to page 18.

Delete Old :

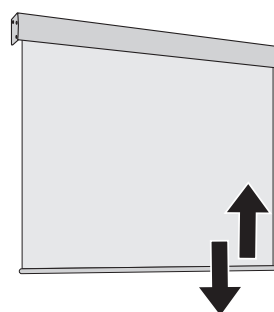

Blind jogs **1x**

Hold "⚙️" & "✓" for 3s



Set New:

! Please refer to page 23-24 to reset the bottom limit position.


Programming

Adjust Running Speed




1. Please ensure your remote is in setting mode ("⚙️" shows up). If not, please refer to page 18.
2. If the motor does not jog, it may have reached the maximum or minimum speed. There are three speed settings available.

Speed +

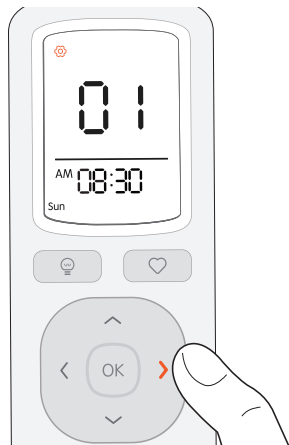

Hold " > " for 3s

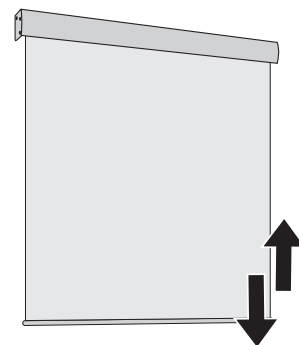


Blind jogs **1x**



Speed -



Hold " < " for 3s

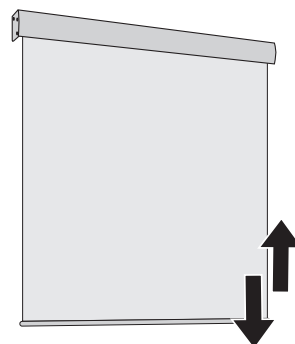

Blind jogs **1x**



RED

- Instructions to ensure correct and safe installation
- If the equipment is intended to be fastened in place, the instructions shall explain how to securely fasten the equipment.
- keep away from fire.
- 2xAAA

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Requirement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Innovation, Science and Economic Development (ISED) Canada Compliance Statement

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Science et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.