


DEX Quick Start Manual

Product Overview




Important Reminder:
Before installing the headset, please connect your mobile phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effect and volume after installing into the helmet, please adjust the position of the speaker inside the helmet.


Power on/off

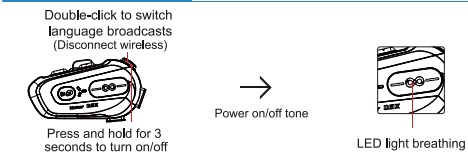


Wireless connection

 


Music Sharing Pairing

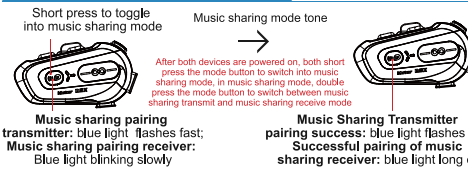


Telephone function

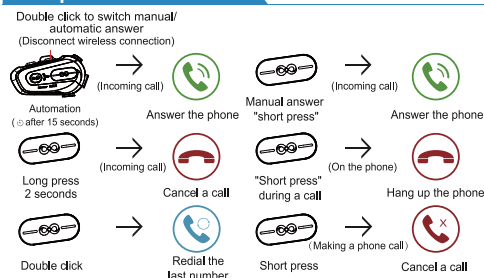


Music function

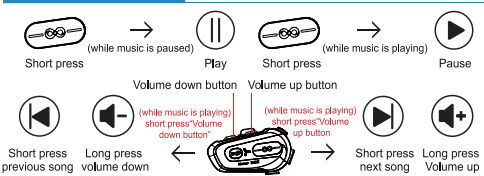

Voice assistant

 


Pairing Reset

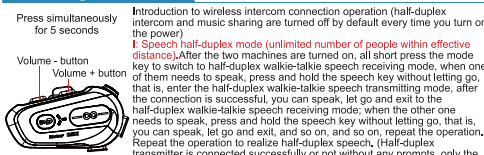


I. Clear intercom pairing and restore factory settings. Power on without connecting wireless and intercom, press and hold the volume down and volume up buttons at the same time for 5S, after the indicator light blinks fast, it will restore the factory settings and clear all the pairing information.
II. Speech half-duplex mode (unlimited number of people within effective distance). After the two machines are turned on, all short press the mode key to switch to half-duplex walkie-talkie speech receiving mode, when one of them needs to speak, press and hold the speech key without letting go, that is, enter the half-duplex walkie-talkie speech transmitting mode, after the connection is successful, you can speak, let go and exit to the half-duplex walkie-talkie speech receiving mode; when the other one needs to speak, press and hold the speech key without letting go, that is, you can speak, let go and exit, and so on, and so on, repeat the operation. Repeat the operation to realize half-duplex speech. (Half-duplex transmitter is connected successfully or not without any prompts, only the successful connection of the receiver will have an indicator light and electronic tone prompts)
III. Music sharing (unlimited number of people within effective distance). After the two devices are switched on, press the mode button briefly to switch to music sharing transmitter mode or music-sharing receiver mode, accompanied by a prompt "Music Sharing Transmitter mode" or "Music Sharing Receiver mode". Connect the device with wirelessly of mobile phone and play music, one device is in music sharing transmitting mode, another device is in music sharing receiving mode. After the other devices receive the signal successfully, there will be a "Music Sharing Connection Successful" prompt, which means the music sharing is successful. Please note that there will not be a successful connection prompt on the transmitting side of music sharing; if both devices are connected to play music wirelessly, only the device in music sharing transmitting mode can share.
IV. Prioritization of telephone calls. After powering on the machine, the machine is connected to the wireless, no matter which mode the machine is in, when the machine calls or goes to the phone, it will be prioritized to automatically enter the phone mode, and hang up to restore the corresponding mode.

Half-duplex intercom

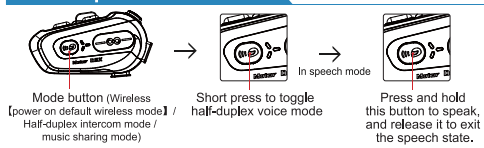

Connection conditions: the machines need the same model to be paired, unlimited number of people within the effective distance.
Connection: After the two machines are turned on, press the mode key to switch to half-duplex speech mode, when one of them needs to speak, press and hold the speech key without letting go, it can speak, let go and exit; when the other one needs to speak, the same operation can realize half-duplex speech.
When speaking in half-duplex: only one can be allowed to enter the speaking state, and none of the others can be in the speaking state.

Product List

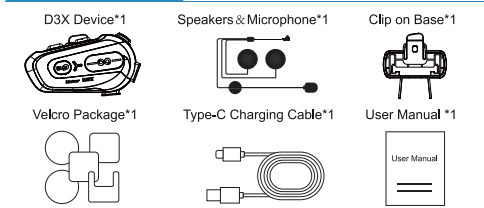

Caveat

1. To avoid explosion, please do not put the product into the flame;
2. Please do not disassemble the product to avoid damage to the electronic components of the product;
3. Please keep away from sharp objects to avoid damage to the product;
4. Please keep in a dry place if not used for long time;
5. Before using the wireless device, please fully charge it;
6. If the red light does not come on while charging, it may be the voltage is too low;
7. To extend the life of the built-in lithium polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.
This device complies with Part 15 of the FCC Rules. The operation needs to fulfill the following two conditions,
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.