


P30 Quick Start Manual

Product Overview




Important Reminder:
Before installing the headset, please connect your mobile phone according to the quick manual guide to test the sound effect and volume.
If there is a big difference in sound effect and volume after installing into the helmet, please adjust the position of the speaker inside the helmet.


Power on/off

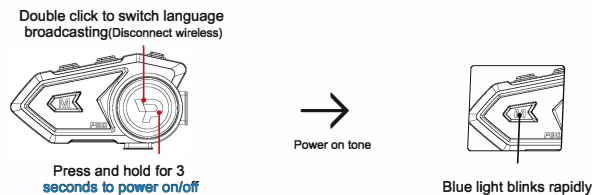

Wireless connection

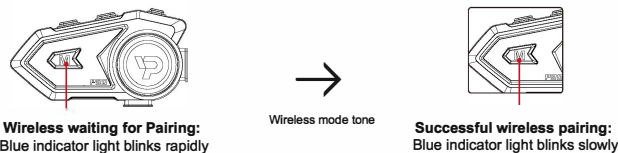

Intercom pairing

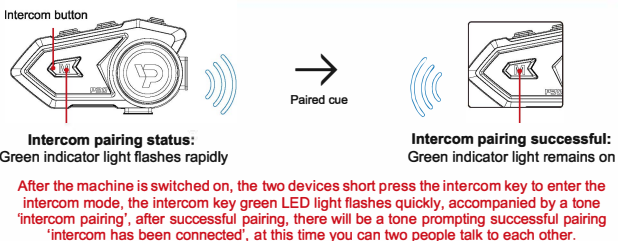


P30 Manual de inicio rápido

Resumen del producto




Recordatorio importante:
Antes de instalar el casco, conecte su teléfono móvil de acuerdo con la guía rápida del manual para comprobar el efecto de sonido y el volumen.
Si hay una gran diferencia en el efecto de sonido y el volumen después de la instalación en el casco, por favor, ajuste la posición del altavoz dentro del casco.

Encendido/apagado

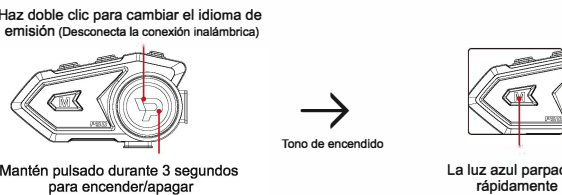


Conexión inalámbrica

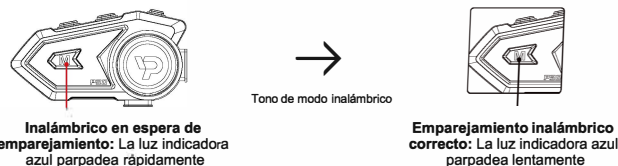


Emparejamiento de intercomunicadores




Telephone function

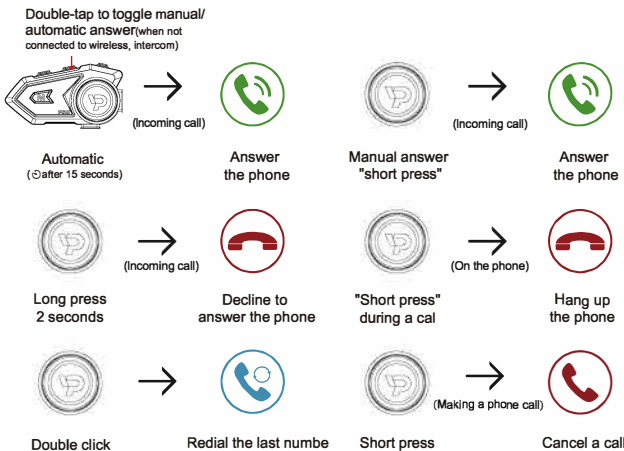


Dating mode pairing (connecting third parties)

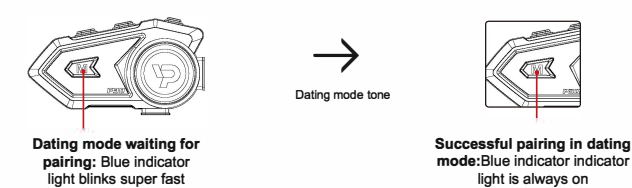


Music function

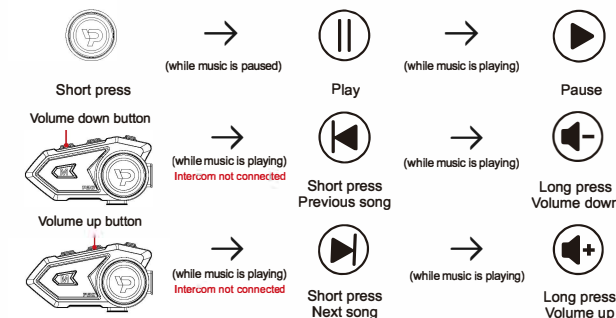


Voice assistant

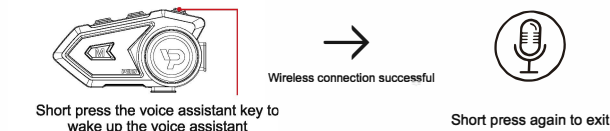


Charging function

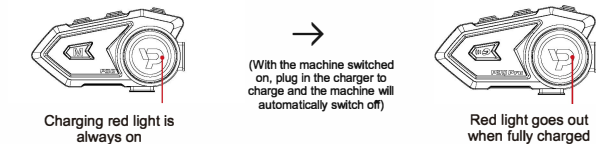


Función de teléfono

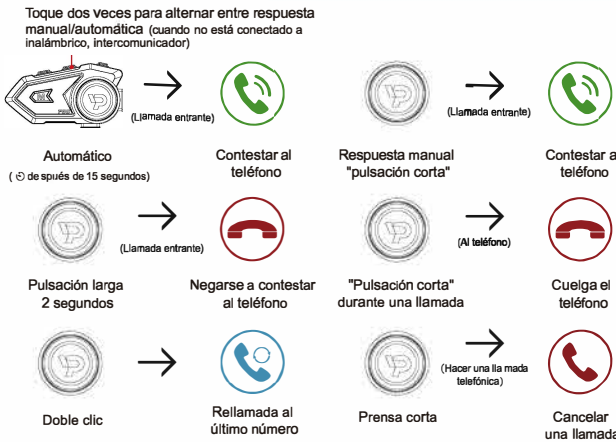


Emparejamiento en modo cita (conexión con terceros)

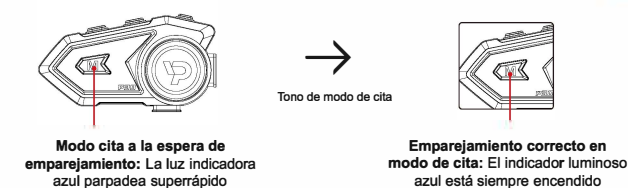


Función música

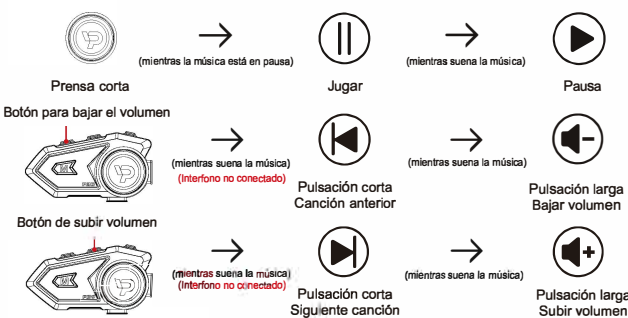


Asistente de voz

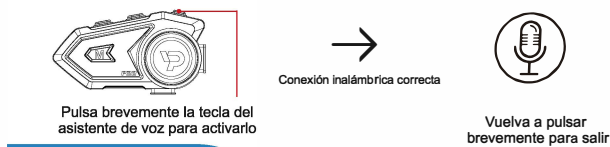

Función de carga

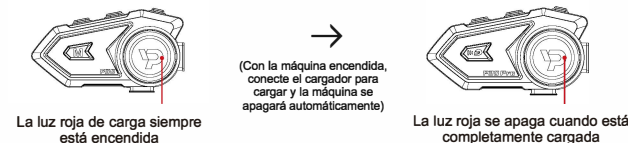


Light effect on/off/toggle

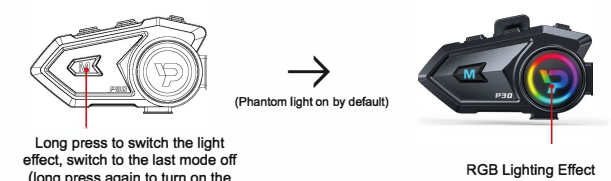

Intercom reset

Introduction to wireless intercom connection operation (intercom is switched off by default every time the power is switched on)
I: Intercom backlink
When the connected machines are switched on, short press the intercom key to enter intercom mode, and short press the corresponding pairing key on the host to connect back to the other corresponding machines.
II: Clear wireless pairing and restore factory settings
After powering on the device, without connecting the wireless and intercom, press and hold the volume down and volume up buttons at the same time for 5S to clear the wireless pairing information, and the indicator light will flash fast.
III: Two machines connected full-duplex intercom
After the machine is switched on, the two devices short press the intercom key to enter the intercom mode, the intercom key green LED light flashes quickly, accompanied by a tone 'intercom pairing', after successful pairing, there will be a tone prompting successful pairing 'intercom has been connected', at this time you can two people talk to each other.
IV: Dating Mode (Connecting Third Party)
Long press the voice assistant key to enter the dating mode, long press again to exit
V: Phone Priority
After switching on the machine, the machine is connected to wireless, no matter which mode the machine is in, when the machine calls or goes to the phone, it will automatically enter the phone mode as a priority, and after hanging up, it will resume the corresponding mode.

Product List

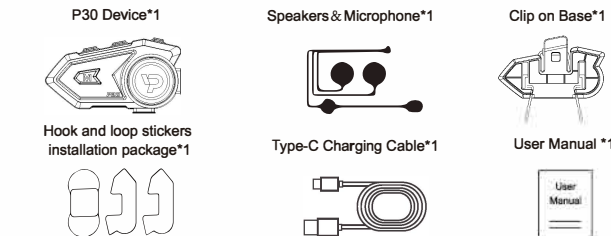

Caveat

- To avoid explosion, please do not put the product into the flame;
- Please do not disassemble the product to avoid damage to the electronic components of the product;
- Please keep away from sharp objects to avoid damage to the product;
- Please keep in a dry place if not used for long time;
- Before using the wireless device, please fully charge it;
- If the red light does not come on while charging, it may be the voltage is too low;
- To extend the life of the built-in lithium polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This product has been tested, meet the restrictions of Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.
-Reorient or relocate the receiving antenna.
-Increase the separation between the device and receiver.
-Connect the device into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.
This device complies with Part 15 of the FCC Rules. The operation needs to fulfill the following two conditions.
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Efecto de luz encendido / apagado / alternar



Reinicio del interfono

Introducción al funcionamiento de la conexión del intercomunicador inalámbrico (el intercomunicador se desconecta por defecto cada vez que se conecta la alimentación)
I: Backlink de intercomunicación
Cuando los equipos conectados estén encendidos, pulse brevemente la tecla de intercomunicación para entrar en el modo de intercomunicación y pulse brevemente la tecla de emparejamiento correspondiente en el host para volver a conectarse a los otros equipos correspondientes.
II: Borrar el emparejamiento inalámbrico y restaurar los ajustes de fábrica
Después de encender el dispositivo, sin conectar el inalámbrico y el intercomunicador, mantenga pulsados los botones de bajar volumen y subir volumen al mismo tiempo durante 5S para borrar la información de emparejamiento inalámbrico, y la luz indicadora parpadeará rápidamente.
III: Dos máquinas conectadas intercomunicador full-duplex
Después de encender la máquina, los dos dispositivos pulsan brevemente la tecla de intercomunicación para entrar en el modo de intercomunicación, la luz LED verde de la tecla de intercomunicación parpadea rápidamente, acompañada de un tono 'emparejamiento de intercomunicación', después de emparejamiento exitoso, habrá un tono que indica emparejamiento exitoso 'intercomunicador se ha conectado', en este momento puede dos personas hablan entre sí.
IV: Modo de Citas (Conexión de Terceros)
Pulse prolongadamente la tecla del asistente de voz para entrar en el modo de citas, pulse prolongadamente de nuevo para salir
V: Prioridad de Teléfono
Después de encender la máquina, la máquina está conectada a la red inalámbrica, no importa en qué modo esté la máquina, cuando la máquina llame o vaya al teléfono, entrará automáticamente en el modo de teléfono como prioridad, y después de colgar, reanudará el modo correspondiente.

Lista de productos

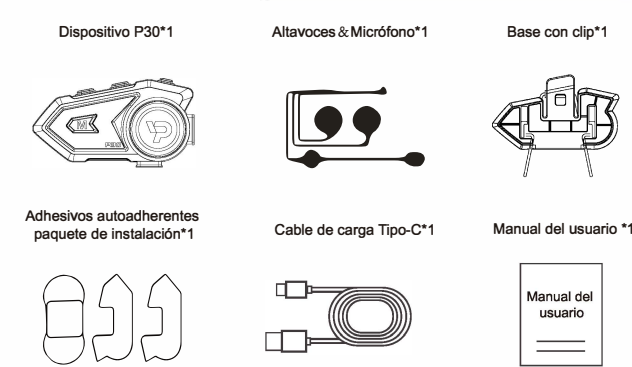

Advertencia

- Para evitar explosiones, no exponga el producto al fuego;
- Por favor, no desmonte el producto para evitar daños en los componentes electrónicos del producto;
- Por favor, manténgase alejado de objetos afilados para evitar daños en el producto;
- Por favor, mantenga en un lugar seco si no se utiliza durante mucho tiempo;
- Antes de utilizar el dispositivo inalámbrico, por favor, cárguelo completamente;
- Si la luz roja no se enciende durante la carga, puede ser que el voltaje sea demasiado bajo;
- Para prolongar la vida útil de la batería de polímero de litio incorporada, cargue el dispositivo al menos una vez al mes.