

**ARRAY 15000MAH 20W PD SOLAR-CHARGING POWER BANK
WITH 15W MAGNETIC WIRELESS CHARGER,
WATCH CHARGER & RETRACTABLE CHARGING CABLE
INSTRUCTION MANUAL
EPB-AR26**

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


IN THE BOX

- EPB-DP26 Array 15000mAh 20W PD Solar-Charging Power Bank (x1)
- Carabiner (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it MUST be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to “test mode” in the presence of a strong magnetic force, if pace-maker or other electronical body implant is in use. Keep a minimum of 3 feet distance.

PRODUCT DIAGRAMS

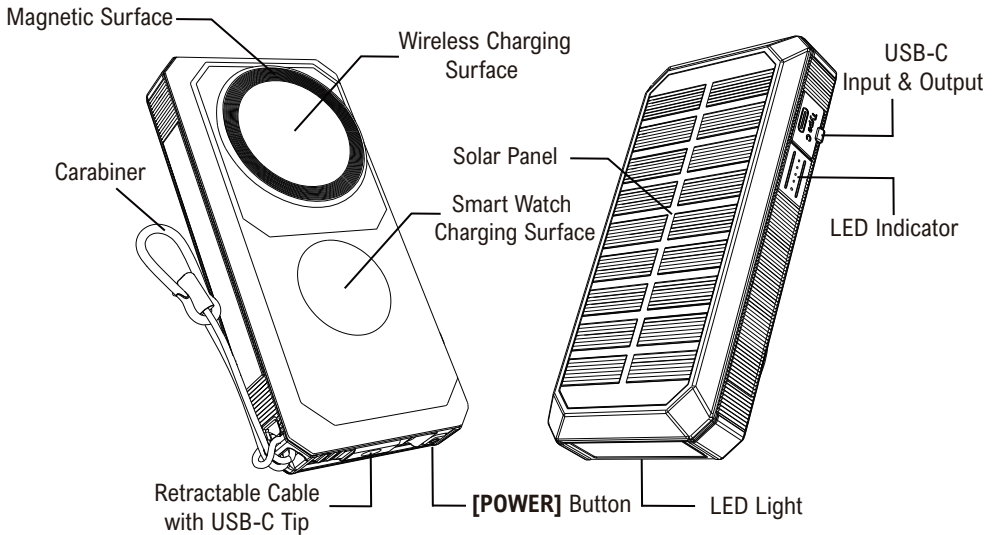

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Plug the USB-C tip of the integrated retractable charging cable into a USB-C power source, such as the USB-C port on a computer or into a certified USB-C adapter (not included), and plug into a wall socket.
- Or plug the USC-tip of your charging cable (not included) into the USB-C port on the power bank. Plug the other end of the cable into a USB power source, such as the USB port on a computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator will **flash WHITE** while the power bank is in charging and stop flashing when the power bank is fully charged.

CHARGING THE POWER BANK WITH SOLAR PANEL

- Place the power bank in bright and consistent sunlight.
- The power bank will begin to charge instantly when the solar panel is exposed to sunlight. The LED indicator will **flash WHITE** to indicate the power bank is in charging.

CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Plug your own cable into USB-C port on the power bank and plug the other end of the cable to your device with the appropriate connector.
- Or pull out the retractable charging cable from the power bank and plug the USB-C tip of the retractable charging cable into your device with USB-C port.
- The power bank will begin to charge automatically.
- The LED indicator will **illuminate WHITE** when charging.
- Remove the cable from your mobile device when it is fully charged.

USING WIRELESS CHARGING FOR PHONE

- Place a wireless charging enabled mobile device on the wireless charging surface, the mobile device will begin to charge automatically. The LED indicator on the top will illuminate GREEN.
- If your device does not begin to charge, try repositioning your device on the wireless charging surface. You may need to remove the case of your device to charge properly.
- Remove your device from the wireless charging surface when it is fully charged.

WIRELESS CHARGING WITH MAGNETIC ATTACHMENT

- If the charged device supports MagSafe Charger, simply place the device against the magnetic surface of the power bank, the device will begin to charge automatically.
- The perfectly aligned magnets in the wireless charging surface will attach to the charged device and provide more secure wireless charging.
- Remove your device from the wireless charging surface when it is fully charged.

USING WIRELESS CHARGING FOR SMART WATCH

- Place a wireless charging enabled smart watch on the Smart Watch Charging Surface, the smart watch will begin to charge automatically.
- The perfectly aligned magnets in the wireless charging surface will attach to the charged watch and provide more secure wireless charging.
- If your watch does not begin to charge, try repositioning your watch on the wireless charging surface. You may remove the case of your watch to charge properly.
- Remove your watch from the wireless charging surface when it is fully charged.

NOTE ON SAFETY FEATURES:

The LED indicator on the top will automatically flash GREEN when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface.

USING LED LIGHT

- Press the **[Power]** button once to turn on the power bank to view the remaining power capacity.
- Press the **[Power]** button twice to turn off the power bank.
- Press and hold the **[Power]** button until the LED light turns on/off.

TECH SPECIFICATIONS

- Battery Capacity: 15000mAh/3.6V/54Wh
- USB-C Port & Retractable Cable Input: DC 5V/3A, 9V/2A, 12V/1.5A (18W Max.)
- USB-C Port & Retractable Cable Output: DC 5V/3A, 9V/2.22A, 12V/1.67A (20W Max.)
- Wireless Charging Output (for Phone): 5W/7.5W/10W/15W
- Wireless Charging Output (for Watch): 2W
- Working Temperature: 14°F ~ 113°F (-10°C ~ 45°C)

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2A9Q9-EPB-AR26
Made in China