

CHARTER 6200MAH LIGHT UP POWER BANK
WITH WATCH CHARGER & KEYRING
INSTRUCTION MANUAL
EPB-CH26

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


IN THE BOX

- EPB-CH26 Charter 6200mAh Light Up Power Bank w/ Watch Charger & Keyring (x1)

SAFETY PRECAUTIONS

- This product is NOT a toy, keep away from children and pets.
- Only use the product according to the instructions in this manual. Never use the product for anything other than its intended purpose.
- Do not open this product or attempt to repair the unit yourself if it is not working properly. Doing so risks fire, shock or injury.
- When not in use, the product should be stored in a dry, cool location, away from sources of water or heat.
- Do not expose product or charging cable to extreme temperatures (heat or cold), open flames, humid or wet conditions.
- Do not submerge in water. Do not use in a location where the product or charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the charging cable to disconnect, or use the cable as a handle.
- Do not use if the product or charging cable is damaged. If the product or charging cable is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- Do not over charge battery.
- This product contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this product.
- Attachments on the back of your device can impede effectiveness of the wireless charger, and lead to overheating. Remove attachments from your device before charging on this wireless charger.
- The strong magnetic fields of neodymium magnets can damage items, such as television, computers, computer monitors, credit cards, bank cards, diskettes and other data carriers, video tapes, mechanical watches, hearing aids, loud speakers and VCRs. Pace-makers may be damaged or switched to “test mode” in the presence of a strong magnetic force, if pace-maker or other electronical body implant is in use. Keep a minimum of 3 feet distance.

PRODUCT DIAGRAMS

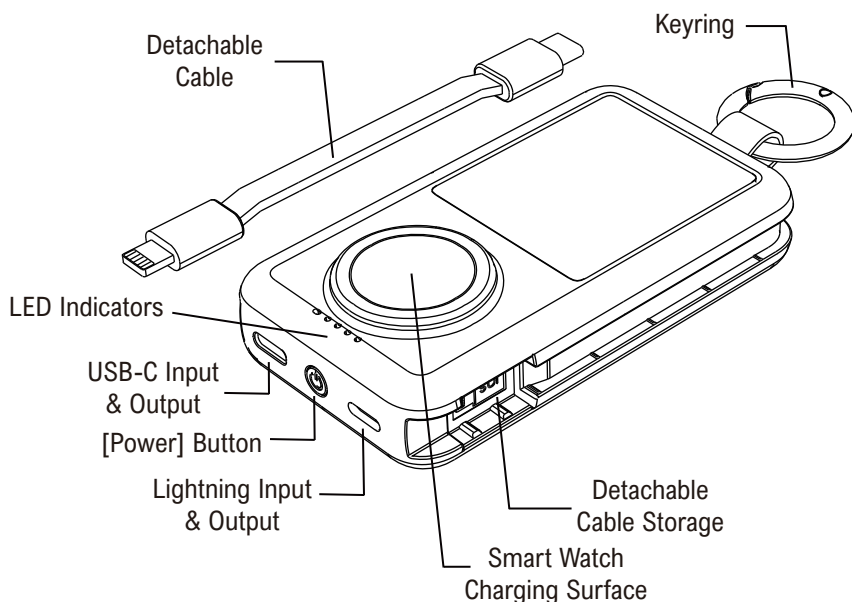

INSTRUCTIONS

Charge the power bank fully before using for the first time.

CHARGING THE POWER BANK

- Take off the detachable cable and plug the lightning tip of the detachable charging cable into the lightning port on the power bank. Plug the other end of the cable into a USB-C power source, such as the USB-C port on the computer or into a certified USB-C adapter (not included), and plug into a wall socket.
- Or plug the USB-C tip of your own charging cable into the USB-C port on the power bank. Plug the other end of your cable into a USB-A or USB-C power source, such as the USB port on the computer or into a certified USB adapter (not included), and plug into a wall socket.
- The LED indicator will flash WHITE while the power bank is in charging and stop flashing when the power bank is fully charged.

CHARGING ELECTRONIC DEVICES WITH THE POWER BANK

- Using the cable of the device you wish to charge, connect the charging cable to your device with the appropriate connector. Connect the other end of the cable to the USB-C port or the lightning port of the power bank.
- Or take off the detachable cable and plug the lightning tip of the detachable charging cable into the lightning port on the power bank. Insert the USB-C tip of the detachable cable to your device that has USB-C female port.
- Or take off the detachable cable and plug the USB-C tip of the detachable charging cable into the USB-C port on the power bank. Insert the lightning tip of the detachable cable to your device that has lightning female port.
- The power bank will begin to charge automatically.

- The LED indicator will illuminate WHITE when charging.
- Remove the cable from your mobile device when it is fully charged.

USING WIRELESS CHARGING FOR SMART WATCH

- Press the [Power] button. The first LED indicator on the left will flash RED three times and turn into GREEN to display standby mode.
- Place a wireless charging enabled smart watch on the Smart Watch Charging surface, the smart watch will begin to charge automatically. The first LED indicator on the left will illuminate RED to indicate that your device is charging properly.
- The perfectly aligned magnets in the wireless charging surface will attach to the charged watch and provide more secure wireless charging.
- If your watch does not begin to charge, try repositioning your watch on the wireless charging surface. You may need to remove the case of your watch to charge properly.
- Remove your watch from the wireless charging surface when it is fully charged.

NOTES:

- The wireless charging will flash RED when the wireless charging surface is overheated or when a metal object, such as a coin, is placed on the wireless charging surface.
- The power bank only charges one device at one time.

TECH SPECIFICATIONS

- Battery Capacity: 6200mAh/3.85V/23.87Wh
- USB-C Input/Output Port: DC 5V/2.4A
- Lightning Input/Output Port: DC 5V/2.4A
- Wireless Charging Output (for watch): 2W
- Working Temperature: 14°F ~ 113°F (-10°C ~ 45°C)

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.