


正面

65mm

Portable 10,000mAh 22.5W powerbank with AC plug built-in cables and 3in1 wireless charger

User's Manual

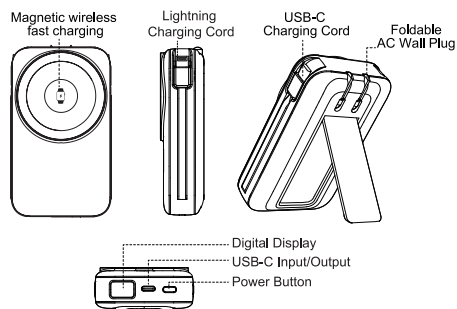

Tech Specifications

- Capacity: 10000mAh/3.85V/38.5Wh
- Type-C Input: 5V/3A, 9V/2A, 12V/1.5A (18W max)
- Type-C Output: 5V/3A, 9V/2A, 12V/1.67A, 10V/2.25A (22.5W max)
- USB Output: 5V/3A, 9V/2A, 12V/1.67A (20W max)
- AC Plug Input: 110V-240V, 50-60Hz
- Type-C Cable Input: 5V/3A, 9V/2A, 12V/1.5A (18W max)
- Type-C Cable Output: 5V/3A, 9V/2.0A, 12V/1.5A, 10V/2.25A (22.5W max)
- Lightning Cable Output: 5V/2A
- Wireless charge for phone: 5W/7.5W/10W/15W
- Wireless charge for earbuds: 5W
- Wireless charge for watch: 2W

Contents:

- 1× 3 in 1 Fast Charge MAG-N-KICK™ AC 10K
- 1× Magnetic Iron Ring
- 1× User's Manual

Safety Precautions

- This product is NOT a toy; keep away from children and pets.
- Use the device only according to the instructions in this Guide. Never use it for anything other than its intended purpose.
- Do not open or attempt to repair the device yourself if it is not working properly. Doing so could lead to fire, shock, or injury.
- Store the device in a dry, cool place when not in use, away from water or heat sources.
- Do not expose the device or charging cable to extreme temperatures, open flames, or wet/humid conditions.
- Do not submerge the device in water or use it where it or the charging cable could fall into liquid.
- Unplug the charging cable when not in use. Do not pull the cable to disconnect or use it as a handle.
- Do not use if the device or charging cable is damaged. If damaged, it must be serviced or replaced by the manufacturer or its service agent before further use.
- A low battery may cause malfunction.
- Do not overcharge the battery.
- This device contains a built-in battery and must not be disposed of with regular household waste. Consult local authorities for proper disposal methods.

How to Use

Charge the power bank fully before using for the first time.

Charge the Power Bank

You can use one of the following methods to charge your power bank:

1. Plug the foldable AC wall plug into a 110V-240V electrical outlet.
2. Connect one end of the USB-C cable to the USB-C Input/Output port on the power bank and the other end to a USB power source like a computer's USB-C port or an AC adapter's output port.
3. Connect the built-in USB-C Charging Cord to the corresponding port on your device.

The Digital Display will show the power level percentage while the power bank is charging.

反面

65mm

Charge Your Devices with the Power Bank

1. To charge using the built-in USB-C or Lightning Charging Cord, plug the cable into the corresponding port on your device.
2. To charge via USB-C port, connect one end of your charging cable to the power bank and the other end to your device.

The power bank will start charging automatically. The Digital Display will show the power level as a percentage while charging. Remove the cable from your device once it's fully charged.

3. To charge with wireless charging, press Powerbank ON/OFF button the LED screen will show the remaining power capacity. place wireless charging enable device on Wireless Charging Pad. The device will begin to charge, the wireless charging symbol "⚡" will show on the LED screen when charging. Remove your mobile device and powerbank once fully charged.

Note: If the wireless charging symbol "⚡" flashes on the screen, an unknown object is being detected between the wireless charging pad and the phone by FOD (Foreign Object Detection). The powerbank will not begin to charge until object is removed

Digital Display

- Press the Power Button once to activate the Digital Display.
- The Digital Display will show the battery power level as a percentage.
- Double press the Power Button to deactivate the Digital Display.

FCC Information

This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

