

NAVI AIR TRACKER INSTRUCTION MANUAL WTV-NV25

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.


WHAT'S INCLUDED:

- 1x Navi Air Tracker
- 1x Metal Ring
- 1x Lanyard
- 1x Battery Compartment Opener

SAFETY PRECAUTIONS

- Only use the device according to the instructions in this manual. Never use the device for anything other than its intended purpose.
- Handle the device with care. It contains sensitive electronic components, including batteries, and can be damaged, impair functionality, or cause injury if dropped, burned, punctured, crushed, disassembled, or if exposed to excessive heat or liquid or to environments having high concentrations of industrial chemicals.
- Do not use the device if it has been damaged in any way.
- Do not handle the device or button cell with wet hands.
- Always use the specified power source and voltage.
- This device contains small parts and is not suitable for children.
- If this device is damaged, it **MUST** be serviced or replaced by the manufacturer or its service agent before using again.
- When not in use, the device should be stored in a dry, cool location, away from sources of water or heat.
- Dispose of used battery according to your local environmental laws and guidelines.
- The device contains components and radios that emit electromagnetic fields. The device also contains magnets. These electromagnetic fields and magnets may interfere with pacemakers, defibrillators, or other medical devices. Maintain a safe distance of separation between your medical device and the device. Consult your physician and medical device manufacturer for information specific to your medical device.
- Stop using the device if you suspect it is interfering with your pacemakers, defibrillators, or other medical devices.

PRODUCT DIAGRAMS

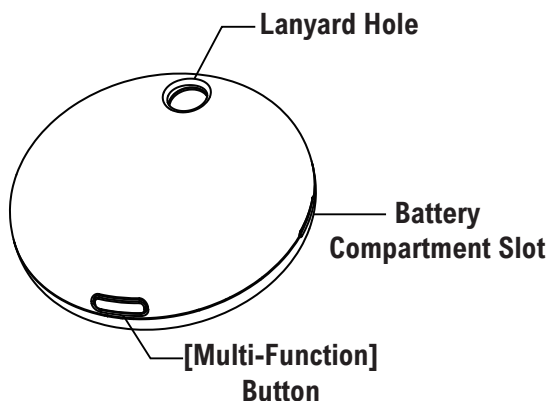


INSTRUCTIONS

Navi Air Tracker is a super easy way to keep track of your stuff. Attach one to your keys, slip another in your backpack. And just like that, they are one your radar in the Find My app, where you can also track down your Apple devices and keep up with friends and family.

PAIR & CONNECT WITH A NEW DEVICE

- Turn on Bluetooth of your iPhone or iPad and make sure the iPhone or iPad is connected to internet.
- Hold the tracker near your iPhone or iPad.
- Press and hold the **[Multi-Function]** button on the bottom of the tracker for 2 seconds to power on.
- You will hear a single beep indicating the tracker is in pairing mode.
- Open the **Find My** app on your iPhone or iPad.

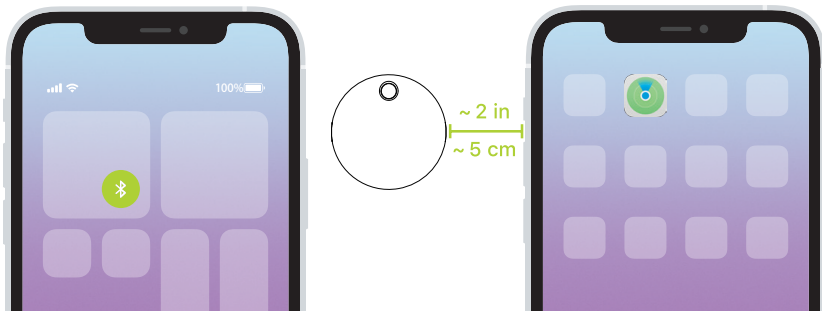

- In the **Find My** app:
 - Navigate to "Items" tab and tap "+" button to add a new item.

- Select “Add Other Item” to start searching items.
- When you see “Huthur tag” popping out, tap “Continue”.
- Then you can follow the onscreen steps to finish setting up the tracker.
- Press and hold the **[Multi-Function]** button on the bottom of the tracker for 6 seconds to power off. You will hear a single beep, followed by two consecutive beeps and then three consecutive beeps, indicating the tracker is turned off.

HOW TO USE

Locate the Tracker

- Open the **Find My** app and navigate to the “Items” tab.
- Tap on your item from the list.
- If the tracker is nearby, tap “Play Sound” to make your tracker beep and follow the sound to find the tracker.
- *You can also use voice assistant to start the search.*
- If the tracker is not nearby, the last known location will appear on the map. Tap “Directions” to navigate to the last known location.

Notification:

- Open the **Find My** app and navigate to the “Items” tab.
- Tap on your item from the list.
- Scroll down to find “Notifications”.
- Turn on or turn off “Notify When Left Behind”.

BATTERY

Navi Air Tracker contains a coin cell battery. The battery may need to be replaced during the life of the product. Replace only with the same type (CR2032) and rating of battery, observing the correct polarity.

To replace the battery:

- Using the battery compartment opener provided with this device, insert into the slot on either side of the tracker and gently pry open the battery compartment.
- Remove the used battery.
- Insert a fresh CR2032 battery into the device with positive side (+) facing up.
- Align the case so that the lanyard hole matches up and press to close the case securely.

Note:

- There is a risk of fire or electric shock, if the battery is replaced by an incorrect type.
- Dispose of used battery according to your local environmental laws and guidelines.
- Keep batteries away from children. Do not ingest battery. If ingested or placed inside body, seek medical attention immediately. Ingesting can cause severe chemical burns in just a few hours and result in serious injury or death.
- If the battery compartment does not close securely, stop using the device and keep away from children.

RESET THE TRACKER

- To remove the tracker from your iPhone or iPad, open the **Find My** app, go to “Items”, locate the tracker, and scroll down to select “Remove item”.
- Then you can follow the onscreen steps to finish removing the tracker.
- If you have trouble connecting or pairing the tracker, press and hold the **[Multi-Function]** button on the bottom of the tracker for 11 seconds. You will hear a single beep, followed by two consecutive beeps, three consecutive beeps and a long beep, indicating the tracker is reset successfully.
- Follow the instructions under “**PAIR & CONNECT WITH A NEW DEVICE**” to pair with the tracker again.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

WARNING:

- (I) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.;
- (II) Even used batteries may cause severe injury or death.;
- (III) Call a local poison control center for treatment information.;
- (IV) Compatible battery type (CR2032);
- (V) Nominal voltage (3V);
- (VI) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.;
- (VII) Ensure the batteries are installed correctly according to polarity (+ and -).;
- (VIII) Remove and immediately recycled or dispose of batteries from equipment not used for an extended period of time according to local regulations.;
- (IX) Non-rechargeable batteries are not to be recharged.;
- (X) Do not force discharge, recharge, disassemble, heat above 122°F (50°C) or

incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

(XI) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

FCC ID: 2A9Q9-WTV-NV25

Made in China