

[illegible]

■ Dual feeding modes

1. Immediate Feed Mode

Short press the **M** **FEED** button to wake up the automatic slow feeder.

Long press the **T** **FEED** button for 2 seconds, the automatic slow feeder beeps and begins to feed.

During feeding, long press the **T** **FEED** button again for 2 seconds to stop feeding.

■ **Low battery alert**

If only battery power is used and the batteries are running low, the **LOW BATTERY ALERT** icon on the panel will light up in red and the automatic slow feeder will beep every 5 minutes to remind you to replace the batteries.

■ **Low battery alert**

If only battery power is used, when the battery power is low, the automatic slow feeder will beep every 5 minutes to remind you to replace the batteries.

A diagram of the automatic slow feeder. A speech bubble with the word "Beep" and three dots is shown next to the feeder, indicating the low battery alert. The feeder is a cylindrical container with a lid and a base.

Clean the washable parts before first use.
Use mild detergent and water to clean the lid, detergent holder, agitator, food hopper, food cutter, adjusters (if), and bowl. Rinse thoroughly. Let all parts air dry completely before assembling.

Caution: do not use the base, batteries, and USB-C cable.

6

Relative Ambient Humidity	90% to 95% RH
---------------------------	---------------

10

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

11