

Home Theater Sound Bar System With HDMI (Arc)

TF-S206 User Guide

Contents

 
 
 
 
Important Safety Instructions	2
Unpacking	3
Product Overview	4
Set up the Soundbar	8
Place the Soundbar	14
Troubleshooting	15
Specification	16
Compliance	17
Customer Service	18

Important Safety Instructions

- A strong impact may cause damage to the internal parts of the product. Use caution to avoid impact.
- This product contains small parts which may be a choking hazard. Not suitable for children under age 3.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- To reduce the risk of fire or electrical shock, do not expose this product to rain, liquids, or moisture.
- Do not expose this product to dripping or splashing and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do not place naked flame sources, such as lighted candles, on or near the product.
- Do not make unauthorized alterations to this product. Only use the mounting hardware supplied with this product.
- Do not mount on surfaces that are not sturdy, or that have hazards concealed behind them, such as electrical wiring or plumbing. If you are not sure about installing the bracket, contact a qualified professional installer.
- Do not place or install the bracket or product near any heat sources, such as fireplaces, radiators, heat registers, or other apparatus that produce heat.
- Do not use chemicals or detergents to clean the product. Clean only with a dry cloth.

Unpacking

Carefully unpack the carton and confirm the following parts are included:



Package Contents

1. Soundbar
2. Remote Control
3. Optical Cable
4. DC Adapter
5. User Guide
6. 3.5mm Audio Cable
7. HDMI Cable
8. AAA Battery (2)
9. Cleaning cloth

Product Overview

 
Front Panel



Top Panel



Right Panel

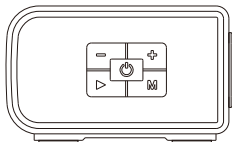

Power Button

Short press once to power on when plug in, long press once to power off.

M Mode Button

Press MODE to switch BT/AUX/HDMI/OPTICAL/ USB mode.

+ Volume Up

- Volume Down

 
▶ Press to pause

Back Panel




-  HDMI Input
-  Optical Input
-  USB Input
-  AUX Input
-  DC 18V

Bottom Panel

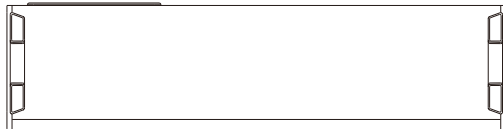

Silicone Feet

 Remote Control

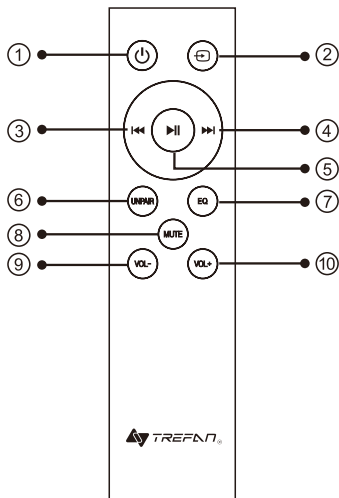

- ① Power Button
- ② Mode Button
- ③ Previous song
- ④ Next song
- ⑤ Play/pause
- ⑥ Unpair, disconnect the sound bar from connected device
- ⑦ EQ, change different EQs
- ⑧ Mute key
- ⑨ Volume -
- ⑩ Volume +

Key special instructions:

 
The previous, next keys are only available on Bluetooth (BT) mode, but other modes have no effect.

Setup Soundbar

Connect the Soundbar

Before using the product, you need to make sure that the product is properly connected to the power supply.


Step1: Plug one end of the power cord into the power connector on the back of the Soundbar.

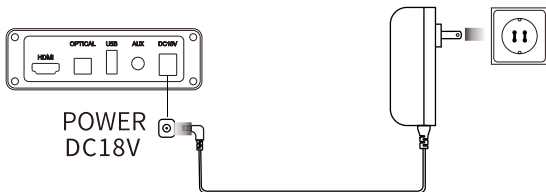


Step2: Plug the other end of the power cord into the DC outlet.

Power On / Off

 Step1:Inserting batteries before using the remote control(AAA batteries x 2).

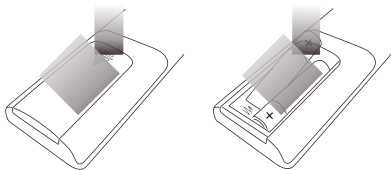

 Step2:Click the power button on the remote control or right .

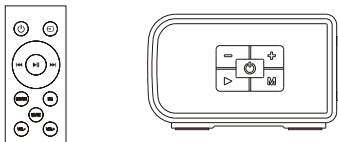

Bluetooth Connection

Step1: The device will enter into Bluetooth mode after power on, you will hear the "bluetooth mode pairing" tone when ready to pair.

Step2: Search the Bluetooth name "Trefan-S206" in the Bluetooth settings for pairing. a "bluetooth connected" tone will be heard , and the white light is always on when the pairing is completed.



Attention:

On first use, the sound bar will automatically enter into Bluetooth mode after power on.

 
 
In Bluetooth mode, the sound bar will automatically connect to the most recently paired device.

Optical Connection

Step1: Remove the protective covers on both ends of the supplied optical cable.

Step2: Connect the digital audio in the optical jack on the soundbar to the optical out jack of the device with a digital optical cable.

Step3: Press the M button on the right panel of the soundbar or the Mode button on the remote control to select the optical input.

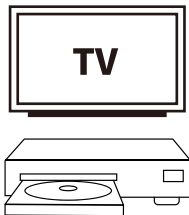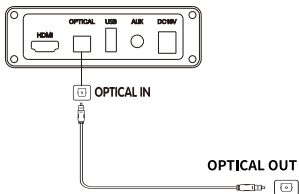

Attention:

 
when connecting with an optical cable, you need to set the TV's audio mode to external devices. At the same time, set the TV's audio decoding mode to PCM (Pulse-Code Modulation) mode. The TV menu may differ depending on the TV manufacturer.

AUX Connection

Step1: Connect AUX IN(audio) on the soundbar unit to the audio out jack of the device using a 3.5mm audio cable.

Step2: Press the M button on the right panel of the soundbar or the Mode button on the remote control to select the AUX input.

Note:Some devices require manual setting of the source output signal to Soundbar.

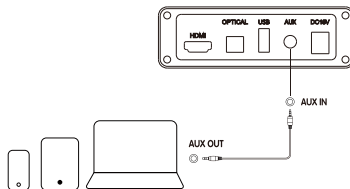


HDMI Connection

Step1: Connect one end of the HDMI cable to the Sound bar

Step2: Connect the other end of the HDMI cable to a device such as a TV

 Step3: Press the M button on the right panel of the soundbar or the Mode button on the remote control to select the HDMI input.

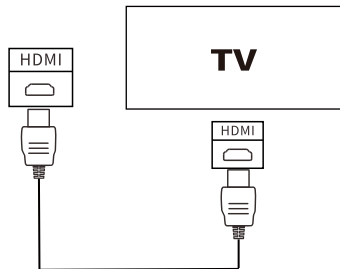

USB Connection

Step1: Plug your USB into the USB interface

Step2: Press the M button on the right panel of the soundbar or the Mode button on the remote control to select the USB input.

Sound Mode settings

 
The Trefan sound bar has 3 built-in equalizers. You can select your favorite sound effects by using the function keys on the remote control.

We have three types of sound effects: [Music], [Talk] and [Movie]. You can switch between the sound effects using the corresponding graphic buttons on the remote control.

Place the Soundbar

Put the Soundbar on the Table

You can use the product on the desk of your TV or computer.

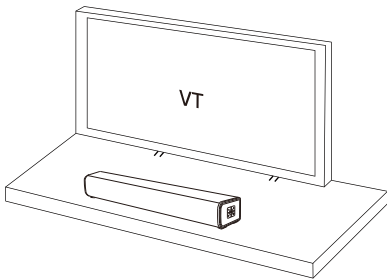

Troubleshooting

Q: Why is the unit not turning on?

A: Please check and make sure the power cord is correctly connected to a power source.

Q: Why is there no sound or the sound is distorted?

A: Please go over the following:

- Check to make sure the audio cable is correctly connected.
- Turn up the volume slowly.
- Press the mute button to switch on the sound.
- Press the play/pause button.
- Set the audio output mode on your TV (if applicable) accordingly with the mode setting on the soundbar.

Q: Why do the buttons on the soundbar not work?

A: Switch off the Soundbar and unplug. Then connect it to a power supply and switch it on again.

Q: Why does the remote control not work?

A: Please go over the following:

- Install 2 AAA 1.5A batteries into the remote.
- Replace the current batteries with new ones.
- Make sure the remote control is pointed to the soundbar during use.
- Make sure the remote control is within operating range.
- Switch off the soundbar and disconnect the power. Then reconnect and power it on, try again.

Specification

Bluetooth	5.0
Aux in	Support
HDMI in	Support
USB in	Support
Optical Connection	Support
Remote Control	Support
Driver	2x2.0"mid
Dimension	W16.54×D4.21×H2.52 Inch

Compliance

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Attention: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement: To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Recycling: To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Service

12-month Warranty Period

Within one year from the date of purchase, we will repair or replace the product for free if it does not work properly due to the quality of the product itself.

If you have any questions, please contact us by email freely.

Contact Us

Mail: customerservice@trefan.com.cn

Manufacturer

Name: Ruijin Trefan Technology CO.,L TD

Address: Jinyuan Road, Economic and Technological Development Zone, Ruijin City, Jiangxi

Made in China

