


Base Station Connection System


ESL Management

- Once the base station is connected to the system, the ESLs will automatically come online.
- You must select the store where the ESLs are located before performing any operations on them.

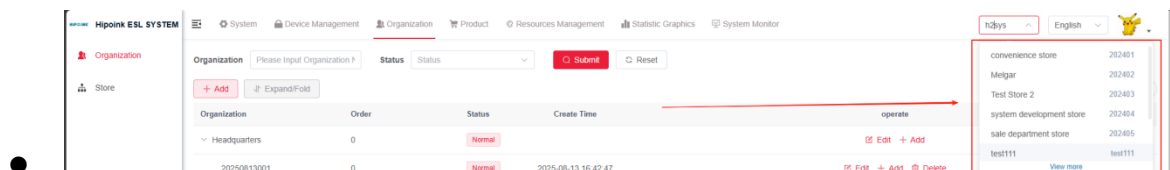


Bind ESL

- Select the corresponding template and enter the product code.

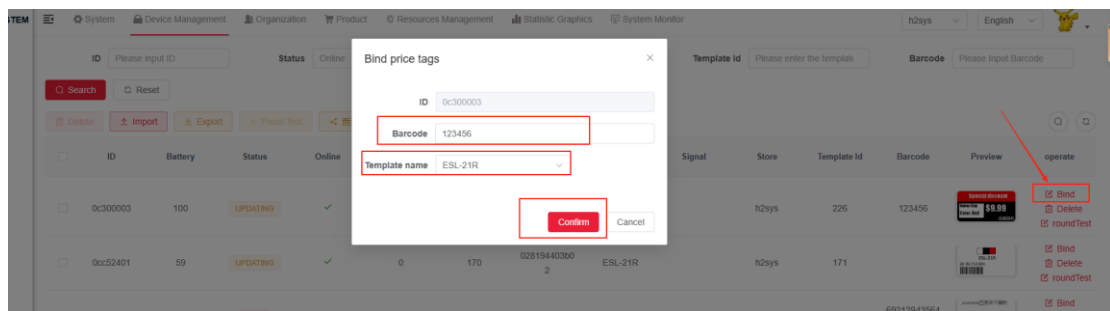

Unbind ESL


- Unlink the ESL from the product. After unbinding, price updates will no longer refresh on the ESL.

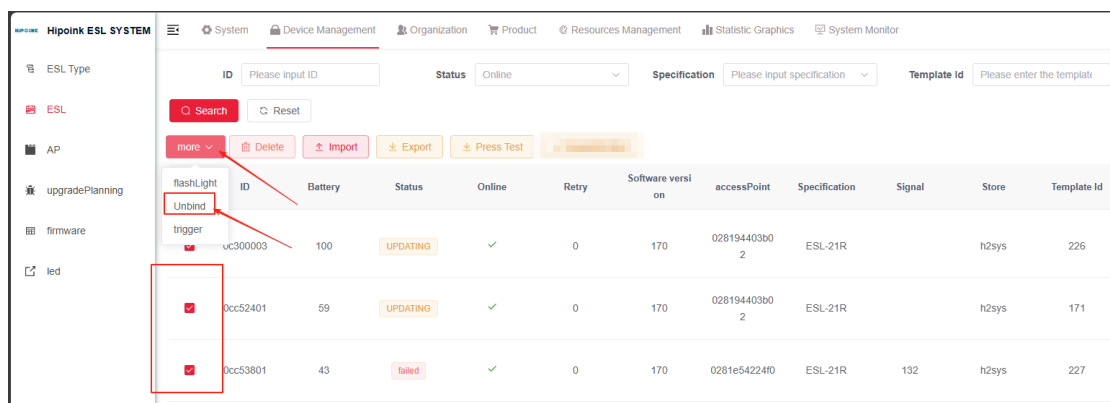

ESL Flashing Light


Add Flashing Light Type

- Click the Flashing Light menu (Device Management - led - add)

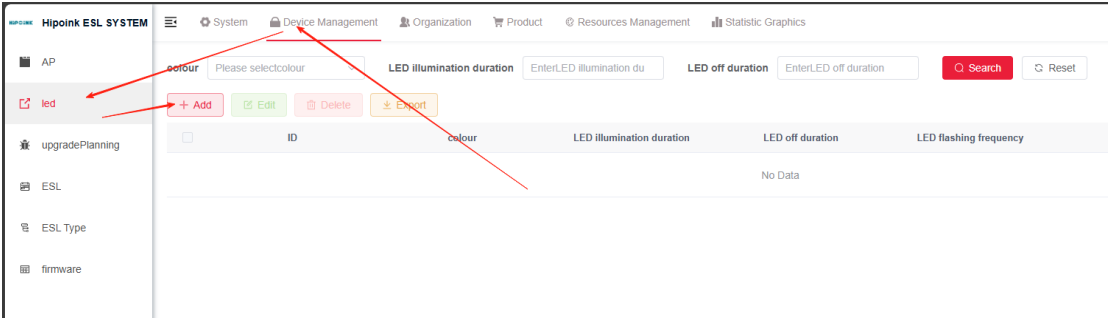


Product Management

Add Product

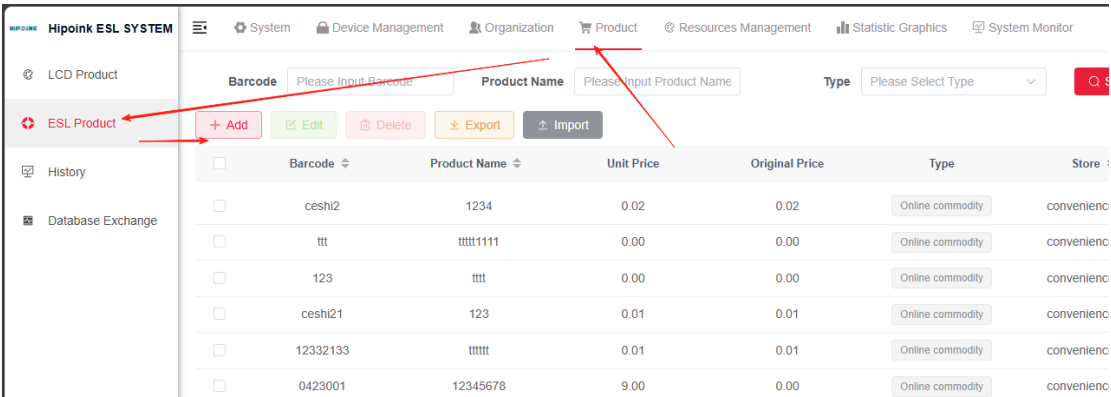

Edit Product

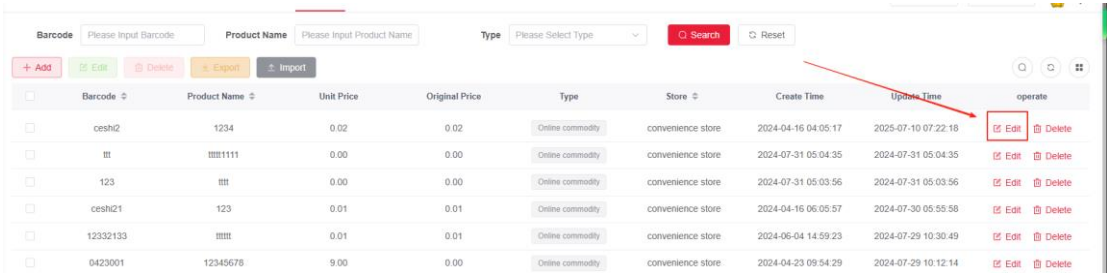

Import Products from Excel

- Export the template, fill in product information accordingly, and re-import.

A	B	C	D	E	F	G	H	I	
Barcode	Product Name	Specification	Grade	Unit Price	Unit	Original Price	MFRS	Origin	QR
ceshi2	1234			0.02		0.02	mfrs		
ceshi21	123			0.01		0.01	mfrs		
0423001	12345678			9.00		0.00	mfrs		
12332133	ttttt			0.01		0.01	mfrs		
123	tttt			0.00		0.00	v		
ttt	tttt1111			0.00		0.00	mfrs		

POS System Integration

- With scale integration: Select the “Dingjian Scale” directly in the POS configuration, and enter the system backend address.
- Without scale integration: Please contact IT support personnel.

Resource Management

Template Management

Add Template


- Click ADD, select Model number then submit

The screenshot shows the 'Hipoint ESL SYSTEM' interface. On the left, there's a sidebar with 'Template Manage' selected. The main area shows a table with columns 'Template Id', 'Template name', and 'Template'. A red arrow points from the 'ADD' button in the sidebar to the 'Add' dialog box. The dialog box has the following fields:


- * Template name: Please enter a template name
- Template classification: Online commodity
- Model number: ESL-21R
- Direction: Horizontal
- * Usable: ☒ Normal ☐ Unused
- * default: ☒ not default ☐ default
- Submit button (highlighted with a red box)
- Cancel button

Template Design


- Click “Design” to start editing the template.

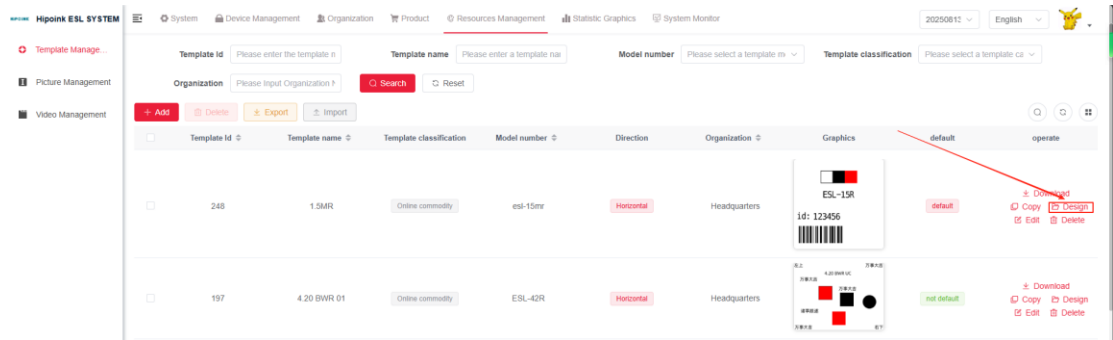

Bind Product Attributes

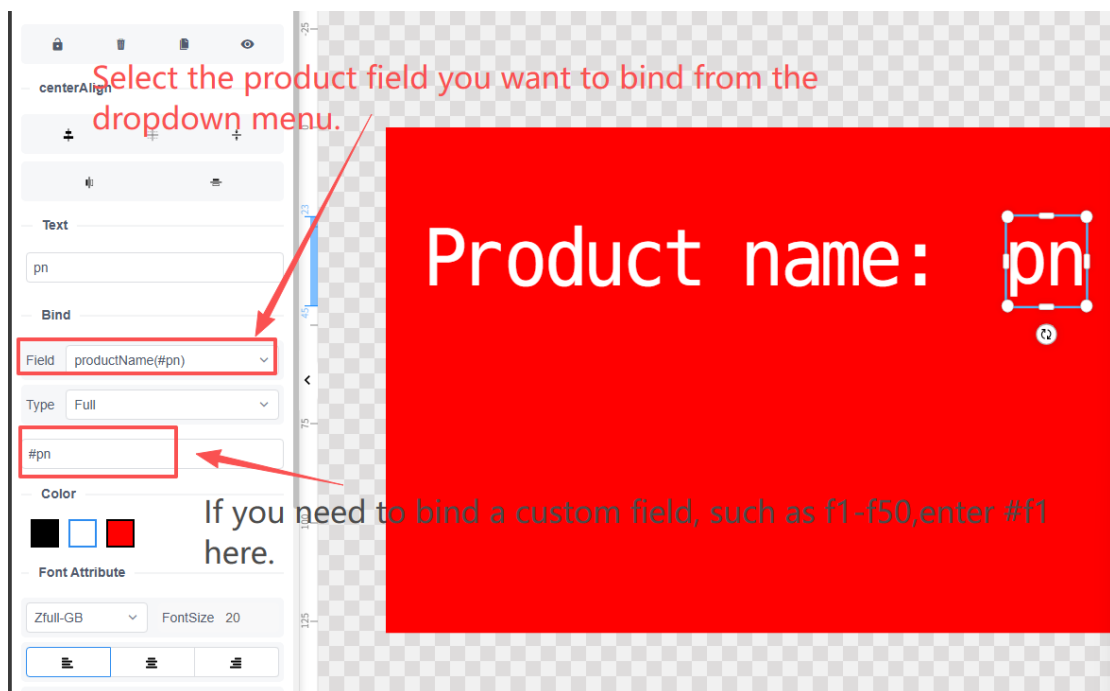

Product Attribute — Configure Different Font Sizes for Integer and Decimal Parts of Price

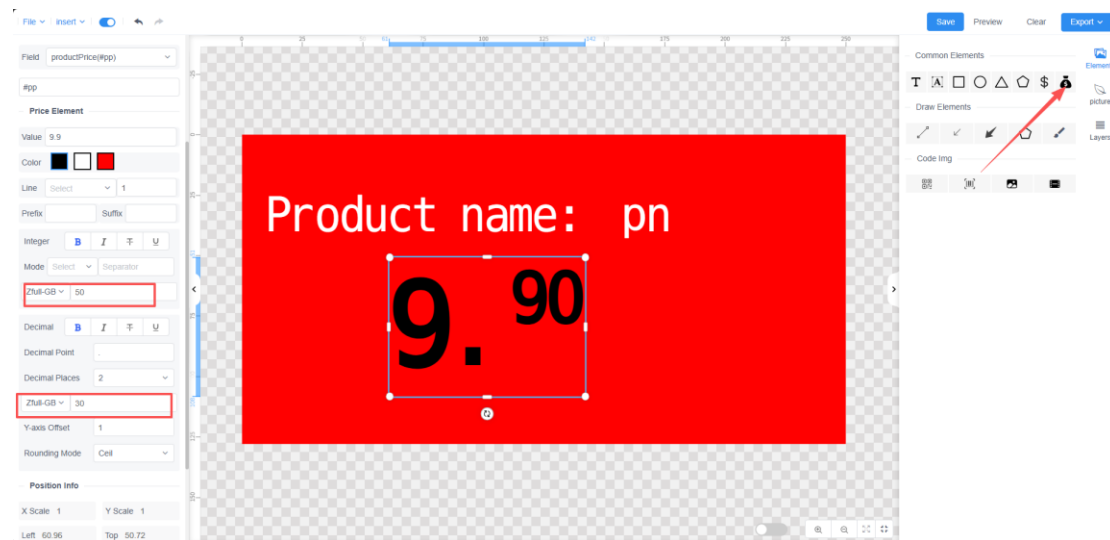

◆ **Price Element:** A commonly used component for displaying prices.

Full price display (supports integer + decimal parts).

Customizable decimal format:

Set the number of decimal places.

Apply rounding rules.

Flexible styling:


Different fonts/sizes for integer vs. decimal portions.

Add prefixes/suffixes (e.g., \$, €, /unit).


Alignment options: Center, right-align.

Additional formatting:

Thousand separators, Slash symbols

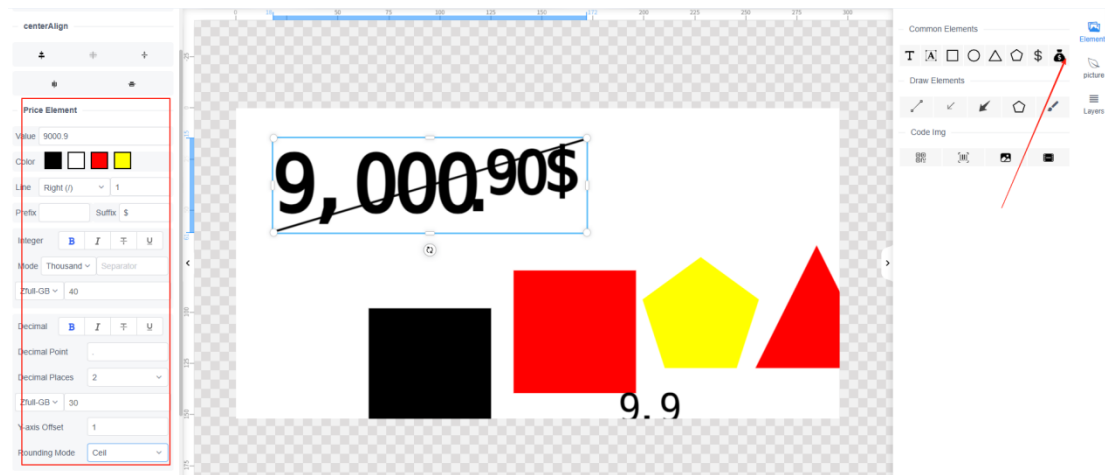

Product Attribute — Configure Product Barcode and QR Code

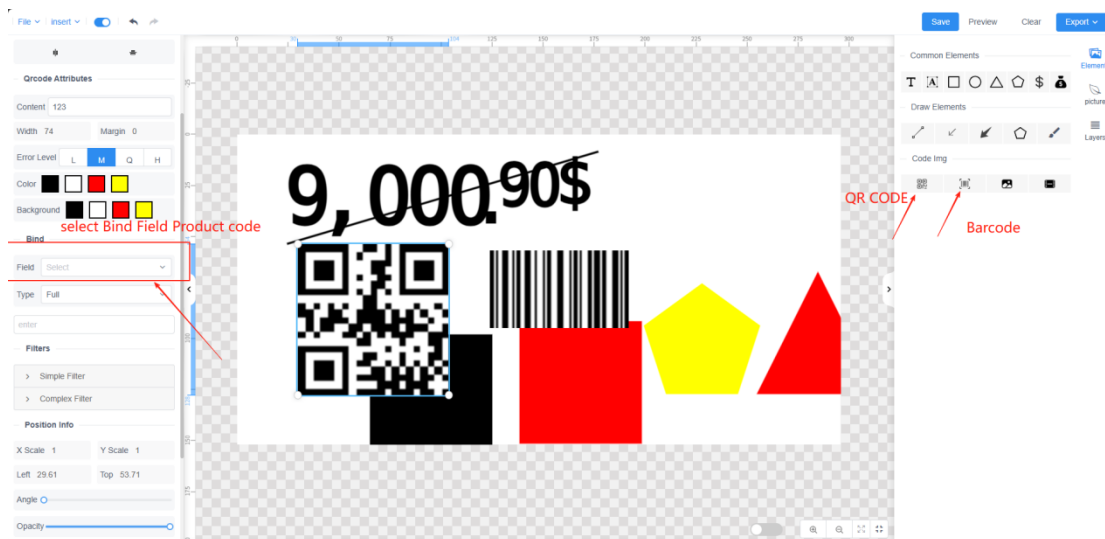

Product Attribute — Bind Product Image


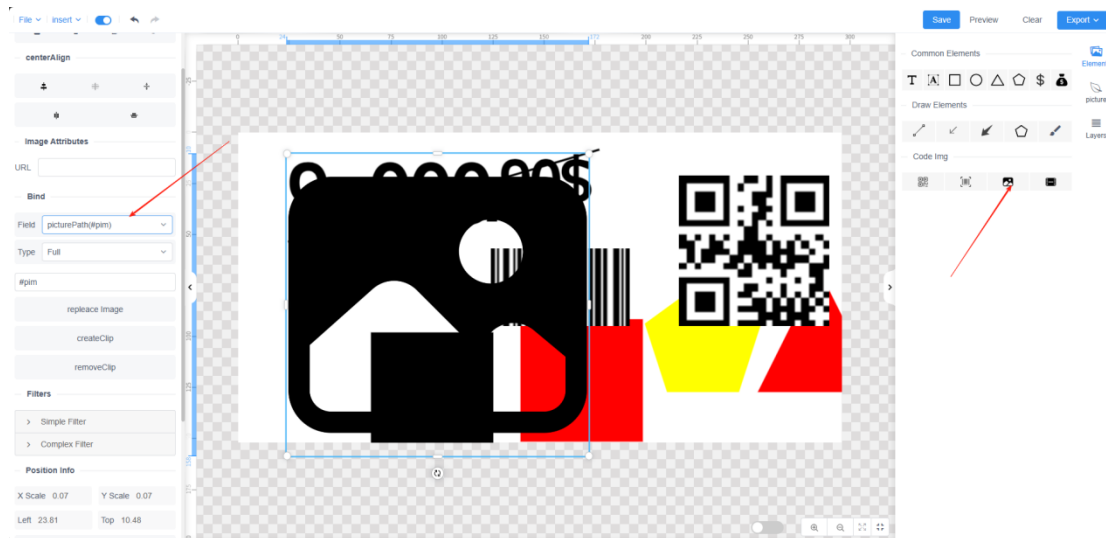


Image Management

Upload product images for selection and binding.

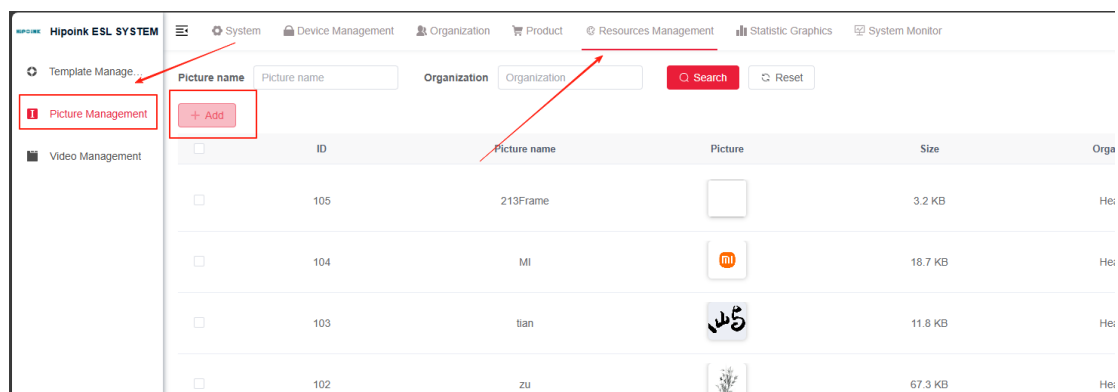

Video Management

Upload product videos for selection and display.

Hipoint ESL SYSTEM

System Device Management Organization Product Resources Management Statistic Graphics System Monitor

Template Manage... Picture Management **Video Management**

Video name Video name Organization Organization Search Reset

ID	Video name	Size
29	M333	7.01 MB
28	M222	3.04 MB
27	M111	4.97 MB
26	lufei	578.68 KB

Add

* Video name Please Input Video Name

* Video **Video Select**

Please upload Size dose not exceed 40MBThe format is mp4 File

Size

Submit Cancel

Organization Management

- Log in with an account to create an organization.

Hipoint ESL SYSTEM

System Device Management **Organization** Product Resources Management Statistic Graphics System Monitor

Organization Please Input Organization Status Status Submit Reset

+ Add Expand/Fold

Organization	Order	Status	Create Time	operate
Headquarters	0	Normal		Edit + Add Del
20250813001	0	Normal	2025-08-13 16:42:47	Edit + Add Del
Guangdong	1	Normal	2024-02-22 18:03:19	Edit + Add Del
dongguan	1	Normal	2024-02-22 18:03:32	Edit + Add Del
Dongcheng	2	Normal	2024-02-22 18:05:07	Edit + Add Del
Dongcheng stree	1	Normal	2024-04-08 19:58:37	Edit + Add Del
SID company	1	Normal	2024-04-18 15:39:31	Edit + Add Del
system development	0	Normal	2024-04-18 16:06:24	Edit + Add Del

- Select a parent organization if applicable.

Add

* Superior organization Headquarters

* Organization Please Input Organization Name

Order

Status ☒ Normal ☐ Unused

Submit Cancel

Normal 2024-02-22 18:05:07

Store Management

An organization can manage multiple stores (one-to-many relationship).

Add

* Store code 1111

* Store store name

Affiliated organization Clear selection of affiliated

Store address Please enter the store address

auto refresh ☒ Yes ☐ No

Submit Cancel

Store code Store address

202401 convenience

202402 Melgar

202403 Test Store

202404 system developm

202405 sale departmen

test111 test111

384 h2sys h2sys gdsid

User Management

Add new users and assign roles.

Path: System → User → Add User → Fill in user details (role, account, password, organization). One organization can have multiple users.

The screenshot shows a web-based management interface with a sidebar on the left containing a tree view of organizations (Headquarters, Guangdong, dongguan, etc.) and a main area with a table of users. A modal dialog titled "Add" is open in the center, used for creating a new user. The dialog contains the following fields and controls:

- * NickName**: Text input field with placeholder "Please input nick name".
- * Organization**: Dropdown menu with "Select Organization" as the placeholder.
- Phone**: Text input field with a country code dropdown (currently "+86") and a length indicator "0 / 11".
- E-mail**: Text input field with placeholder "Please Input Correct E-mail".
- * Username**: Text input field with placeholder "Please Input Username".
- * Password**: Text input field with placeholder "Please Input Password".
- * Role**: Dropdown menu with "Select" as the placeholder.
- Status**: Radio buttons for "Normal" (selected) and "Unused".
- Remarks**: Text area for additional notes.
- Submit**: Red button to save the new user.
- Cancel**: Button to close the dialog.

Red rectangular boxes are drawn around the **Organization** dropdown, the **Username** and **Password** fields, the **Role** dropdown, and the **Submit** button.

Role Management

System administrators can add, modify, or delete roles. Each organization can assign roles to its sub-organizations. For detailed steps, see the “User Management” section.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.