

# Retro Diner Jukebox Stereo with FM Bluetooth (SKR-01)

## Instruction Manual



Photo for reference only.  
Actual product appearance may change due to constant improvement.

 
THIS INSTRUCTION MANUAL REFLECTS THE CURRENT TECHNICAL SPECIFICATIONS AT THE TIME OF PRINT. THE MANUFACTURER RESERVES THE RIGHT TO CHANGE SPECIFICATIONS FOR TECHNICAL REASONS WITHOUT PRIOR NOTICE.

## **IMPORTANT SAFETY INSTRUCTIONS**

**PLEASE READ THIS INSTRUCTION CAREFULLY BEFORE YOU USE OUR PRODUCT.**

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be followed.
4. Follow all instructions – All operating and user instructions must be followed.
5. Cleaning – Unplug this product from the wall electric socket before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water & Moisture – Do not use this product near water. For example, near bath tub, wash bowl, kitchen sink or laundry tub, or near swimming pool, etc.
8. Do not place this product on an unstable stand, tripod, bracket or table.
9. Ventilation – Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided, or the manufacturer's instructions have been adhered to.
10. Power Source – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
11. Power Cord Protection – Power supply cords should be routed so that they are not likely to be walked on or by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
12. Lightning – For added protection for this product, during a lightning storm or when it is left unattended and unused for long period of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
13. Overloading – Do not overload the wall electric socket, extension cords as this can result in a risk of fire or electric shock.
14. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
15. The product should be placed away from heat sources such as radiators, stoves or other products (including amplifiers) that produce heat.
16. This product is not suitable for manual operation by children.


# AC Adapter Power Supply

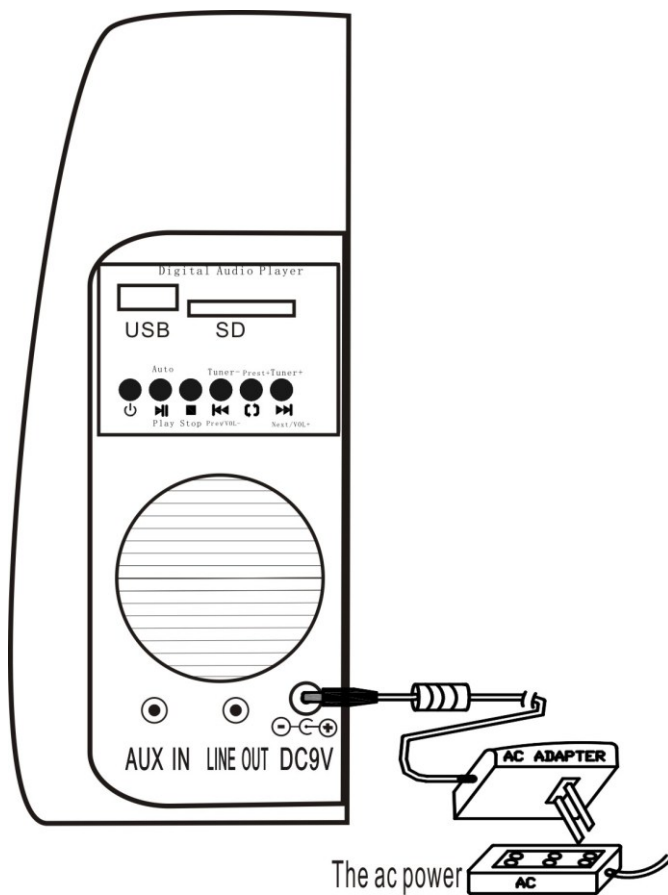

## NOTE:


- Wet hand operation is prohibited.
- If the unit is not used for a long period of time, it should be unplugged from the AC socket.
 
# Description of Parts

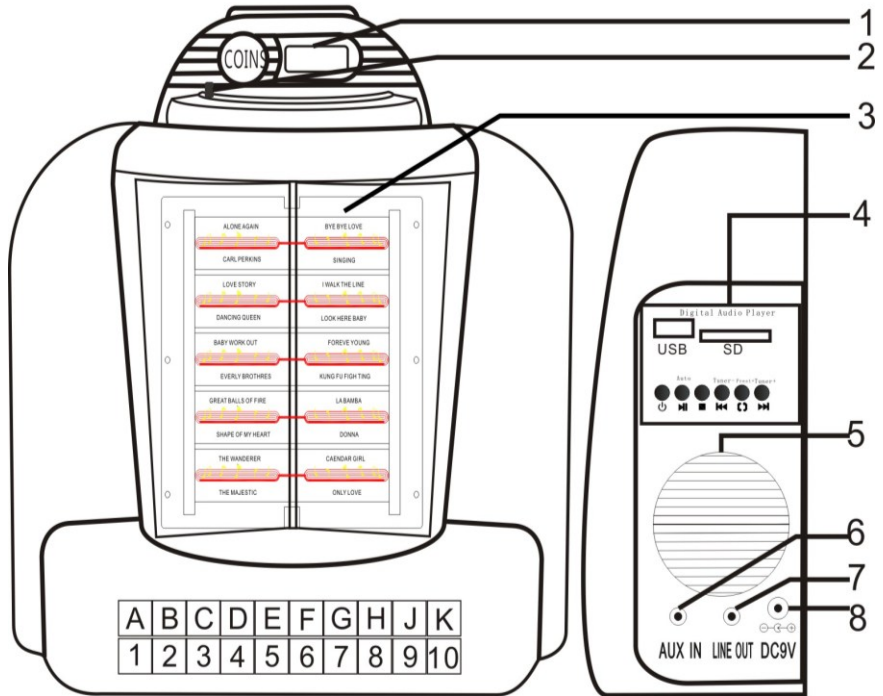

1. LCD display
2. Light switch (ON/OFF)
3. Song list panels (For decoration only)
4. Control panel
5. Speaker L+R
6. AUX IN
7. LINE OUT
8. DC input socket


# Digital Audio Player Control Panel

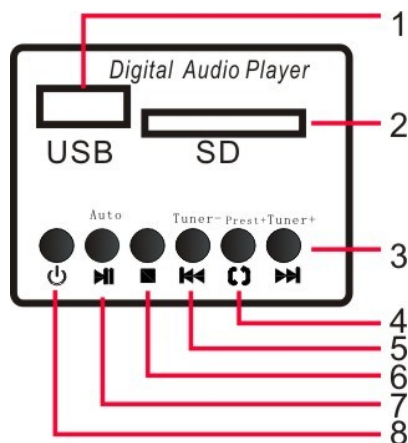 

1. USB Slot
2. SD Card Slot
3. Next/VOL+/Tuner+
4. Repeat/RDM/PGM/Prest+
5. Prev/VOL-/Tuner-
6. Stop
7. Play/Pause/Auto (Automatic Search)
8. Power/Mode

## Listening to the Radio

 1. Press "POWER" button to choose "RADIO" mode (Long press for 3 seconds after power off).
2. Press "Auto" it would search for stations automatically and also search (P01-P20) memory stations, it will automatically start and search the frequencies for the next strong station or stop on that.
3. Manual Tuning – Press the "NEXT/TUNER+" or "PREV/TUNER-"
4. Saving Preset station – Press "Prest+" for 3 seconds, after the display shows "PGM P01...", press "Tuner-" or "Tuner+" to determine storage location, then press "Prest+" to save into memory. Display shows saved position (P01-P20).
5. Select Preset Station – Press "Prest+", the display shows "PGM", and within 3 seconds press "Tuner+" or "Tuner-" to select a radio station. A maximum of 20 radio stations can be stored.



6. To decrease the volume sound level, long press "VOL-" for 3 seconds.
7. To increase the volume sound level, long press "VOL+" for 3 seconds.

## Listening to USB/SD Card

1. Press the "Power/Mode" button until the display shows "USB" or "CARD". If there is no USB or SD card, the display will show "NO". Once the USB flash/SD card insert into the USB or SD card slot, it will automatically start playback. Press "Prev" or "Next" to select the previous or next track. ( Long press for 3 seconds after power off ) .
2. Press "Repeat/RDM" button once to select repeat one song, display shows "REP" and flickers. Press again to select repeat all songs in the folder, display shows "REP" steady. Press a third time to select random playback, display shows "RAN".
3. Press "Stop" button to stop playback.
4. To decrease the volume sound level, long press "VOL-" for 3 seconds.
5. To increase the volume sound level, long press "VOL+" for 3 seconds.

## PGM (Program)

You program songs to play in a specific order if you like. By using the back and forward arrow keys and the play button, you can also advance through your songs to find and play a specific one.

1. Press "Stop" button to display the full track count.
2. Press "PROG" button and hold for a few seconds until the display shows two dashes (--).
3. Choose the songs you want by using the back and forward arrow keys, then press "PROG" to save the song to the program list.
4. Press "Play" button to play the whole sequence.
5. To cancel the program list, press "Stop" button twice.

## Compatible USB Devices and SD Cards

- USB Flash Drive: supports USB2.0 or USB1.1
- File System: FAT16/32 (NTFS file system is not supported)
- Maximum files: under 999
- External HDD, card readers and locked devices are not supported.
- If you cannot read the music file again after the playback mode is changed, turn off the power, and unplug/plug the USB or SD card again.

## Bluetooth Operation

 
1. Press the "Power/Mode" button until the display shows "BLUE". Device is ready to pair when the BT symbol flashes.
2. Switch on the Bluetooth function of your phone/tablet and search for device name "JUKEBOX". Pair your phone/tablet and once pairing is successful, the BT symbol stops flashing. You can start to play music from your phone/tablet.
3. Adjust volume sound level from your phone/tablet or directly from the jukebox.
4. Press "PLAY" button to play music. Press again to pause music.
5. Press "Next" or "Prev" button to browse songs.
6. To end the pairing, press "Power/Mode" button to switch to other functions or turn off the Bluetooth connection from the Bluetooth device.

**NOTE:**

- The best distance of Bluetooth transmission is within 10 meters without barrier.
- If the last connected device is within the Bluetooth reception range of the Jukebox, you will not be able to pair a new device to the Jukebox. You will need to turn off the Bluetooth connection on the last connected device in order to connect a new device.
- The Bluetooth device will be the main controller for playing tracks on the Jukebox via Bluetooth.

**Listening to AUX-IN**

1. Insert the provided Aux-in cable into the Aux-in jack. The unit will immediately enter into Aux-in mode and the display will show "AUX".
2. Use the controls on your Aux-in audio source to play your desired songs.
3. Disconnect the Aux-in cable after using your external audio source.

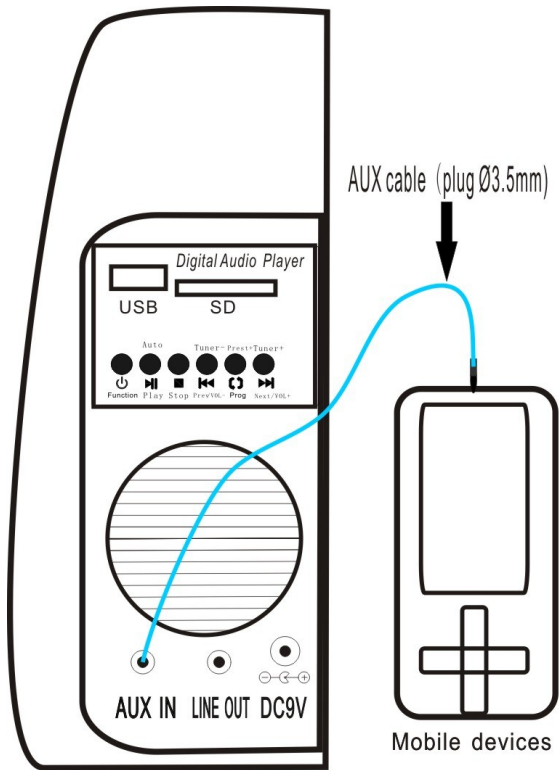


## LINE OUT

Insert the audio LINE cable (not included) into the "LINE OUT" jack. Audio signal from the Jukebox is passed through the connection to an external amplifier device.


### NOTE:

 - The internal speakers continue to keep the sound going.
- Disconnect the LINE cable after using your external amplifier device.

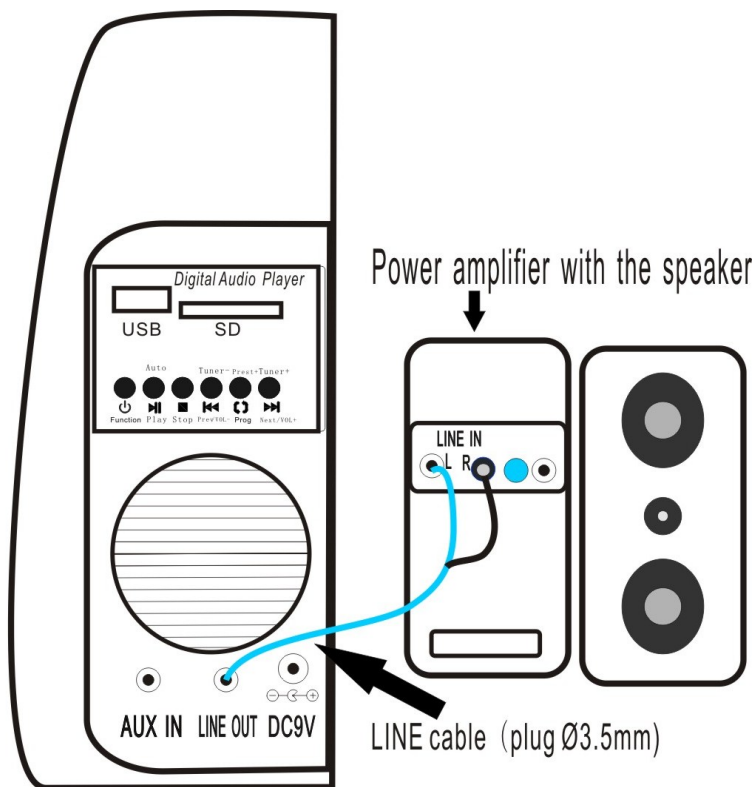

## Wall Mounting the Jukebox

 If you need to hang the Jukebox on the wall, select the right height for wall positioning and use the appropriate screws (not included). If unsure, please get the help of a local handyman.

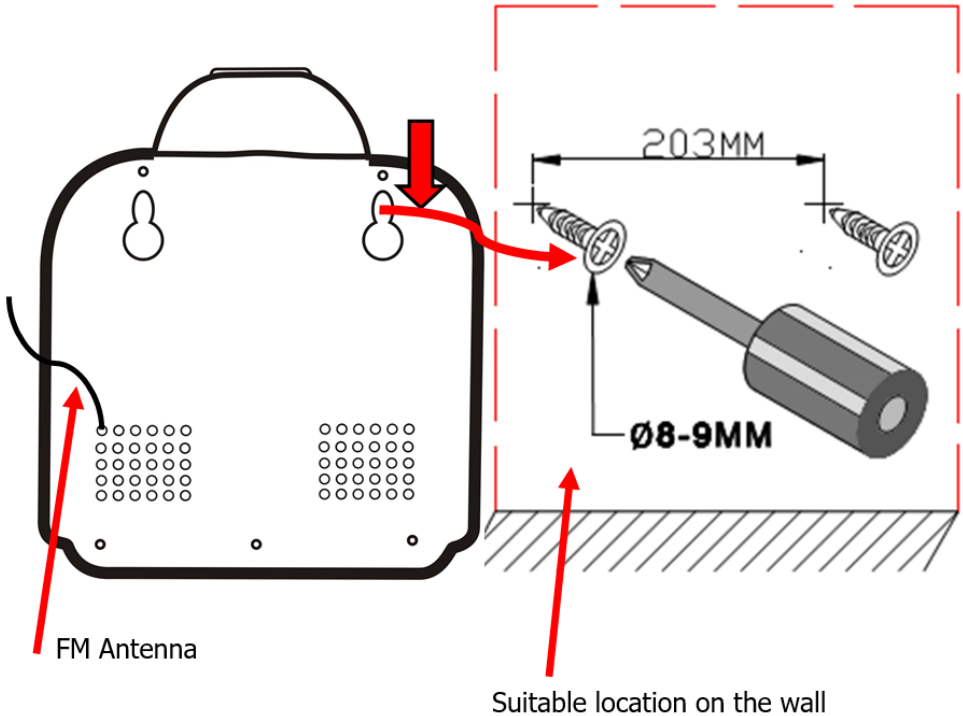

## FCC Part 15.105 Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **RF warning statement:**

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

## **CAUTION:**

1. Use of controls and adjustments or performance of procedures other than those specified here, may result in hazardous radiation exposure.
2. If this product develops trouble, contact a qualified service center, and do not use the product in a defective state.

## **TROUBLESHOOTING**

### **Power does not come on when the power switch is pressed.**

- Unit is Unplugged. Connect the unit to the power adaptor supplied with the product

### **No sound comes out of the speakers.**

- The volume is turned down to low level. Adjust the volume.
- The input selector does not match the playback/source. Re-select the desired input source.
- AUX audio cable is connected. Remove AUX audio cable.

### **The sound is noisy.**

- The unit is too close to a TV Set or another such device. Turn off the TV or other appliance or re-locate the Jukebox device

### **Cannot listen to any station or signal appears weak.**

- The station is not tuned-in properly. Tune-in the desired station properly.
- A TV set is being used nearby and is interfering with the radio reception. Turn off the interfering TV set.

### **The sound is distorted.**

- The antenna is not oriented properly. Re-orient the antenna until the reception improves

## **SPECIFICATION**

Output Power: 2.5W x 2

Impedance: 4 Ohms

Radio Frequency: 87.5 – 108 MHz (FM)

Input: DC 9V, 1A

Power Consumption: 9W