

Waterproof Mega Party Speaker

Instructions

ITEM: 323537



NOTE: Photo for reference only. Actual product appearance may differ due to constant improvement.


CAUTION:

- Do not open the case. No user serviceable parts inside. In case of damage, seek help of a qualified technician.
- Use the provided charger inside the package to charge the device.
- Do not put your belongings inside the storage box if they are not waterproof.
- To protect battery lifespan, fully charge at least once every 3 months. Battery life will vary due to usage patterns and environmental conditions.
- Do not expose the device to liquids without removing cable connection.
- Do not expose the device to water while charging. It may result in permanent damage to the speaker or power source. Chemicals and salt in your pool or the

ocean can damage the waterproof seals or harm the connector surface over time if not rinsed off after use. After a liquid spill or rinsed, do not charge your speaker until it's completely dry and clean. Charging when wet might damage your speaker.

- When using an external adapter, the output voltage/current of the external adapter should not be lower than 18V/3A, nor should it exceed 19V/3A.

Control Buttons and Parts

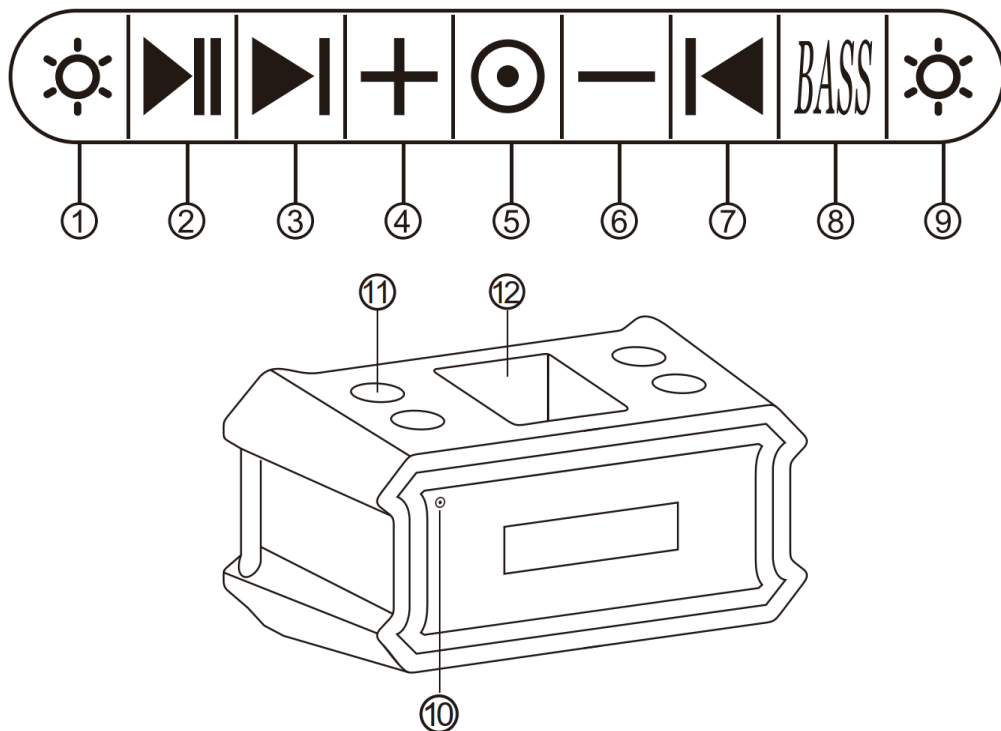

1. RGB LIGHT MODE

2. PLAY/PAUSE

3. NEXT

4. VOLUME +

5. POWER

6. VOLUME -

7. PREVIOUS

8. BASS

9. BUTTON LIGHT

10. CHARGING PORT (REAR)

11. BOTTLE HOLDERS

12. STORAGE SPACE (8.45 QTS.)

Pairing the Speaker

1. Press and hold the POWER button for about 3 seconds to turn on the speaker.
2. Turn on Bluetooth on your mobile phone or tablet.
3. Search for available devices and select Bluetooth name “SSB-66” to connect and pair to the speaker.
4. You will hear a sound prompt once Bluetooth pairing is successful.

NOTE:

- For specific instructions on how to use the Bluetooth function of your mobile phone or tablet, please refer to the user manual of your mobile device.

Using the Speaker

1. Press the POWER button around 3 seconds to turn on/off the device.
2. Press VOLUME buttons to decrease/increase the volume. Long press to continuously increase/decrease sound level.
3. Press NEXT or PREVIOUS buttons to select track.
4. Press PLAY/PAUSE button to play/pause the music.
5. Press RGB LIGHT MODE button to select available light effects surrounding the speakers. There are four RGB LIGHT modes.
6. Press BASS button to turn on/off the bass boost feature.
7. Press BUTTON LIGHT button to turn on/off the light of the buttons.
8. Press and hold PLAY/PAUSE button to disconnect Bluetooth device. Press and hold PLAY/PAUSE button again to connect Bluetooth device.

TWS (True Wireless Stereo) Mode

Two identical speakers can pair with each other for stereo sound. Both speakers can play the same audio (one as the left channel and the other as the right channel).

1. Turn on both speakers.
2. Press twice the PLAY/PAUSE button (either one) to enter TWS mode. You will hear a sound prompt once TWS mode is successful.
3. Press twice the PLAY/PAUSE button (either one) to exit TWS mode.

NOTE:

- After the first successful connection to TWS mode between two identical speakers, the second simultaneous start will automatically enter TWS mode.

Care

- Wipe clean as needed.

Specifications

Bluetooth name: SSB-66

Bluetooth version: 5.4

Output power: 140W (2 x 50W woofer + 4 x 10W tweeter)

Battery: 14.8Wh / 4,000 mAh

Charging time: 4-5 hours

Playing time: 5-11 hours

Input: DC 18V, 3A

Product dimensions: 30.3 x 16.9 x 15.3 in.

Product weight: 37.3 lbs.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

MADE IN CHINA