


USER MANUAL


1 Introduction

Item No.: E594-003
Material: plastic and electronic components
Batteries: Vehicle battery: 3.7V rechargeable battery
Remote controller battery: 2 pcs of 1.5V AA batteries (not included)

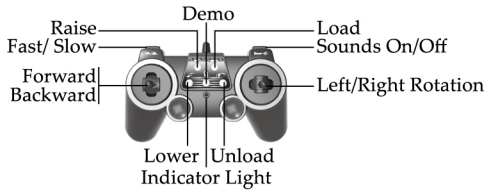


2 Installing batteries


- 1. Remove the battery compartment door at the back of the remote control. Install 2 pcs of 1.5V AA batteries in the correct polarity as indicated into the battery compartment. Reinstall the battery door and fix it with the screw (Picture 2A).
- 2. Remove the battery compartment door at the back of the vehicle. Install 1 pc of 3.7V rechargeable battery in the correct polarity as indicated into the battery compartment. Reinstall the battery door and fix it with the screw (Picture 2B).

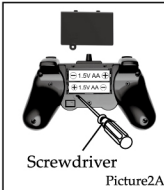

Picture2A

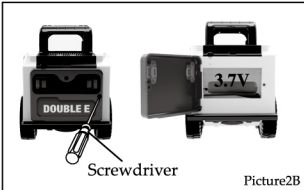

Picture2B

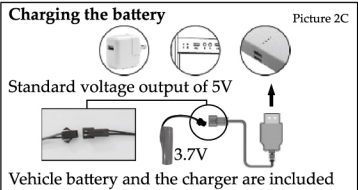

Picture 2C


Notice: The vehicle battery charging time is about 3 hours. Take good care of the charging line and avoid using it with other batteries. When the USB charger is connected to the power output, the indicator light will glow. Connect the battery to the USB charger and the indicator light will start flashing indicating that the battery is being charged. Disconnect the battery from the charger once the indicator light is off (Picture 2C).

3 Pairing procedure


- 1. Install the batteries into the vehicle and the remote control. Turn on the remote control and the vehicle. The pairing procedure will start automatically. The remote control indicator light will turn off and the vehicle will emit double beep indicating that pairing procedure was successful (Picture 3A).
- 2. The remote control can be paired only with one vehicle at once. Each set has an interference free system.
- 3. If there is no linking signal for 1 minute the remote control will automatically shut down.
- 4. To re-pair the set restart the remote control and the vehicle.



Picture3A

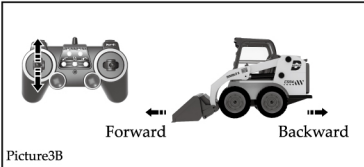

Picture3B

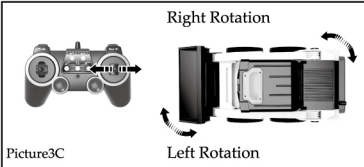

Picture3C

4 Operations

- 1. **Horn/Mute Button**
 - The sounds feature works after the vehicle in idling mode. Short press the "Horn" button to turn on the horn. Long press the "Horn" button to turn off the vehicle sounds.
- 2. **Forward/Backward**
 - Use the driving stick to control forward and backward movement (Picture 3B).
- 3. **Left/Right Rotation**
 - Use the steering stick to control left/right rotation movement (Picture 3C).



4. Bucket Load/Unload

- To do the bucket loading/unloading long press the "Load/Unload" button (Picture3D).

5. Loader Boom Raise/Lower

- To raise/lower down the loader boom long press the "Raise/Lower" button (Picture3E).

6. Fast/Slow Switch

- The slow speed mode works after the vehicle pairing procedure was successful. Press the "Fast/Slow" button to change to fast mode.

These functions could be multiple used for simulating operation.

5 Additional features

1. Demo button

Press the "Demo" button to automatically demonstrate the function after the vehicle is started. Press any key to turn off the demo function.

2. Auto off

If there is no linking signal for 1 minute the remote control will automatically shut down.

3. Interference free system

The interference free system allows multiple sets to be used in one area without interference.


6 Recharging

Notice: Always turn off the set and remove the batteries when the vehicle is not in use and when it is being stored. The vehicle battery charging time is about 3 hours. Do not charge more than 8 hours.


7 Notice

- 1. Do not drive on roads or areas used by real vehicles. Choose safe operating areas.
- 2. Do not drive in rain, snow, wetness or sand. Use dry cloth to clean the vehicle.
- 3. If the speed slows down or the vehicle does not properly turn right or left, please re-charge the battery.
- 4. The batteries should be charged under direct supervision of and adult. Please use only recommended batteries.
- 5. Pay attention to the battery polarity.
- 6. Avoid using old and new batteries together.
- 7. Please charge the battery before initial use.
- 8. The supply terminals are not to be short-circuited.
- 9. Regularly inspect the cable, plug, casing and other parts for damages. Do not use damaged batteries or charging lines.
- 10. Connect the battery only with the regular 5V USB chargers.

CHOKING HAZARD-small parts, not for children under 3 years.
Specifications, colors and contents may vary from illustration.

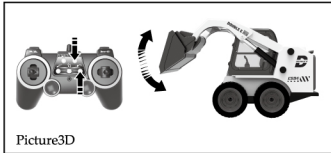

Picture3D

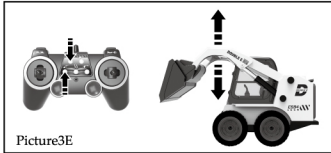

Picture3E

Frequency bands: 2405MHZ to 2475MHZ

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

OPERATING FREQUENCY	2405MHz ~ 2475MHz
EIRP (MAX.)	-6.49dBm

Hereby, [DOUBLEEAGLE INDUSTRY (CHINA)LIMITED], declares that this [REMOTE CONTROL CAR SERIES] is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The full test of the EU declaration of conformity is available at the following internet address:www.doublele-group.com

403AR00E5940003