

六、Machine Picture



JP




US




七、Test Angle and test part placement

DUT测试时的XYZ

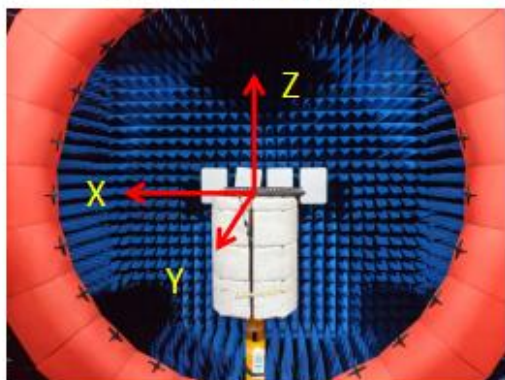


Chamber ANT相对位置

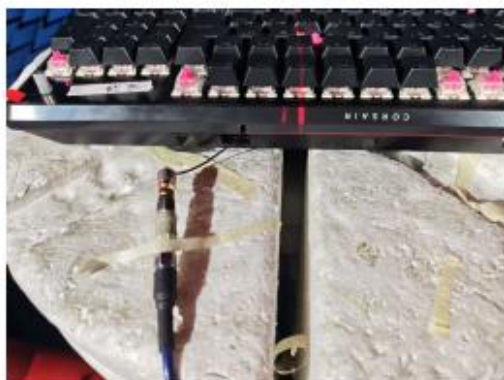


八、Coaxial line out direction

JP版本天线出线

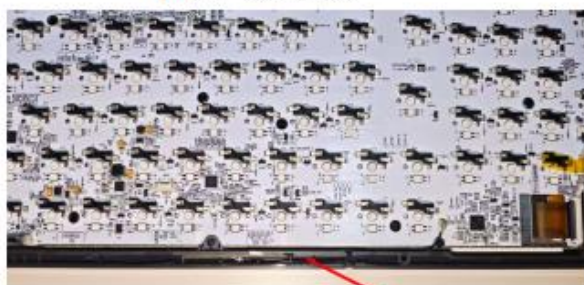


US版本天线出线

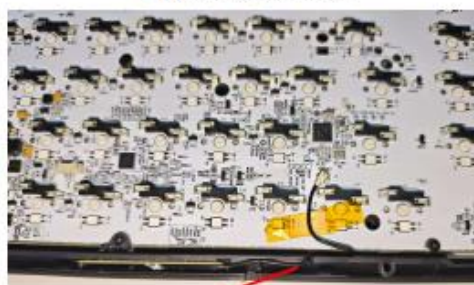

需注意：装配天线时同轴线
应沿着槽位最底部出线，避
免从天线走线上过线。

Please note that when assembling the antenna, the coaxial line should be led out
along the slot line to avoid leading out from the antenna routing line

九、Antenna assembly drawing

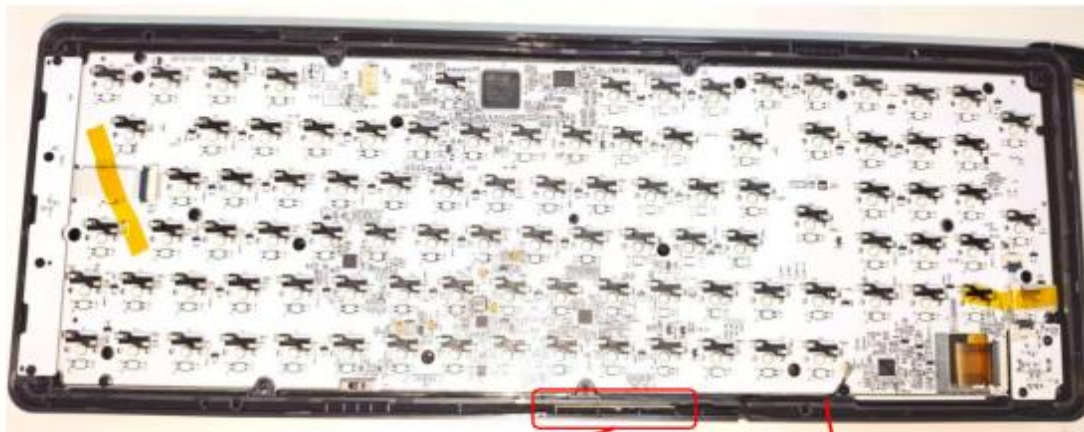

**JP天线位置如图所示
贴放在此槽位最边上卡位处**

The JP antenna is located as shown in the figure and is attached to the card slot at the edge of this slot

**此处同轴线出线紧挨壳料边
缘过线扣到IPEX座子**

The coaxial line here is tightly connected to the edge of the shell material and fastened to the IPEX seat



**US天线位置如图所示
贴放在此槽位最边上卡位处**

The position of the US antenna is shown in the figure, and it should be attached to the card slot at the edge of this slot

**此处同轴线出线需挨壳料边
缘绕线后再扣至IPEX座子**

The coaxial line outlet here needs to be wound next to the edge of the shell material and then fastened to the IPEX seat