

MANUAL | QUICK START GUIDE

SABRE v2 PRO

ULTRALIGHT WIRELESS GAMING MOUSE



CHARGING THE MOUSE

IMPORTANT: The SABRE V2 PRO gaming mouse must be fully charged before its first use.

Connect the mouse to an available USB 2.0 or 3.X port on your PC with the USB CHARGING / DATA CABLE (G).

The lights under the MIDDLE CLICK/SCROLL WHEEL (C) on the mouse will light up according to the battery status and will turn solid green when charging is complete.

GETTING TO KNOW YOUR MOUSE



- A. LEFT MOUSE BUTTON

B. RIGHT MOUSE BUTTON

C. MIDDLE CLICK/SCROLL WHEEL

D. FORWARD BUTTON

E. BACK BUTTON

F. MARKSMAN SE OPTICAL SENSOR
- G. USB CHARGING / DATA PORT

H. 100% VIRGIN-GRADE UPE MOUSE FEET

I. POWER ON/OFF SWITCH

J. USB WIRELESS RECEIVER

K. USB CHARGING / DATA CABLE
- CORSAIR Mouse grip

Extra Mouse feet

Warranty leaflet

SETTING UP 2.4GHz WIRELESS

- Connect the USB WIRELESS RECEIVER (J) to the USB CHARGING / DATA CABLE (G), plug the other side of the cable to an available USB 2.0 or 3.x port located on the front panel of your PC or nearby USB port.
- Power on your mouse by switching the POWER ON/OFF SWITCH (I) to ON.
- The LED indicator under the MIDDLE CLICK/SCROLL WHEEL (C) will light up to the corresponding DPI color it was last set to for 3 seconds before turning off.

If reconnection is required, initiate USB receiver pairing via USB cable and reconnect via CORSAIR WEB HUB.

CYCLING THROUGH DPI PROFILES

On-the-fly pre-defined DPI cycling is available for fast configuration.

- Long press the RIGHT MOUSE BUTTON(B) and the BACK BUTTON(E) for 3 seconds to switch to next DPI stage.
- When switching to the corresponding DPI level, the indicator light on the mouse wheel will flash 3 times for the corresponding DPI color and then turn off.
- Repeat the above steps to switch to the next DPI stage. It will cycle through 5 DPI stages and return to Stage 1.

Advanced configurations are available via CORSAIR WEB HUB.



MOUSE STATUS AND INDICATIONS


Wireless connection and battery status are communicated through the lights under the MIDDLE CLICK/SCROLL WHEEL (C).

DPI STATUS - PREDEFINED	LED INDICATOR
STAGE 1 - 400	RED
STAGE 2 - 800	BLUE
STAGE 3 - 1200	GREEN
STAGE 4 - 1600	YELLOW
STAGE 5 - 2000	PURPLE


BATTERY STATUS	LED INDICATOR
Battery charging when low	Breathing Red
Battery charging when medium	Breathing Green
Battery full	Solid Green
Battery critical, recharge required	Blinking Red

BATTERY REMOVAL INFORMATION

This product uses a rechargeable battery and safety guidelines must be followed in the event that the product is disabled for disposal and recycling. To safely remove the battery for disposal and recycling, follow the numbered steps with the below diagrams.

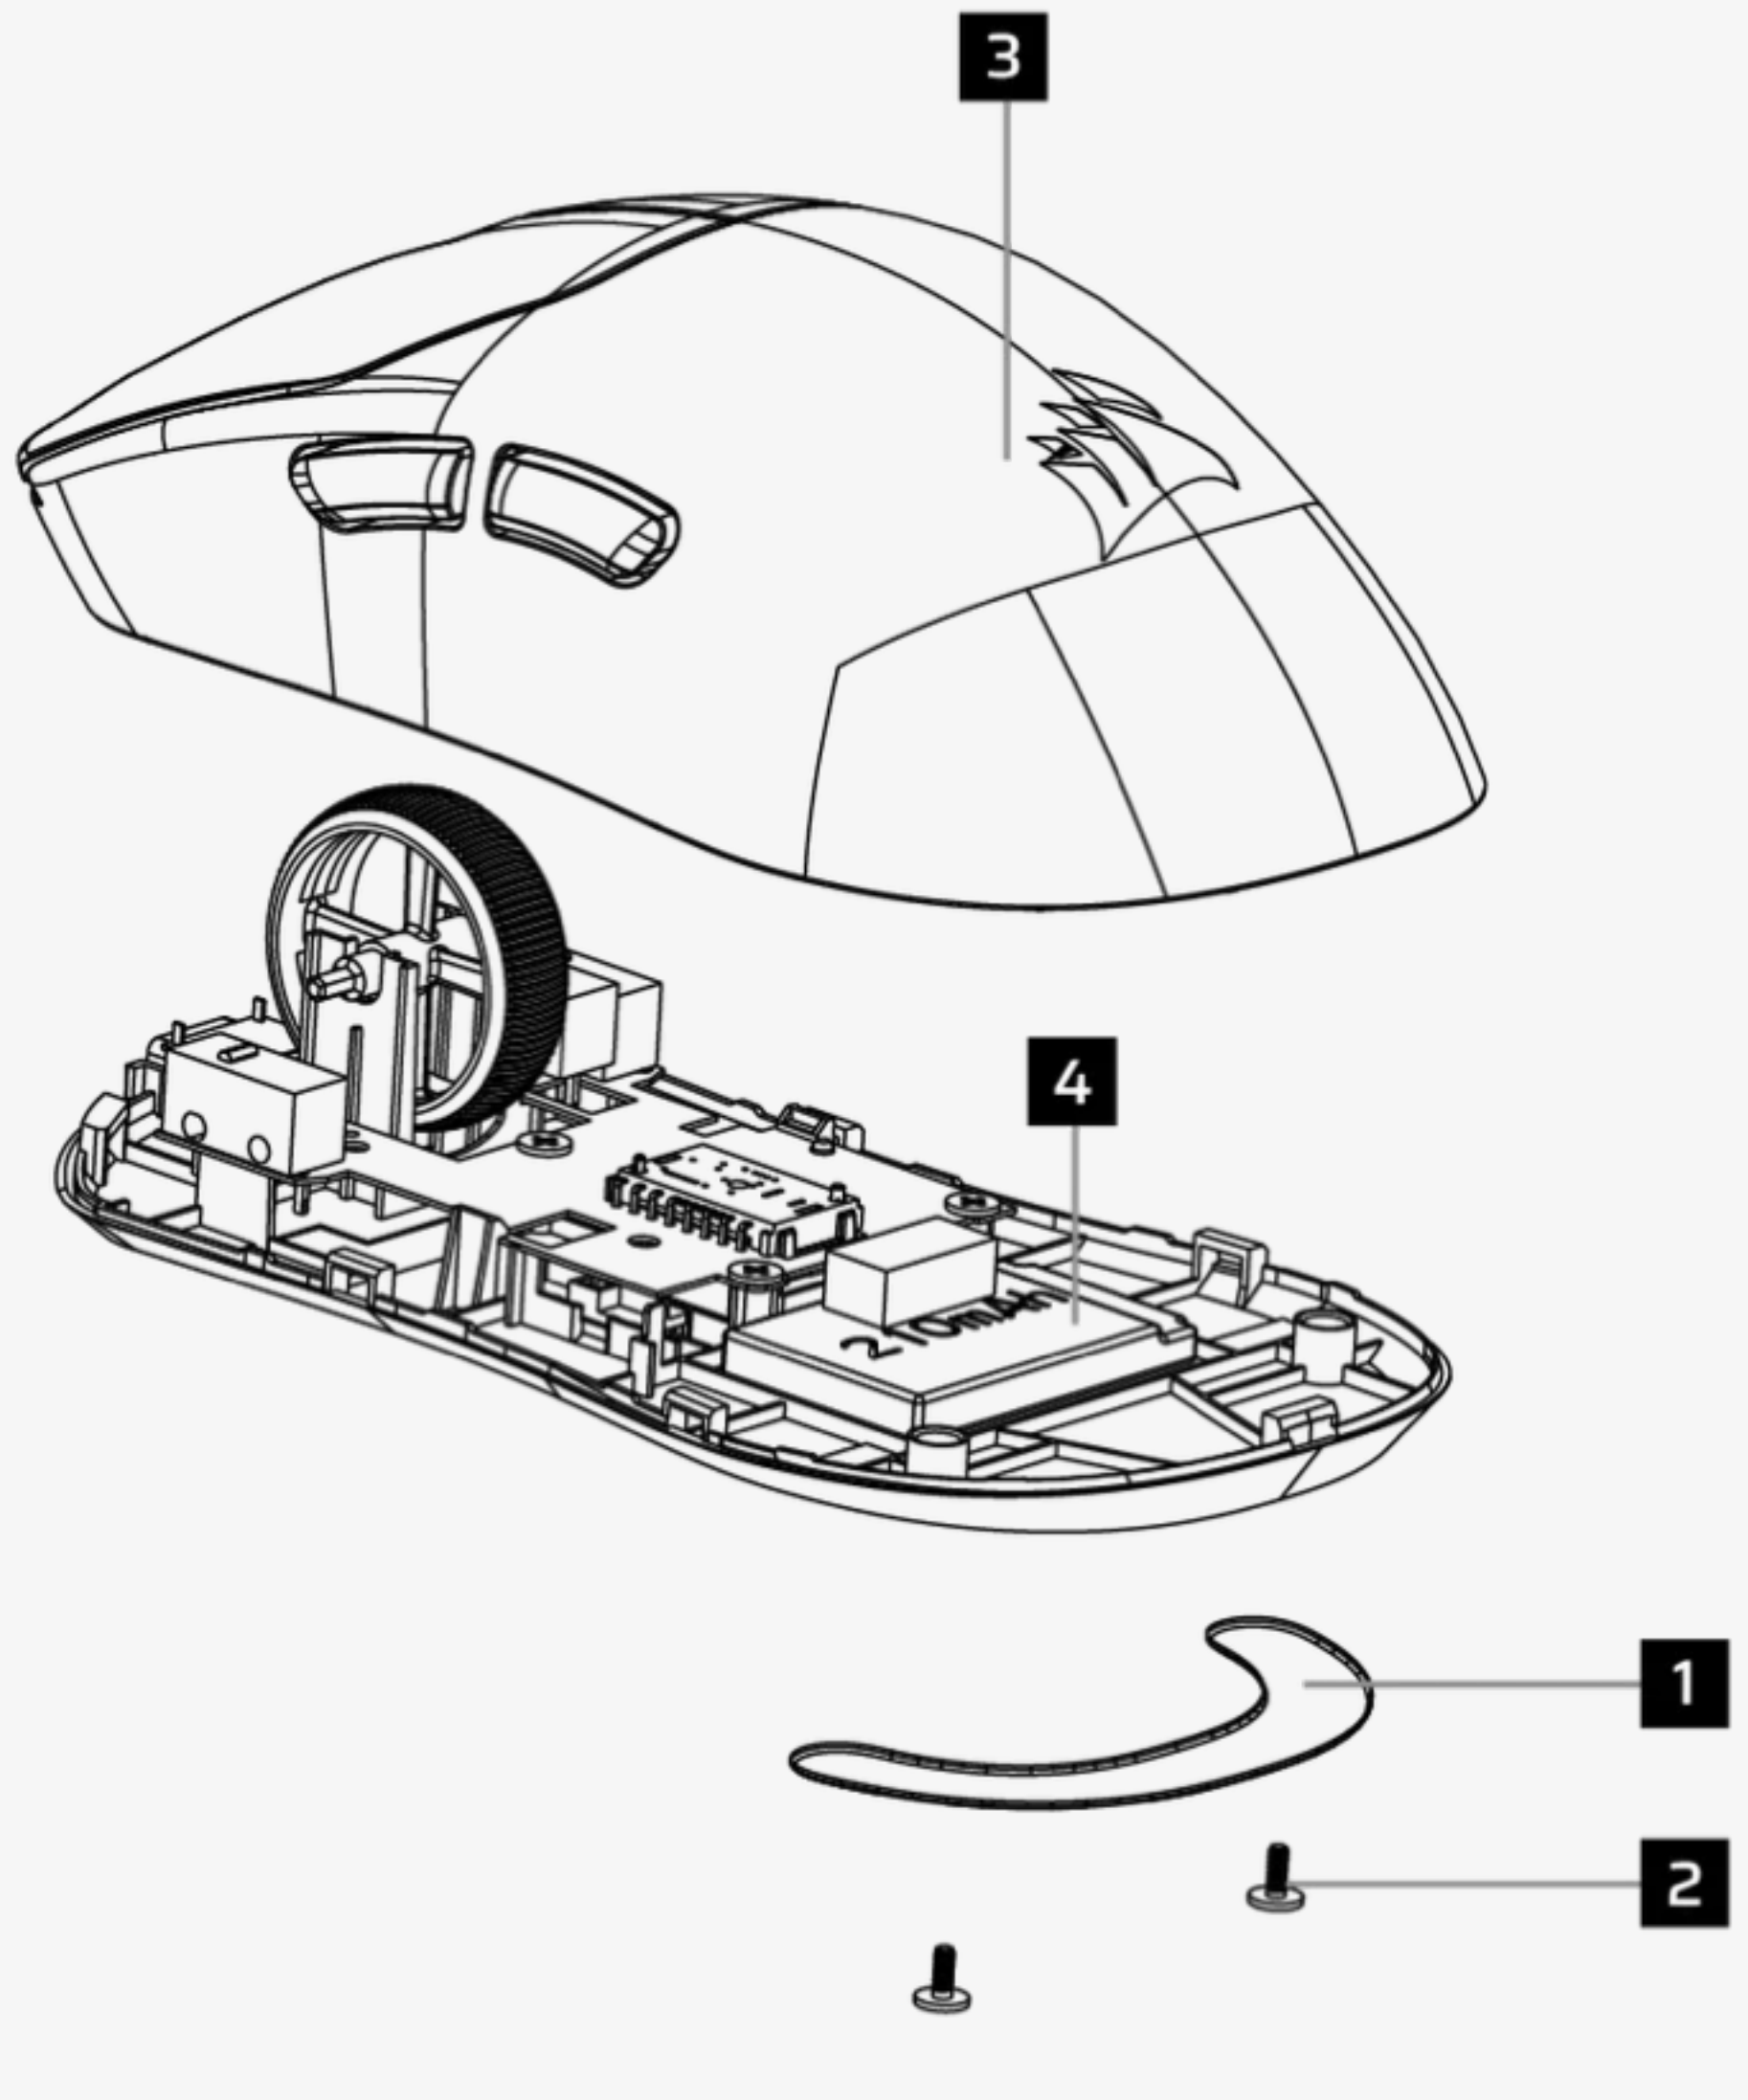

CORSAIR MEMORY, Inc. encourages customers to recycle used electronic hardware and rechargeable batteries in accordance with local laws and regulations.

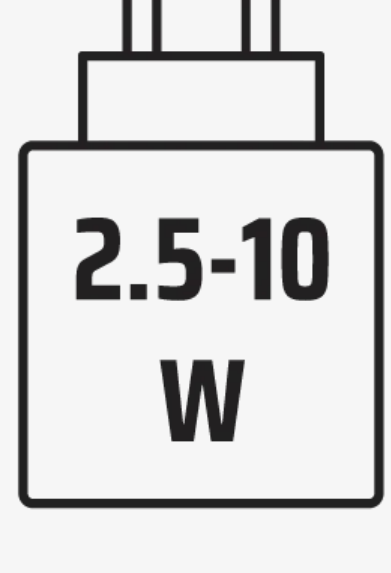

The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 10 Watts in order to achieve the maximum charging speed.

LEGAL INFORMATION

© 2025 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks of CORSAIR in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured.

CH-931G000-WW (Black)
CH-931G001-WW (White)
FCC ID: 2AAFM-RGP0183 (Mouse)
FCC ID: 2AAFM-RGP0185 (Dongle)
IC: 10954A-RGP0183 (Mouse)
IC: 10954A-RGP0185 (Dongle)

Mouse
M/N(型號): RGP0183
Rating(電壓電流): 5V --- 250mA

Dongle
M/N(型號): RGP0185
Rating(電壓電流): 5V --- 50mA

