



IRONCLAW WIRELESS SE

GAMING MOUSE




CHARGING THE MOUSE

IMPORTANT: The IRONCLAW WIRELESS SE gaming mouse must be fully charged before its first use.

Connect the mouse to an available USB 2.0 or 3.X port on your PC with the USB CHARGING / DATA CABLE (P).

The MULTI-PURPOSE LED INDICATOR (K) on the mouse will begin pulsing green to denote battery charging and will turn solid when charging is complete

GETTING TO KNOW YOUR MOUSE

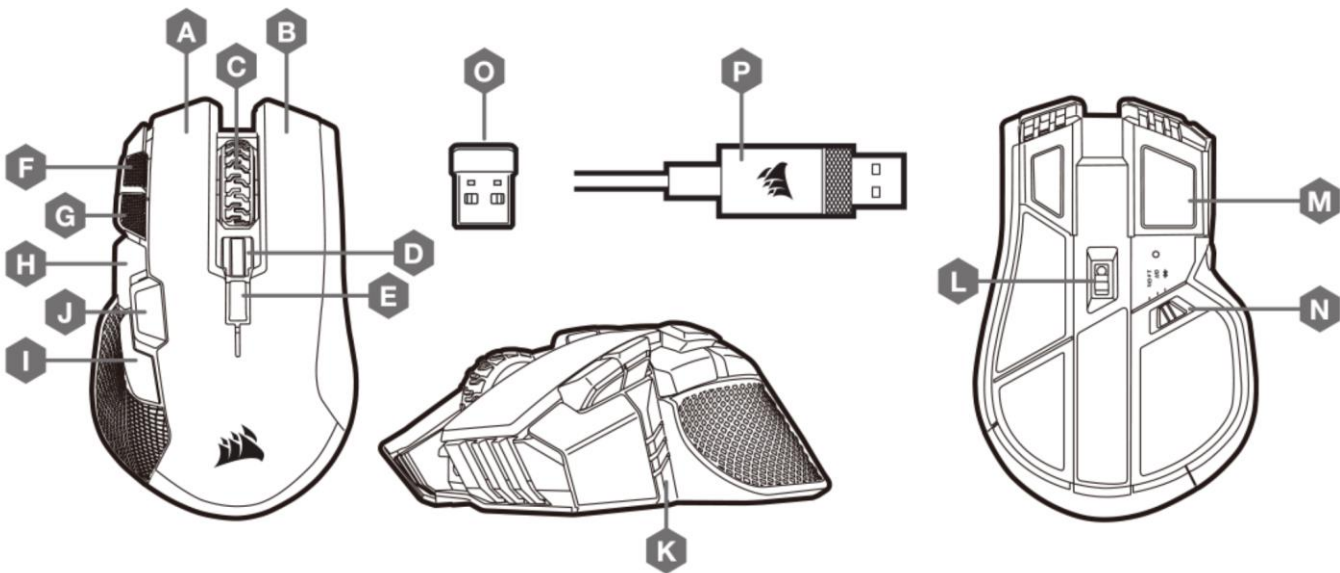

A	LEFT MOUSE BUTTON	I	BACKWARD BUTTON
B	RIGHT MOUSE BUTTON	J	OPTION BUTTON
C	MIDDLE CLICK/SCROLL WHEEL	K	MULTI-PURPOSE LED INDICATOR
D	PROFILE UP BUTTON	L	OPTICAL GAMING SENSOR
E	PROFILE DOWN BUTTON	M	MOUSE FEET
F	DPI UP BUTTON	N	POWER/ WIRELESS MODE SWITCH
G	DPI DOWN BUTTON	O	USB WIRELESS RECEIVER
H	FORWARD BUTTON	P	USB CHARGING / DATA CABLE

SETTING UP 2.4GHz SLIPSTREAM WIRELESS

- Connect the USB WIRELESS RECEIVER (O) to an available USB 2.0 or 3.x port located on the front panel of your PC or nearby USB port.
- Toggle POWER/ WIRELESS MODE SWITCH(N) to "2.4GHz" position to turn on your mouse.
- The MULTI-PURPOSE LED INDICATOR (K) will blink white and turn solid white when connected.
- Download the iCUE software from www.corsair.com/downloads.
- Run the installer program and follow instructions for installation.

If reconnection is required, initiate USB receiver pairing via USB cable and reconnect on the iCUE software settings menu.

SETTING UP *BLUETOOTH*[®] WIRELESS

Bluetooth wireless is best for everyday computing tasks, productivity, and office applications.

- Initiate Bluetooth pairing on your Bluetooth 4.0 or higher enabled device.
- Toggle POWER/ WIRELESS MODE SWITCH(N) to "Bluetooth" position to turn on your mouse.
- The MULTI-PURPOSE LED INDICATOR (K) will blink blue and turn solid blue when connected.

MOUSE STATUS, DPI SETTINGS AND INDICATIONS

Wireless connection and battery status are communicated through the MULTI-PURPOSE LED INDICATOR (K).

BATTERY STATUS	MULTI-PURPOSE LED INDICATOR
Battery charging	Pulsing green
Battery critical, recharge required	Pulsing red
Battery low, recharge soon	Blinking red
Battery Medium	Blinking amber
Battery high	Blinking green
Battery charged	Green

WIRELESS STATUS	MULTI-PURPOSE LED INDICATOR
2.4GHz wireless mode – pairing	Blinking white
2.4GHz wireless mode – paired	White
2.4GHz wireless mode – pairing failed	Pulsing white
BT wireless mode – pairing	Blinking blue
BT wireless mode – paired	Blue
BT wireless mode – pairing failed	Pulsing blue

		LEDI1	LE0#2	LE0#3
Battery Status	BATTERY CHARGING	PULSING GREEN	OFF	OFF
	Battery CRITICAL, RECHARGE REQUIRED	PULSING RED	OFF	OFF
	BATTERYLOW, RECHARGE SOON	BLINKING RED	BLINKINGRED	OFF
	BATTERY MEDIUM	BLINKING AMBER	BLINKING AMBER	OFF
	BATTERY HIGH	BLINKING GREEN	BLINKING GREEN	OFF
	BATTERY CHARGED	GREEN	GREEN	GREEN
Wireless status	2.4GHz WIRELESS MODE - PAIRING		BLINKING WHITE	
	2.4GHz WIRELESS MODE - PAIRED		WHITE	
	2.4GHz WIRELESS MODE-PAIRINGFAILED		PULSINGWHITE	
	BT WIRELESS MODE-PAIRING		BLINKING BLUE	
	BT WIRELESS MODE-PAIRED		BLUE	
	BT WIRELESS MODE - PAIRING FAILED		PULSING BLUE	
DPI Stage Status	STAGE#1	CYAN	OFF	OFF
	STAGE #2	CYAN	CYAN	OFF
	STAGE#3	CYAN	CYAN	CYAN
Onboard Profile Status	PROFILE#1	RED	OFF	OFF
	PRDFILE#2	OFF	GREEN	OFF
	PROFILE#3	OFF	OFF	BLUE