


Marshall
MAJOR IV – ON EAR HEADPHONES

MARSHALLHEADPHONES.COM

QUICK START GUIDE

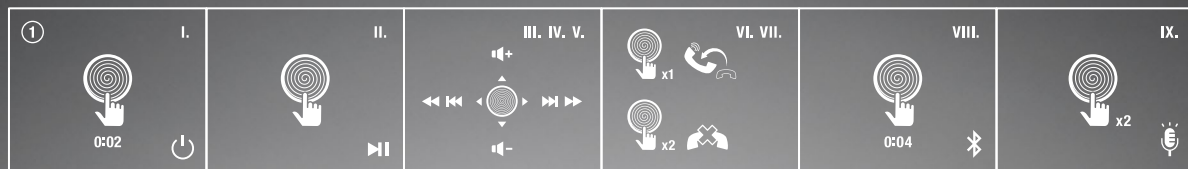



MARSHALL, Marshall Amps, their respective logos, "Marshall" and "Marshall" trade dress are trademarks and intellectual property of Marshall Amplification Plc and may not be used without permission. Permission granted to Zound Industries International AB.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Zound Industries International AB is under license. R.03

CONTENTS

LANGUAGES

ENGLISH	002.
ARABIC – العربية	003.
BULGARIAN – БЪЛГАРСКИ ЕЗИК	004.
CROATIAN – HRVATSKI	005.
CZECH – ČEŠTINA	006.
DANISH – DANSK	007.
DUTCH – NEDERLANDS	008.
ESTONIAN – EESTI	009.
FILIPINO – TAGALOG	010.
FINNISH – SUOMI	011.
FRENCH – FRANÇAIS	012.
GERMAN – DEUTSCH	013.
GREEK – ΕΛΛΗΝΙΚΑ	014.
HEBREW – עברית	015.
HUNGARIAN – MAGYAR	016.
INDONESIAN – BAHASA INDONESIA	017.
ITALIAN – ITALIANO	018.
JAPANESE – 日本語	019.
KOREAN – 한국어	020.
LATVIAN – LATVIEŠU	021.
LITHUANIAN – LIETUVIŲ	022.
NORWEGIAN – NORSK	023.
POLISH – POLSKI	024.
PORTUGUESE – PORTUGUÊS	025.
ROMANIAN – ROMÂNĂ	026.
RUSSIAN – РУССКИЙ	027.
SIMPLIFIED CHINESE – 简体中文	028.
SLOVAK – SLOVENČINA	029.
SLOVENE – SLOVENŠČINA	030.
SPANISH – ESPAÑOL	031.
SWEDISH – SVENSKA	032.
THAI – ภาษาไทย	033.
TRADITIONAL CHINESE – 繁體中文	034.
TURKISH – TÜRKÇE	035.
UKRAINIAN – УКРАЇНСЬКА	036.
VIETNAMESE – TIẾNG VIỆT	037.

ENGLISH

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

العربية

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① **CONTROL KNOB**

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② **CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ **LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ **3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① **CONTROL KNOB**

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② **CHARGING**

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ **LED INDICATOR**

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ **3.5 mm INPUT/OUTPUT SOCKET**

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

① CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

② CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

③ LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

④ 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

1 CONTROL KNOB

- | | |
|--|--|
| I. POWER ON/OFF
Push and hold for 2 seconds | V. TURN UP/DOWN THE VOLUME
Push upwards or downwards |
| II. PLAY/PAUSE
Push once | VI. ANSWER OR END A CALL
Push once |
| III. SKIP FORWARD/BACK
Push to the right or left | VII. REJECT AN INCOMING CALL
Push two times |
| IV. FAST FORWARD/REWIND
Push and hold to the right or left | VIII. BLUETOOTH PAIRING
Push and hold for 4 seconds |
| | IX. ACTIVATE VOICE ASSISTANT
Push two times |

2 CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while Bluetooth pairing mode and white while paused or searching for a device. The LED is off while playing.

4 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

01. Push and hold the control knob until the LED indicator blinks blue.
02. Select Major IV from your sound device's Bluetooth® list.

NOTES

VISIT US ONLINE

VISITEZ-NOUS EN LIGNE / VISITE NUESTRA WEB / BESUCHEN SIE
UNS ONLINE / VIENI A FARCI VISITA ONLINE



MARSHALLHEADPHONES.COM



MARSHALLHEADPHONES



MARSHALL_HEADPHONES



MARSHALLHEADPHONES



MARSHALLHP

