



OPERATING DRONE

Printed in China

1 Pre Flight Checklist

1. Read all warnings and instructions.
2. Install remote batteries, page 3.
3. Make sure that drone and remote are powered off.
4. Install drone holder.
5. Charge batteries, page 3.

2 Choose a location

Slide drone switch to ON.

Place drone on a flat even surface.

For ease of control, the red lights should be toward you.

Turn remote ON. The status LED will light.

The drone's lights will flicker rapidly during the auto-pairing process and then remain on once it has paired.

3 Pairing Drone

6

OPERATING DRONE

Printed in China

TAKE OFF AND LAND

CLIMB/DIVE

When first using drone, use small hand movements to control it.

7

OPERATING DRONE

Printed in China

DIRECTION

Forward and Backward

Sideways

8

ADVANCED MODES

Printed in China

STUNT

AUTO-ORIENTATION

9

TIPS & TROUBLESHOOTING

Printed in China

TIPS

- Do not crash drone into sand or dirt. Drone gears may become clogged
- When first learning to fly, practice lifting off and hovering
- Stay several feet from walls and buildings
- Always press throttle all the way down after crashing or when something gets stuck in propellers
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TROUBLE SHOOTING

When remote switch is turned on, the remote light does not illuminate:

- 1) Check that batteries in the remote are installed correctly OR
- 2) Replace with new batteries

During flight, the Remote Power LED is flashing:

- 1) Remote batteries are low. Land the drone immediately.
- 2) Replace old batteries.

Drone and remote properly pair, but the drone will not lift-off:

- 1) Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

After trimming the drone, flight is very unstable and it cannot fly properly:

- 1) One or more blades are most likely damaged. Replace with the proper number replacement blade and try flying again (page 3).
- 2) Press the thumbstick down for 5 seconds to reset the gyroscope.
- 3) Turn off the drone and remote, then repeat the pairing process (page 6).

Remote and drone cannot be paired:

- 1) Remote must be within 12 feet of drone.

Note: If there is more than one unpaired drone within 12 feet, one must be successfully paired before others may be paired.

10

SHARPER IMAGE®

14+

Printed in China

STUNT DRONE WITH HAND CONTROL

GETTING TO KNOW YOUR DRONE

Printed in China

PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.

CHARGING

- Drone must be charged before each use (USB Charge Cable included)
- Indicator light will turn off once fully charged
- Install batteries in remote

PAIRING

Before each flight pair the remote with the drone:

1. Turn your drone on and place on a flat, level surface
2. Turn on the remote.
3. Steady lit lights on the drone confirm pairing
4. Repeat steps 1 and 2 if necessary.

IMPORTANT!

After a hard landing, turn drone and remote off. Then, repeat pairing!

DIRECTIONAL LIGHTS

- White lights indicate the front of the drone
- Red lights indicate the back of the drone
- Not applicable in auto-orientation mode

REMOTE CONTROL

The drone is controlled by the movement of the hand wearing the controller. Practice flying in an area free of obstruction. Fly below 10 feet until control is mastered.

- The controller is designed for the right hand
- Use small movements for maximum control
- The thumbstick toggles take-off and landing, altitude changes, & special flight modes.

GENERAL WARNINGS

Printed in China

READ ALL WARNINGS AND PRECAUTIONS BEFORE USE.

SAFETY WARNINGS:

- Not recommended for children under 14 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- **DO NOT TOUCH SPINNING PROPELLERS.**
- Do not allow anything to intentionally make contact in any way with spinning propellers.
- Prevent contact with spinning blades by turning off remote prior to handling drone.
- **Use caution and pay attention to your surroundings while operating drone.**
- **Do not fly drone into animals, people, or inanimate objects.**
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Always turn drone off when it is not in use.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY
RECYCLING INFORMATION IS AVAILABLE AT
WWW.MERCHSOURCE.COM

FAA WARNING

This drone weighs 0.08 lbs. As of November 2017, the Federal Aviation Administration (FAA) requires registration of unmanned aircrafts weighing more than .55lbs. Visit www.faa.gov/uas/registration for more information. Ongoing compliance with Federal, state and local laws regarding operation is an owner's sole responsibility.

WARNINGS

Printed in China

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

PATENT PENDING
Printed in China

QUESTIONS OR CONCERNS?

PLEASE GIVE US A CALL... WE'RE HERE TO HELP

CUSTOMER SERVICE (800) 374-2744

Before calling please locate the 10-digit code printed on the back of your remote

WARNING: ONLY USE PROVIDED
USB CABLE FOR CHARGING

CONTENTS

Printed in China

INSIDE THE BOX

Lunar 5" Drone

Drone Controller

USB Charge Cable

Replacement Propellers

3

CHARGING/BATTERY

Printed in China

REMOTE

RECHARGEABLE BATTERY WARNING: (REPLACEABLE BATTERY)

- Do not disassemble, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cables, and/or adapters.
- Rechargeable battery is not to be charged in an attic.
- Adult Supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging battery immediately if it is hot or battery has been overloaded.
- If the battery has been overloaded, it may be damaged and should not be used. Immediately flush with fresh water for at least 15 minutes and seek medical advice.
- Battery charger used with this product are to be regularly monitored for damage to the cord plug, receptacle and other parts, and in the event of such damage, they must be used until the damage has been repaired.
- Remove batteries if removed before charging.
- Recycle or dispose of battery according to federal, state, and local laws.
- Cells or batteries should not be disassembled, crushed, punctured, opened, or otherwise mutilated.
- Seek medical advice immediately if a child or battery has been swallowed.
- If the battery has been swallowed, it may be damaged and should not be used. Immediately flush with fresh water for at least 15 minutes and seek medical advice.
- Store cells and batteries in their original packaging and away from metal objects which may short-circuit them.
- Do not drop or subject the cell or battery to strong mechanical shock.
- Keep cells or batteries dry and dry them thoroughly before use and storage. Wipe metal terminals with a soft, dry cloth if they become dirty.
- Charge cells or batteries before use.
- Do not use, or after prolonged periods of storage, it may be necessary to charge and discharge the cell or battery now and then before attempting to operate the product.
- The battery should be stored in a cool, dry place, between 10°C and 30°C, unless otherwise specified by the manufacturer.
- Refer original product literature for future reference.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc, or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- If the battery has been overloaded, it may be damaged and should not be used. Immediately flush with fresh water for at least 15 minutes and seek medical advice.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in the fire. Batteries may explode or leak.
- Remove batteries if removed before charging.
- Recycle or dispose of batteries according to federal, state, and local laws.

DRONE

45 mins

Note: The USB charging cable will light up while the battery is charging and will turn off when the battery is fully charged. Charge time is approximately 45 minutes.

4

OVERVIEW

Printed in China

White Lights (Front)

Propeller 2

Propeller 1

ON/OFF switch

Red Light (Back)

Battery Compartment

Propeller 1

Propeller 2

Thumbstick

→ Press and Release = Auto Take Off/Landing

→ Press and Hold = Raise Hand = Drone Climb Lower Hand = Drone Descend

↓ Forward = Spin Drone Clockwise Backward = Spin Drone Counterclockwise

↑ Up and Hold + Hand Motion = 360° flip in direction of hand motion

↓ Down and Release = Auto Orientation On/Off

↓ Down and Brief Hold = Reset Gyroscope

Light indicates remote is on

ON/OFF remote switch (on other side)

Hand Strap

5