



OPERATING DRONE

Printed in China

1 Pre Flight Checklist

1. Read all warnings and instructions.
2. Install remote batteries, page 3.
3. Make sure that drone and remote are powered off.
4. Install drone holder.
5. Charge batteries, page 3.

2 Choose a location

Always turn off remote prior to retrieving or picking up drone. This will help you avoid accidentally activating propellers.

3 Pairing Drone

Turn remote ON. The status LED will light.

The drone's lights will flicker rapidly during the auto-pairing process and then remain on once it has paired.

4 Take Off and Land

TAKE-OFF: Press and release thumbstick. Drone will rise and auto-hover.

LANDING: Bring drone to 10" of ground. Press and release thumbstick and drone will land.

5 Climb/Dive

CLIMB: Press and hold thumbstick while raising hand. Drone will climb.

DIVE: Press and hold thumbstick while lowering hand. Drone will descend.

When first using drone, use small hand movements to control it.

OPERATING DRONE

Printed in China

6 Direction

Turn Left and Right: SPIN COUNTER-CLOCKWISE (Push the thumbstick backward). SPIN CLOCKWISE (Push the thumbstick forward).

7 Forward and Backward

Forward and Backward: Push the thumbstick forward to move the drone forward. Push the thumbstick backward to move the drone backward.

8 Sideways

Sideways: Push the thumbstick left to move the drone left. Push the thumbstick right to move the drone right.

OPERATING DRONE

Printed in China

9 Stunt

Stunt: Push the thumbstick up and then down to perform a 360-degree flip.

10 Auto-Orientation

Auto-Orientation: Press the thumbstick down and release. The drone's lights will blink steadily while in auto-orientation mode.

To turn off Auto-Orientation mode, push the thumbstick down and release. The drone's lights will stop blinking and remain on.

ADVANCED MODES

Printed in China

11 Tips & Troubleshooting

Do not crash drone into sand or dirt. Drone gears may become clogged.

When first learning to fly, practice lifting off and hovering.

Stay several feet from walls and buildings.

Always press throttle all the way down after crashing or when something gets stuck in propellers.

Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.

Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.

The drone shall never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

12 Troubleshooting

When remote switch is turned on, the remote light does not illuminate:

- 1) Check that batteries in the remote are installed correctly OR
- 2) Replace with new batteries.

During flight, the Remote Power LED is flashing:

- 1) Remote batteries are low. Land the drone immediately.
- 2) Replace old batteries.

Drone and remote properly pair, but the drone will not lift-off:

- 1) Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

After trimming the drone, flight is very unstable and it cannot fly properly:

- 1) One or more blades are most likely damaged. Replace with the proper number replacement blade and try flying again (page 3).
- 2) Press the thumbstick down for 5 seconds to reset the gyroscope.
- 3) Turn off the drone and remote, then repeat the pairing process (page 6).

Remote and drone cannot be paired:

- 1) Remote must be within 12 feet of drone.

Note: If there is more than one unpaired drone within 12 feet, one must be successfully paired before others may be paired.

TIPS & TROUBLESHOOTING

Printed in China

13 Tips

Do not crash drone into sand or dirt. Drone gears may become clogged.

When first learning to fly, practice lifting off and hovering.

Stay several feet from walls and buildings.

Always press throttle all the way down after crashing or when something gets stuck in propellers.

Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.

Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.

The drone shall never be modified or used for anything except its intended purpose.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

14 Troubleshooting

When remote switch is turned on, the remote light does not illuminate:

- 1) Check that batteries in the remote are installed correctly OR
- 2) Replace with new batteries.

During flight, the Remote Power LED is flashing:

- 1) Remote batteries are low. Land the drone immediately.
- 2) Replace old batteries.

Drone and remote properly pair, but the drone will not lift-off:

- 1) Drone battery needs charging. Use the USB Charge Cable to connect the drone to power source.

After trimming the drone, flight is very unstable and it cannot fly properly:

- 1) One or more blades are most likely damaged. Replace with the proper number replacement blade and try flying again (page 3).
- 2) Press the thumbstick down for 5 seconds to reset the gyroscope.
- 3) Turn off the drone and remote, then repeat the pairing process (page 6).

Remote and drone cannot be paired:

- 1) Remote must be within 12 feet of drone.

Note: If there is more than one unpaired drone within 12 feet, one must be successfully paired before others may be paired.

SHARPER IMAGE®

14+

STUNT DRONE WITH HAND CONTROL

Printed in China

GETTING TO KNOW YOUR DRONE

Printed in China

1 Please Read All Warnings and Instructions Prior to Use. Keep this document as it contains important information about your drone.

2 Charging

Drone must be charged before each use (USB Charge Cable included).

Indicator light will turn off once fully charged.

Install batteries in remote.

3 Pairing

Before each flight pair the remote with the drone:

1. Turn your drone on and place on a flat, level surface
2. Turn on the remote.
3. Steady lit lights on the drone confirm pairing
4. Repeat steps 1 and 2 if necessary.

IMPORTANT! After a hard landing, turn drone and remote off. Then, repeat pairing!

4 Directional Lights

White lights indicate the front of the drone.

Red lights indicate the back of the drone.

Not applicable in auto-orientation mode.

5 Remote Control

The drone is controlled by the movement of the hand wearing the controller. Practice flying in an area free of obstruction. Fly below 10 feet until control is mastered.

The controller is designed for the right hand.

Use small movements for maximum control.

The thumbstick toggles take-off and landing, altitude changes, & special flight modes.

GENERAL WARNINGS

Printed in China

1 Read All Warnings and Precautions Before Use.

SAFETY WARNINGS:

- Not recommended for children under 14 years of age. As with all electrical products, precaution should be observed during handling and use to reduce the risk of electrical shock.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- DO NOT TOUCH SPINNING PROPELLERS.**
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and/or any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Always turn drone off when it is not in use.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

2 Please Recycle or Dispose of Electronics Properly

RECYCLING INFORMATION IS AVAILABLE AT WWW.MERCHSOURCE.COM

3 FAA WARNING

This drone weighs 0.08 lbs. As of November 2017, the Federal Aviation Administration (FAA) requires registration of unmanned aircrafts weighing more than .55lbs. Visit www.faa.gov/uas/registration for more information. Ongoing compliance with Federal, state and local laws regarding operation is an owner's sole responsibility.

WARNINGS

Printed in China

1 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

4 ©2018 Sharper Image. Sharper Image® name and logo are registered trademarks. All rights reserved. Distributed by MerchSource, LLC, Irvine, CA 92618.

5 The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

6 PATENT PENDING

Printed in China

CONTENTS

Printed in China

1 Inside the Box

Lunar 5" Drone

Drone Controller

USB Charge Cable

2 Replacement Propellers

Each blade has a number on it. Match the blades with the corresponding number on the drone.

3 Pull firmly to remove broken propeller. Replace with a new one. Push firmly and carefully.

CHARGING/BATTERY

Printed in China

1 Remote

Open battery cover and install 3 "AAA" 1.5V batteries as shown.

RECHARGEABLE BATTERY WARNING: (REPLACEABLE BATTERY)

- Do not disassemble, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cables, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging battery immediately if it is hot, swollen, or gives off a strong odor.
- Battery charger used with the product are to be regularly inspected for damage to the cord, plug, battery and/or other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Remove batteries if removed before charging.
- Recycle or dispose of battery according to federal, state, and local laws.
- Cells or batteries should not be disassembled, crushed, punctured, opened, or otherwise mutilated.
- Seek medical advice immediately if a child or battery has been swallowed.
- If swallowed, do not induce vomiting and seek medical attention immediately. Flush with fresh water for at least 15 minutes and seek medical advice.
- Store cells and batteries in their original packaging and away from metal objects which may short-circuit them.
- Do not directly subject the cell or battery to strong mechanical shock.
- Keep children away from the cell and dry cloth during use and storage. Wipe metal terminals with a soft, dry cloth if they become dirty.
- Charge cells or batteries before use.
- On first use, or after prolonged periods of storage, it may be necessary to charge and discharge the cell or battery two or three times before attaining maximum performance.
- Do not charge the cell or battery at temperatures below 10°C and 30°C, unless otherwise specified by the manufacturer.
- Read original product literature for future reference.

BATTERY WARNING

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries in the correct polarity. Always use, replace, and recharge if applicable batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in the fire. Batteries may explode or leak.
- Remove batteries if removed before charging.
- Recycle or dispose of batteries according to federal, state, and local laws.

2 Drone

Turn off the drone before charging.

Connect the Battery Charger to the charge port on the drone.

Connect connector to power source.

Note: The USB charging cable will light up while the battery is charging and will turn off when the battery is fully charged. Charge time is approximately 45 minutes.

OVERVIEW

Printed in China

1 Overview

White Lights (Front)

Propeller 2

Propeller 1

ON/OFF switch

Propeller 2

Red Light (Back)

Battery Compartment

2 Hand Strap

Light indicates remote is on

ON/OFF remote switch (on other side)

3 Thumbstick

Press and Release = Auto Take Off/Landing

Press and Hold = Raise Hand = Drone Climb

Lower Hand = Drone Descend

Forward = Spin Drone Clockwise

Backward = Spin Drone Counterclockwise

Up and Hold + Hand Motion = 360° flip in direction of hand motion

Down and Release = Auto Orientation On/Off

Down and Brief Hold = Reset Gyroscope