

Quick Start Guide
For Android™ 12 Tablet
M107FT

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation

RF Exposure Information _____

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

ATTENTION

RISQUE D'EXPLOSION SI LA BATTERIE EST REMPLACÉ PAR UN TYPE INCORRECT. RECYCLEZ LES BATTERIES USAGÉES SELON LES INSTRUCTIONS.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Attention: Teachers, Parents and Adult Supervisors

This product is an educational tool designed for school children, ages 6 and up. There must be supervision by an adult on school children under 10 when using this tablet. It is a must to have a thorough explanation to students on safe and proper handling of the tablet, power supply, battery pack, and power cord.



Be sure to keep the power cord away from younger children

Please ensure that students understand the following:

- ▶▶ As with all electrical products, precautions should be observed during handling and use to prevent electric shock. The power supply (adapter) should not be handled by the children.”
- ▶▶ Emphasize to students that this device is an educational tool and not a toy. The computer, power supply, battery pack or power cord should not be dropped, crushed, stepped on or otherwise abused.
- ▶▶ Ensure students understand the safe and proper handling of power cord and power supply. Misuse could result in serious injury.
- ▶▶ The teacher, parent or adult supervisor should periodically inspect the computer; power supply and power cord for damage and replace it, if necessary.
- ▶▶ Students should report any damage or loose parts to their teacher, parents or adult supervisor, immediately.
- ▶▶ Do not leave the tablet plugged in or “on” when enclosed in a non-vented container, such as a school backpack, as overheating may occur.
- ▶▶ It is recommended that students should take a 5 minute break every 30 minutes of use.

Safety Precautions

The following are lists of precautionary measure the students must understand before using this computer inside the classroom or home environment:



 
1. Do not place near the fire or other sources of heat.
2. Do not expose to magnetic fields.
3. Do not expose to direct sunlight.
4. Do not expose to rain or moisture.
5. Do not place heavy objects to add heavy pressure on the computer.
6. Do not drop the computer.

Package contents

Carefully unpack your box and take out the items listed below. If any of the items are missing or damaged, please contact your dealer immediately:

- One tablet with stylus
- EU/UK/US adapter
- This guide


Tablet layout

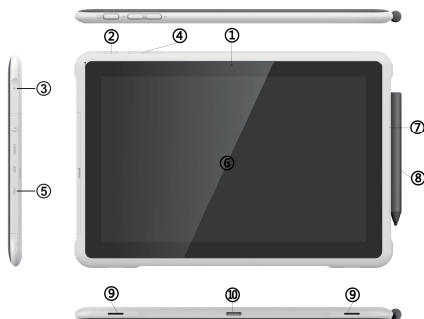

No.	Name	No.	Name
1	Front facing camera	6	Touchscreen
2	Power lock	7	Stylus holder
3	Microphone	8	Stylus
4	Volume up/down	9	Speaker
5	Input/output cabinet (See page 7)	10	Docking Port



No.	Name	No.	Name
1	Power lock	3	Stylus
2	Rear facing camera		

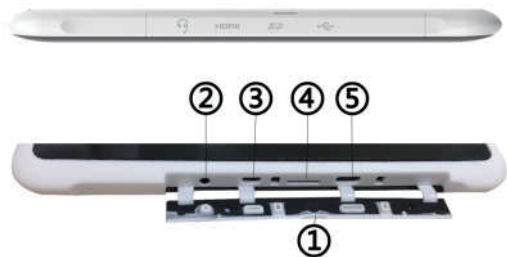 

No.	Name	No.	Name
1	Rubber cover	4	Micro SD card slot
2	Headphone jack	5	Type-C
3	Micro HDMI port		

Charging your tablet

 
If your tablet is just being unpacked from the box, you need to charge the tablet first. It will take around 4 to 5 hours to be fully charged.



1. Plug the adapter into the Type-c in, which you can find in the I/O cabinet as shown in the figure above.
2. Plug the adapter into a wall-socket.

Note: If the remaining power in your battery capacity is 90% or above, plugging the adapter will not fully charge your battery.

Powering ON/OFF your tablet

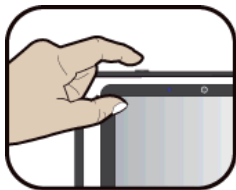


To power on your tablet

Press down the power button (normally 1 to 2 seconds) until you see the screen turn on.

To power off your tablet

 1. Press and hold the Power Lock button.
2. The Power-off menu appears as shown below. Touch Power off.

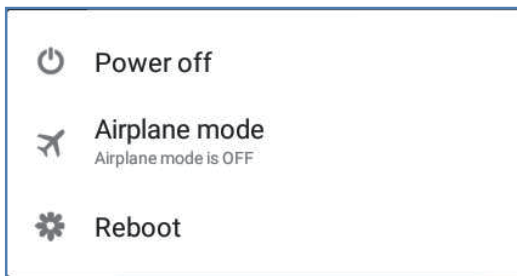

3. Your tablet shuts itself down.

Inserting a storage card



Your tablet supports micro-SD cards with maximum storage space up to 64G. You can insert the micro SD card and pull it out without powering down the tablet. To do so, follow the steps below.

Install your Micro SD Card

1. Hold your tablet with front side up.
2. Insert your micro SD card in the direction as shown.

Remove your Micro SD Card

1. Push and release the micro SD card. This will unlock the card.
2. Pull out the micro SD card.

Specifications

Processor	● MTK 8168 2.0 GHz quad-core ARM Cortex-A53
Memory	● 4G LPDDR3
Storage	● EMMC 64GB
Wireless	● Wi-Fi 802.11 ac/a/b/g/n, 1×1 2.4GHz/5.0GHz (Dual band) ● Bluetooth 5.0
Touchscreen	● 10.1-inch ● Resolution: 800 x 1280 ● 10-points multi-touch, G+G type
Cameras	● Front: 5M ● Rear: 8M (8Mpx)
Battery	● Li-polymer ● 8000mAh, 3.8V, 30.4Wh

Input/Output	● 1 × Type-c Port ● 1 × Micro SD card slot ● 1 × Audio Combo jack ● 1 × Micro HDMI
Speaker & Mic	● Build-in 2 BOX Speaker $0.8\Omega \times 2$ ● MIC x 1
AC-Adapter	● DC Output: 5V/2A ● Input Voltage: 100 - 240VAC ● Input Frequency: 47 - 63Hz
Dimension (mm)	● 261.5 (W) x 178.3 (H) x 11.8 (D)
Weight	● 673 g

Android is a trademark of Google LLC.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

EU Statement:

wireless specification:			
Type	frequency	Descriptions	Output Power Value
Bluetooth(EDR)	2402-2480MHz	Bluetooth v5.0 with BLE	9.88dBm
Bluetooth(BLE)	2402-2480MHz	Bluetooth v5.0 with BLE	1.46dBm
WIFI 2.4G	IEEE 802.11b/g/n HT20: 2412-2472MHz IEEE 802.11n HT40: 2422-2462MHz	/	11.2dBm
WIFI 5G	IEEE 802.11a/n/ac HT20/HT40/HT80: 5180-5240MHz	/	9.75dBm
WIFI 5.8G	IEEE 802.11a/n/ac HT20/HT40/HT80: 5745-5825MHz	/	9.63dBm
GPS	1.57542GHz	receive	/

The host manufacturer has the responsibility that the host device should be compliance with all essential requirement of RED. This restriction will be applied in all member states. The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, SHEN ZHEN NST INDUSTRY AND TRADE CO.,LTD declares that the radio equipment type 10.1inch tablet pc is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.ecs.com.tw>.

This product can be used across EU member states

The use of the 5150 – 5350 MHz band is restricted to indoor use only. This restriction will be applied in all member states.

Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

