



HYPE™

Headphone Bluetooth® Adapter

Operation Manual HY-BTCLP

Thank you for purchasing the Hype Headphone Bluetooth Adapter. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Bluetooth Adapter
- Micro USB Charging Cable

KEY FEATURES

- Use with all headphones and earbuds with 3.5mm plug
- Compatible with smart phones / tablets with Bluetooth
- Built-in microphone & answer button
- Media shortcut keys
- Convenient back clip

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture, or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not puncture or harm the exterior surface of the product in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate any product warranty and liability from the manufacturer.


Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight or open flame.

PRODUCT DIAGRAM

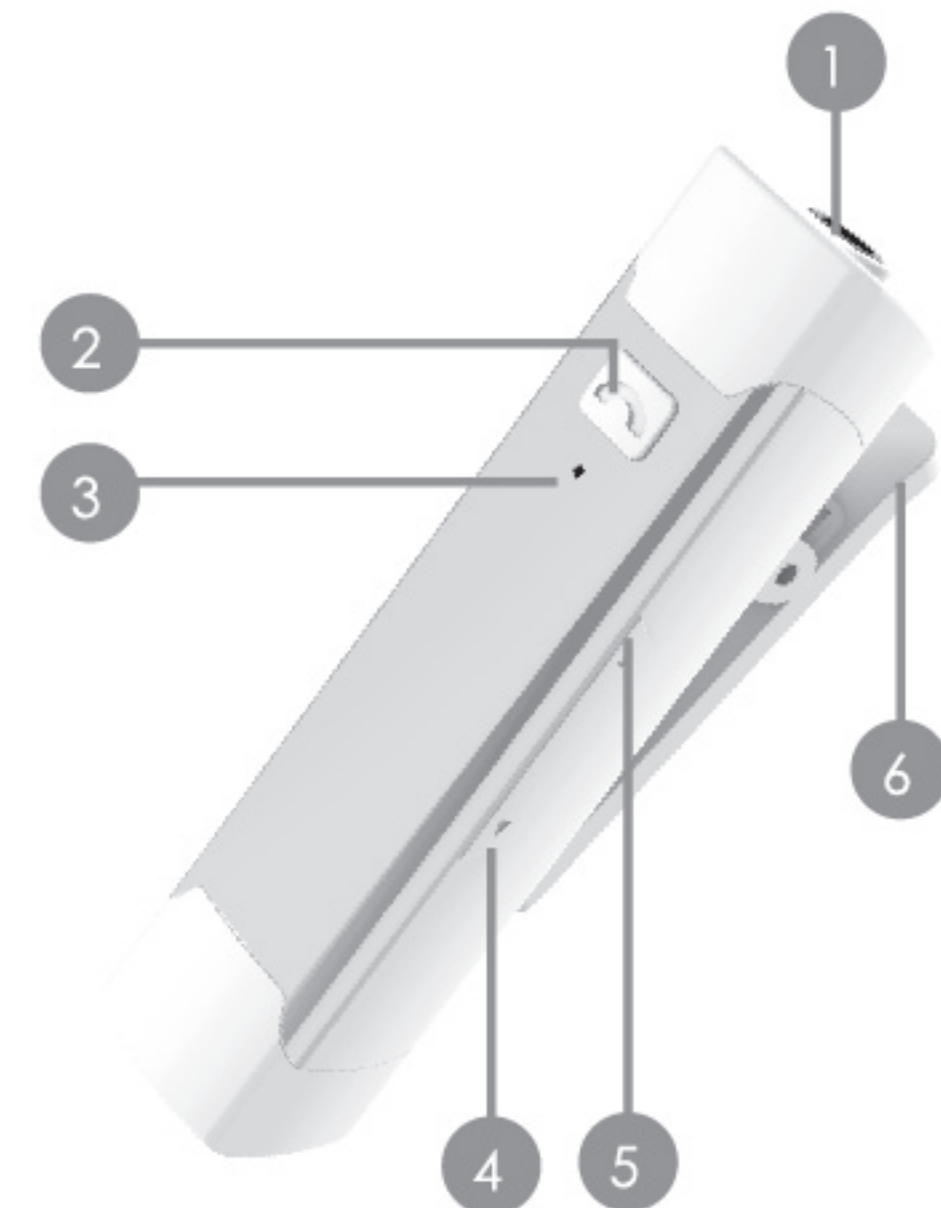

1. 3.5mm Input
2. Multifunction Button
3. Microphone / LED Indicator Light
4. Previous Track / Volume Decrease
5. Next Track / Volume Increase
6. Clip

CHARGING THE ADAPTER

The adapter comes with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the adapter.

Connect the Micro USB port of the enclosed cable to your adapter. Connect the USB end to a computer USB port or certified wall charger that does not exceed 1 Amp output. The LED indicator light will turn red during charging.

A full charge of the battery takes around 2 hours. When the battery is fully charged, the LED light will turn off automatically. Disconnect the adapter at this point. The adapter will be ready for use.

BLUETOOTH PAIRING

1. Turn on the adapter. Press and hold the Multifunction Button for 3 seconds to turn on the adapter. The LED indicator light will alternate red and blue.
2. Ensure that Bluetooth is enabled on your smart phone or tablet.
3. Ensure that the adapter and your smart phone or tablet are within 3ft of each other during pairing.
4. Search for nearby devices on your smart phone or tablet under Bluetooth Settings.
5. Find and select the adapter from the list. It will appear as "HY-BTCLP" in the list of available devices.
6. Enter password "0000" if required, to confirm pairing.

NOTE: If pairing is not completed within 3 minutes of turning on your adapter, your adapter will return to standby mode to conserve power. If you are ready to pair your device again, turn off your adapter and repeat the steps listed above.

Once you have paired the adapter with a device, the adapter will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

PLAYING MUSIC

1. Insert the 3.5mm AUX plug into the 3.5mm Input on your adapter.
2. Begin to play music from your smart phone or tablet.

Listed below are media shortcuts and their corresponding keys on your adapter.

Play/Pause music - Press "Multifunction Button" quickly
Increase Volume - Press and hold "Volume Decrease"
Decrease Volume - Press and hold "Volume Decrease"
Next Track - Press "Next Track" quickly
Previous Track - Press "Previous Track" quickly

ANSWERING CALLS

When music or media is playing and you have an incoming call, press the Multifunction Button quickly to answer the call.

Press the Multifunction Button again to end the call.
Press and hold the Multifunction Button to reject a call.

TROUBLESHOOTING

If you have unable to connect the adapter to your device, please try the following:

- Check to see if the battery is low. When the battery is low, your adapter will not function properly. Please recharge your adapter.
- Check to ensure your adapter is turned on.
- Restart Bluetooth on your smart phone or tablet and ensure your device can locate the adapter.

BATTERY MAINTENANCE

1. In order to prolong battery life, turn off your unit when not in use.
2. If the adapter is not in use for a long period of time, store it in a dry, safe location. The adapter will need to be charged every 2 months to maintain battery life.

CARE AND MAINTENANCE

- Do not expose the unit to liquid, moisture or humidity in order to avoid damage to the product's internal circuitry.
 - Do not use abrasive cleaning solvents to clean the unit.
 - Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
 - Do not dispose of the unit in fire as it may explode or combust.
 - Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
 - Do not let the unit fall from high places, as doing so may damage the internal circuitry.
 - Do not attempt to disassemble the unit.
- In the event that the unit does not function properly, return it to the store where it was purchased.

SPECIFICATIONS

Bluetooth:	Version 4.1
Supported Profiles:	A2DP1.2, HFP1.6, AVRCP1.4, HSP
Operation Range:	Up to 33ft (10m)
Charge Time:	Up to 2 Hours
Usage Time:	Up to 4 Hours
Standby Time:	Up to 100 Hours
BT ID:	D032160
FCC ID:	2AANZBTCLPMETA

WARRANTY INFORMATION

The condition of this warranty and our responsibilities under this warranty are as follows:

Supplier's warranty is non-transferable. And this warranty is limited to the original purchaser only.

*You must be able to prove the date of original purchase of the unit with a dated receipt.

* The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by unauthorized third party.

* The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion.

* Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorations and other accessories.

* A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassembly.

* Modification and repair of the unit should be done by authorized and qualified service personnel, Center or returned to the manufacturer.

* This warranty gives you specific legal rights, and you may also have other rights which vary under local laws. The following conditions comprise the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.

We offer a warranty on our products in accordance with the following conditions:

- 1) DGL™ products are covered by a 12 month warranty. We will resolve damages or defects on DGL™ products free of charge within 12 months of the purchase date under the following warranty conditions. For any damage or defect determined later than 12 months after the purchase date, proof of a manufacturing fault must be submitted for repair under warranty.

2) The warranty does not cover batteries and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the product's fitness for use, in the event of damage caused by chemical or electrochemical effects, by water or generally from abnormal conditions.

3) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts free of charge. DGL™ reserves the right to exchange the product for a replacement product of equal value if the product sent in cannot be repaired within a reasonable time or at a reasonable cost. Requests cannot be made for repairs to be carried out on site. Parts that have been replaced or exchanged become our property.

4) The warranty claim does not apply if repairs or other work is carried out by unauthorized persons or if our products are equipped with additional parts or accessories that are not approved for our product.

5) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.

6) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability. We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, and loss of earnings or interruption to business.

Asserting a warranty claim:

- 1) To make use of the warranty service for hardware issues, you must contact the DGL™ Service Center by email at support@dglusa.com.
- 2) DGL™ will try to diagnose and solve your problem. If it is

determined that a warranty claim exists, you will be given an RMA number (Return Material Authorization) and will be asked to send the product to DGL™.

IMPORTANT: DGL™ will only accept parcels that have an RMA number.

Please observe the following when sending the product:

1) Send the product suitably packaged with carriage and insurance paid. Do not enclose any accessories with the product (cables, chargers, manuals, etc.) unless the DGL Service Center specifies otherwise.

2) Mark the RMA number on the outside of the package in such a way that it is visible and clearly legible.

3) You must enclose a copy of the sales slip as proof of purchase.

4) Once DGL™ has received the product, it will meet its warranty obligations in accordance with the warranty conditions and will return the product to the sender with carriage and insurance paid.

SERVICE OUTSIDE OF WARRANTY

DGL™ can refuse any service claim made that is not covered by the warranty.

If DGL™ agrees to provide a service outside the warranty, the customer will be invoiced for all repair and transport costs. DGL™ will not accept any packages that have not first been approved by DGL™ by means of an RMA (Return Material Authorization).

DGL Group guarantees the quality of this product. For questions or comments, please feel free to contact us via email at support@dglusa.com.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.