



Coca-Cola

CLASSIC WIRELESS EARBUDS

Operation Manual CC-3109

Thank you for purchasing these Classis Wireless Earbuds. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Bluetooth Earbuds
- USB Charging Cable
- Operation Manual

CHARGING YOUR HEADSET

1. Plugs the Micro-USB Charging cable into your earbuds.
2. Plug the USB port on a computer or power adapter.
3. Charge for 90 mins or until the red charging indicator light shuts off, then the blue indicator light will be on.
4. Unplug your earbuds, it is now ready for use.

CAUTION

1. When not in use for a prolonged period, it is recommended that you turn off the headset to lengthen battery life.
2. When the power indicator light flashes red, this indicates that the battery on your headset is low. it is recommended your echarge your headset.

1

SPECIFICATION

Bluetooth spec:	V3.0
Bluetooth profiles supported:	HSP, HFP, A2DP
Frequency range:	20Hz-20kHz
Operation range:	up to 33ft(10m)
Transmission Power:	class 2
Battery:	3.7 V / 55 mAh
Charging time:	90 mins
Play music time:	up to 3.0 hours
Talk time:	up to 4 hours
Standby time:	up to 80 hours
Size:	57 x 12 x 9mm
Weight:	11 g
Previous Track:	Long press "+"
Next Track:	Long press "-"
Volume Up:	Click "+"
Volume Down:	Click "-"

* FCC ID:2AANZCC-3109

2

USING YOUR BLUETOOTH HEADSET

- Turn On Headset:
Press and hold the "○" button for 3 seconds until the blue and red light turn on at the same time.
- Turn Off Headset:
Press and hold the "○" button for 2 seconds. The blue light will flash 3 times and the red light will flash 1 time, then the device will shut off.
- Pairing:
Ensure Bluetooth is enabled on your mobile device or tablet. Make sure your device and your headset are no more than 3ft apart during this pairing process. With the headset off, press and hold the "○" button for 6 seconds. The blue and red light will flash alternately. Select "CC-3109" from the list of available Bluetooth devices to pair.
- Answer a Call:
Press the "○" button quickly to answer an incoming call.
- Reject a Call:
Press and hold the "○" button to reject a call.
- Play/Pause Music:
Press the "○" button to play/pause music.

3

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

4

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

5