

BOOK SIZE: 3" W X 3" H (FOLDED)
PAPER: 100 LBS. MAGAZINE PAPER

INKS


K

DO NOT PRINT

CUT LINE

FOLD LINE

10-PANEL FOLD

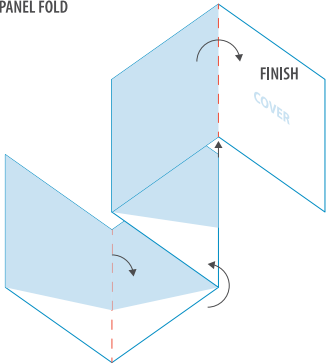

THANK YOU FOR CHOOSING EDGEWOOD!

Please read this user manual carefully before using the product and keep it for future reference. Also, make sure your box has the following items:

Package Contents
1 x Hand Crank Radio
1 x USB-A to USB-C Charging Cable

SAFETY PRECAUTIONS

- Dropping radio may cause injury or damage
- Unit cannot resist strong impacts or corrosive liquids
- Keep unit in a cool dry place when not in use

IMPORTANT NOTICE
This product's specifications, features, and technology may change without prior notice to improve performance and functionality.

FUNCTIONS

- 1 Radio Antenna
- 2 Hand Crank
- 3 Solar Panel
- 4 Flashlight ON/OFF
- 5 Flashlight
- 6 Tuning Knob
- 7 Band Selector
 - AM/FM
- 8 Radio ON/OFF Volume Up/Down
- 9 SOS Button
- 10 Wrist Strap
- 11 Speaker

KNOW THE BASICS

Radio Operation

- Rotate volume control knob to turn on and adjust volume
- Select AM/FM from the band selector
- Rotate tuning dial to select channel, a green light will indicate if a channel is properly selected

NOTE: If you have a weak signal, try extending and rotating the antenna until you have better reception.

Flashlight Operation

- Press the flashlight button to turn it on/off

SOS Operation

- Double press the SOS button to activate
- If active press the SOS once to deactivate

POWERING THE RADIO

Solar Charging

- Place the solar panel under direct sunlight until you see the red charging light
- Solar charging is best for maintaining battery life, we do not recommend using solar for full charge
- Do not charge in a hot area, it is recommended to turn off radio before charging

Hand Crank Charging

- Unfold the crank from the backside of the radio and rotate in either direction until you see the red light
- Turn the hand crank for a few minutes to active internal battery for initial use

USB Charging

- Plug the radio in using the Type-C port
- Charging LED will flash blue when charging
- Light will turn a solid blue when full charged

Charging External Devices

- The solar crank radio can charge USB devices with its built-in battery
- Insert a USB cable into the output (USB-A) port on the side of the radio, and connect your device
- This feature is only recommended for charging during emergencies

SPECIFICATIONS

Frequency: AM 530–1620KHz / FM 88–108MHz
Battery: Lithium Ion 3.7V 2000mAh
Working Time: 40hrs at 50% Radio Volume (Radio Only)
Charging Time: 200–210hrs (Solar Only)
20hrs (Hand Crank Only)
3–4hrs (Cable)

Output: 5V, 1A
Input: 5V, 1A
Flashlight: 1W White Light
FCC ID: 2AANCFLR

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy. If not installed and used by the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

PAGE 8

BACK COVER

EDGEWOOD is a trademark of DGL Group, LTD. • All other trademarks and trade names are those of their respective owners. • No portion of this design may be reproduced without written permission. The illustrated product and specifications may differ slightly from those supplied. Distributed by DGL Group, Ltd. Edison NJ 08817.

EDGEWOOD

**EMERGENCY
HAND CRANK RADIO**

EW-CFLR

USER MANUAL