

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

CHARGING THE SPEAKER

⚡ Charge the speaker before using it for the first time.

🕒 Plug in the cable to the micro USB port and charge for at least 3 hours.

Connect the charging cable to charging port.



PAIRING YOUR SPEAKER

Your speaker will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

PAIRING YOUR SPEAKER (continued)

Make sure the speaker is turned off before attempting to pair it with a smart phone or tablet. Press the "OFF/ON" button to turn on the speaker.



Press the button, it works as Bluetooth mode automatically.




From your smart phone or tablet, find a list of nearby devices and choose "HY-FABP". Enter "0000" if asked. The speaker will "beep" when pairing is complete!

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

MEDIA KEY FUNCTIONS

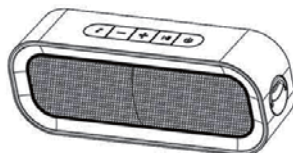

- 🔊 Turn speaker ON/OFF
- ⏮ Play/ Pause music
- + Press & Hold - Next track Press Once - Increase volume
- Press & Hold - Previous track Press Once - Decrease volume
- 📞 Answer/End a call

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

SPECIFICATIONS

Bluetooth Version: V4.2 + EDR
Operation Range: Up to 33ft (10m)
Play Time: Up to 5 hours
Standby Time: Up to 24 Hours
Battery Capacity: 1200mAh
Charging Time: Up to 2 Hours
FCC ID: 2AANZFABP
BT ID: D032334

WARRANTY

For warranty information, please contact us at: support@dglusa.com

WARNING

Keep away from heat sources.
Do not disassemble.

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

HYPE® QUICK START GUIDE

WATER-RESISTANT WIRELESS SPEAKER

used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.