


DO NOT PRINT 不要印刷

CUT LINE 切割线

FOLD LINE 折叠线

10-PANEL FOLD

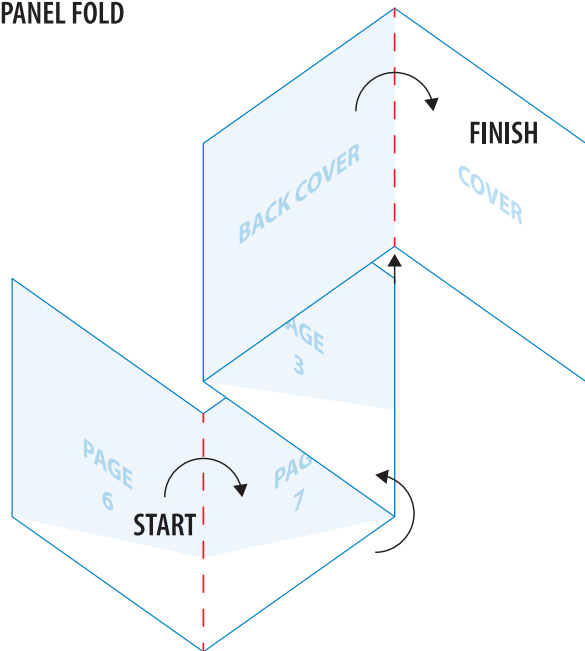

100g铜版纸折页，正反面印刷，73.66*76.2 mm

THANK YOU FOR CHOOSING HYPE!

Please read this user manual carefully before using the product and keep it for future reference. Also, make sure your box has the following items:

Package Contents

- 1 x Wireless Speaker
- 1 x USB-A to USB-C Charging Cable



SAFETY PRECAUTIONS

- Do not play music at excessive volumes to prevent damage to hearing and the speaker.
- Do not use the speaker in wet or damp environments to avoid damage.


IMPORTANT NOTICE

This product's specifications, features, and technology may change without prior notice to improve performance and functionality.

FUNCTIONS

- 1 Light Switch**
 - Long-press to turn on/off.
 - Press to cycle between light modes.
- 2 Power Button (On/Off)**
 - Long-press to turn the speaker on or off.
- 3 Mode Button**
 - Press to switch input modes.
 - Long-press to activate or deactivate TWS mode (True Wireless Stereo).* See TWS section for details.
- 4 Play/Pause**
 - Press to play/pause music.
 - In FM mode, long-press to scan and save stations. Press again to stop.
 - When receiving a call, press to answer; press again to end.

- 5 Charging Light Indicator**
 - Turns red when charging, then off when fully charged.
- 6 USB Media In**
- 7 TF Card Reader**
- 8 Charging Port (USB-C)**
- 9 Volume Down/Previous Track**
 - Press to skip to the previous track.
 - Long-press to decrease volume.
- 10 Volume Up/Next Track**
 - Press to skip to the next track.
 - Long-press to increase volume.
- 11 Hanging Strap**
- 12 Animated Lights**

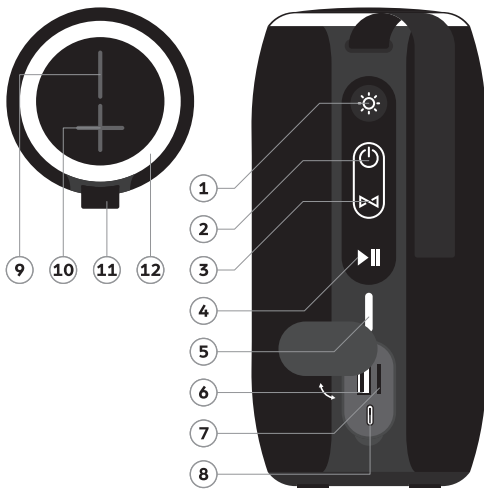

KNOW THE BASICS

Input Modes

- When powered on, Bluetooth® pairing mode is activated.
- Inserting a USB or TF card automatically switches to the corresponding mode. If not, press the Mode Button to switch manually.

NOTE: Avoid having a USB drive and a TF card connected simultaneously, as this may cause your speaker to malfunction.

Bluetooth® Mode

- Turn the speaker on. A tone confirms the pairing mode. The LED indicator flashes white.
- On your music device, enable Bluetooth® and select the speaker from the available devices.
- A tone confirms successful pairing.

FM Mode

- Long-press Play/Pause to scan and save stations automatically.
- Press Volume Up or Volume Down to switch between saved stations.

TRUE WIRELESS STEREO (TWS) FUNCTION

TWS mode requires two compatible speakers (sold separately)

- Place both speakers in the same room and turn them on in Bluetooth® mode. Do not connect them to your device yet.
- Long-press the Mode Switch button on one of the speakers until you hear a tone. The speakers will sync and enter TWS mode.
- Enable Bluetooth® on your audio device. Search for available devices and select the speaker. In TWS mode, only one speaker name will appear.

- To exit TWS mode, long-press the Mode Switch button again

SPECIFICATIONS

Speaker Output: 5W (x2)
Bluetooth® Version: 5.3
Functions: BT/FM/TF/RGB Lights/Handsfree
Battery: Rechargeable 1200mAh
Charging Port: USB Type-C
Charging Time: 2-3 hours
Play Time: 2-4 hours
Dimensions: 100 cm x 100 cm x 205 cm
Weight: 599g
Extras: Integrated vibrating diaphragm, Soft-touch rubber coating, and hanging strap
FCC ID: 2AANZFBSPKR
Bluetooth Frequency: 2.402-2.480GHz

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy. If not installed and used by the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

DGL

HYPE is a trademark of DGL Group, LLC. • All other trademarks and trade names are those of their respective owners • BLUETOOTH® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. • No portion of this design may be reproduced without written permission. The illustrated product and specifications may differ slightly from those supplied. Distributed by DGL Group, Ltd. 2045 Lincoln Highway, 3rd Floor, Edison, NJ, 08817, USA.

hype

HALO
LED WIRELESS
SPEAKER
POP-FBSPKR

USER
MANUAL

Bluetooth

