

SUN-FCHG-MANUAL

BOOK SIZE: 3” W X 3.5” H (FOLDED)

PAPER: 70 LBS. MAGAZINE PAPER

INKS

 
K

DO NOT PRINT

CUT LINE

FOLD LINE

10-PANEL FOLD

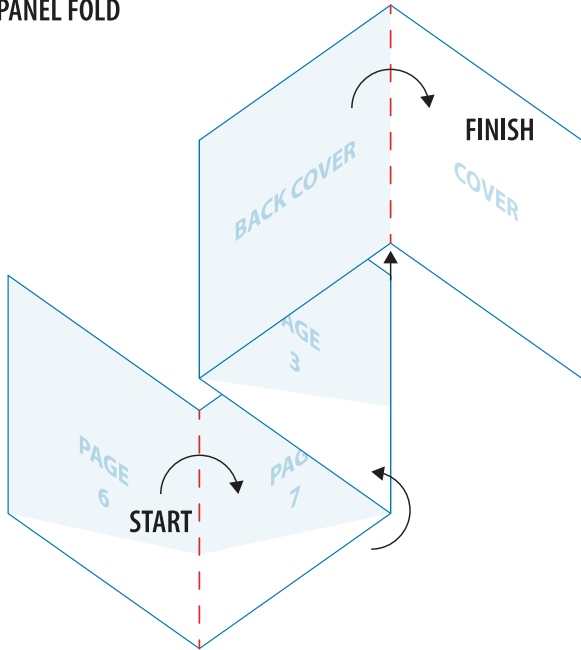


COMPONENTS

- A. 3-in-1 Foldable Wireless Charger
- B. 1 x USB-C Charging Cable
- C. User Guide

PRODUCT

 - A. Mobile phone charging pad
- B. Smart watch charging pad
- C. Earbuds charging pad
- D. USB-C port

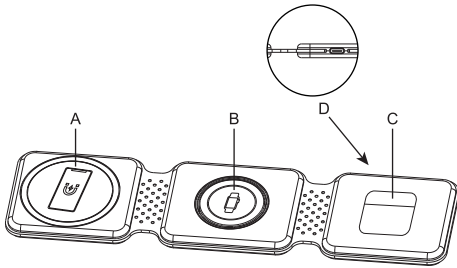

SPECIFICATIONS

Input	USB-C 5V $\equiv$ 3A, 9V $\equiv$ 3A
Output	Phone Charger: 5W, 7.5W, 10W, 15W Watch Charger: 2W Max. Earbuds Charger 3W Max.

Dimensions 80 x 62 x 30mm

Weight 110g

* Output is dependent on input power. Recommend using a $\geq$ 27W USB-C PD charger (not included).

** Only supported on some devices compatible with 15W wireless charging.

*** Compatible with Apple watches from series 2 onwards.

OPERATION

Insert the supplied USB-C cable into a working power source. Connect the opposite end to the USB-C port on the 3-in-1 foldable wireless charger. When powered on, the charger will enter standby mode.

For Charging Phones: Place a compatible mobile phone in the center of the wireless charging pad with the display facing upward to begin charging.


For Charging Watches: Place the back of the watch against the charging pad to charge. The charging pad can be lifted to allow for an alternative charging position.

For Charging Earbuds: Place compatible earbuds flat on their back on the charging pad to charge.


CHARGING LAYOUT

The 3-in-1 foldable wireless charger can be set up in various ways for charging depending on your preference.

 Open Layout: for charging the mobile phone, smart watch, and earbuds at the same time.

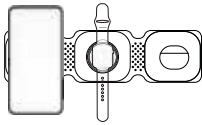

 Folded Layout: for charging your phone only and minimize the required space for operation.



TROUBLESHOOTING

1. Verify that your device is compatible with wireless charging technology.
2. To resolve connection issues, remove any protective cases and ensure the charging pad is completely clear of metal objects, such as coins or keys, which can interfere with the power signal.
3. Finally, try repositioning your device to ensure its center is perfectly aligned with the center of the pad, confirming it is facing the correct direction to initiate power delivery.

CLEANING

Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power sockets and plug pins with a clean, dry cloth.

WARNING

For the safety of yourself and others, follow all instructions and take notice of all the warnings. When adhered to, these safety precautions can reduce the risk of fire, electric shock and injury. This product complies with Safety standard BS EN 62368-1 to ensure the safety of the product.

To avoid the risk of suffocation, keep plastic wrapping and packaging materials out of the reach of babies and young children.

To prevent environmental factors (dampness, dust, food, liquid etc.) harming the power bank, only use it in a well-ventilated, clean and dry environment, away from excessive heat or moisture. Keep the product away from direct sunlight or heat sources.

In case of damage, do not disassemble, repair or modify the product yourself. Contact After Sales Support for advice on repair or replacement, or refer servicing to qualified personnel only.

Children should be supervised to ensure they do not play with the product.

Do not place any objects on the product unless they are intended for use with it.

Do not expose the product to microwaves.

Clean with a dry cloth only.

Do not use water, solvents, or chemical cleaners.

Keep the product away from oils, chemicals, and other organic liquids.

Use this product only for its intended purpose as described in this guide.

Do not place or store the product where it may fall or be pulled into a bath or sink.

This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by individuals lacking experience or knowledge, unless they are supervised or instructed by a person responsible for their safety.

RESPONSIBLE DISPOSAL

RESPONSIBLE DISPOSAL OF THE PRODUCT

The crossed-out wheeled bin symbol on this product indicates that it must not be disposed of with household waste. At the end of its useful life, please take this product to an appropriate local waste collection or recycling facility in accordance with local regulations.

RESPONSIBLE DISPOSAL OF THE PACKAGING

This product's packaging is made from environmentally responsible materials and is typically recyclable. Please dispose of all packaging materials correctly and offer them for recycling whenever possible.

⚠ WARNING:

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

⚠ WARNING

Always confirm that the temperature is between 5˚c-40˚c before you can charge the devices. Please send it to professionals if there is something wrong. Do not overhaul by yourself.

FCC STATEMENT

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines. This equipment should be installed and operated with minimum distance of 20cm from your body.

FCC ID: 2AANZFCHG

 
MADE IN CHINA



SARINA

3-IN-1 WIRELESS TRAVEL CHARGER

SA-FCHG

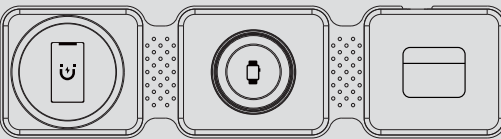

USER MANUAL