

100g铜版纸折页，正反面印刷，73.66*76.2 mm

INKS


K

DO NOT PRINT

CUT LINE

FOLD LINE

10-PANEL FOLD

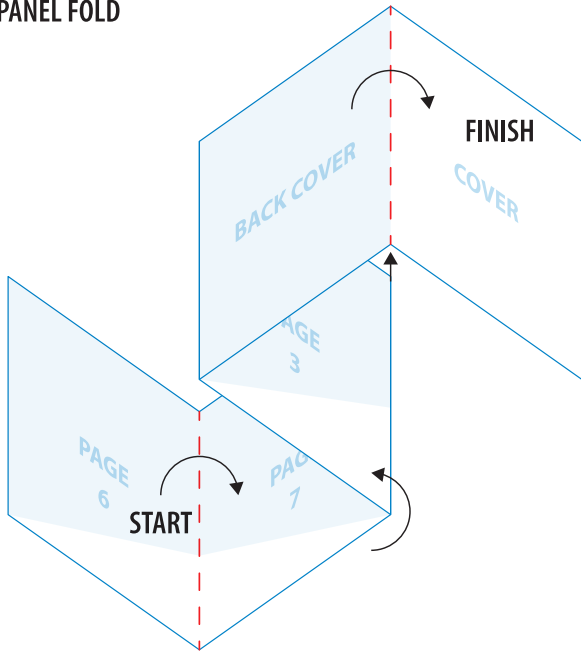

THANK YOU FOR CHOOSING HYPE!

Please read this user manual carefully before using the product and keep it for future reference. Also, make sure your box has the following items:

Package Contents

1 x Wireless Speaker

1 x USB-A to USB-C Charging Cable

SAFETY PRECAUTIONS

- Do not play music at excessive volumes to prevent damage to hearing and the speaker.
- Do not use the speaker in wet or damp environments to avoid damage.

IMPORTANT NOTICE

This product's specifications, features, and technology may change without prior notice to improve performance and functionality.

FUNCTIONS

1 Power Button (On/Off)

- Long-press to turn the speaker on or off.

2 Light Switch

- Long-press to turn on/off.
- Press to cycle between light modes.

3 Mode Button

- Press to switch input modes.
- Long-press to activate or deactivate TWS mode (True Wireless Stereo).* See TWS section for details.

4 Play/Pause

- Press to play/pause music.
- In FM mode, long-press to scan and save stations. Press again to stop.
- When receiving a call, press to answer; press again to end.

5 Volume Down/Previous Track

- Press to skip to the previous track.
- Long-press to decrease volume.

6 Volume Up/Next Track

- Press to skip to the next track.
- Long-press to increase volume.

7 Charging Light Indicator

- Flashes red when charging. Once it is fully charged the indicator light will be off. Do not overcharge.

8 Charging Port (USB-C)

9 USB Media In

10 TF Card Reader

11 AUX In

12 Animated Lights

13 Carrying Handle

KNOW THE BASICS


Input Modes

- When powered on, Bluetooth® pairing mode is activated.
- Inserting a USB or TF card automatically switches to the corresponding mode. If not, press the Mode Button to switch manually.

Bluetooth® Mode

- Turn the speaker on. A tone confirms the pairing mode. The LED indicator flashes white.
- On your music device, enable Bluetooth® and select the speaker from the available devices.
- A tone confirms successful pairing.

NOTE: Avoid having a USB drive and a TF card connected simultaneously, as this may cause your speaker to malfunction.

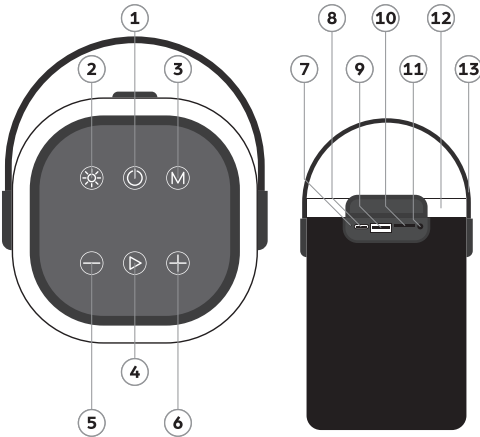

FM Mode

- Long-press Play/Pause to scan and save stations automatically.
- Press Volume Up or Volume Down to switch between saved stations.

TRUE WIRELESS STEREO (TWS) FUNCTION

TWS mode requires two compatible speakers (sold separately)

- Place both speakers in the same room and turn them on in Bluetooth® mode. Do not connect them to your device yet.
- Long-press the Mode Switch button on one of the speakers until you hear a tone. The speakers will sync and enter TWS mode.
- Enable Bluetooth® on your audio device. Search for available devices and select the speaker. In TWS mode, only one speaker name will appear.

- To exit TWS mode, long-press the Mode Switch button again

SPECIFICATIONS

Speaker Output: 10W (x1)

Bluetooth® Version: 5.3

Functions: BT/FM/TF/RGB Lights/Handsfree

Battery: Rechargeable 1200mAh

Charging Port: USB Type-C

Charging Time: 2-3 hours

Play Time: 2-4 hours

Waterproof Level: IPX4

Dimensions: 113 cm x 122 cm x 160 cm

Weight: 790g

Extras: Carrying handle

FCC ID: 2AANZWRLSPKR

Bluetooth Frequency: 2.402-2.480GHz

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy. If not installed and used by the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DGL

HYPE is a trademark of DGL Group, LLC. • All other trademarks and trade names are those of their respective owners • BLUETOOTH® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. • No portion of this design may be reproduced without written permission. The illustrated product and specifications may differ slightly from those supplied. Distributed by DGL Group, Ltd. 2045 Lincoln Highway, 3rd Floor, Edison, NJ, 08817, USA.

hype

NEON

LED WIRELESS SPEAKER

POP-WRLSPKR

USER MANUAL

Bluetooth