

BT138B User Manual Note: Fully charge the speaker, before using for the first time. Ver. 1.0.0	Instructions All the instructions should be read carefully before operation and follow the instructions Keep this product and its accessories away from excessive heat. The user should not attempt to repair the speaker. Contact the nearest iBall Service Center for assistance. No sharp object should be subjected to the speaker/speaker-drivers as it may damage the speakers. Only use a soft cloth, no harsh abrasives or chemicals to clean, as it may damage the surface finishing. The power adapter of the speaker should be unplugged from the power outlet when the speaker is left unused for a long period time. Ensure the speaker is waterproof by removing all the connected cables and the cap is tightly closed before exposing the speaker to liquid. Do not expose the speaker to water while charging, as doing so may result in damage to the speaker or the power source. IPX6 - Protection assured against light splashing of water. Must not immerse in water. Packaging List 1. Speaker.....1pc. 2. User Manual.....1pc. 3. USB Charging Cable.....1pc. 1 2 3	Description of the Control Buttons and Connections 1 2 3 4 5 6 7 MSD BT BT BT BT BT BT 1. Power On/Off/Mode: Long press to power On/Off. Single press to charge mode. 2. Prev / Vol - : MSD/BT mode: Single press to decrease volume and long press to select previous song. AUX mode: Single press to decrease volume. 3. Next / Vol + : MSD/BT mode: Single press to increase volume and long press to select next song. AUX mode: Single press to increase volume. 4. Play/Pause/Call: Single press to play/pause in MSD/BT mode and mute/unmute in AUX mode. Long press to disconnect with existing BT connection. Call functions Single press to recld a call. Double press to redial. Long press to reject Incoming call. 5. MSD Slot: To connect Micro SD card as source input. 6. AUX Slot: To connect AUX input. 7. 5V DC: To charge the speaker using 5V/1Amp power adapter. Charging Instructions 1. Please use the 5V / 1A power adapter for charging this speaker. 2. The Red LED indicator indicates the battery charging status. The LED will stop glowing once the speaker gets charged completely. 3. Charging time may increase if music played and kept for charging simultaneously. LED Indications MSD mode Green LED Constant AUX mode Green LED Constant Bluetooth pairing mode Blue LED Blinking Bluetooth paired mode Blue LED Constant Charging Red LED Constant TWS pairing mode Blue LED fast Blinking TWS paired mode Master Speaker will Blink Blue and Slave Speaker will glow Yellow. TWS paired with BT Device Master and Slave Speaker will glow Yellow. - 2 - - 3 - - 4 -
---	---	--