

# User Manual

For the

**Talon-LTE**

**Vehicle Tracking Device**

Aug 15, 2016



## R1.0

The information presented in this document is strictly confidential and contains trade secrets and other confidential information that are the exclusive property of Montage Systems LLC

| Author | Revision | Changes         | Date       |
|--------|----------|-----------------|------------|
| Zeev   | 1.0      | Initial version | 2016-08-15 |
|        |          |                 |            |
|        |          |                 |            |
|        |          |                 |            |

## Contents

|       |                                        |    |
|-------|----------------------------------------|----|
| 1     | Introduction                           | 3  |
| 2     | Hardware Design                        | 4  |
| 2.1   | Basic Hardware                         | 5  |
| 2.2   | Basic RF Performance                   | 6  |
| 2.3   | Certification and Safety               | 9  |
| 3     | Software Features                      | 10 |
| 3.1   | Basic Software                         | 10 |
| 3.2   | Remote Update                          | 10 |
| 3.3   | Power Modes                            | 10 |
| 3.4   | AT Command                             | 11 |
|       | Event Setting Commands                 | 11 |
|       | Action Commands                        | 12 |
|       | File Update Commands                   | 12 |
|       | Periodic Action Commands (with Events) | 13 |
|       | Configuration Commands                 | 13 |
|       | Communication related settings         | 13 |
|       | Protocol related settings              | 13 |
|       | Drive Trip related settings            | 13 |
|       | Peripheral related settings            | 13 |
|       | Maintenance report settings            | 14 |
|       | Miscellaneous settings                 | 14 |
|       | Information Commands                   | 14 |
|       | Configuration reading commands         | 14 |
|       | Information commands                   | 14 |
| 3.5   | Report                                 | 15 |
|       | Report Queuing                         | 15 |
|       | Ack'ed Mode                            | 15 |
|       | Event Report Format                    | 15 |
| 3.6   | Reset                                  | 16 |
| 3.6.1 | Context Preservation                   | 16 |
| 3.7   | Startup Banner                         | 16 |
| 4     | Test Method                            | 17 |
| 4.1   | Hardware                               | 17 |
| 4.2   | Software Test                          | 17 |
|       | Mechanical Structure(mm)               | 18 |
|       | FCC Statement                          | 19 |
|       | RF Exposure Warning Statements:        | 19 |
|       | IC STATEMENT                           | 19 |

## 1 Introduction

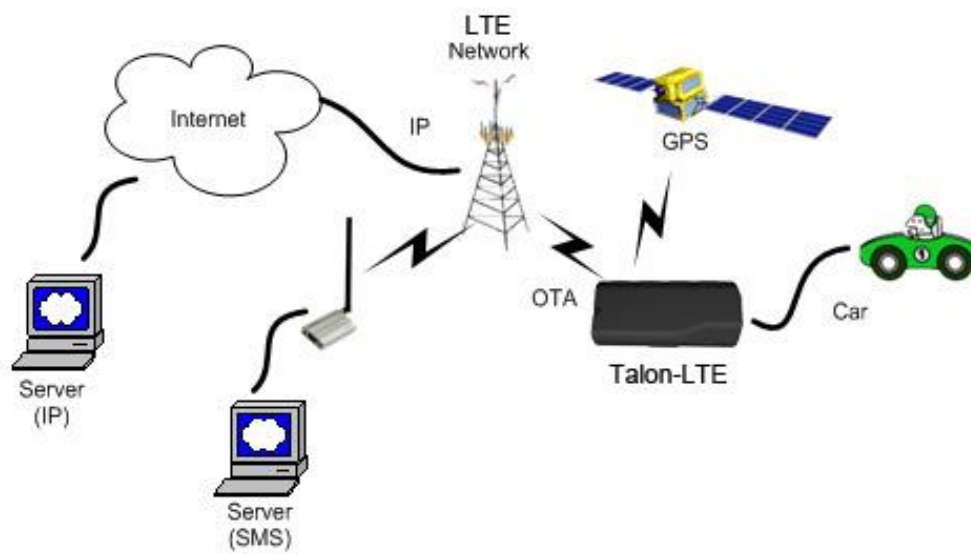
The TALON-LTE is a self-Contained vehicle tracking device that combines GPS location with LTE connectivity.

The TALON-LTE appears to a user or a server application as a single endpoint device. It can be queried, updated and configured either through a serial connection, or an over the air IP connection, or through SMS messaging. The TALON-LTE presents itself over these connections as an enhanced cellular modem with attached functional elements. These elements include:

- GPS location engine
- 2 General Purpose Bidirectional I/O (GPIO) pins
- 1 Relay drive pin output
- Serial UART port
- Input voltage monitor (optional)
- Timers
- Watchdog lockup protection (Dedicated watchdog circuit is optional)
- Factory load option for motion detection

Access to these elements and general purpose interfaces is done through an extended AT command set as defined herein.

Application scene:



This product will be designed based on the 4G wireless data/SQN3223 Baseband chipset, which includes ARM CPU and LTE\_CAT1 protocol. This baseband internal connection 4M serial flash, LTE\_B4&B13 RF Transceiver, and RF Front end circuit.

The device will use one dual band antenna (LTE\_B13&B4) and one dedicated GPS antenna.

## 2 Hardware Design

### 2.1 Basic Hardware

| Items                             | Requirement                                                               |
|-----------------------------------|---------------------------------------------------------------------------|
| <b>Baseband Chipset</b>           | SQN3223                                                                   |
| <b>RF 4G Transceiver</b>          | SQN3241                                                                   |
| <b>Air Interface</b>              | Support for LTE_B13, LTE_B4                                               |
| <b>Frequency</b>                  | B4(MHZ): TX(1710-1755) RX(2110-2155)<br>B13(MHZ): TX(777-787) RX(746-756) |
| <b>Antenna</b>                    | Internal Dual Antennas (Main & Diversity)<br>[B4&B13]                     |
| <b>GPS Antenna</b>                | Dedicate high performance ceramic antenna                                 |
| <b>UIM requirement</b>            | Support: 2FF SIM Interrupt Mode<br>No Support: Hot Plug/Unplug            |
| <b>Interface</b>                  | UART TX UART RX USB                                                       |
| <b>Battery Monitor</b>            | UART RX                                                                   |
| <b>Build in battery manager</b>   | 12V DC Input (1A current)                                                 |
|                                   | Relay Drive (12V Output ,500mA current)                                   |
|                                   | GPIO1                                                                     |
|                                   | GPIO2                                                                     |
|                                   | internal analog input scaled (Optional)                                   |
|                                   | Supported                                                                 |
| <b>Dedicate Timers</b>            | No                                                                        |
| <b>Watchdog</b>                   | Supported                                                                 |
| <b>Motion Detect</b>              | Supported (GPS/G-Sensor)                                                  |
| <b>LED</b>                        | 2 LED Supported<br>2 LED's (one is RED, one is Green)                     |
| <b>Battery</b>                    | Build in battery (80MAH Lion)                                             |
| <b>Working Time</b>               | 4 hours                                                                   |
| <b>Power switch</b>               | Yes (built in power switch)                                               |
| <b>Power Cable color</b>          | 10 colors                                                                 |
| <b>Power Cable connector type</b> | 10pin connector                                                           |
| <b>Power Consumption</b>          | < 5Watts                                                                  |

The TALON-LTE provides support for specialized hardware features through extended AT commands. The features supported include the following.

### GPS

The major functionality of the GPS module is to compute the correlation results between the incoming signal and the selected PRN code based on certain Carrier Doppler Frequency, Code Doppler Frequency, code phase, carrier phase, and the particular satellite the module is tracking or acquiring.

## GPIO

Two GPIO pins, GP1 and GP2, are presented to the external environment on the main connector. They are general purpose bidirectional lines capable of providing system interrupts to generate a report or drive logic levels to external devices. These lines are 2.8V logic level and are 16V tolerant. These pins default to input. GP1 is pulled down representing 0 when disconnected; GP2 is pulled up representing logical 1 when disconnected. They should be asserted to a known value if used. GP1 is intended to use for Ignition Sensing.

## LED's

Two LED status indicators are provided to verify correct installation and operation. The status LEDs are color coded and directly convey the status of the cellular and GPS subsystems as described in the table below. Their valid operation also indicates operational status and power.

| LED   | Function            | Status                                                                                                                                                                                                               |
|-------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Red   | GPS                 | <b>On: GPS satellites acquired and Locked</b><br><b>Flash Slow: GPS satellite search is in progress</b><br><b>Off: No power or GPS subsystem fault</b>                                                               |
| Green | Cellular Connection | <b>On: Indicates WWAN connection is made</b><br><b>Flash Slow: WWAN subsystem initialized but no connection</b><br><b>Flash Fast: WWAN initialization in process</b><br><b>Off: No power or WWAN subsystem fault</b> |

The TALON-LTE provides user control allowing the LEDs to be extinguished once installation is verified. This feature reduces power and further conceals the TALON-LTE Tracker from untrained parties wishing to defeat its operation.

## UART

A UART port is provided for AT command and data interaction and optionally for application specific control. The UART can also be used as an expansion port for sensors and other peripherals

## Relay Driver

A 500mA sink capable output pin is provided. This pin is meant to drive a relay coil indented to interrupt the starter solenoid relay for the ignition circuit to a car.

## Battery Monitor

The battery monitor is internal analog input scaled such that the DC value of the power input pin to the TALON-LTE system is measured. This value is scaled to span the most significant 8 bits of the A/D and consequently covers a scale from 0 to 25.5 Volts.

## Timers

Timers resident on the baseband chip generate periodic interrupts for power down wakeup, watchdog support, report generation and other timer related functions. Report timers are supported by related AT command and cause generation of periodic reports.

## Watchdog

SQN3223 chipset provides internal software Watchdog, and a physically dedicate Watchdog circuit requirement is optional.

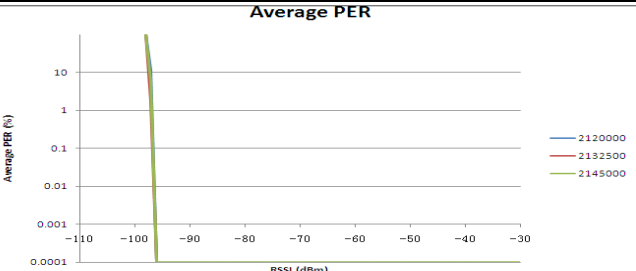
The circuit includes is MCU that acts as a failsafe external watchdog. The MCU power cycles the system, if no activity is detected for 2 hours.

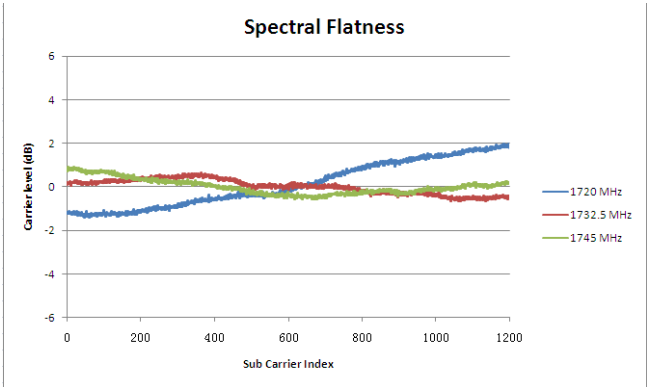
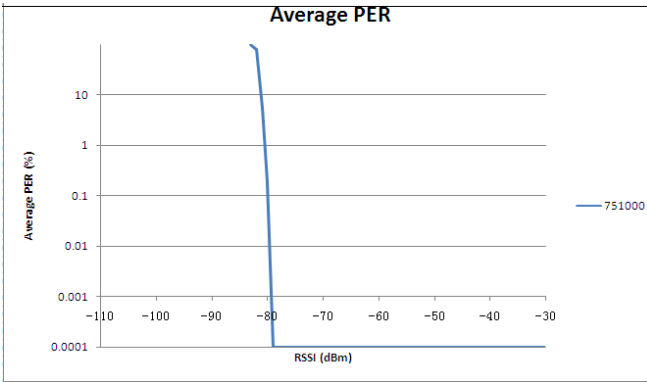
## Motion Detect (Option)

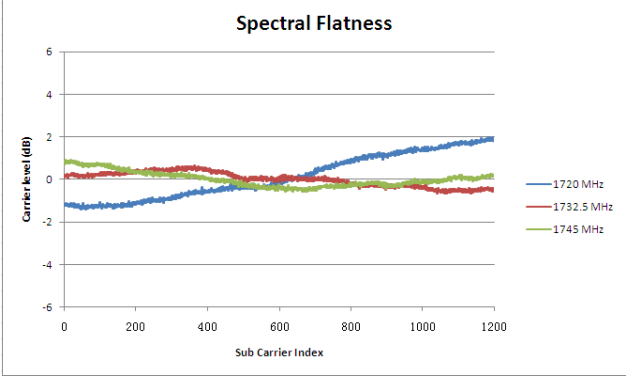
A factory populates option for motion detector is provided. If populated at the time the TALON-LTE is manufactured, this option will work with firmware power down options to keep the TALON-LTE in a very low power down state until motion is detected. Upon wakening, a report can then be generated.

## 2.2 Basic RF Performance

| Items          | Requirements                                | Remark                                 |
|----------------|---------------------------------------------|----------------------------------------|
| TRP free space | B4/B13: $\geq 20$ dBm                       | TRP free space                         |
| TIS free space | Main: $\leq -91$ dBm<br>Div: $\leq -88$ dBm | TIS free space                         |
| Antenna loss   | $\leq -3$ dB                                | TRP-TX Power Conducted                 |
| Antenna Loss   | $\leq -3$ dB                                | RX receive sensitivity conducted – TIS |

| Board RF Specification       |                                                                                                         |
|------------------------------|---------------------------------------------------------------------------------------------------------|
| <b>LTE_B4 RX</b>             |                                                                                                         |
| B4 Frequency range           | 2110-2155MHZ                                                                                            |
| Sensitivity                  | -99.5dBm (10MHZ_50RB_Downlink)                                                                          |
| Dynamic range                | -23~-99.5dBm                                                                                            |
| Dynamic range PER            |  <p><b>Pass</b></p> |
| <b>LTE_B4 TX</b>             |                                                                                                         |
| B4 Frequency range           | 1710MHz~1755MHz                                                                                         |
| Maximum Frequency error      | $\pm 10$ Hz                                                                                             |
| Maximum output power         | 23dBm                                                                                                   |
| Minimum control output power | $< -40$ dBm                                                                                             |
| ACLR                         | UTRA2: 46.48    UTRA1: 41.21    E-UTRA1:39.23<br>UTRA2: 43.87    UTRA1: 40.51    E-UTRA2:38.05          |
| OBW                          | 8.87MHZ (10MHZ Nominal)                                                                                 |
| IQ OFFSET                    | $< -55.6$ dbc                                                                                           |

|                              |                                                                                                        |
|------------------------------|--------------------------------------------------------------------------------------------------------|
| EVM                          | <3%                                                                                                    |
| TX Spectral Flatness         |  <p><b>Pass</b></p>  |
| <b>LTE_B13 RX</b>            |                                                                                                        |
| Frequency range              | 746MHz ~ 756MHz                                                                                        |
| Sensitivity                  | -100dBm (10MHZ_50RB_Downlink)                                                                          |
| Dynamic range                | -23 ~ -100dBm                                                                                          |
| Dynamic Range PER            |  <p><b>Pass</b></p> |
| <b>LTE_B13 TX</b>            |                                                                                                        |
| Frequency range              | 777MHz ~ 787MHz                                                                                        |
| Maximum Frequency error      | ±10Hz                                                                                                  |
| Maximum output power         | 23dBm                                                                                                  |
| Minimum control output power | <-40dBm                                                                                                |
| ACLR                         | UTRA2: 45.48    UTRA1: 41.41    E-UTRA1:39.43<br>UTRA2: 44.87    UTRA1: 41.51    E-UTRA2:38.25         |
| OBW                          | 8.87MHZ (10MHZ Nominal)                                                                                |
| IQ OFFSET                    | < -54.7dbc                                                                                             |
| EVM                          | <3%                                                                                                    |

|                           |                                                                                                                          |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------|
| TX Spectral Flatness      |  <p><b>Pass</b></p>                    |
| <b>GPS</b>                |                                                                                                                          |
| AGPS Support              | Embedded AGPS software supporting an internal GPS subsystem solution<br>E911 FCC mandated phase 1 and phase 2 (optional) |
| Frequency Support         | L1-band (1.57542GHz)<br>Channels: 210 PRN, 66 Search, 22 Simultaneous tracking                                           |
| Sensitivity               | Sensitivity (UHS):<br>Tracking: -156dBm<br>Reacquisition: -153dBm<br>Acquisition: -144dBm                                |
| Tracking Time Requirement | Acquisition time:<br>Hot: <2s<br>Warm: <15s<br>Cold: <60s<br>Reacquisition: 2s - 10s Depends on signal level             |

### 2.3 Certification and Safety

| Items                              | Requirement                                                       |
|------------------------------------|-------------------------------------------------------------------|
| <b>Drop Design</b>                 | 1.2meter 6 direction standard drop test                           |
| <b>Temperature Range</b>           | -20 to 40°C Operation<br>-50 to +100° C Storage                   |
| <b>Humidity:</b>                   | 20% to 90% Operation<br>10% to 95% Storage                        |
| <b>Altitude:</b>                   | -500 to +18,000m                                                  |
| <b>Vehicle ISO Test</b>            | ISO7637-2-2004; ISO7637-3-2007; ISO10605-2008;<br>ISO16750-2-2010 |
| <b>FCC Certification</b>           | FCC 47 CFR Part 15 and Part 27                                    |
| <b>Safety</b>                      | UL Listing                                                        |
| <b>Others Operator Requirement</b> | Industry Canada/ AT&T (optional)                                  |
| <b>ESD Requirement</b>             | 10KV non-Conductive                                               |

## 3 Software Features

### 3.1 Basic Software

| Items                 | Requirement                                     |
|-----------------------|-------------------------------------------------|
| <b>RF Function</b>    | LTE、GPS                                         |
| <b>WWAN Data</b>      | Supported                                       |
| <b>IP Stack</b>       | IPV4/IPV6                                       |
| <b>Upgrade Method</b> | Remote update/ PC tool                          |
| <b>Remote Update</b>  | Supported                                       |
| <b>Power Modes</b>    | Supported                                       |
| <b>AT Command</b>     | Supported                                       |
| <b>Report</b>         | Supported; 3000records                          |
| <b>Driver</b>         | GPIO, LED, GPS, UART                            |
| <b>GPIOs</b>          | Interrupt for Door Open Detect, Ignition Status |
| <b>LEDs</b>           | GPS Status, WWAN Status                         |
| <b>Watch Dog</b>      | Supported (CBP8.2 integrated, and external)     |
| <b>Reset</b>          | Soft reset, hard reset                          |
| <b>Startup Banner</b> | Supported                                       |

### 3.2 Remote Update

The TALON-LTE supports OTA field upgrades of the TALON-LTE resident application. An over the air TFTP (Trivial File Transfer Protocol) connection is made over a UDP/IP connection. A replacement file is then transferred from a server to the TALON-LTE and that file replaces the previous application image. Additionally the whole stack can be updated using an OMA-DM protocol.

### 3.3 Power Modes

The TALON-LTE device supports several power modes that are set by the power mode command. In full power mode the GPS is active and the cellular subsystem will maintain a persistent cellular connection whenever service is available. IP connection is maintained according to the configuration of the device.

The device can be put in low power mode whenever it runs on a backup battery or if the external battery is low or if it is not moving. In low power mode the GPS is not running and the LED's are off. The device would return to full power whenever an event occurs that triggers a report. Those events include:

- Report timer
- GPIO change
- IP change
- Battery threshold
- Heartbeat
- Watchdog
- Power-up

Any hardware or software reset will return the device to full power mode.

### 3.4 AT Command

TALON-LTE commands are AT extensions specific to TALON-LTE devices. They are closely based on commands that are as similar as possible to other industry common devices and are essentially subsets of standard TALON-LTE commands. Common commands used with LTE modems supporting IP connectivity are not included within the TALON-LTE command set extensions. These commands are left in their native structure.

#### Ack'ed Mode

UDP is not a 100% reliable connection and occasional reports or command/responses may be lost. Since all commands have responses, the server can repeat any command to which there is no response. In order to assure reliable reception of reports, Arsenal devices can be configured either in Normal or Ack'ed mode to send the reports. In the Normal mode the reports are simply sent "as is" with no acknowledgment from the server. In the Ack'ed mode every report sent is expected to be acknowledged by the server by sending back an ACK message back. If acknowledgement is not received within the specified timeout, the report is re-sent. If the report is not acknowledged after the specified number of attempts, it is queued. If acknowledgement is received after the report is queued (i.e. past timeout of the last attempt), it is ignored.

Report is not considered "complete" until its acknowledgement is received. Thus, if report X is sent and report X+1 is triggered while waiting for acknowledgement of X, report X+1 will be queued until such acknowledgement is received and only then sent. The Talon-LTE will attempt to re-send queued report(s) every time a new report is triggered. If there is more than one report queued, the reports will attempt to be sent in the order of triggering and only once the report is acknowledged, the next report is attempted. This assures that reports are sent and received in order.

Ack'ed mode assures that all reports are received, but adds overhead in time and data. Report that is not acknowledged is sent again and eventually will be queued and sent again. The number and frequency of re-tries is configurable via the Report Acknowledgement command (AT+IONACK).

#### Event Report Format

Reports can be generated in either an ASCII representation of hex or as actual binary encoded hex. The reporting format is selected via Report Format (AT+IONRF) command. Note that while the logical content of the report is the same in both representations, the size for an ASCII report is twice the size of actual numbers of bytes compared to binary representation.

### 3.5 Reset

There are a number of resets available on the device. Soft reset only restarts the software running on the device. Hard reset is caused by resetting the whole basband module via a reset pin. There is also an option to reset the GPS sub-system only.

### **3.5.1 Context Preservation**

When a reset is caused by the Network Watchdog or by the Reset command (modes 0,1), the context of the system is being preserved and is restored after the reset. The context includes all the periodic timers, the report queue, the odometer, etc. This allows to reset the unit as a troubleshooting measure either periodically or due to Network Watchdog without losing reports that are already in the queue or are pending on running timers. Note that the reset process may cause 1-2min of inaccuracy in the timers and should not be considered as very precise.

### **3.6 Startup Banner**

After a reset a startup banner is printed through the UART only. The format and content of the banner shown below:

```
FW:<firmware version>; BIN:<bin version>; IMEI:<IMEI>  
APN1:<apn1 name>; IP:<IP>:<port>;LPORT:<lport>
```

## 4 Test Method

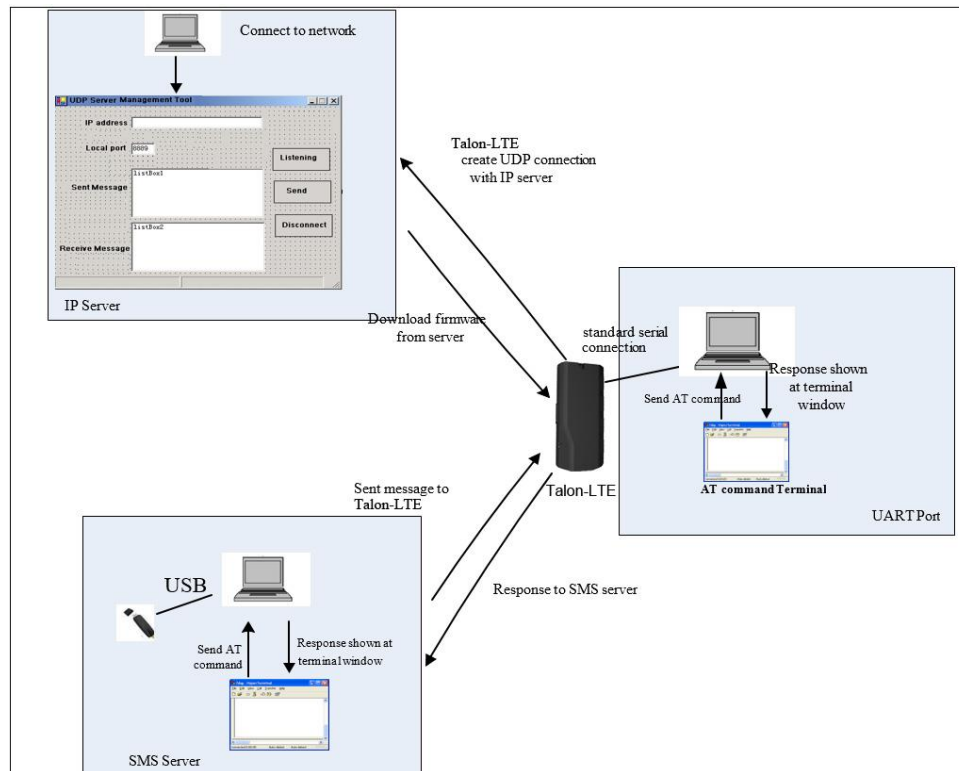
### 4.1 Hardware

| Test Item                     | Description                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Baseband Function Test</b> | <ul style="list-style-type: none"> <li>• Power Input Test</li> <li>• Power Consumption and Current Test</li> <li>• Heat Dissipation Test</li> <li>• UART Stability Test</li> <li>• GPIO Level Test</li> <li>• LED Stability Test</li> <li>• Drop Down Test</li> <li>• ESD Test</li> <li>• High/Low Temperature Test</li> <li>• Humidity Test</li> </ul> |
| <b>RF Test</b>                | <ul style="list-style-type: none"> <li>• RF Performance Test</li> <li>• GPS Performance Test</li> <li>• Antenna Performance Test</li> </ul>                                                                                                                                                                                                             |

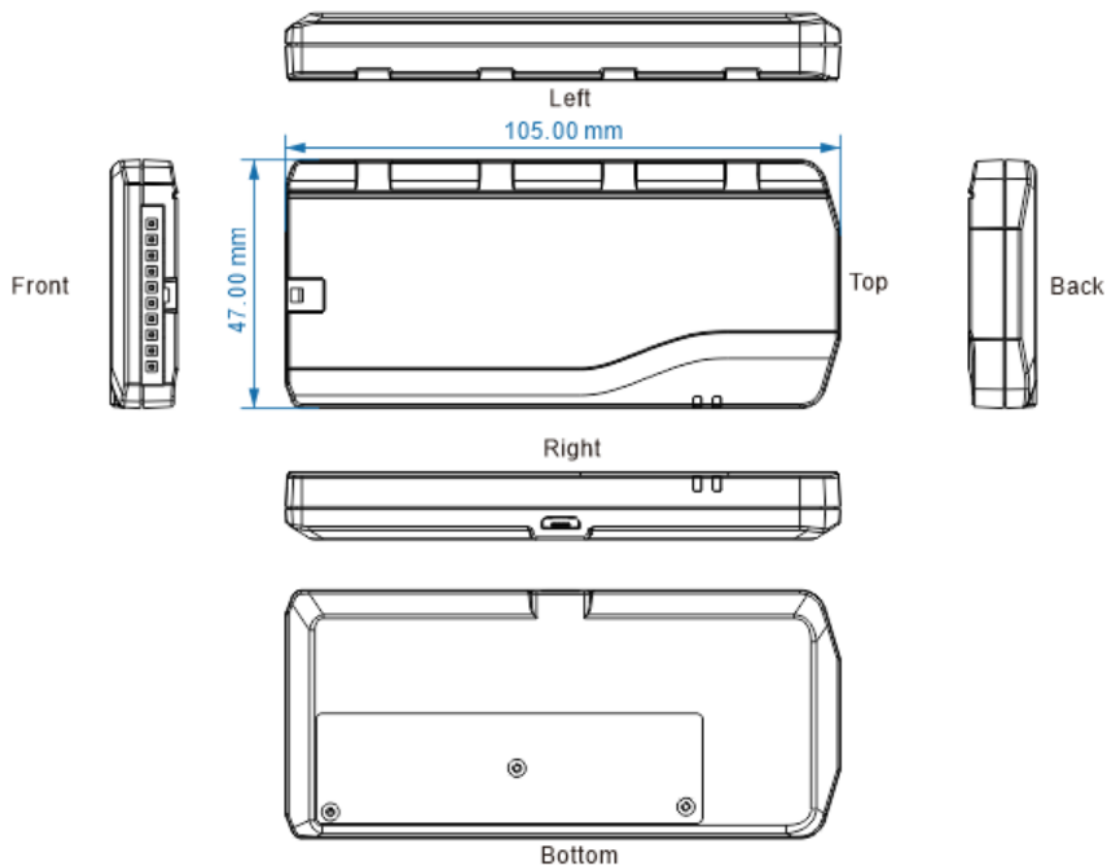
### 4.2 Software Test

#### Test Environment Construct

- Message Test environment
  1. USB dongle and PC as message server
  2. Send message to TALON-LTE
- UDP Test environment
  1. Connect dongle to PC and create dialup as ip server
  2. TALON-LTE create IP connection to server
- UART Test environment
  1. Connect TALON-LTE to PC with com serial cable
  2. Open Terminal tool and send at command
  3. Response can be shown at terminal window



## Mechanical Structure(mm)



## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## RF Exposure Warning Statements:

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons during the normal operations.

## IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

In order to avoid the possibility of exceeding the IC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Afin d'éviter la possibilité de dépasser les limites d'exposition aux fréquences radio de la IC CNR102, la proximité humaine à l'antenne ne doit pas être inférieure à 20 cm (8 pouces) pendant le fonctionnement normal.