

PTAB782 QSG
20130826

Quick Start Guide
Model: PTAB782

In the box

- 7" Kids Tablet
- Quick Start Guide
- USB Cable
- AC Adapter

Buttons, ports & hardware

- 1. Front Camera
- 2. Earpiece
- 3. Volume Buttons
- 4. Home Button
- 5. Power Button
- 6. Back Button
- 7. Headset Jack
- 8. Micro-USB
- 9. Micro-SD Slot
- 10. Back Camera

Basic operation

Power ON
Press and hold the Power button until the screen appears.

Power OFF
Press and hold the Power button until the screen goes dark.

Lock the tablet (optional)
Swipe down from the top of the screen to reveal the notification shade. Tap the lock icon to lock the screen.

Unlock the tablet
Swipe up from the bottom of the screen to reveal the home screen.

Charging the battery
The battery is pre-charged and should be connected to the wall outlet for 2 hours.

Display lock
The display lock is used to prevent unauthorized access to the tablet.

Wi-Fi setup

To access the App Store and download apps, you must first connect the tablet to the internet. To set up Wi-Fi:

1. Select the Wi-Fi icon.
2. Select "Wi-Fi Setup".
3. Select the Wi-Fi network you want to connect to.
4. Enter the Wi-Fi password.

Parental controls

To control the apps that your child can access, use the Parental Controls app.

1. Select the Parental Controls app.
2. Select the Parental Controls app.
3. Create a parent account.
4. Select the Parental Controls app.
5. Select the Parental Controls app.

Home screens

App Store home screen
Access the App Store and download apps.

Music home screen
Access the Music app and download songs.

Game home screen
Access the Game Center and download games.

Apps screens

All Apps screen
View all the apps installed on the tablet.

New Apps screen
View the apps that are available for download.

SD card
Insert the SD card into the slot on the back of the tablet.

Safe mode

Safe Mode is a quick way to revert your Parental Controls settings.

Safe Mode ON
Press and hold the Power button and the Home button until the screen goes dark.

Safe Mode OFF
Press and hold the Power button and the Home button until the screen goes dark.

Care & safety precautions

CAUTION: Do not use the tablet in the following situations:

- Do not use the tablet near water.
- Do not use the tablet near fire.
- Do not use the tablet near heat.
- Do not use the tablet near magnets.

Legal information

© 2013 Polaroid Corporation. All rights reserved.

Limited Warranty

WARRANTY: This product is warranted against defects in materials and workmanship for a period of 12 months from the date of purchase.