


PRIMARK®

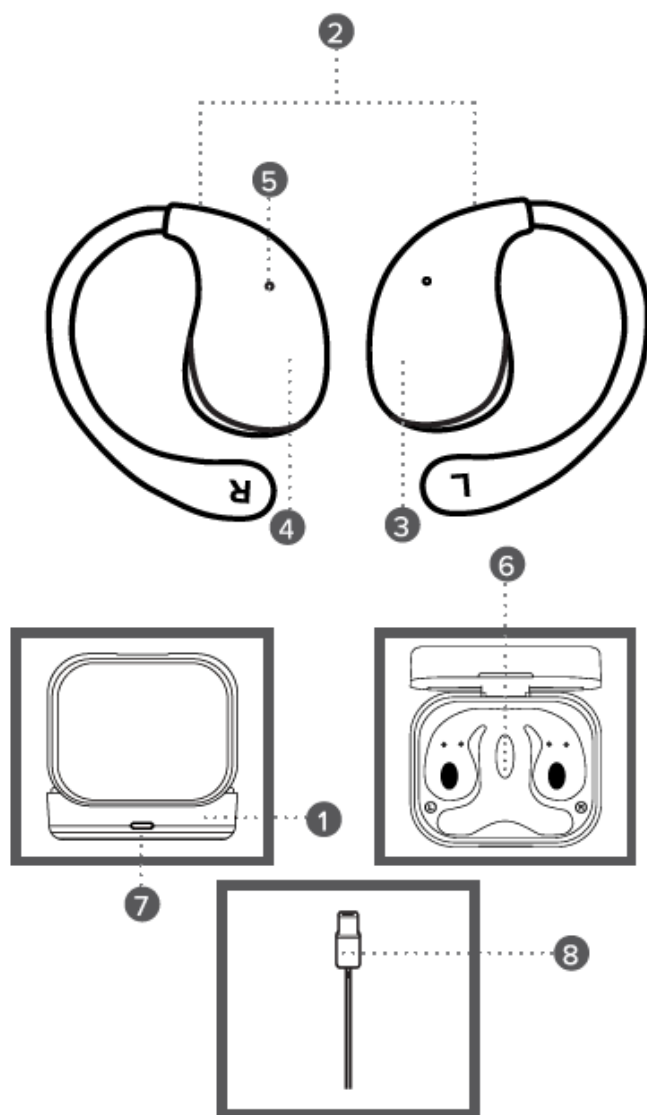

OPEN-EAR EARPHONES

Instruction Manual

EN | Please retain instructions for future reference.

SAFETY INSTRUCTIONS

When using electrical products, basic safety precautions should always be followed.

Keep the product and its accessories out of the reach of children.

Keep small parts away from children as these may present a choking hazard.

Children under 8 years should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged, the product should be recycled.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

It is imperative to unplug the charging cable after the product has been used before it is cleaned.

This product is intended for domestic use only. It should not be used for commercial purposes. To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.



NOTE: It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

BATTERY SAFETY

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or

eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not dispose of exhausted batteries in household waste.

Do not dispose of exhausted batteries in a fire as they may explode.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

This product is fitted with a 3.7 V 30 mAh (earbuds) 300 mAh (charging case) rechargeable lithium-ion battery (non-removable).

Disposal of waste batteries and electrical and electronic equipment

Electric and Electronic devices as well as batteries must not be disposed of with household waste. For more information about where you can drop off your waste product for recycling, please contact your local authority.

The used battery should not be thrown away with other waste. The battery must be collected, recycled or disposed of in an environmentally sound manner according to local regulations.

Declaration of conformity

Hereby, Primark declares that the radio equipment type [**PMK EARPONES**] is in compliance with Directive 2014/53/EU and with the Radio Equipment Regulations 2017. The full text of the declaration of conformity is available at the following internet address: <https://www.primark.com/en-gb/doc>.

Care and maintenance

Wipe the speaker with a soft, lint-free cloth.

DO NOT:

Use any abrasive cleaning solvents to clean the earphones.
Expose the earphones to extremely high or low temperatures.
Drop the earphones.
Attempt to disassemble the earphones.
Dispose of the earphones in a fire as this will result in an explosion.
Description of parts

Instructions for use**Charging the battery**

Each earphone is fitted with a 30 mAh battery (non-removable). The charging case is fitted with a 300 mAh rechargeable battery (non-removable). It is recommended that the earphones and charging case are fully charged before first use; this will take approx. 3 hours.

To charge the charging case, connect the Type-C connector into the Type-C charging port and the other end to a compatible USB port. The case indicator light will flash blue whilst charging. Once charging is complete, the indicator light will remain illuminated.

To charge the earphones, place each earphone into the corresponding earphone charging port. As charging takes place, the earphone indicator light will flash red. Once charging is complete, the indicator light will remain illuminated.



NOTE: *Maximum play time of up to 15 hours is based on 50% volume.
The charging case provides approx. 3 full charges.

Using the earphones

The earphones will automatically turn on when taken out of the charging case. To manually turn on, press and hold the button for approx. 3 seconds. The earphones will automatically turn off when placed back in the charging case.

Once turned on, the earphones will automatically pair and connect with each other. Search for the earphones using a Bluetooth compatible device. Select '**PMK EARPHONES**' to connect and pair them.

Press both sides of the earphones to answer an incoming call.

Press the left or right earphone to hang up a call.

Press the left or right earphone for approx. 2 seconds to decline an incoming call.

Press the left earphone twice to play previous the song.

Press the right earphone twice to skip to next the song.

Press the left earphone three times to increase the volume.

Press the right earphone three times to decrease the volume.

Press the left or right earphone to play/pause music.

Modes

The earphones must be turned on before using any of the following modes.

Bluetooth mode**Pairing with a Bluetooth compatible device**

STEP 1: Once the earphones have been turned on, they will automatically pair and connect with each other.

STEP 2: Search for the earphones using a Bluetooth compatible device. Select '**PMK EARPHONES**'

to connect and pair. Once a connection has been made, a tone will sound to signal that the devices are paired.

STEP 3: To unpair or remove a Bluetooth compatible device from the earphones, turn off the Bluetooth function on the compatible device. The earphones can now be paired with a new compatible device.



NOTE: Once connected, sound can be controlled using either the earphones or the relevant controls on the Bluetooth compatible device.

Making phone calls via a Bluetooth compatible device

Once the Bluetooth compatible device has been paired with the earphones, phone calls can be made.

STEP 1: To answer a call, press '**FUNCTION**' once on either earphone.

STEP 2: To end a call, press '**FUNCTION**' once on either earphone.

STEP 3: To reject an incoming phone call, press and hold either earphone for approx. 2 seconds.

Troubleshooting

The earphones have no power.

The earphones have run out of charge. Charge the earphones following the instructions in the section entitled '**Charging the battery**'.

The earphones have no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly on the connected device.

The earphones are not paired with a Bluetooth compatible device. Follow the instructions in the section entitled '**Bluetooth mode**'.

Unable to pair a device with the earphones.

The Bluetooth device is not compatible with the earphones. Check that the Bluetooth device is compatible with the earphones and that the Bluetooth function is switched on.

The charge of the earphones depletes quickly.

The volume level is set too high. Excessive use of the earphones at high volumes will drain the battery quickly. Charge the earphones following the instructions in the section entitled '**Charging the battery**' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and the earphones will need to be disposed of. See the section entitled '**BATTERY SAFETY**'.

The earphones do not charge whilst in the charging case.

Ensure the charging case is charged and the earphones are placed securely in the correct compartment.

The earphones do not connect to each other.

Place the earphones back into the charging case, take them out and reconnect. Alternatively, press and hold the function button on each earbud to ensure they are switched on.

The earphones are connected to the device but no sound is playing.

Place the earphones back into the charging case and remove the Bluetooth pairing name from the compatible device. Take the earphones out and reconnect.

Specifications

Kimball number: 56443

Bluetooth version: 5.4

Wireless distance: Up to 10 m*

Impedance: 8Ω

Sensitivity: 108 +/-3 dB

Frequency response: 100 Hz–18 kHz

Charging voltage: 5 V = 1 A

Battery capacity (earphones): 30 mAh

Battery capacity (charging case): 300 mAh

Bluetooth frequency: 2400 MHz ~ 2483.5 MHz

Max RF output: ≤10 dbm

Max. operating temperature: 45 °C

FCC ID: 2AAR2EE8152

*Effective range may be reduced due to the presence of obstacles between connected devices. The power delivered by the charger must be between 0.1 W (min) required by the radio equipment, and 2.4 W (max) in order to achieve maximum charging speed.



EN | Electric and Electronic devices as well as batteries must not be disposed of with household waste. For more information about where you can drop off your waste product for recycling please contact your local authority.

CA | Els dispositius elèctrics i electrònics, incloses les piles, no s'han de llençar amb els residus domèstics. Per obtenir més informació sobre els punts de recollida de residus, poseu-vos en contacte amb les autoritats locals.

CS | Elektrická a elektronická zařízení a baterie se nesmí likvidovat spolu s domovním odpadem. Další informace o tom, kde můžete svůj výrobek odevzdat k recyklaci nebo zlikvidovat, získáte od místního úřadu.

DE | Elektrische und elektronische Geräte sowie Batterien dürfen nicht im Hausmüll entsorgt werden. Nähere Informationen zu den Recyclingstellen für Altprodukte lassen sich bei den kommunalen Behörden erfragen.

EL | Οι ηλεκτρικές και ηλεκτρονικές συσκευές καθώς και οι μπαταρίες δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να αφήσετε τα απορρίμματά σας για ανακύκλωση, επικοινωνήστε με την τοπική αρχή.

ES | Los dispositivos eléctricos y electrónicos, así como las baterías, no deben desecharse con los residuos domésticos. Contactar con las autoridades locales competentes para obtener más información sobre dónde se pueden depositar los residuos para su reciclaje.

FR | Ne pas jeter les appareils électriques et électroniques ou les piles avec les ordures ménagères. Pour plus d'informations sur les endroits où vous pouvez déposer votre produit usagé à des fins de recyclage, veuillez contacter votre autorité locale.

HU | Az elektromos és elektronikus eszközöket, valamint az elemeket, akkumulátorokat nem szabad a háztartási hulladékkal együtt kidobni. Ha további információra van szüksége arról, hogy hol adhatja le a terméket szelektív hulladékként, forduljon a helyi hatóságokhoz.

IT | I dispositivi elettrici ed elettronici e le batterie non devono essere smaltiti insieme ai rifiuti domestici. Per maggiori informazioni sui punti di raccolta per il riciclaggio dei rifiuti, contattare l'ente locale.

NL | Elektrische en elektronische apparaten en batterijen mogen niet worden weggegooid met het huishoudelijke afval. Neem voor meer informatie over inzamelpunten voor afval ten behoeve van recycling contact op met de gemeente.

PL | Produktów elektrycznych i sprzętu elektronicznego nie wolno wyrzucać wraz z odpadami z gospodarstwa domowego. Więcej informacji na temat punktów zbiórki odpadów do recyklingu można zasięgnąć w lokalnym urzędzie.

PT | Os dispositivos elétricos e eletrónicos, bem como as baterias, não devem ser eliminados com o lixo doméstico. Para obter mais informações sobre onde entregar o produto para reciclagem, contactar a autoridade local.

RO | Dispozitivele electrice și electronice, precum și bateriile, nu trebuie eliminate împreună cu deșeurile menajere. Pentru mai multe informații despre locul în care puteți lăsa deșeurile în vederea reciclării, vă rugăm să contactați autoritățile locale.

SK | Elektrické a elektronické zariadenie ani batérie sa nesmú likvidovať spolu s komunálnym odpadom. Ďalšie informácie o tom, kam môžete výrobok odniesť na recykláciu, vám poskytne miestny úrad.

SL | Električnih in elektronskih naprav ter baterij ne smete odvreči med gospodinjске odpadke. Za več informacij o tem, kje lahko oddate odpadni izdelek za recikliranje, se obrnite na lokalne oblasti.

AR

بيان توجيه النفايات الكهربائية والإلكترونية (WEEE) - يمنع التخلص من الأجهزة الكهربائية والإلكترونية وكذلك البطاريات مع النفايات المنزلية. للحصول على المزيد من المعلومات حول أماكن التخلص من المنتجات المستعملة لإعادة تدويرها، يرجى الاتصال بالسلطة المحلية.



EN | The used battery should not be thrown away with other waste. The battery must be collected, recycled or disposed of in an environmentally sound manner according to local regulations.

CA | La pila utilitzada no s'ha de llençar amb altres residus. Les piles s'han de recollir, reciclar o llençar de manera respectuosa amb el medi ambient, d'acord amb la normativa local.

CS | Použitá baterie nesmí být vyhozena do jiného odpadu. Baterie se musí sbírat, recyklovat nebo likvidovat způsobem šetrným k životnímu prostředí v souladu s místními předpisy.

DE | Gebrauchte Batterien/Akkus dürfen nicht zusammen mit anderem Abfall entsorgt werden. Die Batterie muss gemäß den örtlichen Vorschriften gesammelt, recycelt oder umweltgerecht entsorgt werden.

EL | Η χρησιμοποιημένη μπαταρία δεν πρέπει να απορρίπτεται μαζί με άλλα απορρίμματα. Η μπαταρία πρέπει να συλλέγεται, να ανακυκλώνεται ή να απορρίπτεται με περιβαλλοντικά ορθό τρόπο, σύμφωνα με τους τοπικούς κανονισμούς.

ES | Las baterías usadas no deben desecharse con otros residuos domésticos. Las baterías deben recogerse, reciclarse o desecharse en consonancia con las medidas de protección del medioambiente y de conformidad con la legislación local.

FR | La batterie usagée ne devra pas être jetée avec les autres déchets. Les batteries doivent être collectées, recyclées ou jetées d'une manière respectueuse de l'environnement conformément à la réglementation locale.

HU | A használt elemeket és akkumulátorokat nem szabad más hulladékkal együtt kidobni. Az elemeket és akkumulátorokat a helyi előírásoknak megfelelően, környezetkímélő módon kell begyűjteni, újrahasznosítani vagy ártalmatlanítani.

IT | Le batterie usate non devono essere smaltite insieme ai rifiuti indifferenziati. Le batterie devono essere raccolte separatamente, riciclate o smaltite secondo una procedura ecologicamente corretta e in accordo con le normative locali.

NL | De gebruikte batterij mag niet met ander afval worden weggegooid. De batterij moet worden ingezameld, gerecycled of op een milieuvriendelijke manier worden weggegooid volgens de lokale regelgeving.

PL | Zużytej baterii nie wolno wyrzucać wraz z innymi odpadami. Baterie należy zebrać, poddać recyklingowi lub utylizacji w sposób nieszkodliwy dla środowiska naturalnego i zgodny z lokalnymi przepisami.

PT | A bateria usada não deve ser deixada fora com outros resíduos. A bateria deve ser recolhida, reciclada ou eliminada de forma ambientalmente correta, de acordo com os regulamentos locais.

RO | Bateria uzată nu trebuie aruncată împreună cu alte deșeuri. Bateria trebuie colectată, reciclată sau aruncată într-un mod ecologic, în conformitate cu reglementările locale.

SK | Použitá batéria sa nesmie likvidovať s iným odpadom. Zber, recyklácia alebo likvidácia batérie musí prebehnúť environmentálne vhodným spôsobom v súlade s miestnymi predpismi.


SL | Izrabljenih baterij ne smete zavreči skupaj z drugimi odpadki. Baterijo je treba zbrati, reciklirati ali odvreči na okolju varen način v skladu z lokalnimi predpisi.

AR | لا ينبغي التخلص من البطارية المستخدمة مع النفايات الأخرى. يجب جمع البطارية وإعادة تدويرها أو التخلص منها بطريقة صحية للبيئة وفقاً للوائح المحلية.



IT: PAP22, Carta.
Raccolta Carta.

ES: PAP22, Papel. Recogida de residuos de papel. Consultar las directrices de reciclaje y recogida de residuos locales.

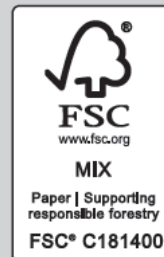

FR
Cet appareil,
ses cordons,
et batterie
se recyclent

À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

MADE IN CHINA / FABRICAT A LA XINA. / VYROBENO V ČÍNE. / HERGESTELLT IN CHINA. / KATAΣKEYAΣTHKE ΣTHN KINA / FABRICADO EN CHINA / FABRIQUÉ EN CHINE. / SZÁRMAZÁSI HELY: KÍNA. / PRODOTTO IN CINA. / GEMAAKT IN CHINA. / GEMAAKT IN CHINA. / WYPRODUKOWANO W CHINACH. / FABRICADO NA CHINA / FABRICAT ÎN CHINA. / VYROBENÉ V ČÍNE. / IZDELANO NA KITAJSKEM / صنع في الصين

Primark Limited, 22-24 Parnell Street, Dublin, D01 P7W2, Ireland.
Primark Stores Limited, 41 West Street, Reading, RG1 1TZ UK.
US Importer: Primark US Corp., 101 Arch Street, Suite 300, Boston MA 02110, USA.
www.primark.com

RN CODE: 145478
SEASON CODE: SS26
CIF: B83875427

CD040625/MD000000/V1