



SMC-1030 Music Streamer

User Manual



Introduction

Sound Machine Premier is a Hi-Res music streamer for Hi-Fi home audio system, which can connect various inputs, like Bluetooth, USB, DVB-C and connect to your old traditional radios, amplifier, Hi-Fi receivers. The best is, you can enjoy high quality audio sound!

- Streaming music from mobile phone, tablets and desktops wirelessly via Bluetooth, Wi-Fi.
- NFC tag and pair : simply tag, pair, and play via Bluetooth from Android mobiles.
- USB supports conventional turntable, CD players and USB storage sticks.
- Internet Radio to access to +20,000 turntables radio stations worldwide.
- Transmits audio to FM frequency for FM-enable devices, such as FM radios, Hi-Fi receivers.
- Supporting Hi-Res Music formats : FLAC, AAC, WAV, MP3.
- High resolution music output via Optical, Coaxial, L/R audio to your wired Hi-Fi audio home system.
- Listen to DVB-C radios from wired audio system and your portable devices wirelessly.

Table of Contents

1	Product Specifications	3
2	Interface	4
2.1	Front Panel	4
2.2	Rear Panel	5
3	Remote control Definition	6
4	Display Icon Introduction	7
5	Operating instruction	8
5.1	Wi-Fi connect	8
5.2	Wi-Fi Disconnect	9
5.3	Bluetooth Pairing & Desparring	10
5.4	Spotify Connect	11
5.5	USB	12
	• USB Storage Stick	16
	• Turntable	16
	• CD Driver	16
5.6	Net Radio	17
5.7	DVB-C	18
5.8	FM	21
5.9	DLNA	23
5.10	Information	24
5.11	Updating Version	26
5.12	Time Zone Settings	27
5.13	Recovery Mode	28

1 Product Specifications

CPU and Storage

Host CPU	MIPS 3300 Processor (1125 DMIPS)
DRAM	512MB DDR3
Internal Storage	8MB NOR Flash, 512MB NAND

Audio Input Interfaces

Front Panel USB	USB2.0 (5V/1 Amp)
USB Devices Support	Support Dongle, CD Player, Turntable Player
75 Ohm F-Connector	DVB-C Input
Bluetooth	Bluetooth 4.1 Audio Input

Output

Analog Audio	RCA ports for R/L audio channel
Digital Audio	Coaxial and Optical S/PDIF
FM Output Frequency	87.5MHz—108MHz

Other Interfaces

IR Receiver	RC5 protocol
RF Receiver	Bluetooth Remote Controller
IR Blaster	IR port to other IR-enable devices
DC Power Input	DC12V input (12 Watt)

Buttons and Indicators

Standby Button	• Active/Standby button • Dual colors LED indicator • Long press for 10 seconds to reboot.
Navigation Keys	• Left/Right/Up/Down • OK, Menu, Back • Volume up/down • Channel up/down
Visual Display	OLED Display
NFC	NFC reader for BT and Wi-Fi Paring

Audio support in USB dongle

Codec	FLAC, WMA, MP3, AAC-HE, Dolby Digital
File format	FLAC, TS, WAV, mp3, mp4, aac,
CD (Compact Disk)	Standard Audio CD

S/PDIF

Digital	PCM
Pass-Through	Dolby Digital AC3 5.1

Paring button

WPS	Wi-Fi Paring
Bluetooth	Bluetooth Paring

Networking

RJ45	10/100Mbps Ethernet
Wi-Fi	2x2 802.11n (2.4GHz) and 802.11ac (5GHz)

 
Physical

Width x Depth x Height	22.5 cm x 15 cm x 4 cm
Weight	0.35 kg
Temperature	0°C to 45°C (32°F to 113°F)
Humidity	8% to 95% (non-condensing)
Warranty	Limited one year, optional warranty available

Accessories (Optional)


Remote Controller	IR RCU
Adaptor	AC 100V-265V

2 Interface

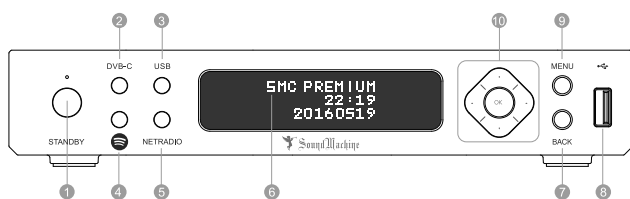

2.1 Front Panel

 
1. **STANDBY:**
Green in POWER-ON mode
Red in Standby mode
Blinking red / green light during Scan / Reset mode
2. **DVB-C:**
DVB-C mode
3. **USB:**
USB mode : USB storage stick, CD player, Turntable
4. **SPOTIFY:**
Spotify Connect mode
5. **NETRADIO:**
NETRADIO mode
6. **DISPLAY:**
Audio information display
7. **BACK:**
Previous action
8. **USB Port:**
Inputs from USB storage stick, CD player, Turntable
9. **MENU:**
Home MENU button
10. **Navigation Key:**

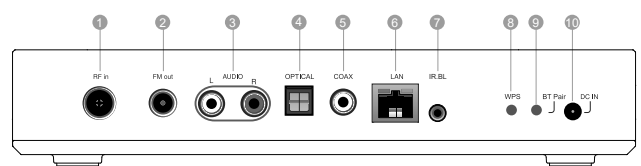


2.2 Rear Panel

1. **RF in :**
DVB-C digital radio channels input via coaxial cable.
2. **FM out :**
FM frequency output to Hi-Fi home audio system/radio devices via coax cable.
3. **L/R Audio:**
Stereo output to Hi-Fi home audio system/powered speakers via RCA cable.
4. **Optical :**
Optical output to Hi-Fi home audio system/powered speakers via optical cable.
5. **Coaxial cable:**
Optical output to Hi-Fi home audio system/powered speakers via coaxial cable.
6. **LAN :**
Connect to local area network via Ethernet cable.
7. **IR Blaster:**
Plug in IR extension cable for signal improvement.
8. **WPS :**
Quick connection to authorized Wi-Fi networks without settings.
9. **BT Pair :**
Press to turn off and on Bluetooth for pairing when Bluetooth connection error occurs.
10. **DC in :**
Power SMC-1030 via power cord.

 3 Remote control Definition

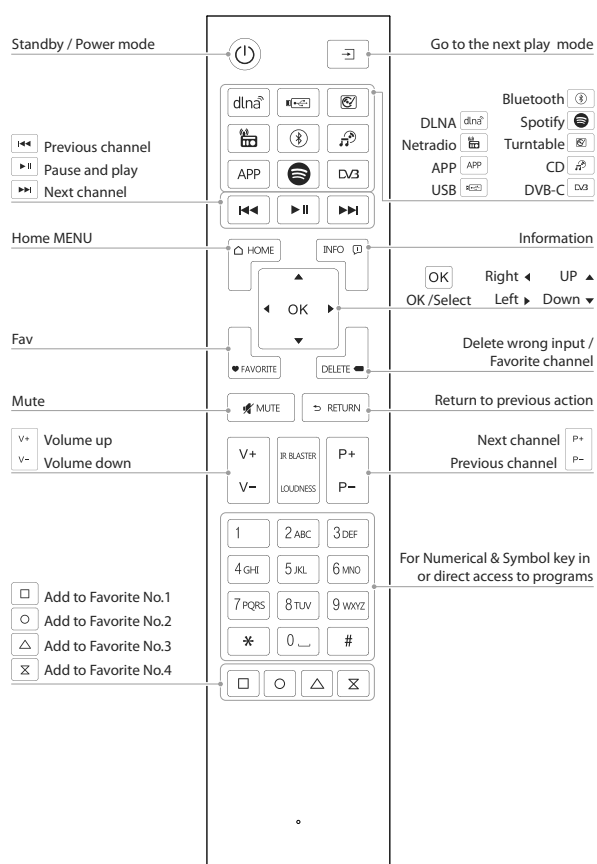

4 Display Icon Introduction

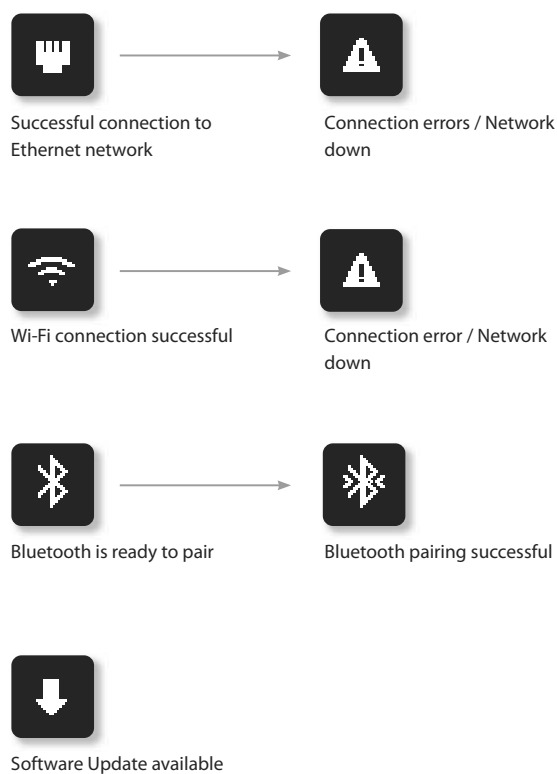 

5 Operating instruction

5.1 WIFI Connection

 **HiFi Connection**
Turntable
Software Update

1. Select Wi-Fi connection
1-1. Click ▲▼ to select Wi-Fi connection.
1-2. Press OK to enter.

 **Connect**
Disconnect
HiFi information

2. Connect :
2-1. Select Connect for Wi-Fi connection.
2-2. Press OK to confirm.

Scanning...

3. Scanning :
Start Scanning available Wi-Fi networks.

 RTIL-AP
 RTIL-AP_5G
awp

4. Select :
Select a desired Wi-Fi network from the list of available Wi-Fi networks.

Enter the password
-

5. Input the password :
Input the password on alphabet / number keys in the remote control.

 Connecting...

6. Connecting :
Connecting message shows while connecting to the network.

 Connected
Successfully

7. Connected Successfully :
The Wi-Fi network is connected successfully.

5.2 WIFI Disconnect

 **HiFi Connection**
Turntable
Software Update

1. Select Wi-Fi connection
1-1. Click ▲▼ to select Wi-Fi connection.
1-2. Press OK to enter.

 **Connect**
Disconnect
HiFi information

2. Disconnect :
2-1. Press ▲▼ to select Disconnect.
2-2. Press OK to confirm.

 **HiFi Connection**
Turntable
Software Update

 
3. Disconnection :
The Wi-Fi icon on the bottom disappears after disconnection is successful.

5.3 Bluetooth Pairing & Despairing

Pairing




- 1. Select Bluetooth**
 - 1-1. Click to select Bluetooth.
 - 1-2. Or press **Bluetooth** on the remote.
 - 1-3. Press **OK** to confirm.



- 2. Bluetooth enabling**
Start enabling Bluetooth.




 - 3. Bluetooth Enabled**
The Bluetooth icon on the bottom pops out when Bluetooth is enabled.




- 4. Pairing successfully**
 - 4-1. Enable Bluetooth on your smart devices.
 - 4-2. Select pairing device : SMC-1030
 - 4-3. The icon on the bottom pops out once pairing is successful.

 
Dispairing



 - 1. Select Bluetooth**
 - 1-1. Click to select Bluetooth.
 - 1-2. Or press **Bluetooth** on the remote.
 - 1-3. Press **OK** to confirm.



 - 2. Bluetooth disabling**
Start disabling Bluetooth.



- 3. Disconnect Successfully**
Bluetooth icon disappears once disconnection is successful.

5.4 Spotify Connect

Introduction

 
Spotify Connect supports streaming audio controlled from Spotify APP on multiple smart devices.

What you can do :



- Control from Spotify APP on multiple smart devices.
- Switch audio output between multiple WiFi networked Spotify Connect devices.
- Make calls, watch videos online from your smart devices without interruption.
- Save battery in your smart devices.

What you need :

- You need to be a premium Spotify subscriber.

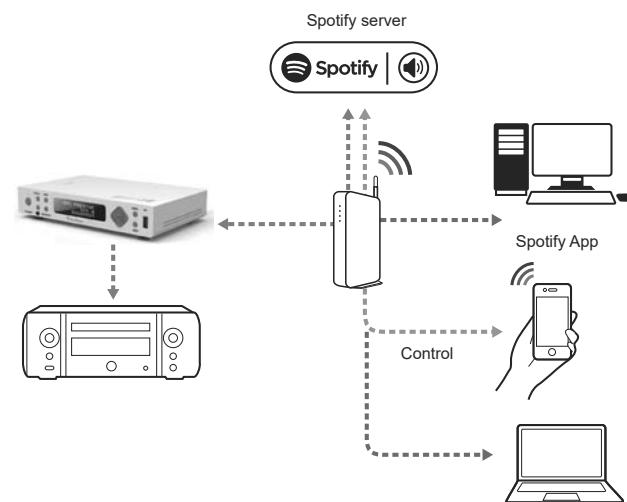

Spotify Connect Instructions

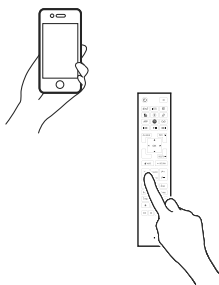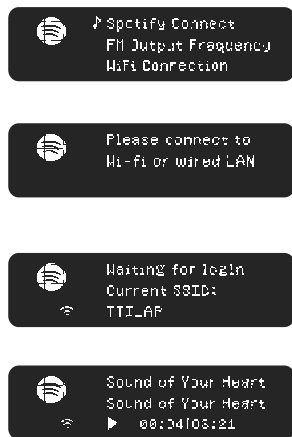  

1. Select Spotify Connect

1-1. Press ▲ ▼ to go to Spotify Connect in Home Menu.
1-2. Press OK to enter.

2. Ensure WiFi connection

2-1. Ensure WiFi network or LAN network is connected before entering Spotify Connect.
2-2. Go to WiFi Connection Captor for the instructions.

3. Waiting for login

3-1. Waiting for log in Current connected WiFi network is shown.

4. Play

4-1. Play audio from your smart devices.
4-2. Currently audio playing is shown on the display.

Note : Go to the next Captor - Spotify APP for the instructions.

5. Control

5-1 Use Spotify APP to control play lists, Previous/ Next songs, and Volume Up/ Down.

5-2. You can also control Previous/ Next songs, and Volume Up/ Down from the remote.

Spotify Connect APP

 
Ensure the smart device is connected to the same WiFi network as the one shown on SMC-1030 display.

Note : Please go back to the last page for Spotify Connect Instruction to see the connected WiFi network.



1. Mobile & Tablet

1-1. Log in to play a desired song.
1-2. Tap the Now Playing bar.
1-3. Tap device available on the bottom of the screen.

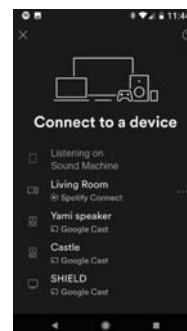


1-4. Select SMC-1030 from the Device Menu.
1-5. You can also switch between Spotify Connect enabled devices from the Device Menu.




2. Laptop & Desktop

 - 2-1. Log in to play a desired song.
- 2-2. Click  to connect to a device in the bottom-right to bring out the Device Menu.
- 2-3. Select to connect to SMC-1030 from the Device Menu to output to SMC-1030.

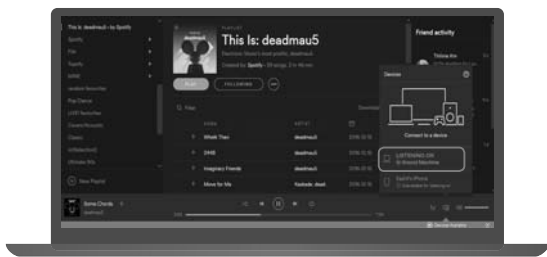

3. Web Player

 - 3-1. Log in to play a desired song.
- 3-2. Click  to connect to a device in the bottom-right to bring out the Device Menu.
- 3-3. Select to connect to SMC-1030 from the Device Menu to output to SMC-1030.

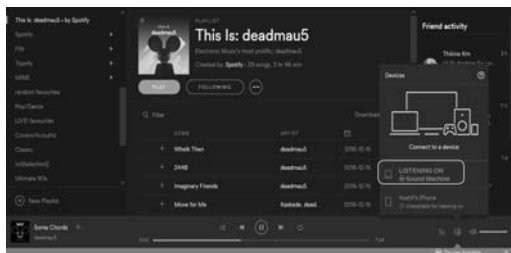

5.5 USB

USB Storage Stick



 
1. Install USB Storage Stick

Insert your USB Device into USB port.



2. Select USB Drive

- 2-1. Click  to select USB Drive.
- 2-2. Or press  on the remote control.
- 2-3. Press OK to enter.



3. Play List

- 3-1. Click  to select a desired songs.
- 3-2. Press OK to play.



4. Play & Information

 
The display shows the information about the track being played.

Turntable



1. Connect with Turntable

Plug your Turntable USB jack into USB port



2. Select Turntable

- 1-1. Click  to Turntable.
- 1-2. Or press  on the remote control to go to Turntable.
- 1-3. Press OK to enter.



3. Play

SMC-1030 Starts to play the vinyl.

 
CD Drive



- 1. Install CD Player**
Connect to CD Player via USB port.



- 2. CD Drive**
1-1. Click ▲▼ to select USB Drive.
1-2. Or press on the remote control.
1-3. Press OK to enter.



- 3. Play List**
Press OK to play.



- 4. Play & Information**
The display shows the information about the track being played.

5.6 Net Radio

Make sure SMC-1030 is connected to the internet before operating Net Radio. You can connect to the internet either simply through LAN port, or through Wi-Fi network.

Internet Connection : LAN Local Area Network



- 1. Connect to Internet**
Connect the Ethernet cable to the LAN port, and wait for 5 ~ 10 seconds to identify the network to confirm the connection.

- 2. Connection Successfully**
After network icon appears that the connection is successful.

 
Internet Connection : Wi-Fi Network

Go to 5.1 Wi-Fi Connection Captor for Wi-Fi network setting-ups.

Genres



- 1.Genres**
1-1. Click ▲▼ to go to Genres.
1-2. Press OK to enter.




- 2. Genres List**
2-1. Click ▲▼ to go to a desired genre.
2-2. Press OK to enter.



Recent




 - 1.Recent**
1-1. Click ▲▼ to go to Recent in NetRadio Menu.
1-2. Press OK to enter.



- 2. Play in Recent List**
2-1. The recent played radios stations are listed in Recent.
2-2. Play a desired radio station from the list.

 Favorite List Edit



- 1.Select a desired station**
Press ▲▼ to go to a radio station.



- 2.Processing message**
Press Favorite on the remote control to add the radio into Favorite list.



- 3.Favorite List**
3-1. Press ▲▼ to go to Favorite in NetRadio Menu.
3-2. Press OK to enter. You will find all radio stations in Favorite List.



- 4. Delete from Favorite List**
4-1. Press  delete a desired station from Favorite List.



 
Keyword



- 1. Search Keyword**
1-1. Press ▲▼ to go to Search in NetRadio Menu.
1-2. Press OK to enter.



- 2. Input Keyword**
2-1. Press Alphabet keys on the remote control to input keywords.
2-2. Press OK to search.




- 3. Play**
3-1. The search result shows on the display.
3-2. Press OK to play.




- 4. None Found**
4-1. There might be server errors or server down and results in not being able to access the radio station.
4-2. Please come back later and try again.



 5.7 DVB-C



 1. Plug in DVB-C Cable
Plug DVB-C cable into RF in port.




2. Select DVB-C
2-1. Press ▲▼ to go to DVB-C in Home Menu.
2-2. Press OK to enter.

There are 2 scan methods available below :

1. Scan Channel Map is to scan all frequencies for when if the frequency information is not clear.
2. Range Scan is for when the frequencies information is available from your local cable service operator.

 
Scan Channel Map




1. Scan Channel Map
1-1. Press ▲▼ to select Scan Channel Map in DVB-C Menu.
1-2. Press OK to confirm.



 2. Scanning
2-1. Start frequency scan.
2-2. The display says the numbers of radio channels which has been found and locked.
Warning : Do not turn off the device during scanning until the process is completed.



 3. Play DVB-C
The display says the total number of radio channels found once the process is completed.




4. Play DVB-C
4-1. Press ▲▼ to go back to Play DVB-C
4-2. Press OK to play DVB-C radios.





Range Set

 Please note that Range Scan is run by default. We strongly recommend to do the setting in Range Set in order to get all the available radio stations.



  
1. Range Set
1-1. Press ▲▼ to select Range Set in DVB-C Menu.
1-2. Press OK to confirm.




2. QAM
Press OK to switch between QAM 64/128/256.
3. Start Freq / End Freq
Press OK to enter to Start / End Freq.



 4.No. Input
4-1. Press Number keys 0-9 in the remote to set Start Freq.
4-2. Enter OK to confirm.
4-3. Repeat again to input End Freq.



 
5. Bandwidth
Press OK to select 6 / 7 / 8.
6.Symbol Rate
Press No. 0-9 to input symbol rate.



7. Range Scan
7-1. Press ▲▼ to select Range Scan
7-2. Press OK to start Range Scan.

5.8 FM

 FM output frequency

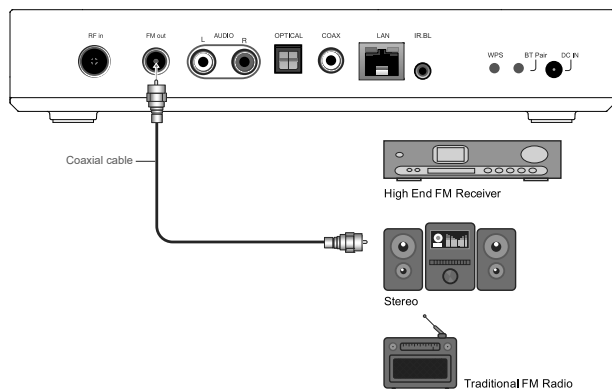

Connect to Hi-Fi Audio System or Radio

Plug coaxial cable into FM out to connect to Hi-Fi audio system or radios.

FM

FM Output Frequency
95.0 MHz



FM Output Frequency
95.0 MHz
Successfully



USB Drive
CD Drive
NetRadio

1. Select FM Frequency

1-1. Press ▲▼ to go to FM Frequency in Home Menu.

1-2. Press OK to enter.

2. Frequency Tuning

Tune to an available frequency where there is no radio broadcasting.

3. Radio devices tuning

Tune the radio devices to the same frequency as SMC-1030.

 
4. Play

4-1. Go to a desired play mode (DVB-C, USB, Netradio, ect...)

4-2. Follow the instruction of the captor and play.

5.9 DLNA

Introduction

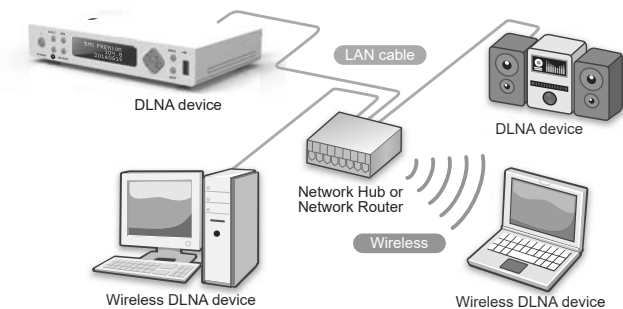

1. DLNA Digital Life Network Alliance

DLNA supports digital file sharing on a local area network across multiple devices such as PCs, laptops, mobiles, and tablets.

2. Install DLNA Player Application

All DLNA media applications are supported for audio streaming on SMC-1030. Find an application from the internet you like to install on your devices.

Here are 2 examples of DLNA media players to install on your devices :

1. Universal Media Server
2. Plex Media Server

Internet Connection : LAN Local Area Network



 
1. Plug in Ethernet jack
Make sure the Ethernet is plugged into LAN port properly.

2. Connect to LAN Network
The Ethernet icon  pops up on the display once the LAN network is connected successfully.

Internet Connection : Wi-Fi Network

Go to 5.1 Wi-Fi Connection Captor for the instructions.


Audio Streaming :




1. Select DLNA
1-1. Press  to go to DLNA in Home Menu.
1-2. Or press  on the remote control.
1-3. Press OK to enter .



 2. Select Media server
2-1. Press  to select connected Media Server.
2-2. Press OK to enter.




 3. Select a category
Press  to select a desired category.
Note : if no category shown, skip to the next step.




4. Play from the play list
2-1. Press  to select a desired song to start.
2-2. Press OK to play.

 5.10 Information



 1. Select Information
2-1. Press  to select Information in Home Menu.
2-2. Press OK to enter.



2. Version
The display says the current version installed.

5.11 Updating Version

Warning : do not turn off while updating.

HiFi Connection
Turntable
Software Update

HiFi Connection
Turntable
Software Update

No update available

USB Drive
CD Drive
NetRadio

Installing...
Please keep the power on

Installation Completed

Rebooting...

1. Network connection
 1-1. Ensure the local network connection either LAN port is plugged properly, or Wi-Fi connection is successful.
 1-2. If no connection, please go to Wi-Fi Network chapter.

2. Select Software Update
 2-1. Press ▲▼ to select Software Update.
 2-2. Press OK to confirm.

3. Confirm update

4. Software Update Available
 The icon pops up on the display when software update is available.

5. Installing
 Wait until the process complete
 Warning : do not turn off the power while updating.

6. Installation completed
 The icon disappears once Software Update is completed.

7. Auto reboot
 Rebooting starts automatically.

5.12 Time Zone Settings

Time Zone will be detected automatically. However, you can also set a desired Time Zone from the Menu.

Time Zone Setting
USB Drive
CD Drive

Trinidad & Tobago
Tuvalu
Taiwan

Setting timezone...

Timezone set to Taiwan

15:12:53
Nov Thr 11 2017

1. Select Time zone setting
 1-1. Press ▲▼ to Time Zone Setting in Home Menu.
 1-2. Press OK to enter.

 
2. Select Country
 2-1. Press ▲▼ to select the location in Time Zone Menu.
 2-2. Press OK to confirm.

3. Setting Time zone
 Start setting time zone.

4. Setting Completed
 Setting Completed.

5. Time / Date on display
 Time / Date is shown on display and then switch to Home Menu automatically.

5.13 Recovery Mode



1. Reboot & Ethernet Connection

- 1-1. Reboot the power by unplugging and plugging again the power cord.
- 1-2. Ensure the Ethernet cable is plugged into LAN port properly.



Entering
Recovery mode

2. Recovery mode

- 2-1. Long press Standby button and Standby light goes red/ green blinking.
- 2-2. Hold the button until entering recovery mode.



Restore from Backup
Install Latest Version
Normal Booting

3. Select Reset mode :

- 3-1. Restore from Backup : select here to keep saved settings.
- 3-2. Install Latest Version : select here to erase all settings.
- 3-3. Normal Booting : exit to back to Normal Mode.



Extracting file...
Please keep the
power on

4. Extracting files

Extracting files. Please wait for the process.



Installing...
Please keep the
power on

5. Installing

Installing. Please wait for the process.



Rebooting...

6. Rebooting

Once the installation is completed, rebooting starts automatically.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



APP Store

Search SoundMachine to download and install APP

Google Store

Search SoundMachine to download and install APP

QR Code

TTI Technology Corporation. ©2019. All rights are reserved.

The information contained herein is the exclusive property of TTI and shall not be used, distributed, reproduced, or disclosed in whole or in part without prior written permission of TTI. It thereof does not convey or imply any licenses under patent rights or other industrial or intellectual property rights.