


# S10 Series Quick Start

## 1. Appearance

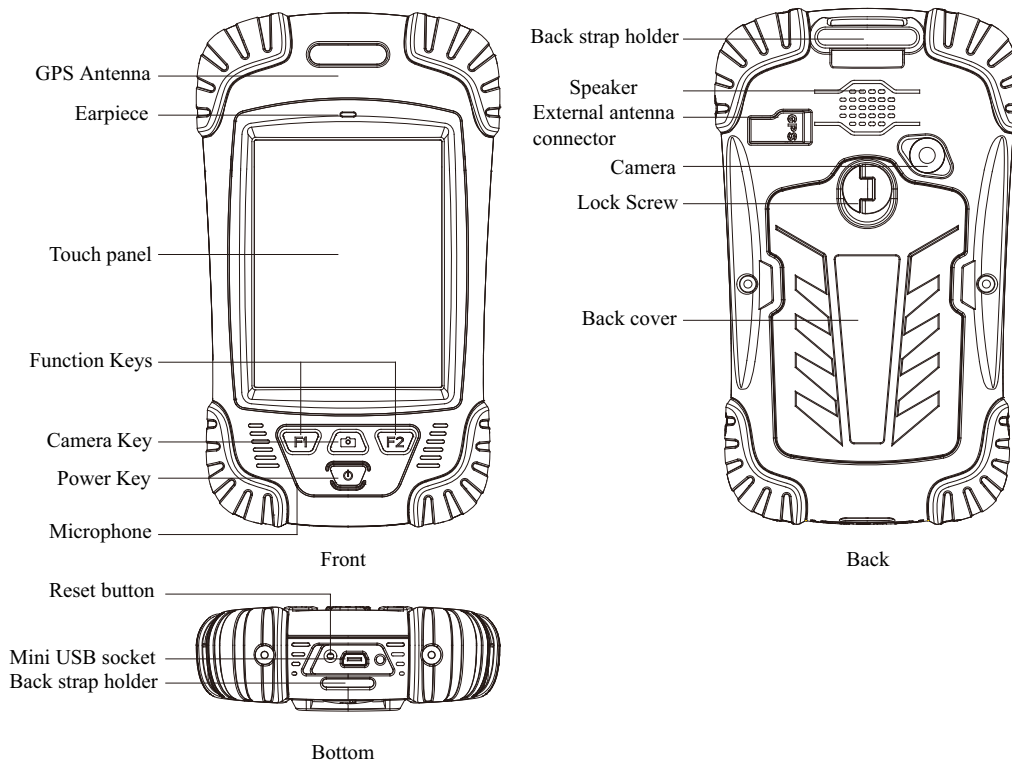

## 2. Operating steps:

- I. Charging
- II. Fix TF card/Battery
- III. Turn on the collector
- IV. Connect to PC to install application or data
- V. Collect GIS data with internal GPS and GIS application
- VI. Upload data

### • Charging

Insert the Li-ion battery into the battery charger to charge.

Remark: mini USB cable can also be used to charge the receiver. When normally charged, there is charging icon in the screen if receiver is off and there is charging icon to the top right corner in the screen if receiver is on.

### • Fix TF card/Battery

- 1、 Turn the back cover screw to the open position according to the instruction on the back cover and take off the back cover (figure 1).
- 2、 Fix the TF card according to the instruction in the battery cabin (figure 2).
- 3、 Fix the battery.
- 4、 Fix the back cover and turn the back cover screw to the lock position according to the

## Appendix - Product Safety Warnings

### Safety and compliance information

Use responsibility – Read all instructions and safety information before use to avoid injury.

### Battery safety

Charge battery only in temperature ranging from 32°F to 140°F (0°C to 60°C)

**CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by the manufacturer.**

**The maximum operating ambient temperature of the switching power supply declared by the manufacturer is 50 °C.**

Dispose of used batteries according to battery manufacturer's instructions.

### WiFi safety

Turn WiFi off in areas where WiFi use is prohibited or when it may cause interference or danger, such as in airplanes while flying.

### Care and maintenance

S10 is an electronic product and should be treated with care, to reduce the risk of fire, electronic shock, or product damage.

- Do not expose this device to rain, moisture, or any type of liquid that corrodes electronic circuits. If your device gets wet, immediately turn the power off. Allow the device to dry completely before using it again.
- Clean the display with a soft cloth, and be careful not to wipe the display with anything abrasive.
- Do not expose your device to extreme heat (–10°C) or cold (60°C). For example, do not leave it in the trunk of your car in high heat conditions.
- Do not attempt to open the device other than as instructed in this manual.
- Rough handling can break internal circuitry.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Use only the recommended accessories.
- Do not excessive sound pressure from earphones and headphones, which can cause hearing loss.

## USB Data Cables

This version supports the USB interface. You can connect your S10 with the PC via the USB&data cable, copying or moving the files amid the S10 and PC, or browsing the images, record files and video files saved in the S10 via the PC.

- 1 Insert the USB data cable connector into the USB interface of the S10.
- 2 Connect the other terminal of the USB data cable with the USB interface of the PC.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.