 


860-7



(7) Do not charge under unstable voltage or near the

(8) Do not charge under humid environment or when nobody around;
(9) When charging, please make sure there are no flammable objects around;
(10) When charging, if the product smoke or overheat, please immediately cut off the power, and move the product to a safe place.

- | | | |
|---|--------------|---|
| 2 | The sound is | <p>F. Check if the speaker has connected to the computer successfully. If successfully, both the blue lights of the USB adapter and the speaker will be on without flash.</p> <p>A. There maybe electrical interference to the wireless signal.</p> <p>B. The power amplifier IC maybe overheating, please turn off</p> |
|---|--------------|---|

- | | | |
|---|--|--|
| 3 | Can the speaker connect to the computer | <p>1. Plug the USB port of computer into the USB port of the speaker without voltage output.</p> <p>2. Turn off the speaker and turn on again or take down the USB adapter from computer and insert again.</p> |
| 4 | Can not turn on or turn off this product | <p>A. Check if the battery has no power. If yes, please charge the battery.</p> <p>B. Remove the battery and install again.</p> |

the blue light of the power switch will flash and make a hint tone of power

(3) After several seconds to decacases of seconds, the speaker will make a hint tone of successful connection, at this time both the blue lights of the USB adapter and the speaker will stop flashing, which means the speaker has connected to the computer successfully.

(4) If you forget to turn off the speaker when you turn off computer, the speaker will automatically shutdown 10 minutes after disconnect to computer, which can help to save power of the speaker. (If some computer's USB port still have voltage output after the computer is turned off, the speaker will not automatically shutdown.)

This product is not only a wireless computer speaker, but also a

wireless Bluetooth speaker. The Bluetooth operation is as follows:

- (1) Take away the USB adapter from the computer, or turn off the computer, or move the speaker over 10 meters away from the computer, just in order to cut off the connection between the speaker and the computer.
- (2) Turn on the speaker, and open the Bluetooth of the mobile phone, then the mobile phone will search the Bluetooth devices, and click to connect the Bluetooth name "computer speaker one", and the speaker has connected to the Bluetooth successfully, there will be a hint tone of successful connection and also the blue light of the power switch **⬢** will be on without flash. At this time, the audio of your mobile phone can be played through the speaker.

FCC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

when



Picture 2: Catch battery door circle open tool, turn 90 degrees to the direction of OPEN arrow.



Picture 8: If the battery has been installed, the battery door and the speaker are flat in the same level. If not flat or the battery still can jump out, means the battery has not been installed successfully, please take out the battery door and repeat the operation of picture 5 until it is installed successfully. When finish installment, fix out the battery door circle open tool.