

9" Portable DVD Player

User's Guide for Model No. PD901 v3001-02



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum 20cm distance between the unit and your body.

Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard - Do Not Open.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION

RISQUE DE ELECTRICITE
NE PAS OUVRIR



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with Arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is Open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is Open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.



WARNING : This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with all Federal regulations.**

Functions & Controls


Features

- DVD player: DVD, DVD±R/RW
- CD player: CD, CD-R/RW, JPEG CD
- USB and SD memory card port
- 9"TFT LCD display screen
- 800 x 480 native resolution
- Aspect ratio: 16:9
- Screen swivels and folds flat into tablet
- 3.5mm audio/video input and output
- Bluetooth Out (transmitter) to Bluetooth receiver device
- Stereo headphone jack
- Built-in stereo speakers
- Full-function remote
- DC battery power: built-in rechargeable lithium polymer battery
- Battery life: approx. 1.5 hours at 100% volume, approx. 2 hours at 50% volume

Includes

- Remote control: requires 2 AAA batteries
- 3.5mm to RCA audio/video cable
- AC/DC power adapter
- 12V DC car adapter
- 1 set of earbuds
- 1 set of headphones
- Carrying case
- User's Guide

1. **Battery Charge Indicator:**
Turns red when the battery is charging.
Turns green when the battery is fully charged.
2. **Remote Receiver**
3. **Power Indicator:**
Turns red when the unit is powered ON.
Turns green when in Bluetooth Out mode
4. **USB Media Port**
5. **SD/MMC Memory Card Port**
6. **Stereo Headphone Jack**
7. **Audio/Video Output**
8. **Audio/Video Input**
9. **Power Switch**
10. **DC Power Input**
11. **Disc Door/Open:** Press open the disc door
12. **Setup:** Press to view DVD player setup menu and settings.
13. **Volume:** Press to adjust the volume of the speaker.
14. **Arrows/OK:** Use to navigate and make selections in menu and settings screens.
Prev/Next: Press to skip chapters or tracks.
Fwd/Rev: Press to search through chapters or tracks
15. **Play/Pause:** Press to play or pause a loaded DVD.
16. **STOP:** Press to stop DVD playback
17. **DVD/CARD/USB:** Press to select DVD/CARD/USB input.

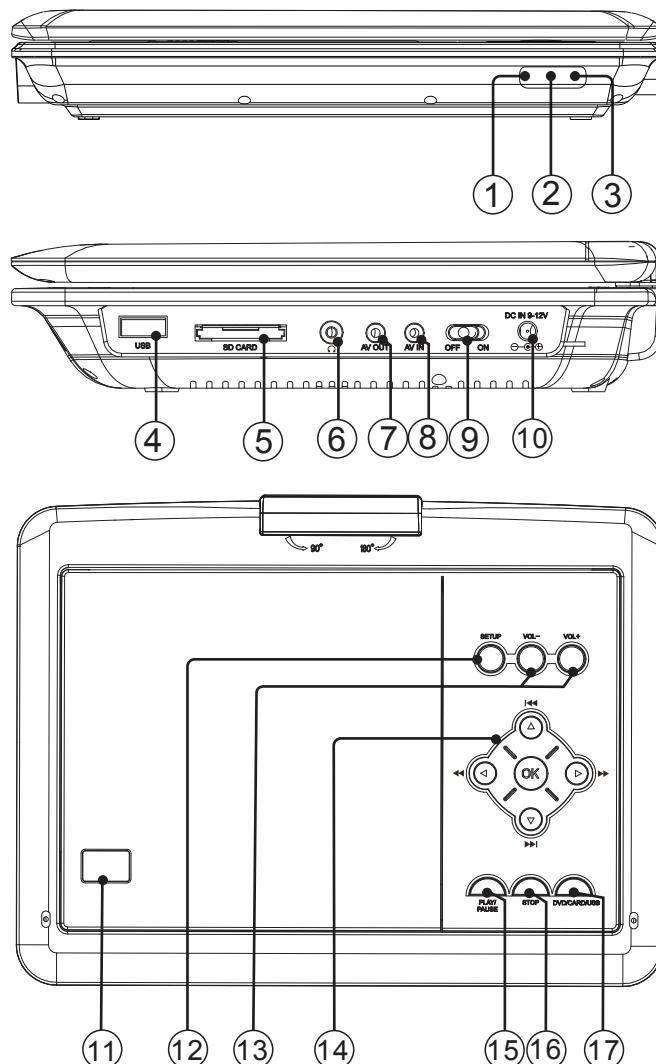

Remote

DVD/CARD/USB

Press to select DVD/CARD/USB input.

Power

Press to power ON/OFF

Number Keypad

Use to enter info to play a specific chapter or track.

Volume +/-

Press to adjust the volume level.

Mute

Press to mute audio.

Setup

Press to access the setup menu.

Arrows/OK

Press to make selections in the on screen or disc menus.

Stop

Press to stop DVD/CARD/USB playback

PREV

Press to return to the previous chapter or track on a loaded DVD.

NEXT

Press to skip to the next chapter or track on a loaded DVD.

Fast Forward

Press to search through forward media on a loaded DVD.

Fast Rewind

Press to search through rewind media on a loaded DVD

Play/Pause

Press to play or pause media on a loaded DVD.

Program

Press to program a loaded disc to play chapters or tracks in a specified order.

Repeat

Press to repeat current chapter, title, repeat all or off.

Display

Press to turn the On Screen Display ON or OFF.

Go To

Press to access a specific chapter or title.

Zoom

Press to zoom in or out on a loaded DVD.

TFT Off/On

Press to turn the screen ON or OFF.

MODE

Press to switch to DVD or AV In play mode.

Angle

On supported DVDs, press to view alternate angles.

Press again to return to normal playback.

Title

Press to access the title menu of a loaded DVD.

Menu


Press to access DVD menu.

Subtitle

Toggle subtitle ON or OFF.

Audio

Press to adjust the current audio settings for the loaded DVD.

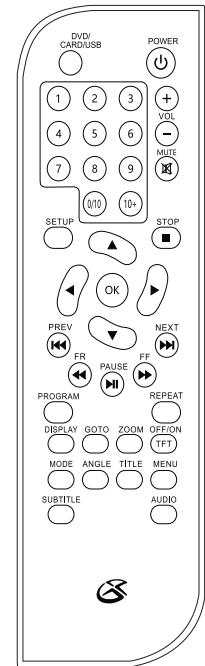

Using the DVD Player

Power and Charging the Internal Battery

To power the unit, plug the included **AC/DC adapter** into the unit and a standard wall outlet. For use in a car, plug the **12V DC car adapter (included)** into the unit and a standard 12V Power outlet in the car.

The **Power Indicator** will turn red when the DVD player is ON. The **Charge Indicator** will turn red whenever the battery is charging.

Accessing the Setup Menu

To access the Setup Menu, press the **Setup** button on the player or the remote.

Loading and Playing a Disc

DVD, DVD±R/RW, CD, CD-R/RW, and JPEG CD supported.

1. Press **Open** on the **Disc Door**.
2. Lad a disc into the **DVD player**, label side facing up. Close the **Disc Door**. After a disc is loaded, it will begin playing automatically.
3. If the disc does not play automatically, press the **Play/Pause** button.

Programming a Loaded Disc

1. While the loaded disc is playing, press the **Program** button on the remote.
2. Use the **Arrow** buttons to select a program slot.
3. Use the **Number Keypad** to enter the chapter and tracks to play. Repeat until the desired titles and chapters, or tracks are programmed. Chapters and tracks will play in the order they are listed.
4. Use the **Arrow/OK** buttons to highlight the on-screen **Play** button and begin playing the programmed disc.

Connecting the 3.5mm AV Output

Requires a 3.5mm to 3x RCA audio/video cable (included).

1. Connect the 3.5mm to 3x RCA audio/video cable to the **AV Output** on the unit and the **RCA stereo audio inputs and composite video input** on a TV.
2. Audio and video played on the DVD player will display on the connected TV.

Connecting the 3.5mm AV Input

Requires a 3.5mm to 3 x RCA audio/video cable (included).

1. Connect the 3.5mm to 3 x RCA audio/video cable to the AV Input on the unit and the composite video/audio outputs on a TV.
2. Press the Mode button to enter the AV In menu.
3. Use the Arrow/Enter buttons to select AV In mode. Audio/video played on the connected TV will display on the DVD player.

Connecting a USB Thumb Drive

AVI, VOB, MPEG 1, MPEG 2 video formats are supported.

1. Connect a **USB thumb drive** to the **USB Port**.

2. Press the **DVD/CARD/USB** button to enter the menu.

3. Use the **Arrow/Enter** buttons to select **USB mode** and play content from the connected USB thumb drive.

Connecting a Memory Card

AVI, VOB, MPEG 1, MPEG 2 video formats are supported. Note: Formats are not universally compatible. Playback may be dependent on recording conditions.

1. Connect a **SD** or **MMC memory card** to the **SD/MMC Memory Card Port**.
2. Press the **DVD/CARD/USB** button to enter the menu.
3. Use the **Arrow/Enter** buttons to select **Card mode** and play content from the connected memory card.

Bluetooth Out (transmitter) operation

1. Slide the **POWER** button to power on the unit, power indicator light RED
 2. Press the DVD/CARD/USB button to desired function mode
 3. Press the setup button to enter SYSTEM MENU, use Arrow button to select Bluetooth OUT and set to On. The power indicator will change to green and flashes.
 4. After that, press setup button to exit menu.
 5. Set your Bluetooth receiver such as headphone or speaker to ON and unit begin searching for devices.
- NOTE:
- a.) If you have several Bluetooth receivers, switch off those receivers that are not in use and place the one to be linked near the unit to avoid unit linked to other unwanted Bluetooth enabled devices.
 - b.) The effective distance between your external device and this apparatus is within 10 meters (30 feet).
6. Unit will auto scan and pair with your Bluetooth receiver nearby, power indicator will change to solid to indicate a connection has been established.
 7. Play music on unit in DVD, USB, CARD or AV IN mode, unit speaker sound will be off, you can listen to music by using your Bluetooth receiver such as a headphone or speaker wirelessly.
 8. If you want change to pair with another Bluetooth Enabled Device, switch off the Bluetooth function of your Bluetooth receiver which was paired previously. Go to SYSTEM MENU to set Bluetooth OUT to turn off and set the Bluetooth OUT on again to pairing mode (repeat step 4 to 6).
 9. Set the Bluetooth OUT off when you finish listening in Bluetooth transmitter mode, power indicator will change to red solid and unit speaker will sound again.

Notes:

- 1.) There will be a brief sound delay when enabling the Bluetooth Transmit/Out function.
- 2.) Bluetooth Out (Transmitter) can only pair with Bluetooth receiver such as headphone or speaker for music streaming wirelessly. Use your Bluetooth device volume control if necessary.

Customer Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **www.gpx.com**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **www.gpx.com**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: **www.gpx.com**

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.gpx.com**

Customer Service: **1-888-999-4215** | Email Support: **prodinfo@dpiinc.com** | Email Parts: **partsinfo@dpiinc.com**

Copyright © 2019 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

