

603-00001-058R E8降噪说明书 (更新) 通用+中文/150*105mm/80g书写纸/4*5折页/正反/单色印刷/±0.5MM

User's Guide EN Specification E8 Load impedance: 32Ω S/N: ≥90dB Frequency range: 20Hz-20KHz Power supply: Lithium battery or USB cable Audio source: iPhone, iPad, Smartphone, Notebook, MP3, MP4, etc Function spec: Bluetooth, Microphone Size: 169X94X205mm Battery Precautions The device is powered by a built-in rechargeable lithium battery. Please charge the battery for at least 8 hours before your first use of device. - Rechargeable batteries should only be charged under adult supervision. - Use the supplied micro USB cable to recharge the battery and avoid. Improper charging may damage the battery and the device. Do not attempt to open the rechargeable battery or battery pack. There are no serviceable parts inside. - Keep the battery out of reach of children. Once swallowed, consult a physician immediately. - Do not dispose batteries in a fire as they may explode. Batteries may also explode if damaged. Properly dispose them according to local regulation.	Getting Started Cable Connection Pairing headphones by your Smart device: The Bluetooth device should be within 10 meters of this headphone). - Activate pairing mode on headphone by turning the switch to "BT". The LED will flash blue and red. - Turn on Bluetooth switch of your device, (refer to the device owner's manual to locate Bluetooth function). - Select "Search" or "Discover" devices. - Select "E8". - If requested, type the password or PIN 0000 - Press the Enter Key. After completing the steps above, a message on your Smart device will appear confirming that your device is now paired connected. In case of unsuccessful pairing, turn off it and restart, then do as steps above. If the Bluetooth on your smart device remains open, when you restart the headphone, the Bluetooth will be connected automatically. Live in connection - When the headset is on or off, you can listen to music directly after inserting the audio cable. - Noise cancellation will activate under the mode of ANC.	Cable Connection	Function Guidance Play music from your Smart device <table border="1"> <thead> <tr> <th>Button</th> <th>Operation</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>+</td> <td>Long Press <td>Previous song</td> </td></tr> <tr> <td>+</td> <td>Short Press <td>Volume up</td> </td></tr> <tr> <td>-</td> <td>Long Press <td>Next song</td> </td></tr> <tr> <td>-</td> <td>Short Press <td>Volume down</td> </td></tr> <tr> <td>ⓘ</td> <td>Short Press <td>Play/Pause, Answer/End a call.</td> </td></tr> <tr> <td>ⓘ</td> <td>Long Press <td>Ready for pairing</td> </td></tr> </tbody> </table>	Button	Operation	Function	+	Long Press <td>Previous song</td>	Previous song	+	Short Press <td>Volume up</td>	Volume up	-	Long Press <td>Next song</td>	Next song	-	Short Press <td>Volume down</td>	Volume down	ⓘ	Short Press <td>Play/Pause, Answer/End a call.</td>	Play/Pause, Answer/End a call.	ⓘ	Long Press <td>Ready for pairing</td>	Ready for pairing	Q&A session: Q1: I have difficulty to pair my device to this headset. - Make sure that the headset is in pairing mode. The light on the headset is flashing blue and red lights alternately. - Make sure that the headset is not paired by another device. If it has, turn on the headset and press the buttons of "+" (volume up) and "-" (volume down) at the same time to clear the previous pairing records. Alternatively, you may turn off the Bluetooth setting in the previous paired device. Q2: Your headset and your audio device are close together as possible while you troubleshoot. Q3: My computer can detect the headset, but it shows "no driver found" or similar messages. - Check if the hardware of your computer supports Bluetooth function and make sure that it is on. - Make sure that your PC Bluetooth driver is installed. Please consult your computer manufacturer for more details. - Make sure that the headset is in a pairing mode (flashing red and blue lights alternately). Q4: I want to connect my TV and headset via Bluetooth - Check if your TV has built-in Bluetooth function first. - If it does, follow your TV manual to connect your TV and headset. - If it does not, you may consider buying a Bluetooth transmitter online or your electronic retailers. Q4: There is noise when I switch my headset to ANC - Make sure that the headset is worn correctly. If it is worn continues, the headset is defective. Please return this item as soon as possible. Q5: My headset cannot hear me when I use the microphone to answer a call. - Make sure your phone is set to the earphone mode.
Button	Operation	Function																							
+	Long Press <td>Previous song</td>	Previous song																							
+	Short Press <td>Volume up</td>	Volume up																							
-	Long Press <td>Next song</td>	Next song																							
-	Short Press <td>Volume down</td>	Volume down																							
ⓘ	Short Press <td>Play/Pause, Answer/End a call.</td>	Play/Pause, Answer/End a call.																							
ⓘ	Long Press <td>Ready for pairing</td>	Ready for pairing																							
Guida utente IT Specifiche tecniche E8 Resistenza elettrica: 32Ω S / N: ≥90dB Frequenza: 20Hz-20KHz Alimentazione: batteria al litio o cavo USB Input compatibile con: iPhone, iPad, Smartphone, Notebook, MP3, MP4, etc Funzioni speciali: Bluetooth, microfono Dimensioni: 169X94X205 mm Precauzioni per l'utilizzo della Batteria E' importante alimentare il dispositivo con la sola batteria al litio ricaricabile incorporata. Al primo utilizzo è consigliabile caricare la batteria almeno 8 ore. - Tenere la batteria lontano dalla portata di bambini. - Utilizzare solo il cavo micro USB in dotazione per ricaricare la batteria. Altre tipologie potrebbero danneggiare la batteria e il dispositi vo. - Evitare in qualsiasi caso di aprire l'unità batteria. - Tenere la batteria fuori dalla portata dei bambini. In caso di contatto o ingerimento di piccole parti consultare immediatamente un medico. - Non gettare, o tenere a contatto la batteria a fonti di calore, perché facilmente infiammabili. Gettarle negli appositi cassetti.	Iniizzare Come operare Accendi questo auricolare regolare la lunghezza per una maggiore comodità	Cavo di collegamento Cavo USB	Guidance funzione Riproduzione di musica dal dispositivo smart <table border="1"> <thead> <tr> <th>Pulsante</th> <th>Funzione</th> <th>Funzione</th> </tr> </thead> <tbody> <tr> <td>+</td> <td>Pressione prolungata</td> <td>Brano precedente</td> </tr> <tr> <td>+</td> <td>Pressione breve</td> <td>Volume su</td> </tr> <tr> <td>-</td> <td>Pressione prolungata</td> <td>Brano successivo</td> </tr> <tr> <td>-</td> <td>Pressione breve</td> <td>Volume giù</td> </tr> <tr> <td>ⓘ</td> <td>Pressione breve</td> <td>Play/Pause, Answer/End a call.</td> </tr> <tr> <td>ⓘ</td> <td>Pressione lunga</td> <td>Avviamento per collegamento</td> </tr> </tbody> </table>	Pulsante	Funzione	Funzione	+	Pressione prolungata	Brano precedente	+	Pressione breve	Volume su	-	Pressione prolungata	Brano successivo	-	Pressione breve	Volume giù	ⓘ	Pressione breve	Play/Pause, Answer/End a call.	ⓘ	Pressione lunga	Avviamento per collegamento	Sessione di domande e risposte: Q1: Ho difficoltà ad associare il mio dispositivo a questo auricolare. - Assicurarsi che l'auricolare sia in modalità di accoppiamento. La luce dell'auricolare lampeggia alternativamente in blu e rosso. - Assicurarsi che l'auricolare non sia associato a un altro dispositivo. In tal caso, accendere l'auricolare e premere contemporaneamente i pulsanti "+" (volume su) e "-" (volume giù) per cancellare i record di abbinamento precedenti. In alternativa, è possibile disattivare l'impostazione Bluetooth nel dispositivo accoppiato precedente. Q2: Il mio computer è in grado di rilevare l'auricolare, ma mostra "nessun driver trovato" o messaggi simili. - Verificare che l'hardware del computer supporti la funzione Bluetooth e assicurarsi che sia acceso. - Assicurarsi che il driver Bluetooth del PC sia installato. Consultare l' fornitore del computer e scaricare la versione più recente del driver. Q3: Assicurarsi che l'auricolare sia in modalità di associazione (luce rosse e blu lampeggianti). Q3: desidero collegare il TV a l'auricolare tramite Bluetooth - Controllare se l' televisore ha prima la funzione Bluetooth incorporata. - In tal caso, seguire il manuale della TV per collegare la TV e l'auricolare. - In caso contrario, è consigliabile acquistare un trasmettitore TV Bluetooth online o i rivenditori elettronici locali. Q4: C'è rumore quando accendo l'auricolare ad ANC - Assicurarsi che l'auricolare sia indossato correttamente. Se lo è e il rumore continua, l'auricolare è difettoso. Si prega di restituire questo articolo il più presto possibile. Q5: Io mi anticipo non può sentirsi quando uso il microfono per rispondere a una chiamata - Assicurarsi che il telefono sia impostato sulla modalità cuffia.
Pulsante	Funzione	Funzione																							
+	Pressione prolungata	Brano precedente																							
+	Pressione breve	Volume su																							
-	Pressione prolungata	Brano successivo																							
-	Pressione breve	Volume giù																							
ⓘ	Pressione breve	Play/Pause, Answer/End a call.																							
ⓘ	Pressione lunga	Avviamento per collegamento																							
Guide de l'utilisateur FR Spécification E8 Impédance de charge: 32Ω S / N: ≥90 dB Gamme de fréquence: 20Hz-20KHz Alimentation: Pile au lithium ou câble USB Source audio: iPhone, iPad, Smartphone, ordinateur portable, MP3, MP4, etc. Autre fonction: Bluetooth, Microphone Taille: 169X94X205mm Précaution de la batterie L'appareil peut être alimenté par une pile au lithium rechargeable intégrée. Il vous faut charger la batterie pendant au moins 8 heures avant la première utilisation de l'appareil. - Les piles rechargeables ne doivent être chargées que sous la supervision d'un adulte. - Utilisez uniquement le câble micro USB fourni pour recharger la batterie. Le chargeur non conforme peut endommager la batterie et l'appareil. - N'essayez pas d'ouvrir la batterie rechargeable. Il y a ris de pièces détachées à l'intérieur. - N'utilisez aucune pièce pouvant être ingérée. - Gardez la batterie hors de la portée des enfants. En cas d'ingestion, consulter un médecin immédiatement. - Né jetez pas les batteries au feu car elles risquent d'exploser. Les piles peuvent également exploser si endommagées. Veuillez les éliminer conformément à la réglementation.	Commencer Comment opérer Allumez ce casque regler la longueur Angle réglable	Câble de connexion	Guide des fonctions Riproduzione di musica dal dispositivo smart <table border="1"> <thead> <tr> <th>Bouton</th> <th>Operation</th> <th>Fonction</th> </tr> </thead> <tbody> <tr> <td>+</td> <td>Longue pression</td> <td>Chanson précédente</td> </tr> <tr> <td>+</td> <td>Courte pression</td> <td>Monter le son</td> </tr> <tr> <td>-</td> <td>Longue pression</td> <td>Chanson Suivante</td> </tr> <tr> <td>-</td> <td>Courte pression</td> <td>Baisser le volume</td> </tr> <tr> <td>ⓘ</td> <td>Courte pression</td> <td>Lancer / Pause, Répondre / en appel</td> </tr> <tr> <td>ⓘ</td> <td>Longue pression</td> <td>Prêt pour l'appariage</td> </tr> </tbody> </table>	Bouton	Operation	Fonction	+	Longue pression	Chanson précédente	+	Courte pression	Monter le son	-	Longue pression	Chanson Suivante	-	Courte pression	Baisser le volume	ⓘ	Courte pression	Lancer / Pause, Répondre / en appel	ⓘ	Longue pression	Prêt pour l'appariage	
Bouton	Operation	Fonction																							
+	Longue pression	Chanson précédente																							
+	Courte pression	Monter le son																							
-	Longue pression	Chanson Suivante																							
-	Courte pression	Baisser le volume																							
ⓘ	Courte pression	Lancer / Pause, Répondre / en appel																							
ⓘ	Longue pression	Prêt pour l'appariage																							

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.