

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

OPERATING THE VEHICLE

- For your safety, never play with this toy on the street.
- This product is 2.4GHz radio control operated.
- ① To start playing, turn the switch of the controller to "ON", the red light on the controller will blink, it is ready to connect the vehicle.
- ② Turn the switch underneath the vehicle to "ON", you will hear a car "Beep" sound.
- ③ When the red light on the controller lights up without blinking, the vehicle and the controller are connected successfully.
- ④ Press the "Engine Start / Off" button on the controller, you will hear engine running sound from the vehicle, then start to play.
- ⑤ When you press the "Engine Start / Off" button again, the engine running sound from the vehicle will stop and the vehicle will be idle.
- ⑥ When finish playing, turn the switch of both vehicle and controller to "Off".

OPERATION TIPS

- When either the red light on the controller is blinking or the lights underneath the vehicle are blinking, the connection is not complete, you may need to turn the switch of both vehicle and controller to "Off" and wait for 5 seconds, then repeat the steps of 1 - 4.
- Operate only on smooth (but not slippery), dry and clean surface.
- Do not play with this toy on grass, sand or carpet.
- Do not drive the toy through water.
- Always point the controller antenna upward for better transmission.
- Do not make any physical contact with the controller antenna while operating.
- Keep the toy in a dry and cool place after playing.
- Do not leave in direct sunlight.

RADIO CONTROL FREQUENCY

For interference-free results, do not operate this vehicle with other radio-controlled toys not included in this set within transmission range.

TRANSMITTER AND RECEIVER

Since radio waves control this vehicle and in order to avoid interruption, do not operate this vehicle near electrical or telephone lines, cb interference, CD players, mobile phones, elevators, steel girders, other electronic devices and near highways.

INSTALLING THE BATTERIES

- Remember to set the "ON-OFF" switch of the vehicle and the controller to "OFF" position before inserting the batteries.
- Unscrew and open battery compartment cover to insert batteries as shown in the "BATTERY INSTRUCTION DIAGRAMS".
- Make sure all batteries are at the correct polarities.
- Close the cover and tighten the screw.
- Do not leave batteries in the vehicle and controller when the toy is not in use.
- Do not mix old and new batteries together.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove exhausted batteries from the toy.
- Supply terminals are not to be short circuited.
- For best performance, alkaline batteries are recommended.
- Do not dispose of batteries in fire. Batteries may explode or leak.
- Batteries contain mercury, don't put in trash. Recycle or dispose as hazardous waste.
- Batteries included are for demonstration purpose only and may need to be replaced by the consumer.

CONFORMS TO TOY SAFETY STANDARDS ASTM F963-16.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

BATTERY INSTRUCTION DIAGRAMS

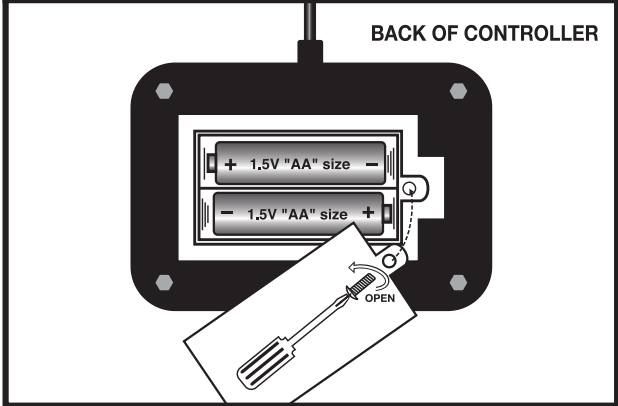

 CONTROLLER REQUIRES 2 X 1.5V "AA" SIZE BATTERIES (NOT INCLUDED)

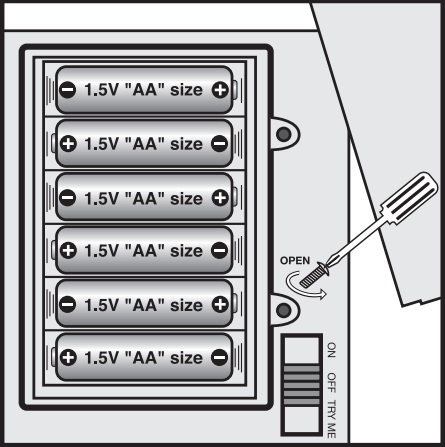

VEHICLE REQUIRES 6 X 1.5V "AA" SIZE BATTERIES (3 X 1.5V "AA" SIZE BATTERIES ARE INCLUDED FOR DEMONSTRATION PURPOSE ONLY AND MAY NEED TO BE REPLACED BY THE CONSUMER.)

REPLACE BATTERIES WITH NEW ONES WHEN THE VEHICLE MOVES SLOW OR IS OCCASIONALLY NOT UNDER CONTROL.

 
ALKALINE BATTERIES ARE RECOMMENDED

HAVING PROBLEM WITH THIS TOY ?
Before Returning it to the Store !

Please email your problem to us and we get back to you promptly .

support@pdtoys.com.hk

RADIO CONTROLLER OPERATION DIAGRAM

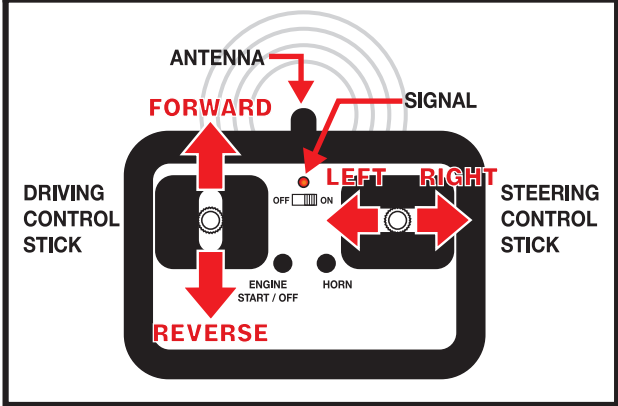

⚠ CAUTION:
To prevent entanglement,
keep hair away from wheels