

FREEDOM

(T7470 Paging System Transmitter)

USER MANUAL



LRS

Long Range Systems, LLC

4550 Excel Parkway, Suite 200

Addison, TX 75001

800.437.4996 • 214.553.5308

www.pager.net

Table Of Contents

Compatible Pagers	3
Installation and Setup	4
Hardware Provided	4
Installation Procedure	4
Connections	4
Keypad Description	5
Initial Power Up and Time Set	5
Basic Paging Operation Guide	6
Page Guest Pagers	6
Page Individual Staff Pagers	6
Page a Cell Phone	7
Canned or Special Alphanumeric Messages	7
Canned Message	8
Special Functions	9
Theft-Deterrent Function	9
Tracking	10
Custom Tracking	10
Group Paging	11
Manager Mapping	12
Dry Contact	12
Set Alarms	13
Feature Setup Procedures	15
User Password	15
Set Manager Password	15
Set Page Mode	15
Set to Page Staff or Guest Pagers	16
Create Alphanumeric Messages	16
Setting System Time/Date for Freedom Transmitter (T7470)	17
Repeat Delay	18
ID Span	18
Alphanumeric Pager Button Enable/Disable	18
Guest Message	18
Freeform Messages	19
Alpha Vibration Level	19
Display the Prompt	19
Turning ON/OFF Canned Messages in Display Prompt	20
Editing Canned Messages in Display Prompt	20
Freeform Staff Message	20


Display the Staff Prompt	21
Staff Message	21
Turning ON/OFF Canned Messages in Staff Display Prompt	21
Editing Canned Messages in Staff Display Prompt	22
USB Keyboard	22
Alpha Pager Communication Baud Rate	22
Maintenance Functions	23
Paging Types in Mixed Systems	23
Station ID	23
Adjust Transmit Power	23
Locating Misplaced Pagers	24
Cell Phone Paging/Messaging	25
Overview	25
System Requirements	25
Cell Phone Status	26
Programming Pagers	27
Individual Pagers	27
Program Pager Groups	29
Alpha Encryption	30
Program Pager Vibration	31
Program Welcome Message	31
System Specifications	32
Transmitter	32
Battery Powered Pagers	32
Rechargeable Pagers	32
Troubleshooting	33
Display Shows Nothing	33
Pagers Do Not Receive Pages	33
My Cell Phone Paging Is Not Working	33
Service Questions and Answers	34
LRS Pagers Available for the Freedom Transmitter (T7470)	34
Using the 4-Line Alphanumeric Pager	34
Using the Star Pager	37
Using the SP5 1-Line Rechargeable Alphanumeric Pagers	37
Using the Non-Alphanumeric Guest Pagers	39
Using the Alphanumeric Coaster Guest Pagers	40
Cleaning & Charging Instructions for LRS Paging Equipment	41
Warranty	42

Compatible Pagers


Customer Pagers:




Coaster Call

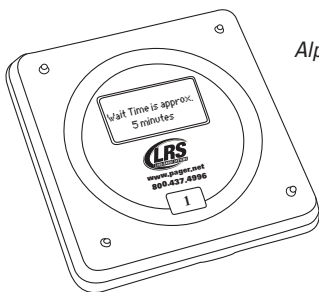


Alphanumeric Coaster

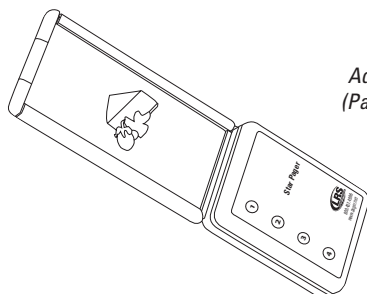

*AdverTeaser
(Paddle)Pager*

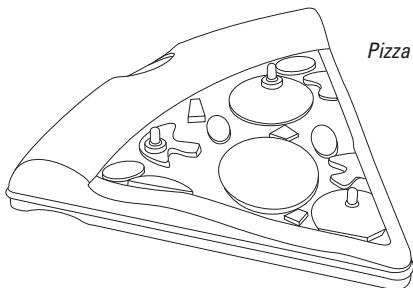


Pizza Pager

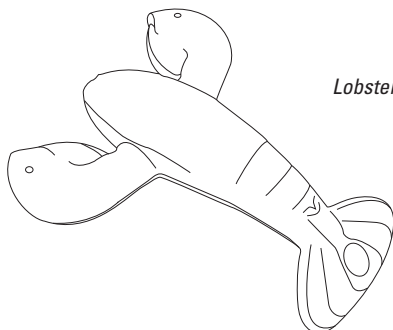


Lobster Pager


Staff Pagers:

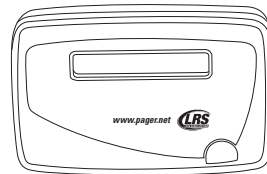

*SP5 1-Line Rechargeable
Alphanumeric Pager*

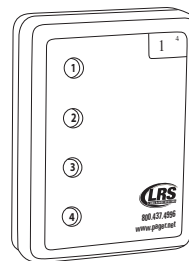

Star Pager

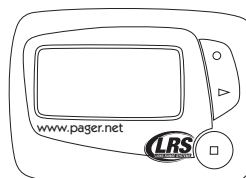

*RX-E 4-Line
Alphanumeric Pager
(Battery Operated)*

Installation and Setup

Hardware Provided

The system contains the transmitter keypad, an instruction booklet, an antenna, a strip of Velcro, rubber feet, and a 12-VDC power adapter.

Notice: Operation is subject to the following:

- This device may or may not cause interference.
- This device will accept any interference including interference that may cause undesired operation of the unit.

Notice: To reduce potential radio interference to other users, the antenna type and gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than required for successful communication.

Installation Procedure


The following is the basic installation procedure:

CAUTION: *Do not mount the transmitter antenna near any large metal objects.*

1. Un-wrap all system components.
2. Twist the 3" antenna onto the silver connector located on the rear of the transmitter.
3. Plug the power adapter into a standard 110/220V outlet and insert the barrel connector end into the port located on the rear of the antenna.
4. Upon completion of setup, make sure pagers are fully charged and/or have good batteries and are powered on.
5. The systems are shipped ready for the most general use. If you need to modify settings, refer to the table of contents to locate a specific function guideline.

Connections

The following diagram shows the system connections.

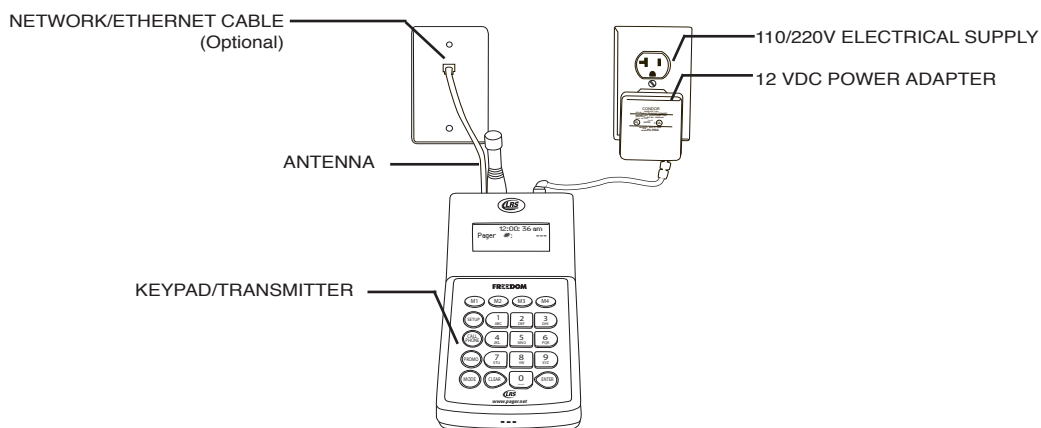


Keypad Description

Before using the keypad, read the following keypad descriptions.



Note: As the display changes, the keys may perform different functions.

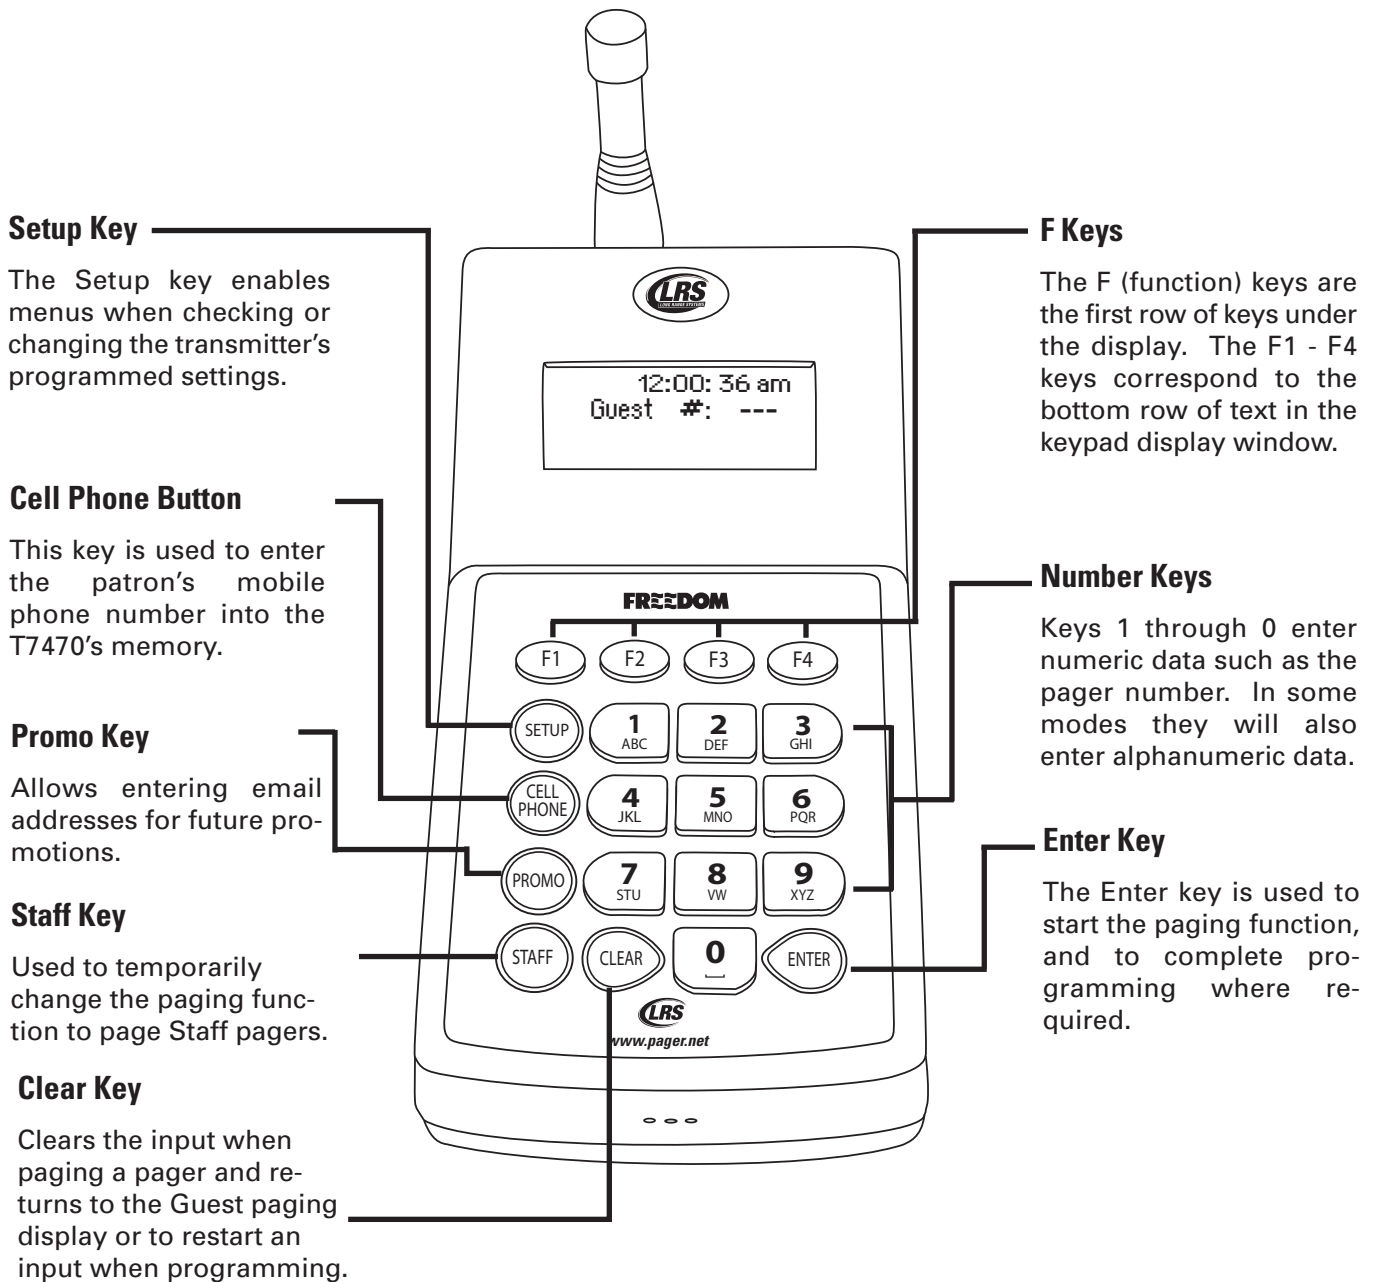

Initial Power Up and Time Set

1. After the transmitter initializes, the set date menu is shown, type in the current date (Using MM/DD/YY) and press ENTER.
2. When the display asks to enter time, type in the current time and select F1 (AM) or F2 (PM).

Basic Paging Operation Guide

The following are the most commonly used procedures for paging. Make sure that all rechargeable guest or staff pagers are not on the charging unit and all battery-operated pagers are turned on.

Page Guest Pagers:

Non-Alphanumeric (AdverTeaser, Pizza, Lobster, Coaster Call pagers)

1. Main screen displays – Guest #: - - - -
2. Enter number assigned to guest at handout.
3. Press ENTER to send page.
4. Return guest pagers to charging unit after paging.

Alphanumeric (Alphanumeric Coaster pager)

1. Main screen displays – Guest #: - - - -
2. Enter number assigned to guest at handout - then press ENTER.
3. Enter message code (000-099). (see Canned Messages Table pg. 8).
4. Press ENTER to send page.
5. Return guest pagers to charging unit after paging.

Page Individual Staff Pagers:

Non-Alphanumeric (Star Pager)

1. On keypad press STAFF (Display will show: Pager #: - - - -).
2. Enter staff pager number to be paged - then press ENTER.
3. Press ENTER to send page.

OR

4. Press F1 (V1), F2 (V2) or F3 (V3) for 1, 2 or 3 vibrations.

Alphanumeric (Alphanumeric, Rechargeable alphanumeric pagers)

1. On keypad press STAFF (Display will show: Pager #: - - - -).
2. Enter staff pager number to be paged - then press ENTER.
3. Enter message code (000-099). (see Canned Messages Table pg. 8)
4. Press ENTER to send page.

OR

5. Press F1 (V1), F2 (V2) or F3 (V3) for 1, 2 or 3 vibrations.

All Call Page:

Page all guest pagers simultaneously.

At (Guest #: - - -) Screen Display:

1. Enter 000 then press ENTER.

All Staff Alpha Page:

Page all staff pagers simultaneously.

1. Press STAFF.
2. Press 9-1-1 then ENTER.
3. Enter message number code (000-099). (see Canned Messages Table pg. 8).
4. Press ENTER to send page.

OR

5. Choose F1 (V1), F2 (V2), F3 (V3) or F4 (Exit) for 1, 2 or 3 vibrations.

All Staff SP4 Page:

1. Press STAFF.
2. Type 0-0-0 then ENTER.
3. Press F1 (YES) to send all page, or F4 (NO) to cancel.
4. Enter a message of 1-9.
5. Press ENTER to send the page.

OR

6. Choose F1 (V1), F2 (V2), F3 (V3) or F4 (Exit) to send 1, 2 or 3 vibrations.

Page a Cell Phone

1. Press Cell Phone and type in guest's cell phone number, then press ENTER.
2. Record the Pager number that appears on the screen.



Note: *Pager number 500 – 999 are reserved for Cell Phone Paging.*

3. When the customer's table is ready, at the Guest Screen, enter the pager number assigned to the customer.

Canned or Special Alphanumeric Messages

 
Using Message Codes

When prompted for a message on the Freedom Transmitter (T7470):

1. Enter message number code (and an extension number – optional).
2. Press ENTER.

Example: Send a message to call extension 123.

- From Canned Message Table choose – 006 (Call Ext).
- Enter code 0-0-6-1-2-3 (Displays: CALL EXT 123).



Note: *These non-editable messages are built into the transmitter. If using Alphanumeric pagers, additional messages can be created (see Create Additional Alphanumeric Messages on pg. 16).*

See next page for table of canned messages.

Canned Message

Code	Message				
000	Phone Call	020	Starter	040	Door
001	Sales Call	021	Service drive	041	Survey
002	Manager	022	Showroom	042	T-nnn Q-mm
003	Customer	023	Parked Call	043	Break
004	Room	024	Voice Mail	044	Fire
005	Visitor	025	Dressing room	045	Unit
006	Call Ext	026	Price check	046	Window
007	MTG Room	027	Department	047	Nurse
008	Lane	028	Cashier	048	Register
009	Aisle	029	Office	049	Owner
010	Void	030	Table	050	Check
011	Stamps	031	Winner	051	Drink
012	Change	032	Pickup	052	Food
013	Station	033	Dock	053	Service
014	Machine	034	You have mail	054	Seat
015	Operator	035	Table ready	055	Booth
016	Emergency	036	No special	056	Lobby
017	XX Minutes	037	Hole	057	Help
018	Tee	038	Kitchen	058	Restroom
019	Pro Shop	039	Bar	059	Valet
				060	Car
				061	Bus
				062	Bay
				063	Low battery
				064	Error
				065	Exit
				066	Fax
				067	host
				068	Space
				069	Location
				070	Nursery
				071	Teller
				072	Officer
				073	Buffet
				074	Diaper change
				075	Child crying
				076	To nursery

Special Functions

User Password

All of the functions that adjust paging preferences are protected by a Password.


- To reduce tampering with critical settings, the keypad is password protected.
- The Password 56789 allows you to enter most restricted programming screens.
- Press F4 at any menu to return to the Guest menu.

Theft-Deterrent Function

Theft deterrent is used to alert staff and guests that they are leaving the premises while still carrying the coaster/pager.

When Activated:

- The transmitter sends a signal to the coaster/pager, and if the signal is not received, the coaster/pager will emit a continuous beep sound until it is returned to the charging unit or back in range.
- The LED screen on the alphanumeric pagers will display "OUT OF RANGE".
- When theft deterrent mode is active, a "T" will display on the upper left corner of the transmitter display.

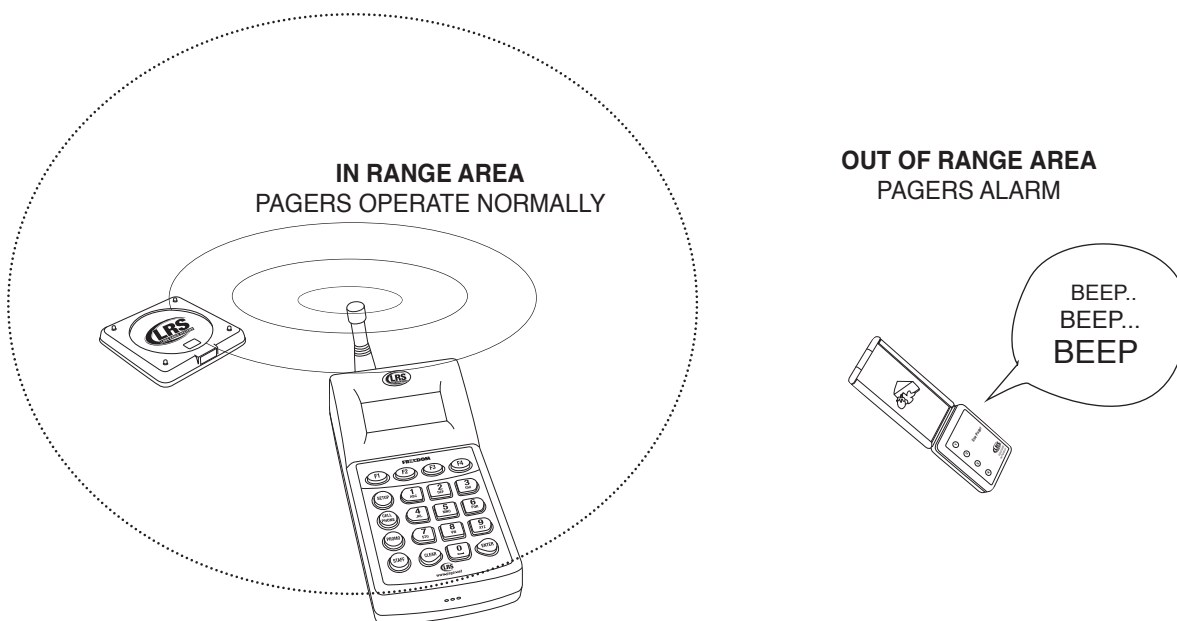

To Activate:

1. Press SETUP and enter Password.
2. Press 1 (SYSTEM).
3. Press 1 (Anti-Theft).
4. Press F1 (YES) to turn theft mode on (Press F2 (NO) to turn off).
5. Main screen display will show "T " on upper left corner when turned on.



Note: Anti-Theft does not work with the RX-SP4.


When Anti-Theft is enable, Repeat Delay is Disabled.

Tracking

This function allows the host to monitor which Guest or Staff pager has been paged, and continues paging, based on a user defined interval and run time setting. The pager number is cleared on the keypad unit when run time is complete or when user clears the number by press the Function Key (F1-F4) under the number.

To turn Tracking on (or off):

1. Press SETUP and enter Password.
2. Press F2 (DN) until screen displays 3) Tracking.
3. Select 2 (Tracking).
4. Select 1) Enable.
5. Press F1 (YES) or F2 (NO).

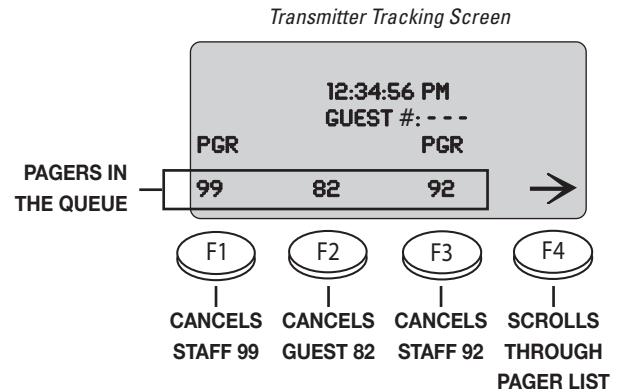

To Use Tracking

1. Page the guest or staff pager using the basic paging procedure.
2. The pager number will appear at the bottom of the screen signifying that the pager is being paged.
3. When the page has been received and acknowledged, clear the page by pressing the F1, F2 or F3 key under the pager number shown on the keypad display.
 - If more than 3 pagers are in the queue "→" will be shown at the right of the display.
 - Press F4 to see the rest of the list.

Custom Tracking

Tracking Intervals

The tracking feature can be set to a user defined duration and paging intervals.

Duration

The Duration is the total amount of time the repeated pages will continue for in seconds.

For example, if you choose 120 seconds, the Freedom Transmitter (T7470) will continue to page at the pre-defined interval until the overall 2 minutes (120 seconds) is timed out.

The default duration is 90 seconds.

The duration can be set for 0-3600 seconds.

To Set the Duration

1. Press SETUP and enter Password.
2. Press 1) system.
3. Press F2 (DN) until display shows 2) Tracking.
4. Press 2.
5. Select 2) Duration.
6. Type in a new time, in seconds and press ENTER.



Note: Entering 0 will make the Duration run "Forever"

Interval


The Interval defines how many seconds of time passes between pages.

The default Interval is 10 seconds.

The Interval can be set from 10-255 seconds.

To set the Interval


1. Press SETUP and enter Password.
2. Press 1) system.
3. Press F2 (DN) until display shows 2) Tracking.
4. Press 2.
5. Select 3) Interval.
6. Type in a new time, in seconds, and press ENTER.

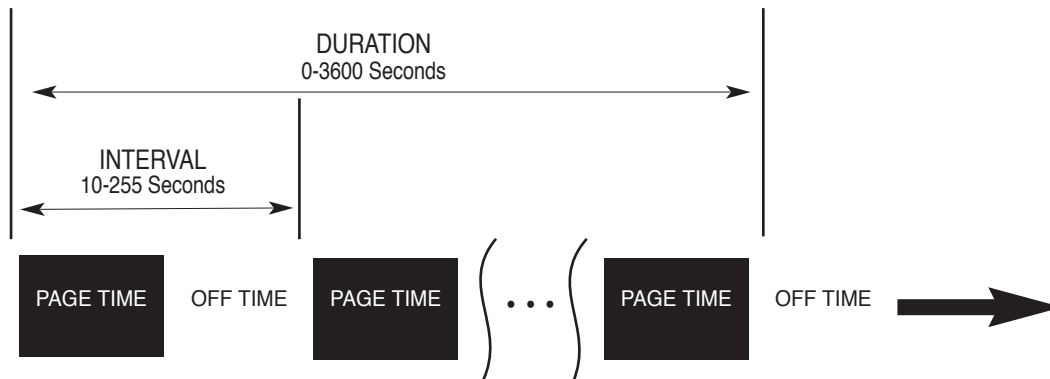

Group Paging

General Purpose

This function is used with Alpha pagers. These pagers can be programmed to respond to group calls. Ten groups are available and each pager can be a member of 5 groups. Each pager will respond to its individual number and to any groups it belongs to. See example below.

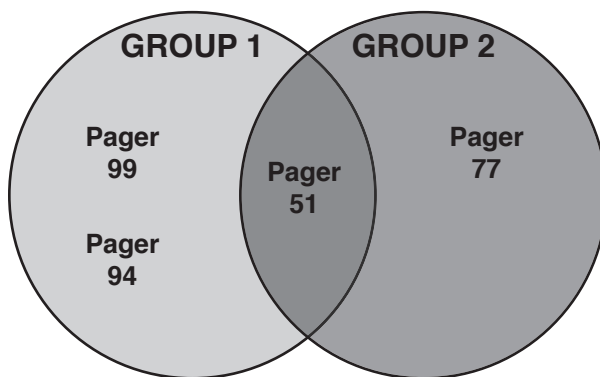

Group Paging Rules

General rules for paging groups are:

- Pagers must be programmed in the group mode.
- Staff pagers must be numbered above 100. (1-99 are reserved for groups)
- Any alphanumeric pager can be a member of up to 5 groups.

Paging Groups

1. Enter the number for the pager or the group.
 - If only paging staff pagers and have the transmitter default set to Pager, enter the pager or group number directly.
 - If paging, default is set to Guest, press Staff before entering the pager or group number.
2. Enter the message to send.
3. Press ENTER.

To Turn Group Paging On/Off

1. Press SETUP and enter the Password.
2. Press 1 (System).
3. Press F2 (DN) until display shows 2) POCSAG.
4. Press 1) Groups Enabled.
5. Select 2) Group Paging.
6. Press F1 (Yes) or F4 (No).

Manager Mapping

The Manager Map function allows the user to store up to 10 manager cell phone numbers to use in situations where the manager's cell phone would be alerted. Example functions would include a times alarm or a triggered Dry Contact. Manager numbers will be stored in pager numbers 501-510.



Note: *Requires cell paging to be enabled.*

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 3) Manager Map.
4. Press 3) Manager Map.
5. Type in a pager number 501-510.
6. Type in a manager's cell phone number to correspond to the pager number and press ENTER.

Dry Contacts

The Dry Contact are contacts or switches that are connected through a wire to the T7470, for example: Doorbell. This sensor can send a message to the pager or cell phone when an event occurs (e.g., alarms if a door is opened). To make a Dry Contact alert the manager's cell phone when the contact is triggered: This function requires Network Enabled, cell paging ON, a manager cell phone number mapped, and a valid account. Default setting for the Contact Sensor is OFF. To program the Contact Sensor (Dry Contact):

1. Press SETUP and enter the Password.
2. Press F2 (DN) until the display shows 1: Dry Contact.
3. Select 1 (1: Dry Contact).
4. At the Contact Menu screen - select 1 (1: Prog Contacts).
5. Select contact to program - press 1 (1: Contact #1) or 2 (2: Contact #2).
6. The Screen will show if Contact Sensor is currently on or off:
 - Press F1 to turn the function ON.
 - Press F2 to turn the function OFF.
7. If select ON, select for the sensor to set as:
 - Press F4 for Normally Closed (this is the default setting).



- Press F1 for Normally Open.
8. Enter the pager number that will be paged when this event occurs (Pager Num = - - - -) and press ENTER.
 9. Enter a User Message:
 - Press F2 to create a new message, use the 1-9 keys to enter the text, and then press ENTER to Save.
 - Press F1 to edit the current message.
 10. Select paging type mode - F1 (STAFF), F4 (GUEST).
 11. Press F4 to EXIT.

T7470 Dry Contact Specifications:

Input Voltage	0-5 Volts DC
Contact Diameter	2.5 mm
Contact Type	Mono Plug

T7470 Dry Contact Cable Specifications:

Contact Diameter	2.5 mm
Contact Type	Mono Plug
Number of Conductors	2
Ring Connection	Positive
Tip Connection	Ground

  

Set Alarms

This function is used to set the transmitter to page an individual or all STAFF pagers at a specific time or on a timed interval. The transmitter can send 10 different time alarms or periodic alarms. Alarms may be set to page a specific pager (or all pagers) or cell phone at a specific time every day. To make an alarm contact the manager's cell phone, this function requires Network Enabled, cell phone paging ON, a manager cell phone number mapped, and a valid account.

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until display shows 3) ALARMS.
4. Select 3 (3: ALARMS).
5. From the Alarm menu, select the number of the alarm to set (0 through 9) and press ENTER.
6. The Alarm Display screen shows the status of the selected alarm. Select Change (F1) to en-

able/disable or modify the alarm.



Note: *If the alarm is already enabled as an interval alarm:*

- Press F1 (YES) to reset the timer and return to the paging menu.
- Press F4 (NO) to continue to the ON/OFF menu.

7. At Enable menu select F1 (YES) to enable the alarm or F4 (NO) to disable the alarm.
8. Select the type of alarm 1 (Interval), 2 (Daily), or 3 (Weekly).

Interval Alarms are alarms that re-page a staff pager at regular intervals.

1. Enter the desired time interval in hours and minutes (HH:MM) and Press ENTER.
2. Enter pager number to be alerted.
3. Type in canned message (See Table on pg. 8) and press ENTER.

Daily Alarms are alarms that re-page a staff pager at a particular time every day.

1. At the Time of Day menu enter the time for alarm.
2. Select F1 (AM) or F2 (PM).
3. Type in pager number to be alerted and press ENTER.
4. Type in canned message (See Table on pg. 8) and press ENTER.

Weekly Alarms are alarms that will page a staff page on a certain day of the week.

1. Select the Day of Week to page. Use F2 (DN) to scroll through Wednesday through Saturday.
 2. Enter the Time of Day (HH:MM) for the alarm.
 3. Press F1 (AM) and F2 (PM).
 4. Type pager number to page and press ENTER.
 5. Type in canned message (See Table on pg. 8) and press ENTER.
 6. At Set pager Number menu, either:
 - Enter the number of the pager to be alarmed followed by ENTER.
- OR**
- Press F1 (KEEP) to use the existing number.



Note: *Entering pager number 911 will page all Alpha pagers.*

Feature Setup Procedures

User Password

All of the functions that adjust paging preferences are protected by a Password.

- To reduce tampering with critical settings, the keypad is password protected.
- The Password 56789 allows you to enter most restricted programming screens.
- Press F4 at any menu to return to the Guest menu.

Set Manager Password

To change the Manager Password:

1. Press SETUP and enter Password.
2. Press F2 (DN).
3. Select 3) Manager Password.
4. Type in new 5 digit Manager Password and press Enter.

Set Page Mode

This programs how guest and staff pagers will respond when paged. Guest pagers can flash, beep, glow, flash and beep, etc. To set the modes:

1. Press SETUP and enter Password.
2. Press F2 (DN).
3. Select 1) Page Mode.
4. Select 1 (1:Guest) or 2 (2:Staff).

Guest Pager - Select:



Note: An asterisk next to a mode indicates that is the current Paging Mode.

Press 1) Flash/Beep/Glow.

Select a page Mode.

- 1) Flash 30 sec.
- 2) Flash 5 mins.
- 3) Beep/Flash.

Press F2 (DN).

- 1) Flash 1 sec.
- 2) Glow 15 times.
- 3) Glow 5 mins.

Press F2 (DN).

- 1) Beep 3 times.
- 2) Beep continuously.

To turn Alphanumeric Guest Paging Vibration On or Off:

Select 2) Alphanumeric Vibe.

Press F1 (yes) to turn Alphanumeric Vibration On or F2 (No) for Off.

Manager Pager - Select:

- 1) Vibe 1 time.
- 2) Vibe 2 times.
- 3) Vibe 3 times.

F2 (ON)

- 1) Vibe continuously.
- 2) Vibe/Beep 1 time.
- 3) Vibe/Beep 2 times.

F2 (ON)

- 1) Vibe/Beep 3 times.
- 2) Beep 3 times.
- 3) Beep continuously.

Set to Page Staff or Guest Pagers

In cases where the unit will always be paging staff pagers, the transmitter default can be set to page either Guest or Staff pagers. Factory default is Guest:

1. Press SETUP and enter Password.
2. Select 1 (1: Default Mode).
3. Select 1 (Guest Paging) for guest pager or 2 (Staff Paging) for staff pager.

Create Alphanumeric Messages

If your staff pagers are alphanumeric, they can display 77 different pre-set messages (numbered 000 through 076), and 22 additional user-defined messages of up to 32 characters per message (077 through 099).

1. Press SETUP and enter Password.
2. Press 3) Other.
3. Press 1) Canned Message.
4. At the Canned Msg.# screen select F3 (EDIT) to edit message, (use (F1 (up) or F2 (DN) to scroll through messages to edit).
5. If no message exists at the Edit Message screen, type a new message. If a message exists, press F3 (EDIT) to change it. Enter the desired message using the number keys, waiting until the cursor moves between letters (i.e. for letter 'E' press #2 twice). Similar to a Cell Phone.
6. Press the ENTER key to save your message.

Setting Time and Date for Freedom Transmitter (T7470)

Set Date:

1. Press SETUP and enter Password.
2. Press 3) Date/Time.
3. Press 3) Set Date.
4. Enter Date (MM/DD/YY) (e.g. March 11, 2010 = 03/11/10) and press ENTER.

Set Time:

1. Press SETUP and enter Password.
2. Press 3) Date/Time.
3. Press F2 (DN).
4. Press 1) Set Time.
5. Enter Time (---:--) (e.g. 08:30) and select F1 (AM) or F2 (PM).

Time Format:

1. Press SETUP and enter Password.
2. Press 3) Date/Time.
3. Press 2) Time Format.
4. Select 1) 12 hour or 2) 24 hour.



Note: Asterisk next to an option indicates the current operation mode


Date Format:

1. Press SETUP and enter Password.
2. Press 3) Date/Time.
3. Select 1) Date Format.
4. Select 1) MM/DD/YY or 2) DD/MM/YY.




Note: Asterisk next to an option indicates the current operation mode

24 HOUR TIME ON DISPLAY

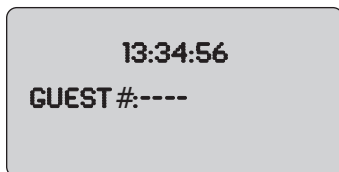

12 HOUR TIME ON DISPLAY

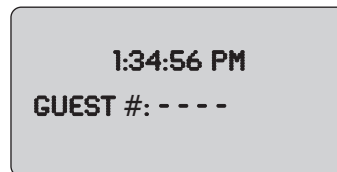

T7470 Transmitter Screen

Repeat Delay

When using a repeater, it may be necessary to add a delay between pages when paging multiple pagers to allow the repeater time to repeat the signal and detect the next one. To add repeat delay:

1. Press SETUP.
2. Enter Password.
3. Press 1) System.
4. Press F2 (DN) until the display shows 2) Repeat Delay.
5. Press 2 (2: Repeat Delay).
6. Select F1 (Yes) to enable or F4 (No) to disable.



Note: *If Repeat Delay is enabled, Anti-Theft will be disabled.*

ID Span

In very large systems up to 9999 Guest pagers can be paged. To do this, ID Span is required. This function disables normal System ID functions except for Staff Paging and allows the programming of Guest Pagers from 1000 to 9999.

To use ID Span:

1. Press SETUP.
2. Enter Password.
3. Press 3) Other.
4. Press 2) ID Span.
5. Select F1 (YES) to enable or F4 (NO) to disable.

Alphanumeric Pager Button Enable/Disable

The buttons on an Alpha Pager can be enabled or disabled.

1. Press SETUP and enter Password.
2. Press 1 for 1) System.
3. Press F2 (DN) until 1)POCSAG-> is displayed.
4. Press 1 for 1)POCSAG->.
5. Press 2 for 2) Btns Enabled.
6. Press F1 (Yes) to enable Alpha Pager buttons, or press F4 (No) to disable Alpha Pager buttons.

Alpha Pager Vibration Level

The strength of vibration when an Alpha Pager receives a Vibration Alert can be varied.

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen show 1 (POCSAG).
4. Press 1 (POCSAG).
5. Press F2 (DN) until screen displays 1 (Vibe Strength).
6. Press 1 (Vibe Strength).
7. Press F1 (UP) to increase the level or F2 (DN) to lower the level.
8. Press F4 (Done) when finished.

Guest Message

The Guest Message is the default canned message sent to Guest Alpha Pagers. To change the message.

1. Press SETUP and enter Password.
2. Press 1 for 1) System.
3. Press F2 (DN) until 1)POCSAG-> is displayed.
4. Press 1 for 1)POCSAG->.
5. Press 3 for 3) Guest Message.
6. Type a number 00-99 for selected canned message and press ENTER.



Note: See pg. 16 for Creating Alphanumeric Messages.

Freeform Guest Message

When the Freedom Transmitter pages Guest Alpha pagers, the user is given a default message and the ability to add an extension, example 035125 = "Table Ready 125".

The user can select to have a Freeform message when they control what is entered and if the message can be edited.


Features for editing guest messages can be accessed by:

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (POCSAG).
4. Press 1 (POCSAG).

Display the Guest and Staff Prompt

When paging Guest or Staff Alpha Pagers, the user is shown a prompt:

Freedom Transmitter screen Display

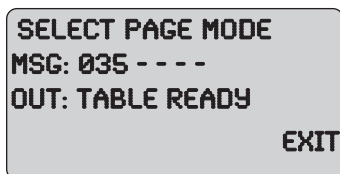

To Enable or Disable Seeing This Prompt While Paging:

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (POCSAG).
4. Press 1 (POCSAG).
5. Press F2 (DN) until screen show 1 (Disp Prompt).
6. Press 1 (Disp Prompt).
7. Press F1 (YES) to display, or F4 (NO) to not display.

If Display Prompt is disabled, the message sent will default to the Guest Message.

Turning ON/OFF Canned Messages in Guest Display Prompt



Note: For this feature to be used with Guest Paging, Display Prompt must be enabled. (See pg. 18).

To write Freeform messages using the 0-9 keys or USB Keyboard into the Display Prompt, Canned Messages will need to be disabled.

To Enable or Disable:

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (POCSAG).
4. Press 1 (POCSAG).
5. press F2 (DN) until screen shows 2 (Canned Msg).
6. Press 2 (Canned Msg).
7. At prompt to "Use Canned Msg", press F1 (YES) to keep Canned Messages, or press F4 (NO) to allow Freeform Messages.

Editing Canned Messages in Guest Display Prompt

The user has the option of locking the Canned Message part of the Guest Display Prompt.



Note: To change the Canned Messages, see Guest Messages on pg. 19.

Example: If the user has Canned Messages Enabled, and Edit Message Enabled, in the Display Prompt of 035 123 "Table Ready 123" ONLY the "123" portion of the message can be changed e.g. to 035 456 (or another number) to display "Table Ready 456".

To Enable or Disable Editing:

1. Press SETUP and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (POCSAG).
4. Press 1 (POCSAG).
5. Press F2 (DN) until screen shows 3 (Edit Msg).
6. Press 3 (Edit Msg).
7. At prompt to "Edit Canned Message" press F1 (YES) for editing, or F4 (NO) to disable editing.

Freeform Staff Message

When the Freedom Transmitter pages Staff Alpha pagers, the user is given a default message and the ability to add an extension, example 035125 = "Table Ready 125"

The user can select to have a Freeform message when they control what is entered and if the message can be edited.


Features for editing Staff Message can be accessed by:

1. Press Setup and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (Manager Msg).
4. Press 1 (Manager Msg).

Display the Staff Prompt

When paging Staff Alpha Pagers, the user is shown the prompt:

Freedom Transmitter screen Display

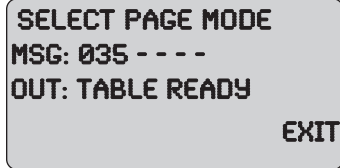

To enable or disable seeing this prompt while paging, refer to pg. 20.

Staff Message

The Staff Message is the default canned message sent to Staff Alpha pagers.

To change the message:

1. Press Setup and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (Manager Msg).
4. Press 1 (Manager Msg).
5. Type number 00-99 for selected canned message and press ENTER.



Note: See pg. 16 for creating Alpha Messages.

Turning ON/OFF Canned Messages in Staff Display Prompt

To write Freeform messages using 0-9 keys or USB Keyboard into the Display Prompt, Canned Messages will need to be disabled.

To Enable or Disable Editing:

1. Press Setup and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (Manager Msg).
4. Press 1 (Manager Msg).
5. Press 2 (Use Canned Msg).
6. At prompt to "Use Canned Msg", press F1 (YES) to keep canned Messages, or F4 (NO) to allow Freeform messages.

Editing Canned Messages in Staff Display Prompt

The user has the option of locking the canned message part of the Staff Display Prompt.



Note: *To change the Canned Messages, see Guest Messages on pg. 19.*

Example: If the user has Canned Messages Enabled, and Edit Message Enabled, in the Display Prompt of 035 123 "Table Ready 123" ONLY the "123" portion of the message can be changed e.g. to 035 456 (or another number) to display "Table Ready 456".

To Enable or Disable Editing:

1. Press Setup and enter Password.
2. Press 1 (System).
3. Press F2 (DN) until screen shows 1 (Manager Msg).
4. Press 1 (Manager Msg).
5. Press 3 (Edit Msg).
6. At prompt to "Edit Canned Msg", press F1 (YES) for editing, or F4 (NO) to disable editing.

Alpha Pager Communication Baud Rate

LRS Alpha Pagers use a 1200 bit per Second Baud Rate as the default communication Baud Rate. In scenarios where this is required to be changed to 512-2400 BPS.

1. Contact LRS first for access code.
2. Press Setup and enter LRS Password.
3. Press 1 (System).
4. Press F2 (DN) until screen shows 1) POCSAG.
5. Press 1 (1: POCSAG).
6. Press F2 (DN) until screen shows 1) OTA Baud Rate.
7. Press 1) OTA Baud Rate.
8. Select new Baud Rate.

Maintenance Functions

 **Caution:** *The following features are not normally adjusted unless directed by LRS.*

Paging Types in Mixed Systems

When using different types of pagers, be sure that alphanumeric pagers are numbered higher than the non-alphanumeric pagers.

Setting Crossover Points

This function is used to set the crossover points where non-alphanumeric end and alphanumeric pagers begin. Crossover points must be set using the following rules:

The default crossover point for Staff Pagers is 50.

- 50 and above are Alphanumeric Pagers.
- Below 50 is for Star Pagers.

The default crossover point for Guest Pagers is 1000.

- 1000 and above for Alphanumeric Coasters.
- Below 1000 for Coaster Call and Paddle pagers (AdverTeaser).

To Change the Crossover Points:

1. Press SETUP and enter Password.
2. Press 1) System.
3. Press F2 (DN) until display shows 1) POCSAG.
4. Press 1 (1: POCSAG).
5. Press F2(DN) until 2)POCSAG Start is displayed.
6. Press 2) POCSAG Start.
7. For Guest Alphanumeric Pagers, press 1) Guest and type in the new POCSAG start number from 1 – 9999.
8. For Staff Alphanumeric Pagers, press 2) Staff and type in the new POCSAG start number 1-9999. Choose number from 1 – 9999. Press ENTER to keep a default value - 50.

Station ID

Station ID is often confused with System ID. This function is used where more than one station of the same establishment may be paging staff pagers. The indicators on the pager will show this code.

To set a different station number:

1. Press SETUP and enter Password.
2. Press 1) System.
3. Press F2 (DN) until the display shows 3) Station ID.
5. Press 3 (3: Station ID).
6. The display shows the current station ID number (default is 1).
7. Press a number to use (0 – 9) to change the default Station ID number and press ENTER.

Adjust Transmit Power

The range may be increased or decreased from the transmitter by adjusting the transmit power level. The

power levels are 1 through 5. *Default from the factory is power level 3. Reset only by direction from LRS.*

To set the power level:

1. Press SETUP and enter Password.
2. Press 1) System, press F2 (DN) until the display shows 2) Transmit Power.
5. Press 2 (2:Transmit Power).
6. Set the required power level (from 1 through 5).
7. Press ENTER.

Locating Misplaced Pagers

Two location modes are available for finding lost or misplaced pagers/coasters. Auto Locate Mode automatically searches at a preset time, Run Locate Mode searches on demand.

 **CAUTION:** *Do not set auto locate to run or use Run Locate feature while pagers are handed out. All pagers will be paged!*

Auto Locate Mode

Auto Locate sends a signal to ALL coasters/pagers at a preset time. The coasters/pagers will beep so that staff can locate them.

Example: If closing at 11:30PM, the transmitter can be set to auto locate at 12:30AM, causing all missing coasters/pagers to beep at that time.

When activated:

- A signal is sent out to ALL coaster/ pagers.
- Pagers will Beep or Flash until the pagers are placed on the charging unit or the batteries go dead. In the case of battery operated pagers, the battery must be removed to stop the beeping.

To activate:

1. Press SETUP and enter Password.
2. Press 3 (OTHER).
3. Press F2 (DN).
4. Choose 1 (1:Auto Locate) to program auto locate.
5. Press F1 (YES) to turn Auto-Locate mode on or press F2 (NO) to turn off.
6. If turning function ON, enter a starting Time of Day for Auto Location (HH:MM).
7. Press F1 (AM) or F2 (PM).

If turning function ON:

8. Enter Start Time for Auto Location (- -: - -) and press ENTER to continue.
9. Press F1 (AM) or F4 (PM).

Run Locate Mode

Run locate is used to immediately locate any misplaced coasters around the restaurants (ideal during closing hours).

When activated:

- A signal is sent out to ALL guest pagers.
- Pagers will Beep or Flash until returned to charging unit or batteries removed.

To activate

1. Press SETUP and enter Password.
2. Press 3 (OTHER).
3. Choose 3 (Locate Pagers).
4. Press ENTER to begin locating pagers.

Cell Phone Paging/Messaging

Overview

The Cell Phone interface is used to extend the capability of the on-premise paging system allowing you to notify people on their cell phones.

Cell phone paging is an optional service. This service is not required for normal over-the-air UHF paging operations.

When a Guest's Cell Phone number is entered, the transmitter will store the number as a Pager Number between 500 and 599.

System Requirements

Cell Phone Paging requires broadband internet service, a CAT-5 Ethernet cable, and a contract with Long Range Systems. If you would like to utilize cell phone messaging, please contact your local LRS office or call 800.437.4996.

Two Steps to enable the Cell Phone Paging:

Step 1

1. Disconnect power to the T7470.
2. Connect the CAT-5 cable to the Ethernet port.
3. Re-connect power to the T7470.
4. Press SETUP and enter Password.
5. Press 1) System.
6. Press 2) Cell Phone Paging.
7. Press 1) Enabled.
8. When asked to Enable voice/SMS paging, press F1 (Yes) or F4 (No).
9. Exit.

Step 2

1. Press SETUP and enter Password.
2. Press 3) Other.
3. Press F2 (Down).
4. Press 3) Network.
5. Press 1) Configure Network.
6. Press 2) Enabled
7. Press F1 (Yes) to enable or press F4 (No) to disable Network.

For Users on DHCP Network

From Step 7 when screen displays Network Type.

1. Press 1) DHCP.

For Users on Static Network

For users on a Static Network, the user will need a valid IP Address available on their internal network. Contact your local Network Administrator for an available IP address.



Note: *If an IP Address has one or two digits, the address must be written out fully (example 192.168.7.17 must be entered 192.168.007.017.)*

From Step 7 when screen displays Network Type.

1. Press 2) Static.
2. Enter IP Address to assign for the Freedom Transmitter on Network and press ENTER.
3. Enter Netmask address for the Freedom TransmitterT7470 on Network and press ENTER.
4. Enter default gateway address for the Freedom Transmitter on Network and press ENTER.
5. Enter DNS address for the Freedom Transmitter on Network and press ENTER.

To select if a Guest receives an SMS text message or a Voice recording

1. Press SETUP and enter Password.
2. Press 1) System.
3. Press 2) Cell Phone Paging.
4. Press 2) Type.
5. Press 1 for SMS Text or 2 for Voice Message.



Note: *Long Range Systems must setup the SMS Text or Voice Message before this feature can be used. If the user wishes to change the Message or type of message, contact Long Range Systems.*

Cell Phone Status

To view the current link status of the Freedom Transmitter:

1. Press SETUP and enter Password.
2. Press 1) System.
3. Press 2) Cell Phone Paging.
4. Press 3) Status.
5. The screen will now show the current Cell Status. If the Status is OK, then the link is successful.

Programming Pagers

Pager numbering and mode setup is used to renumber or set up individual pagers.



Note: *Be sure to refer back to "Paging Types in Mixed Systems" section to ensure that pagers are programmed using appropriate crossover points.*

Individual Pagers



Note: *Rechargeable pagers can have their System ID's changed or their vibration turned on or off as a group.*

1. Press SETUP and enter Password.
2. Press F2 (DN).
3. Press 1 (1: Program).
5. Press 1 (1: Prg Pager).
7. At the Select Type menu, select the basic type of pager you are re-programming (Guest pagers or Staff pagers).

Non-Alpha Guest Pagers (AdverTeaser (Paddle Pager), Coaster Pager, Pizza Pager, Lobster Call)

This procedure is repeated for each pager being programmed. Two charging bases are suggested for programming Coasters, Pizza pager, Lobster Call.

1. Place all guest pagers to be programmed on one charger base, leave the second base empty. Paddle pagers may be replaced into the same slot in the charger.
2. Complete the steps for programming "individual Pagers".
3. At the Select Type menu, press 1 (1: Guest Pagers).
4. Enter Pager Number and press Enter.
5. Select Pager type 1) Coaster Page or 2) Paddle Pager.
6. Select if Pager should Vibrate F1 (Yes) or F4 (No.)
7. Remove the guest pagers from the charger.
8. When flashing stops, press ENTER.
9. The coaster/pager will slowly vibrate and light up then dim to off to indicate it is being programmed.
10. When programming is finished, put the coaster on the second charging base or the Paddle pager back into its slot.
11. Repeat steps 2 through 10 for the remaining coasters/pagers.
12. When finished remove all of the coasters/pagers from the charging base and page each one.
13. Reprogram any that do not page.

Guest Alpha Coasters

This procedure is repeated for each pager being programmed. Two charging bases are suggested for programming Alpha Coasters.



Note: *Guest Alpha Pagers numbers must be above POCSAG start.*

1. Put all coasters to be programmed on one charger base, leave the second base empty.
2. Complete the steps for programming "individual Pagers".

3. At the Select Type menu, press 1 (1: Guest Pagers).
4. Enter Pager Number and press ENTER.
5. Remove the coaster from the charger.
6. When flashing stops, press ENTER.
7. The pager will beep four times to indicate it is being programmed and the screen will display:
Example: System ID = 0, Pager ID Number = 99, All Page = 911
 - [0]123 prg Single
 - [0]911 prg All Page
 - [0]0 prg System
8. Repeat steps 2 through 7 for the remaining coasters.
9. When finished, remove all of the coasters from the charging base and page each one.
10. Reprogram any that do not page.

Staff Pagers (Star Type)

This procedure is repeated for each pager being programmed. Pagers may be replaced into the same slot in the charger.

1. Place all Pagers to be programmed in the charger.
2. Complete the steps for programming "individual Pagers".
3. At the Select Type menu, press 2 (2: Staff).
4. At Enter ID --- enter the number you wish to assign to the Pager and press ENTER.
5. Select if Pager should Vibrate F1 (Yes) or F4 (No).
6. Remove the Pager from the Charger.
7. When the Flashing Stops, press ENTER.
8. The Pager will slowly Brighten and Dim to Off to indicate it is being Programmed.
9. When Programming is finished, return the Pager to its Charging Base.
10. Repeat Steps 1 through 9 for the remaining Pagers.
11. When finished, remove all of the Pagers from the Charging Base and Page each one.
12. Reprogram any that do not page.

Staff Pagers (Rechargeable Alpha Pagers)

This procedure is repeated for each pager being programmed.



Note: *Staff Alpha Pagers numbers must be above POCSAG start.*

1. Place pagers in charger.
2. Complete the Steps for Programming "Individual Pagers".
3. At the Select Type menu, press 2 (2: Staff).
4. At Enter ID --- enter the number you wish to assign to the Pager.
5. Remove the Pager from the charger.
6. At the screen display "Reset Pager. When Pager Stop..." press ENTER.
7. The pager will Vibrate and/or Beep.
8. When the Vibration/Beeping Stops, press ENTER again.
9. The Pager will beep three times to indicate it is being programmed and the screen will display:
Example: System ID = 0, Pager ID Number = 99, All Page = 911
 - Prg C1: [0]99
 - Prg C2: [0]911

- Prg C3: [0]0

10. Return the Pager to the Charger when Programming is complete.
11. Repeat Steps 2 through 10 for the remaining Pagers.
12. When finished, remove Pagers from the Charger and Page each one.
13. Reprogram any Pagers that do not page.

Staff Pagers (Battery Operated Alpha Pagers)

This procedure is repeated for each pager being programmed.



Note: *Staff Alpha Pagers numbers must be above POCSAG start.*

1. Turn all of the Pagers Off (or remove batteries).
2. Complete the steps for Programming "individual Pagers".
3. At the Select Type menu, press 2 (2: Staff).
4. At Enter ID --- enter the number you wish to assign to the Pager.
5. Turn the Pager Off and then On (or reinstall the battery).
6. At screen display "Reset Pagers. When Pagers Stop..." press ENTER.
7. It will Vibrate and/or Beep.
8. When the Vibration/Beeping Stops, press ENTER again.
9. The Pager will beep three times to indicate it is being Programmed and the screen will display:
Example: System ID = 0, Pager ID Number = 99, All Page = 911
 - Prg Single [0]99
 - Prg All Page [0]911
 - Prg System [0]0
10. Repeat Steps 2 through 9 for the remaining Pagers.
11. When you're finished programming, send a test page to each pager.
12. Repeat the programming procedure for any pagers that do not page.

Program Pager Groups

Group Paging must be enabled.



Note: *Only LRS pagers can be assigned groups and be programmed from the transmitter.*

1. Turn all Pagers Off (or remove batteries) or Place unit in Charger.
2. Complete the steps for individual Pagers.
3. At select type menu, press (2: Staff).
4. At enter ID, enter the number you wish to assign to the Pager.
5. At enter Groups, enter the Group Numbers you wish to assign the Pager to and press ENTER.
6. Turn Pager or Remove pager from charger.
7. At screen displays "Reset Pagers. When Pagers Stop..." press ENTER.
8. The Pager will beep three times and additional beeps for each Group Number and Group Name assigned.
Example: System ID = 0, Pager ID Number = 99, All Page = 911, Group = 1, 2
 [Group numbers will display across the screen as you enter them]
 - Prg Single [0]99
 - Prg All Page [0]911

- Prg System [0]0
 - Group [1] 1
 - Group [2] 2
9. Return the Pager to the Charger when done (If rechargeable).
 10. Repeat steps 2 through 8 for the remaining Pagers.
 11. When finished, remove Pagers from the Charger and Page each one.
 12. Reprogram any Pagers that Do Not Page.

Alpha Encryption

- Only LRS Alpha pagers can be encrypted and be programmed from the transmitter
- Encryption does not change the pager numbering

1. Press Setup.
2. Enter Access Code.
3. Press the F2 (DN) until the display shows 2: Encryption.
4. Press 2 (2: Encryption).
5. Select:

1: ON/SET

2: OFF

3. TRANSMIT KEY

- 1 (1: On/Set) to enable encryption and set new encryption key
 - Enter 16 double digits (Note: all ff will disable the key)
(Example: 11:12:13:44:11:11:11:11:11:11:11:11:11:11:11)
 - Press ENTER when finished with each line.
 - Follow instructions on display.
 - Turn the pager off then on.
 - When it stops vibrating, press ENTER (note more than 1 pager can be encrypted at once).
 - Screen will display "Transmitting Key".
 - Pager will beep once and display "Pgr Encryption 128-bit".
- 2 (2: Off) to disable encryption
 - The display shows "Transmit Key Now?" press the F1 (YES) key to send or F4 (NO).
 - Follow instructions on display.
 - Turn the pager off then on .
 - When it stops vibrating, press ENTER.
 - Screen will display "Transmitting Key".
 - Pager will beep once and display "Pgr Encryption None".
- 3 (3: Transmit Key) to send the current encryption key to pagers.
 - Follow instructions on display.
 - Turn the pager off then on.
 - When it stops vibrating, press ENTER.



Note: more than 1 pager can be encrypted at once.

- The unit will wait 5 seconds and send out the signal.
- The screen will display “prg encryption none” (or 128 bit key) then “Transmitting Key”.
- Continue this procedure with the remaining pagers.

Program Pager Vibration

The Program Vibration feature can program a set of Guest or Staff Pagers all at once to Vibrate or not Vibrate when paged.

1. Be sure All Pagers are on the Charger.
2. Press Setup and enter Password.
3. Press F2 (DN).
4. Press 1 to select 1) Program.
5. Press 2 to select 2) Prg Vibe.
6. Press 1 to select Guest Pagers or 2 to select Staff Pagers.
7. If selected Guest, select 1 for Coaster Pagers or 2 for Paddle Pagers.
8. Press F1 (YES) to enable Pager to Vibrate, or F4 (NO) to prevent the Pager from Vibrating.
9. Unplug the charger power supply.
10. When Pagers finish flashing, press ENTER.
11. Pagers will slowly brighten and dim to off to indicate they are being Programmed.



Note: *Pagers will vibrate during glowing if vibration is enabled and will not vibrate if vibration was disabled.*

12. When finished, plug the charger power supply back in.

Program Welcome Message

The Welcome Message on a Staff 4-Line Alpha pager can be customized to show something new when the Pager is powered on.

1. Press SETUP and enter Password.
2. Press F2 (DN).
3. Press 1 to select 1) Program.
4. Press 3 to select 3) Prg Welcome.
5. Type in New Welcome Message and press ENTER.



Note: *The welcome message has a 32 character limit.*

6. Turn off and then turn on Alpha Pager.
7. Press ENTER.
8. Pager should Beep Once to indicate programming.
9. Cycle power on Pager to view New Message.

System Specifications

Notice - Operation is subject to the following:

- This device may cause interference.
- This device will accept any interference including interference that may cause undesired operation of the unit.

Transmitter

Required voltage: One 110/220V outlet for the pager keypad.

Operating Frequency: 467.750 MHz

Operating Range: Dependent upon pagers used, topography and environment.

Battery Powered Pagers

Required voltage: One AAA Alkaline battery for the pager.

Rechargeable Pagers

Required Voltage: (1) 110/220V outlets for pager charging base

Battery Type: Nickel Metal Hydride (NiMH). Rechargeable.

Lifetime of Batteries: Approximately 3-5 years. (depending on usage).

Battery Charge Life: Approximately 12 - 48 hours (depending on usage).

Recharge Time: Typically 8 hours depending on usage (24 hours minimum from completely "dead").

Troubleshooting

Display Shows Nothing

Be sure power supply is plugged in.

- If yes
 - Be sure power supply is good. Substitute the transmitter power supply with the charger supply.
 - Be sure the outlet circuit is on.
 - Unplug and re-plug a few times to be sure the unit doesn't need a reset.
- If no – plug it in.

Remedy

If power supply is good call LRS to troubleshoot further.

If power supply is bad call LRS to order a power supply.

Pagers Do Not Receive Pages

Be sure pagers are ON, Awake, Charged or have Good Batteries

- Try paging more than one pager to be sure it's not a faulty pager.

Battery Powered Pagers Don't Receive Pages

1. Be sure the pager is turned on and that the battery is good
2. If pagers do not turn on, replace battery and retry
3. If pagers do turn on, and still do not receive a page, check transmitter

If pagers continue to not receive pages, contact LRS.

My Cell Phone Paging Is Not Working

1. Do you have an account setup with Long Range Systems for a voice/SMS messaging service?
If Yes, proceed to Step 2.
2. Check Network cable and make sure both ends are plugged in. Green Light will be lit, and the Orange Light should blink to indicate connectivity.
3. Access the Cell Paging Menu, and make sure Cell Paging is ENABLED.
4. Access the Network Menu, and verify that the Network is ENABLED.
5. If using a DHCP Network, verify DHCP is selected as YES.
6. If using a Static Network, verify DHCP is selected NO, then verify the transmitter's IP, Netmask, DNS, and Gateway addresses are entered correctly.

Service Questions and Answers


Should your paging system ever fail or should you need additional paging equipment, call Long Range Systems at (800) 437-4996 or (214) 553-5308 (24/7 days a week)

For weekend or night emergencies:

- Long Range Systems has 24/7 live technical support available.
- Please keep in mind that options are limited over the weekend.


LRS Pagers Available for the Freedom Transmitter (T7470)

Using the 4-Line Alphanumeric Pager

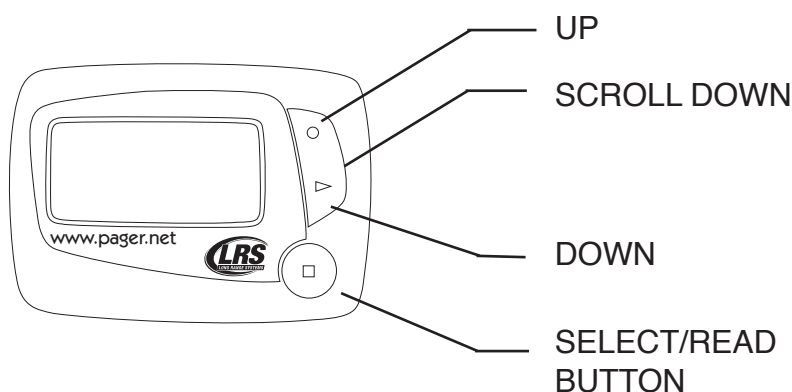

Menus

Alphanumeric Pager Screen

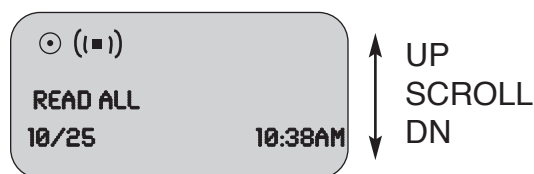

1. From Read All screen, press UP (or DN) Scroll button until desired selection displays
2. Press Read/Select button to select item
3. Press UP (or DN) Scroll button to choose/adjust
4. Press Read/Select to confirm/set

Power On/Off

Set ON (if unit is off)


1. Press and hold Scroll Up until YES/NO shows.
2. At "Power ON?" use UP (or DN) Scroll button to select YES
3. Press Read/Select button to set

Set OFF

1. Using the UP (or DN) scroll button scroll until display shows "Power OFF?"
2. Press Read/Select button to set power on/off
3. At "Power OFF?" screen, use UP (or DN) Scroll button to select YES
4. Press Read/Select button to set

Read Message

Alphanumeric Pager Screen

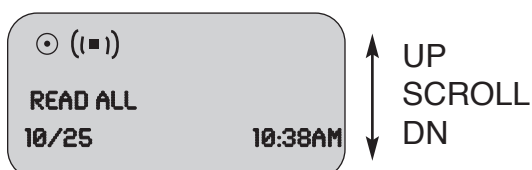

- Messages are displayed upon receipt.
- Press Read/Select to display.

To Review Stored Messages:

1. Select "Read All?".
2. Press Read/Select to display messages and time stamps.
3. Use the UP (or DN) Scroll button to scroll through messages.

Delete Messages

1. Using the UP (or DN) scroll button, scroll until display shows "Delete All?".
2. Press Read/Select.
3. Use the UP (or DN) scroll button to select Yes or No.
4. Press Read/Select button to confirm.

Time/Date Set

1. Using the UP (or DN) scroll button scroll until display shows "Set Time/Date".
2. Press Read/Select to set time/date.
3. Press UP (or DN) scroll button to set each time or date segment and press Read/Select to move through the segments.

Set Contrast

1. Using the UP (or DN) scroll button scroll until display shows "Set Contrast".
2. Press Read/Select.
3. Use the UP (or DN) scroll button to adjust.
4. Press Read/Select to confirm.

Auto ON/OFF

1. Using the UP (or DN) scroll button scroll until display shows "Auto ON/OFF".
2. Press Read/Select to set auto on/off.
3. Use the UP (or DN) scroll button to select On or Off.

4. Press UP (or DN) scroll button to set on/off time and press Read/Select to move through the segments.

Set Key Tone On/Off

1. Using the UP (or DN) scroll button scroll until display shows "Set Key Tone".
2. Press Read/Select to set key tone on/off.
3. Use the UP (or DN) scroll button to select On or Off.
4. Press Read/Select to set.

Select Alert Mode

1. Using the UP (or DN) scroll button scroll until display shows "Set Alert Mode."
2. Use the UP (or DN) scroll button to select Beep, Vibe, or Both.
3. Press Read/Select to set:

Beep - Use the Up (or DN) scroll button to select:

- Select Beep Type - Loud or Soft and press Read/Select to set.
- Set Alert Time (seconds) and press Read/Select to set.

Vibe - Use the Up (or DN) scroll button to select:

- Set Vibe strength - Strong or Weak and press Read/Select to set.
- Set Vibe Pulse - Cnst, P1, P2 or P3 and press Read/Select to set.
- Set Alert Time (seconds) and press Read/Select to set.

Both - Use the Up (or DN) scroll button to select:

- Set Vibe strength - Strong or Weak and press Read/Select to set.
- Set Alert Time (seconds) and press Read/Select to set.

Battery

The RX-E 4-Line Alphanumeric pager uses 1 AAA Battery.

Programming

To program the pager see pg. 29

Using the Star Pager



Charging


Any rechargeable pager will require use of an LRS charger.

1. Place the pager in the charger.
2. Allow unit to fully charge overnight.
3. Remove from charger, and pager will vibrate and light all lights as a verification that it is working.
4. Replace the pager in the charger at the end of each day.
 - Star Pagers uses the charger 9 (CH-R9)

Programming

To program the pager see pg. 28

Using the SP5 1-Line Rechargeable Alphanumeric Pager

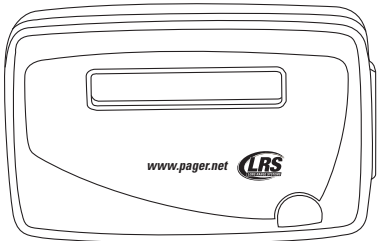

Charging

The SP5 uses the Charger 5 (CH-R5)

1. Place the pager in the charger.
2. Allow unit to fully charge overnight.
3. Remove from charger, pager will vibrate or beep to show it is working.
4. LCD will show the pager's ID.
5. Replace the pager in the charger at the end of each day.

Menus

To access the vibrate/contrast menu, remove the pager from the charger. While vibrating or beeping, press and hold the Select button for 8 seconds. This top-level menu will display:



If you PRESS and RELEASE the SP5 pager button the menu will change to:



To exit this menu wait 8 seconds.

To re-enter the vibe/contrast menu at any time, reset the pager, and then hold the SP5 pager button.

Vibe

To set the Vibration Level

1. Enter the vibe/contrast menu as described above.
2. Highlight the Vibe selection then PRESS and HOLD the SP5 pager Button until the screen shows.



3. Press or hold the Select Button to the desired vibration level. The level will rise to max, Release the Select Button and press or hold again until the level goes to minimum or desired level.
4. To exit, wait 8 seconds. And the pager will go back to the vibe/contrast menu.



Contrast

To set the Contrast Level

1. Enter the vibe/contrast menu as described above.
2. Highlight the Contrast selection then PRESS and HOLD the SP5 pager Button until the screen shows.



3. Press or hold the Select Button to the desired Contrast. The level will increase to max (NOTE: screen could be dark and hard to read), Release the Select Button and press or hold again to change the level back towards the minimum or to desired contrast.
4. To exit, wait 8 seconds. And the pager will go back to the vibe/contrast menu.



5. To exit this menu wait 8 additional seconds.

Settings

To view the current pager settings

1. Remove pager from the charger or reset on the T9601, T9100, or T9101 reset terminals.
2. Press the Select Button repeatedly to scroll through the settings:
 - C1: [System ID number] and Pager ID number
 - C2: [System ID number] and All Page number
 - C3: [System ID number] and System ID number
 - G: Group number
 - Enc: Encryption enabled (128) or none
 - Ver: Current Firmware Version
3. To exit, wait 8 seconds.

Messages

The pager stores the last 5 received messages.

To view the messages:

1. Press the Select Button once.
2. Messages 2 lines in length will show a > symbol on the end of the first line and a < on the second line. Messages over 2 lines in length, the middle lines will show "< the next line of the message >".
3. Press the Select Button to continue scrolling forward through the message or messages.


Time

Pager will display the current time. The Freedom Transmitter (T7470) automatically updates this feature. If the time does not appear, a flashing star will appear on the right side of LCD to show pager is operational.

Programming

To program the pager see pg. 28

Using Non-Alphanumeric Guest Pagers

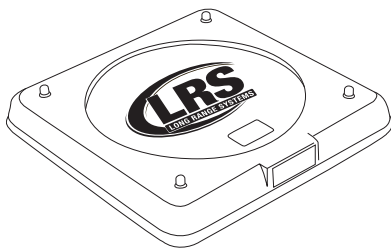

Charging

Any rechargeable guest pager will require use of an LRS charger.

1. Place the guest pager in the charger. For 15 Coasters, 10 Pizza pager, and 10 Lobster call pagers. Do not stack more than 10 pagers at a time on a Charger.
2. Allow unit to charge fully overnight.
3. Remove from charger, and pager will vibrate, beep, and light all lights as a verification that it is working.
4. Replace the pager in the charger at the end of each day.

The pagers all use different chargers:

- Coasters use the Charger 8 (CH-R8).
- AdverTeasers and Star Pagers use the Charger 9 (CH-R9).
- Lobster Pagers use the Lobster Charger (CH-LP).
- Pizza Pagers use the Pizza Charger (CH-PZ).

Programming

To program the pager see pg. 27

Using Alphanumeric Coaster Guest Pagers



Charging

Any Alphanumeric Coaster pager will require use of an LRS coaster charger.

1. Place the pager in the charger. 15 pagers at a time on a Charger.
2. Allow unit to charge fully overnight.
3. Remove from charger, and pager will vibrate, beep, and light all lights as a verification that it is working.
4. Replace the pager in the charger at the end of each day.
 - The Alphanumeric Coasters use the Charger 8 (CH-R8).

Programming

To program the pager see pg. 27

Cleaning & Charging Instructions For LRS Paging Equipment

Cleaning:

LRS pagers are made from industrial-strength, polycarbonate material. However, this material is susceptible to hairline cracking if non-approved cleaners are used. When cleaning LRS pagers, we recommend only using ISOPROPYL ALCOHOL-BASED CLEANERS.

To clean the equipment:

1. Take a clean rag and an isopropyl-alcohol based cleaner.
2. Soak the clean rag with the isopropyl alcohol cleaner.
3. Wipe down the pagers or equipment.

Cleaning equipment with any other non-approved cleaners can weaken plastic and cause hairline cracks. Pagers and equipment that are cleaned with unapproved cleaners and suffer cracking will not be covered under warranty.

Do not submerge any LRS paging equipment in any type of liquid as this will also damage the equipment and is not covered under the standard warranty.

Charging:

Place rechargeable pagers on the charger and let them charge for 8 hours prior to first use.

Rechargeable pagers should be kept on charge even during extremely long periods of inactivity.

Only 12 VDC power supplies should be used with LRS chargers and transmitters. DC power supplies will cause damage to equipment that is not covered under the standard warranty.

Should you have any questions, please contact the LRS Customer Service Department at 800.437.4996, 214.553.5308 or your local LRS dealer.

LRS Australia
+61 (02) 995 5700
www.lrsaustalia.com.au

LRS Brazil
5511 41528416
www.lrspager.com.br

LRS Canada
877.607.7243
www.lrscanada.ca

LRS Colombia
(+57) 1 - 7592452
www.lrscolombia.com

LRS Europe GmbH
+49 531 310542 0
www.lrs.eu.com

LRS Middle East Ltd
+9613 81 82 84
www.lrs-lb.com

LRS South Africa
+27 21 422 4975
www.lrssa.com

LRS United Kingdom
+44(0)1782 537000
www.lrspagers.co.uk

Warranty

Long Range Systems, LLC warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase. The warranty does not include damage to the product resulting from accident, misuse, improper electrical connection, or failure to charge the product within 30 days of receipt. Rechargeable pagers are required to stay on charge while not in use. Rechargeable pagers that are left off of charge for longer than 30 days will have a negative impact on the life of the batteries requiring them to be replaced thus voiding the warranty. If this product should become defective within the warranty period, we will repair or replace it with an equivalent product, free of charge. LRS will return your product via UPS ground shipping. All warranty claims must be initiated through our customer service department.

Customer Service: 800.437.4996
4550 Excel Parkway, Suite 200
Addison, TX 75001

This warranty gives you specific legal rights and you may also have rights that vary from state to state.

Copyright © 2014, Long Range Systems, LLC All Rights Reserved

This manual contains proprietary information of Long Range Systems, LLC (LRS) and is intended for use only by its employees or customers. None of the material contained herein may be copied, reproduced, republished, downloaded, displayed, posted, or transmitted in any form or by any means, including but not limited to, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of LRS. Additional copies of this manual may be obtained by contacting LRS.

Screen displays, keyboard layouts, hardware descriptions, or software are proprietary to LRS and are subject to copyright and other intellectual property rights of LRS and shall be treated in accordance with the previous paragraph.

All attempts have been made to make the information in this document complete and accurate. LRS is not responsible for any direct or indirect damages or loss of business resulting from inaccuracies or omissions. Specifications and other information contained within this document are subject to change without notice.

Long Range Systems, LLC reserves the right to make changes without further notice to any products herein. LRS, LLC makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does LRS, LLC assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in LRS, LLC data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. LRS, LLC products are not designed, intended, or authorized for use as components in systems intended to support or sustain life, or for any other application in which the failure of the LRS, LLC product could create a situation where personal injury or death may occur. Should Buyer purchase or use LRS, LLC products for any such unintended or unauthorized application, Buyer shall indemnify and hold LRS, LLC. and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that LRS, LLC was negligent regarding the design or manufacture of the part, device or system.