


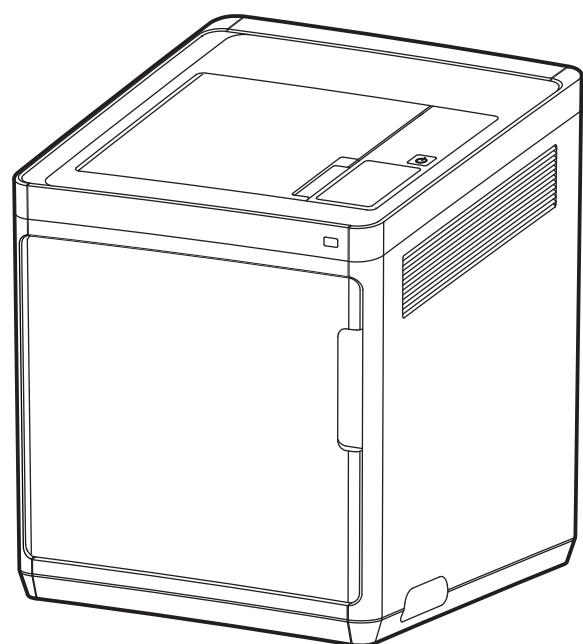

1X Series

USER MANUAL

- Read the User Manual before operating the product, and keep the manual at a convenient place near the product.



Safety Instructions

Be sure to observe the following instructions when using the device.



Warning: Failure to observe the instructions may lead to death or serious injury.

- Directly plug the power cord in the receptacle on the wall. Do not use extension cord.
- If the power cable or plug is worn or damaged, pull out the power plug.
- The exposure of the interior of the machine can cause electric shock or burns.
Do not remove covers or screws other than specified in this manual.
- Please be cautious. In the process of printing, the temperature of the nozzle and the heated bed rise higher than 100 degrees Celsius.
- Do not place the machine in a highly moist environment as it may cause deformation and malfunction.
- Avoid contact of electrical terminal with metal product such as necklaces, coins, keys, watches, etc.
- Do not hold the shaft for lifting or moving of the printer.
- For the following situations turn off power and pull out the power plug
 - When in contact with liquid
 - When in need for a service or repair request
 - When the device cover is damaged
- For the method of disposal contact local service center or use a proper collection site.
- Please turn off power when leaving the office after business hours or in circumstances where machine is unoccupied for a long period of time as it may cause abrupt fire accidents.



Caution: Failure to observe instructions may cause injuries or damages to property.

- Protect device from humid or wet conditions eg. rain, snow, etc
- Remove power cord from receptacle on the wall before moving device.
- Be careful not to damage power cord while device is being translocated.
- When removing the power cord, please pull the plug and not the power cable.
- Be cautious of clips, staples and any other small metal objects from falling inside the device.
- Please be cautious on safety when touching the interior of the machine, e.g. cleaning the interior.
- Do not dispose of device or consumables together with household waste.
For the method of disposal, please contact local service center or use a proper collection site.
- Interior of device may be very hot. Please do not touch the part with “Caution: High Temperature” sign or its surrounding areas as it may cause burns.
- Our product maintains high quality standards and performance.
It is recommended to use genuine components only, components can be acquired from any authorized distributors.

Before use

Thank you for purchasing our product.

This user manual contains detailed information about correct use of device and easy maintenance to maintain the optimal state, and to contribute to the rationalization of office work of your company.

Carefully read the user manual before using the device and keep close at hand.

In order to use device correctly and safely, please carefully note the precautions before use.

Prohibition and limitation

1. This User Manual has been created for the convenience of the user, actual product may differ from image and explanations shown.
2. The contents of this user manual is subject to change without notice. We are not responsible for the direct and/or indirect loss or damages caused by results of handling or operating the product in any case and for results occurring from user's negligence.
3. The copyrighted literary works can be duplicated and used for personal use or household use and within the same parameter. In other cases than the aforementioned, it is prohibited by law.
4. The above details present only a part of the applicable laws and regulations. Details on these laws/regulations may not be stated as they are. We do not guarantee its correctness and completeness. Please consult a legal advisor to check if the object you intend to print is legal.
5. User is responsible for all loss derived from modification of the product executed by the user or third party.
6. Font used in the printer GUI and the user manual is the "NANUM" font provided by NAVER.

Contents

Before using the Machine

1. Preface	1
2. Conventions	2
Symbols	2
3. Safety Information	3
4. Precautions	5
4.1 Installation	5
4.2 Moving the Machine	6
5. Consumables Handling	7
5.1 PLA	7
5.2 ABS	7
5.3 Flexible	8
6. Instructions for Use	9
7. Ventilation	10
8. Notices	11
9. Disposal of Used Battery	14
10. Wifi Module Disclaimer	15
11. USB Memory Disclaimer	17

Chapter 1 Preparations for Machine Operation

1. Machine Specifications	1-2
1.1 Printing	1-2
1.2 Temperature/Speed	1-2
1.3 Machine	1-2
1.4 Software/Support	1-2
1.5 Default Setting of Print layer Width	1-2
2. Basic Components	1-3
3. Understanding the Device Parts	1-4
4. Installation (Product connection, Cartridge Setup and includes Software Installation)	1-6
4.1 Device Connection	1-6
4.2 Program Installation	1-6

Chapter 2 UI Menu Functions

1. UI Menu Function description	2-2
1.1 CARTRIDGE	2-3
LOAD	2-3
UNLOAD	2-5
UNLOCK	2-10
1.2 Settings	2-13
X, Y, Z	2-14
EXTRUDER	2-15
BED LEVELING	2-17
Z OFFSET	2-20
NOZZLE CLEANING	2-22
CLEANING CASE	2-23
NETWORK	2-25
BED LOWERING	2-28
TEST PRINT	2-29
ACTIVE LEVELING	2-31
SECURITY	2-32
VOICE GUIDE	2-34
BEEP SOUND	2-35
LANGUAGE	2-37
E-MAIL	2-38
UNIT	2-42
TIME SETTING	2-44
TIME ZONE	2-45
POWER SAVING MODE	2-47
LAMP	2-48
WEB	2-50
S/W UPDATE	2-51
NOZZLE REPLACEMENT	2-53
CLOUD	2-55
OPEN MATERIAL	2-56
1.3 Information	2-60

Chapter 3 Printing

1. Printing	3-2
1.1 Printing from USB Flash Drive	3-2
1.2 Printing Via PC	3-8
1.3 Print Job Management	3-8
1.4 Changing Filaments	3-10

Chapter 4 Printed Output Check

1. Printed Output Check	4-2
1.1 Detaching Printed Output	4-2
1.2 Improving Printing Quality	4-4
2. When Printer Cannot be Turned On	4-5
3. If problems persist	4-6

Chapter 5 Maintenance

1. Machine Cleaning	5-2
1.1 Cleaning Case Maintenance	5-2
1.2 Printer Interior Cleaning	5-2
1.3 Periodical Inspection	5-2
Oil/Grease Inspection	5-2
1.4 Flexible bed and Nozzle Cleaning	5-2
1.5 Cleaning the inside of the Nozzle	5-3
1.6 NOZZLE TIP CLEANING	5-10
2. Error Message and Solutions	5-12
3. Problems and Solutions	5-14
3.1 If filament does not come out of the nozzle	5-14
3.2 In Cases where Filament is Cut Between the Extruder and Nozzle	5-15
3.3 When Filament End is Visible Outside the Cartridge After Unloading	5-15
3.4 If the bed leveling does not operate normally	5-16
3.5 Solution for Notification 401	5-16
4. Replenishing Consumables	5-20
4.1 Bed Replacement	5-20
Removing Aluminum Bed	5-20
Installing Aluminum Bed	5-20
4.2 Filter Replacement	5-20
4.3 Cartridge Replacement	5-24

4.4 Nozzle Replacement	5-24
Methods of Detaching Nozzle	5-24
Assembling the Nozzle	5-26

Chapter 6 Appendix

1. Type of Consumables (Material, Color)	6-2
--	-----

1. Preface

This User Manual describes detailed explanations and points to note in connection with operating and using the machine. Please read the User Manual carefully before using machine, and keep it for reference purpose.

Important

- The content of the User Manual is subject to change without any prior notification.
Sindoh shall not be liable for consequential, special, indirect damages or losses caused by the handling or operating of the machine or by the user's negligence.
- Copyrighted works can be printed and used for home and/or personal use; other usage is prohibited by law.
- The above details present only a part of the applicable laws and regulations and the details of the law may not be stated as they are. Sindoh is not responsible for its correctness and completeness.
Please consult your legal advisor to check if the object you intend to print is legal.

Note

- The User Manual may include a little different descriptions of the machine from the actual one.
Some options may not be available in some countries. Please contact local distributor for details.
Some standard units are optional in some countries.
Please consult your local service center.
- In some countries some models are not available.
Please consult your local sales office.
- This manual uses metric units of measurement

2. Conventions

Symbols

This manual uses the following symbols and meanings.

Warning

- Indicates importance safety notes.
Ignoring these notes could result in serious injury or death.
Be sure to read these notes carefully for your safe operations of the machine.

Caution

- Indicates important safety notes.
Ignoring these notes could result in minor injury, or damage to the machine or to property.
Be sure to read these notes for your safe operations of the machine.

Important

- Indicates points to pay attention to when using the machine, and explanations of likely causes of filament misfeeds, damage to originals, or loss of data.
Be sure to read these explanations before operating the machine.

Note

- Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

Reference

- This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the messages or menus that appear on the machine's LCD display panel.

[]

Indicates the names of each function key on the machine control panel and the display window.

3. Safety Information

Plug the power cord into a properly grounded outlet which is near and quickly accessible from the machine.
Do not use or place the machine in wet or humid environment.

Caution Hot Surface

- When you touch your body with this part, you are burned.
- To avoid burns, follow the instructions below.
 - The inside of the machine may be hot. To reduce the risk of injury from a hot component, allow some time to cool down.
(Please be cautious of getting burns during printing as the Nozzle and the heating bed will maintain a high temperature of over 100 degrees.)
 - Do not put any portion of your body or objects on any part during machine operation as the motor and bed can be in very high temperature and can cause burns/injuries. Please be cautious.
 - When the power is on, do not let any of your body touch the machine except the bed.
If you have to touch the bed while the power is on, please do so after the bed temperature has been lowered to room temperature.
 - If you have to touch any parts other than the bed, please do so after the bed and nozzle temperature have been lowered to room temperature.
 - After the printer has finished printing, check the LCD screen and built-in speaker.
Do not touch the bed or the bed handle until you are told you can touch the bed.



Caution Electric Shock

- Contact with this part may result in electric shock.
- To avoid electric shock, follow the instructions below.
 - Proceed your work after turning off the machine and unplugging the power cord from the outlet in case of accessing the system board, or installing hardware or optional memory devices. If the machine is connected with other device, turn it off and separate the cables from the machine.
 - This product has been designed, tested and approved to meet strict safety requirements of international safety standard. Some safety features of parts may not be guaranteed. Sindoh is not liable for problems caused by using an unauthorized spare parts or consumables.
 - Disconnect the power cord and all the cables connected to the machine to prevent from any electrical shock when cleaning the outside or inside of the machine.
 - Be sure to turn off the power before removing the nozzle from the machine. Electrical damage to the internal parts of the nozzle may occur.



Caution Injuries

- Do not twist, fold, step or place heavy objects on the powercord.
- Be careful with the power cord peeled off or overloaded.
- Do not let the power cord pinched by furniture or walls.
- Misusing the cord could result in fire or electrical shock.
- Check the cord regularly. When checking the cord, unplug the cord from the outlet first.
- Please consult a qualified engineer for services or repairs not stated in this User Manual.

⚠ Caution Injuries

- Contact with this part may cause injury.
- To prevent injury or damage to the equipment, follow the instructions below.
 - Do not open the front and top door during machine operation.
 - Do not open the rear cover or touch any parts of the rear extruder unit during machine operation.
 - When the power is on, do not let any of your body touch the machine except the bed.
 - If you have to touch any parts other than the bed, please do so after turning the power off, removing the power cord from the plug and after the bed and nozzle temperature have been lowered to room temperature.
 - Turn the power switch off, then unplug the power cord from the power outlet.
 - Unplug and release all the cords and cables before moving the machine.
 - Only use the power cords provided with this machine or cords that are approved by the manufacturer.
 - Do not put any portion of your body or objects during machine operation, as the bed, motor, nozzle will be in operation and moving. Small objects such as neckless, hair, etc may cause personal injuries or damages to the machine.
 - If any problems occur(malfunction, body part being caught inside the machine, etc) during machine operation, quickly press the pause [⏸] or stop [■] button located on the on the bottom right of the touch screen located on the bottom right of the upper side.



Nozzle



Bed



UI



4. Precautions

4.1 Installation



⚠ Warning

- Install the machine in a well ventilated area.

You can smell odor during machine operation. It should not be harmful; however, if the area of where the machine is located is not ventilated, make sure to ventilate the area appropriately time to time.

⚙ Important


- Install the machine with its vents spaced at least 10 cm away from walls and other equipments.
Secure properly sufficient space around the machine for easy ventilation and operation.
Use the machine at temperatures of 16 °C ~ 29 °C and relative humidity of 20% ~ 70%.
Do not install or use the machine outdoor.

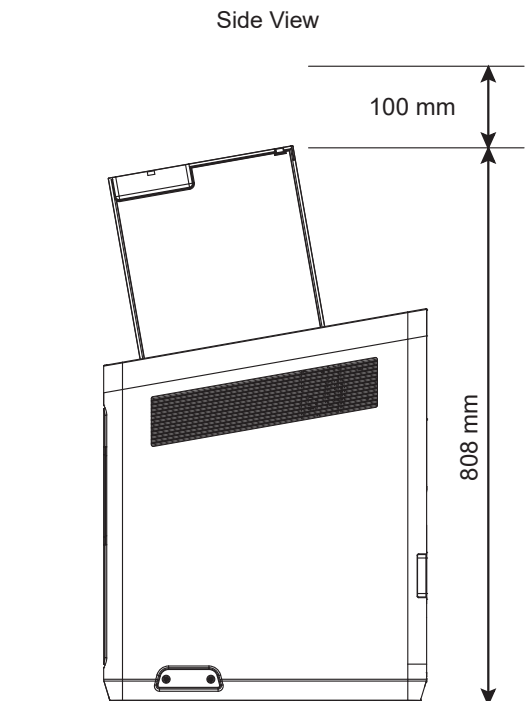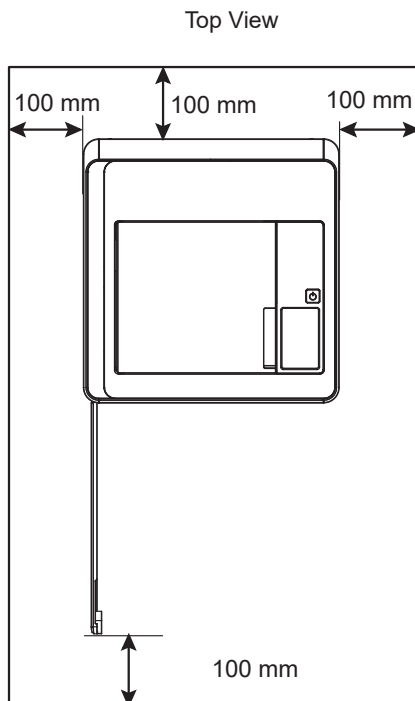

4.2 Moving the Machine

⚠ Warning

- Before moving the machine, be sure to unplug the power cord from the outlet.
When moving the printer, it is recommended that two people lift and move the printer for safety.
- Hold the bottom handles of the machine when moving it.
Bend your knees enough to protect your spine when lifting the machine.
- The unit is heavy. Make sure to carry with two or more people.

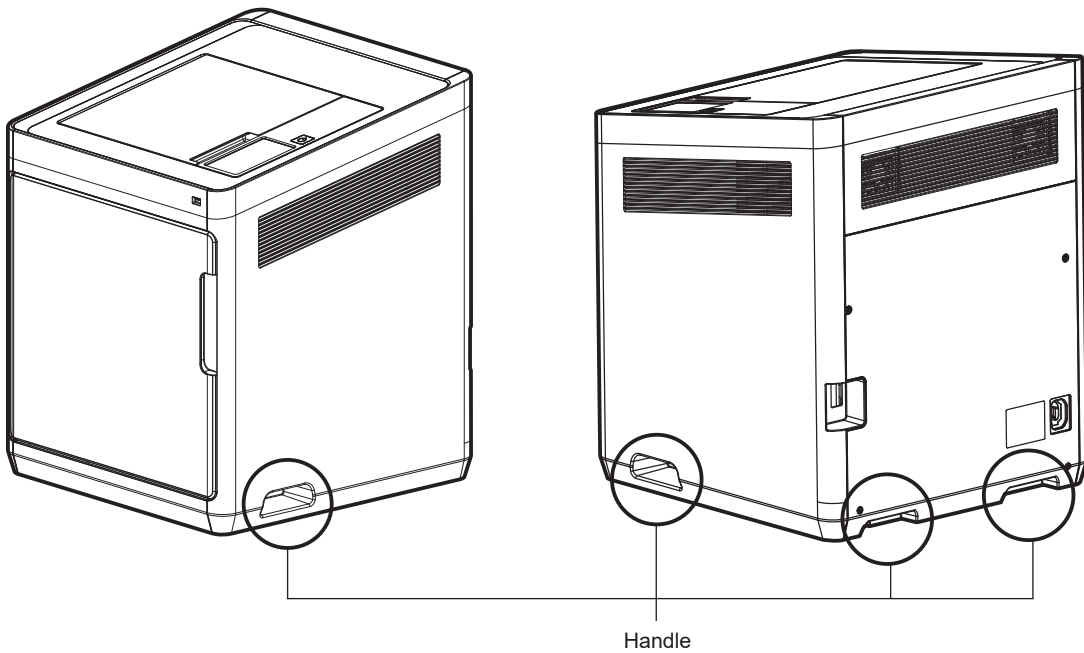

5. Consumables Handling

Warning

- Do not burn the Cartridge unit or filament. It may be a cause of big fire or burn by ignition.

Caution

- Keep them out of the reach of children.
- If skin irritation occurs after touching the filament, please see a doctor.

Important

- Do not keep the cartridge unit in the following places.
 - Exposed to fire
 - Exposed to direct sunlight;
 - Where temperature or humidity may rise;
 - Where sharp change of temperature may occur;
 - Covered with dust;
 - Inside a vehicle for extended time.
- Keep cartridges away from physical impact or vibration.
- Do not unpack cartridges until you are just ready to use them.

5.1 PLA

It is a material that can be easily printed by the users using the 3D printer for the first time. You can easily print various colors and complex shapes. Ambient temperatures above 50 ° C can cause material properties to change, causing the material to expand or scatter.

Nozzle temperature: 200 ° C

Bed temperature: 60 ° C

Printing Speed: 40mm / s

Color: White, Black, Gray, Red, Yellow, Green, Blue, Pink, Purple

Storage : Store in cartridges with the silica gel that was included in the purchase.

5.2 ABS

Widely used in 3D printers, it has more rigidity and heat resistance than PLA. ABS material can be deformed by shrinkage when the temperature in the cabin drops during printing. Particularly when printing a wide output surface to the bed, shrinkage may occur at the corners.

Nozzle temperature: 230 ° C

Bed temperature: 90 ° C

Output speed: 40mm / s

Color: white, black, gray, red, yellow, green, blue

Storage: Store in cartridges with the silica gel that was included in the purchase.

5.3 Flexible

When using flexible materials, clean the inside of the nozzle after the filament load. Even if the inside of the nozzle is cleaned, if the inside of the nozzle has debris, the nozzle may be clogged or the filament may be transported. (Refer to P. 5-3 "1.5 Cleaning the Inside of the Nozzle".)

Be careful because it is difficult to set the output condition compared with PLA and ABS materials. Warp or spider web may occur at output.

Flexible materials can cause twists in the extruder or inside the cartridge rollers. (Refer to P. 5-14 "3.5 Solution for Notification 401".)

Nozzle temperature: 240 ° C

Bed temperature: 60 ° C

Output speed: 40mm / s

Color: White, Red, Yellow, Black, Green, Orange.

Storage: Store in cartridges with the silica gel that was included in the purchase.

6. Instructions for Use

⚠ Caution

- The nozzle and the bed that are inside the machine are very hot during machine operation. Please be cautious not to touch the nozzle or the bed during removal of the printed object or during inspection of the machine inside. It may become the cause of injuries or burns.
- Never operate the machine in the way this manual does not specifically instruct.

Notification for California customers, USA



⚠ Warning

- This product uses chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. This appliance and its accessories can cause low-level exposure to chemicals during operation, which can be reduced by operating the appliance in a well ventilated area.


⚠ Caution

- Do not open the rear cover or touch any parts of the extruder unit during machine operation to prevent personal injuries or damages.
- If you need inspection of the extruder unit, turn off the power and disconnect the power cord and follow the instructions below.


Remove the cover upward.

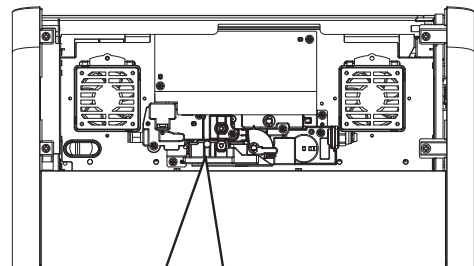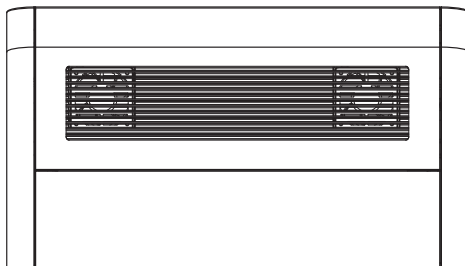

Remove 5 screws.

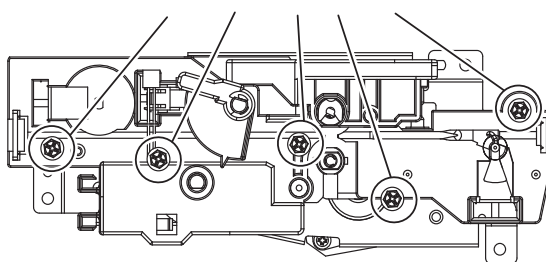

Remove filaments that are blocked.

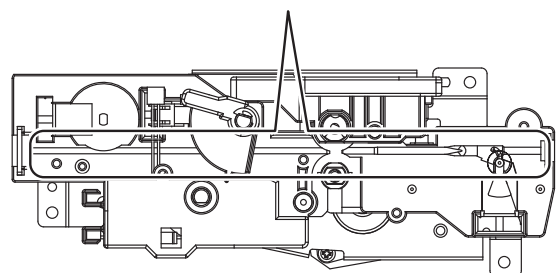

7. Ventilation

 Caution

- Use the machine in a place with good ventilation. If the machine is used in a place without good ventilation, this may be harmful for your health. Ventilate it on a regular basis.
- Do not block vents. Inappropriate cooling may lead to high temperatures inside the machine.
- In general, a new machine may produce small amount of gaseous components, so ensure good ventilation when the machine is used for the first time. If the machine is in operation for an extended time, do not stay in the same room for a long time.

8. Notices

❖ Noise Emission Level

The following are measured in accordance of ISO 7779 and reported to meet ISO 9296.
Some modes may not be available in your purchased products.

Average Sound Pressure at 1 Meter Away	
Printing	45dBA(Normal Print Condition - Printing speed 40 mm/s, Travel speed 100 mm/s)
Standby	under 40 dBA

❖ Temperature/Humidity

Operation	16 °C ~ 29 °C, 20%RH~70%RH
Shipping	-30 °C ~ 50 °C, 15%RH~95%RH(for 0 °C or lower temperature, room's temperature should be higher than the outdoor's; must not touch the floor)
Storage	-30 °C ~ 50 °C, Below 80%RH(No condensation, must not touch the floor)

❖ Disposal of The Products

Do not dispose the machine and consumables together with household wastes.
For disposal or recycling, contact your local sales office.

❖ EMI(Electromagnetic Interference) Notice

This machine complies with the limits for Class A.

Class A (Industrial Device) : This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

① FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

② INFORMATION TO USER

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

③ CAUTION

Any changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

④ DECLARATION OF CONFORMITY (DOC Letter): 13page

❖ Wireless LAN Specifications

The wireless device may be affected by electromagnetic interference so it should not be used for life saving services.

❖ WLAN Notice

Exposure to radio frequency radiation

The following notice is applicable if your printer has a wireless network card installed.

The radiated output power of this device is far below the FCC radio frequency exposure limits.

A minimum clearance of 20 cm (8 inches) must be maintained between the antenna and any persons for this device to satisfy the RF exposure requirements of the FCC.

❖ Power Consumption

Power Consumption of the Products

The below table shows power consumption.

Mode	Description	Power Consumption(W)
Printing	A device is printing using electronic input data.	300W
Standby	A device is in standby mode.	20W
Power Off	A power plug is plugged into the outlet with the machine's switch off .	0.5W

The above power consumption is the hourly average value.

Instant power consumption can be much higher than the average value.

Deactivated Mode

The machine consumes power even in the deactivated mode. Unplug the power cord to completely stop the power consumption.

Total Energy Usage

It would be useful to calculate the Total energy usage of the machine.

Since the electricity bill is charged in Watt unit, you have to multiply time spent in each mode by power consumption in order to calculate the energy use.

Total energy usage is the sum of energy used in each mode.

Condensation

Dramatic change of the ambient temperature may produces water droplets on the interior and exterior of the machine. Wipe the water droplets on the outer surface, but for the inside please let them dry off by leaving front door and cover opened.

❖ Safety Notice

This equipment is not suitable for use in locations where children are likely to be present.

DECLARATION OF CONFORMITY

Product name : 3D Printer

Model name : 1X

FCC Rules : Tested to comply with FCC Part 15, Class A

Operating Environment : For OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RESPONSIBLE PARTY:

Name : Sindoh America, Ltd.

Address : 6047 Tyvola Glen Circle, Suite #115, Charlotte, NC 28217

Phone No. : 1-704-414-6690

We hereby declare that the above specified equipment with the trade name and model number was tested conforming to the applicable FCC Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the Commission's requirements.

Manufacturer : Sindoh Co., Ltd.

Date of Issue :

Title/Name :

Signature :

Sindoh Co., Ltd.

3, Seongsu-ro24(isipsa)-gil, Seongdong-gu, Seoul, 04797 Korea


Sindoh

9. Disposal of Used Battery


Control board uses a Lithium battery.

Please discard used batteries following the environmentally friendly procedure stated on the manufacturer guidelines.

To replace batteries, please contact a qualified service engineer.

10. Wifi Module Disclaimer

- ❖ This module includes a Wifi module, compatible only with Sindoh 3DWOX models.

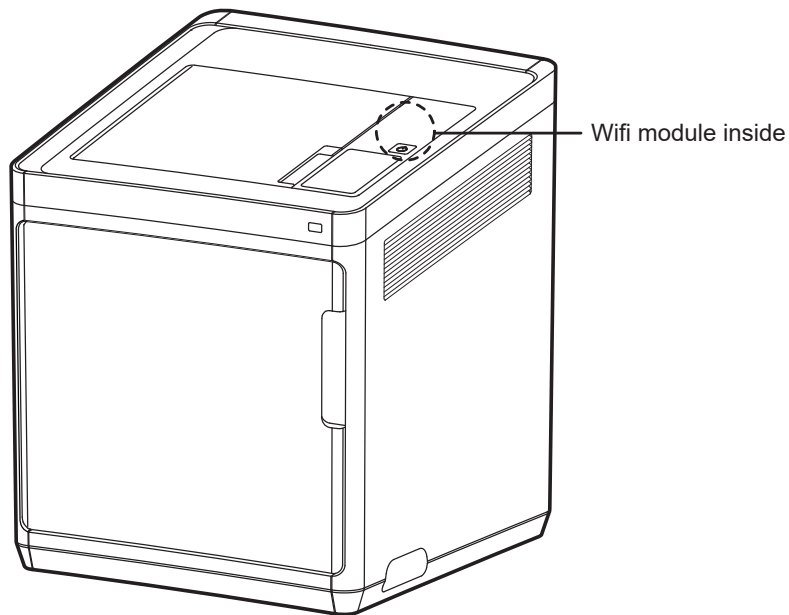

❖ Precautions

This Wifi module can cause radio interference, therefore it should not be used for any purposes related to human lives.

Do not expose this product to water, humidity or liquid.

Do not expose this product to direct light, hot temperature or fire.

⚠ Warning

- If the machine has been modified by an unauthorized personnel, Sindoh is not liable for the machine trouble or failure.

⚠ Caution

- To prevent RF signals that exceed FCC RF exposure limits from being exposed to human, this module has been mounted in a place that minimizes human access.

❖ Precautions

Frequency	IEEE 802.11b : 2412MHz ~ 2462MHz IEEE 802.11g : 2412MHz ~ 2462MHz IEEE 802.11n(20MHz) : 2412MHz ~ 2462MHz IEEE 802.11n(40MHz) : 2422MHz ~ 2452MHz
Antenna Power Density	IEEE 802.11b : 10mW(10dbm)/MHz IEEE 802.11g : 10mW(10dbm)/MHz IEEE 802.11n(20MHz) : 10mW(10dbm)/MHz IEEE 802.11n(40MHz) : 10mW(10dbm)/MHz
No. of Channels	IEEE 802.11b : 11 IEEE 802.11g : 11 IEEE 802.11n(20MHz) : 11 IEEE 802.11n(40MHz) : 7
Modulation	IEEE 802.11b : DSSS/CCK IEEE 802.11g : OFDM IEEE 802.11n(20MHz) : OFDM IEEE 802.11n(40MHz) : OFDM
Power Consumption	5V 500mA(Maximum)
Dimension	37.0mm X 28.0mm X 3.7 mm
Operation Temperature	0 ~ 60 °C
Storage Temperature	-10 ~ 80 °C

11. USB Memory Disclaimer

❖ FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

❖ INFORMATION TO USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

❖ CAUTION

Any changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

❖ Specification of compatible USB flash drive for 3DWOX


- Please use the enclosed USB flash drive.
- The enclosed USB flash drive is in FAT32 format.
The 3DWOX 3D printer does not support USB flash drives in NTFS format.
- The warranty will not be valid if a 3rd party USB drive is used.

❖ **IC Identification on Class of ITE**

CAN ICES-3 (B)/NMB-3 (B)

DECLARATION OF CONFORMITY

Product name : USB Flash Drive
Model name : 8GB-WJ004, 4GB-WJ004
FCC Rules : Tested to comply with FCC Part 15, Class A
Operating Environment : For HOME OR OFFICE USE

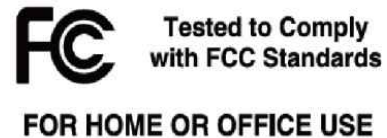

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RESPONSIBLE PARTY

Name : Sindoh America, Ltd.
Address : 6047 Tyvola Glen Circle, Suite #115, Charlotte, NC 28217
Phone No. : 1-704-414-6690

We hereby declare that the above specified equipment with the trade name and model number was tested conforming to the applicable FCC Rules under the most accurate measurement standards possible, and that all the necessary steps have been taken and are in force to assure that production units of the same equipment will continue to comply with the Commission's requirements.

Manufacturer : Sindoh Co., Ltd.
Address : 3, Seongsuiro24(isipsa)-gil, Seongdong-gu, Seoul, 04797 REPUBLIC OF KOREA

**1X Series
USER MANUAL**

**Preparations for
Machine Operation**

1

1. Machine Specifications

1.1 Printing

Printing Method	Fused Filament Fabrication
Max. Print Length(mm)	W(max):228, D(max):200, H(max):300
Print Layer Thickness Setting	0.05~0.4mm
Basic Nozzle diameter	0.4mm
Filament width	1.75mm
Printable materials	PLA, ABS, FLEXIBLE
Printable color	PLA : White, Black, Gray, Red, Yellow, Green, Blue, Pink, Purple ABS : White, Black, Gray, Red, Yellow, Green, Blue Flexible: White, Black, Yellow, Green, Red, Orange
Bed leveling	Auto measuring + Manual leveling
Print Head	One Nozzle

1.2 Temperature/Speed

Continuous Nozzle Usage/ Maximum Temperature	Recommended Temperature(Nozzle): PLA 200℃, ABS 230℃, Flexible 240℃ / Max 270℃
Continuous Bed Usage/ Maximum Temperature	Recommended Temperature(Bed): PLA 60℃, ABS 90℃, Flexible 60℃ / Max 110℃
Recommended printing speed/maximum speed	40mm/s Recommended / 200mm/s max

* Continuous operation at maximum temperature can cause malfunction, Please use in case of nozzle clogging or other troubles.

1.3 Machine

Power	300W
Dimensions	454 x 468 x 571(W x D x H)
Weight	26kg (excluding cartridge)
Port	USB Device, USB Host , Wifi, Ethernet
Cartridge	Auto Load / Unload

1.4 Software/Support

Supported Software	Sindoh Exclusive Slicer
Supported File Format	*.stl, *.ply, *.obj, *.gcode, *.amf
Supported Operating System	Windows 7 or above, Mac OSX 10.10 or above
Recommended Memory Requirements	DRAM 8 GB+

Note

- Graphics must support OpenGL 2.0 or higher.
- This product can be utilized with Alexa Echo for hands-free control. Please refer to the below URL for more details on how to use.(<https://3dprinter.sindoh.com/support/downloads>)

1.5 Default Setting of Print layer Width


Nozzle Width	0.4mm
Print Layer Width	0.2mm

2. Basic Components


Please check all basic components are in the box.

⚠ Caution


- Please keep the box and packaging material; they are needed for product exchange or repair service.

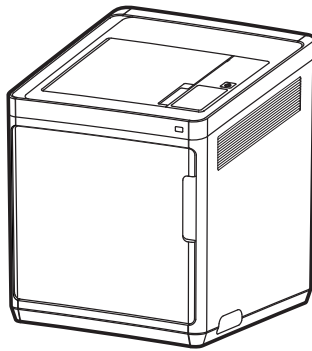


3D Printer

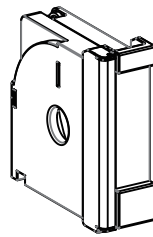

Cartridge

 

Power Cable

 


USB Cable



Scraper




USB Drive

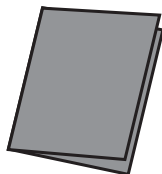

Reference Guide



Tube for Cleaning

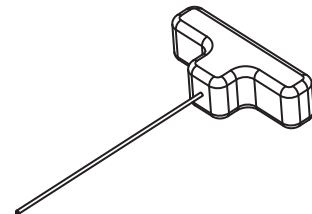

Nozzle Cleaner




Spring Nozzle Cleaner

⚠ Warning


- The blades of the scraper can be very sharp. Please be cautious. Please do not use for other than removing printables.
Please do not touch the blade of the scraper.

3. Understanding the Device Parts

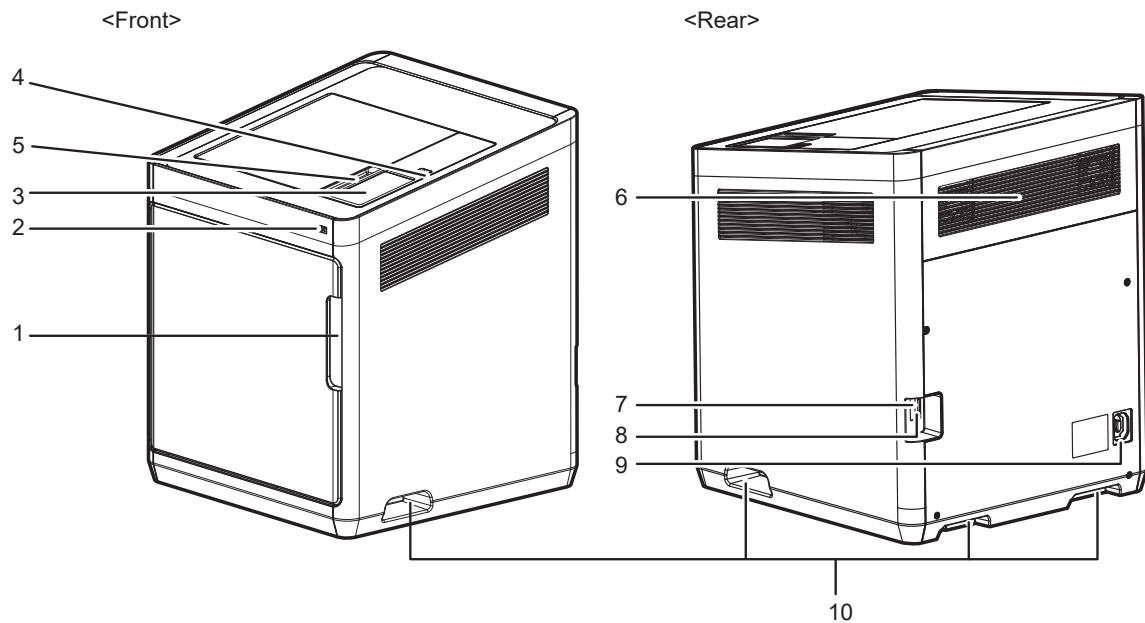


No.	Part Name	Description	
1	Front door handle	A handle to open the front door.	
2	USB port 	Connect USB flash drive containing printing information and print directly from USB flash drive.	
3	LCD Control panel	Screen used to control printer. ⚠ Caution - Usage of printer is recommended after removing the protection film on LCD control panel. If the film is not removed, the touch screen may not work properly.	
4	Power Button 	Briefly press this button to turn on printer. Press and hold for 2 seconds to turn off the printer	
	Power Button Indicator	Lamp On	Power is On.
		1 second interval flickering	Can be turned on instantly. (power cable is connected) ⚠ Caution - If in case of not using the printer for long period of time, please unplug the power cord. - The lamp may flicker for a few seconds after the power cord is disconnected.
		Lamp Off	Inactive Mode. (Power cord is unplugged)
5	Top door handle	A handle to open top door.	
6	Ventilator fan(Odor removing filter)	Discharges heat from interior. Filters out odor created through printing.	
7	Lan Port	Allows a device to connect to a network using a LAN cable.	
8	USB Port	Used to connect printer to computer with a USB cable.	
9	Power port	Power cord connector.	
10	Carrying Handles	Handles to use when moving the printer.	

<Interior>

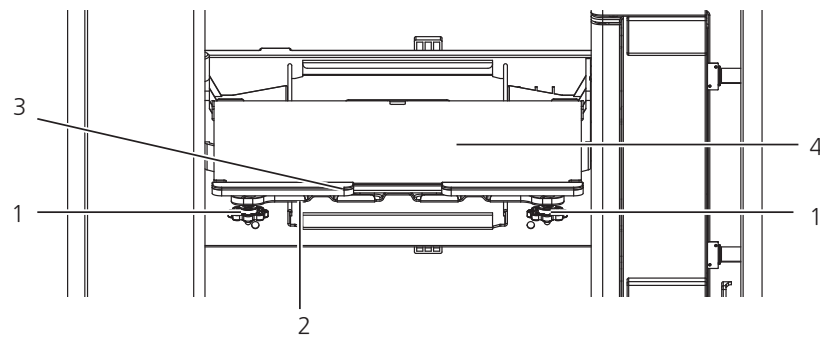

No.	Part Name	Description
1	Bed height adjustment Knob	Used to level the Flexible bed.
2	Removable bed handle	Used to assemble and dismantle Flexible bed
3	Bed heater	Heats the printables' bottom surface to stabilize it on the bed.
4	Flexible bed (bed sheet)	Seating space for Printable

<Nozzle>

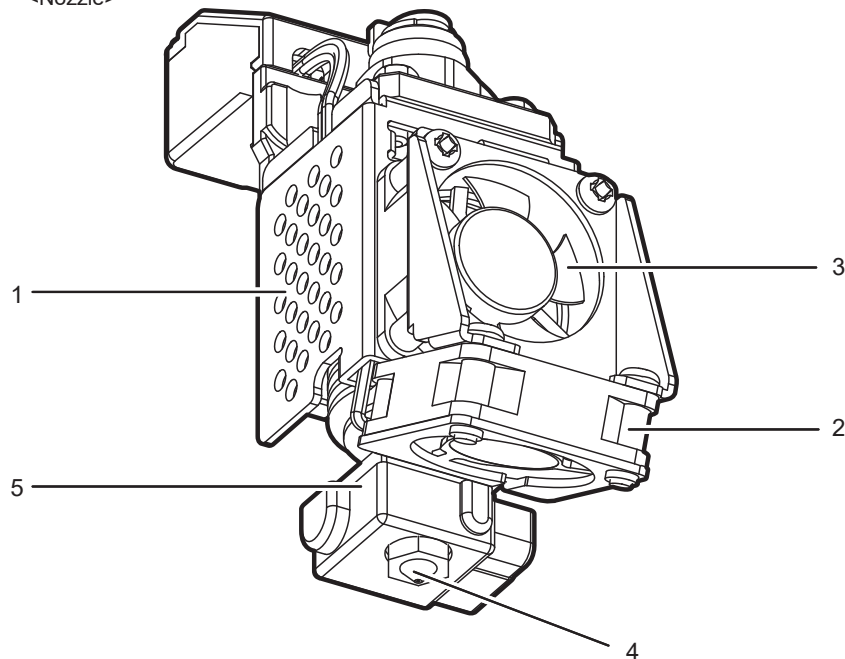


No.	Part Name	Description
1	Body	Main body of the nozzle part.
2	Fan 1	Cooling fan for extrusion.
3	Fan 2	Cooling fan for Nozzle heatsink.
4	Nozzle	Nozzle for printing.
5	Heater block	Nozzle part for filament heating.

4. Installation(Product connection, Cartridge Setup and Software installation)

4.1 Device Connection


- 1 On the rear side of the machine, connect the power cable to the power socket.
Next, connect the power cable to the power outlet.
- 2 Press the power button, located on top of the machine.
- 3 After main menu is displayed on the LCD screen, install the cartridge (Refer to UI manual “LOAD”).

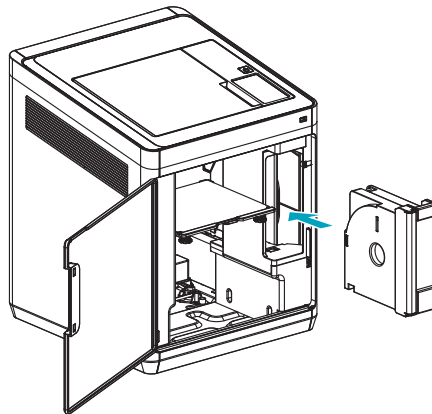


- 4 Connection to PC
 - 1) Direct Connection: Connect one end of the enclosed USB cable to the back of the 3DWOX and the other end to the PC.
 - 2) Network Connection: Refer to 2-25(Network) of the User Manual.
- 5 Plug USB flash drive in, and install machine drivers and Slicer program.

4.2 Program Installation

 
- 1 Start the installation of 3DWOX Desktop program by clicking on “3DWOX Desktop.exe” file in the enclosed USB.




- 2 Install the additional files required by the software first.

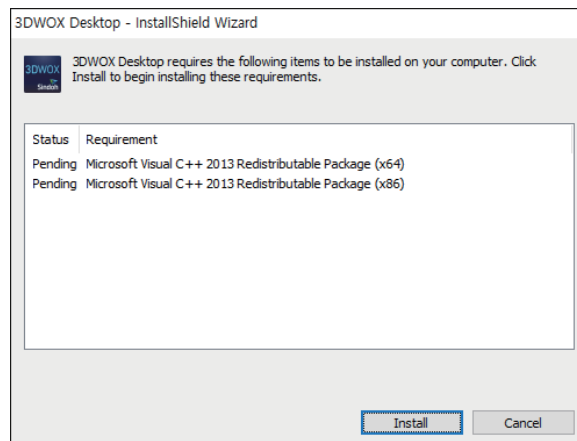



- 3** When installation of the file is complete, a pop-up window shows up as picture below.
Press **[Next]** button to initiate the installation of 3DWOX Desktop program.

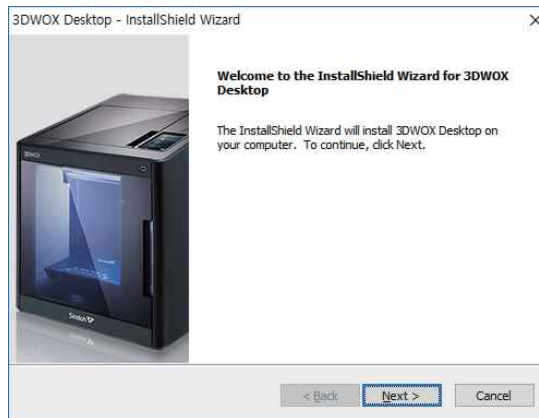

- 4** Choose the destination location of the file and press **[Next]** to proceed.

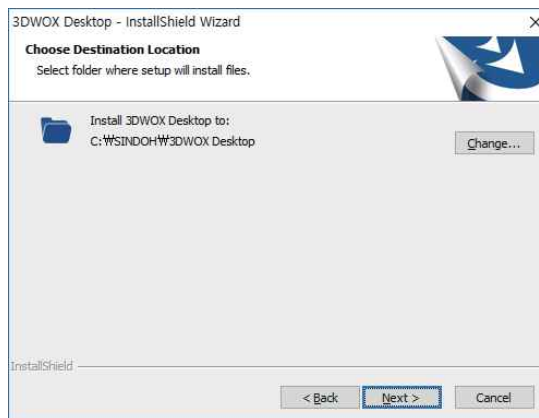

- 5** The file gets saved and the installation starts.

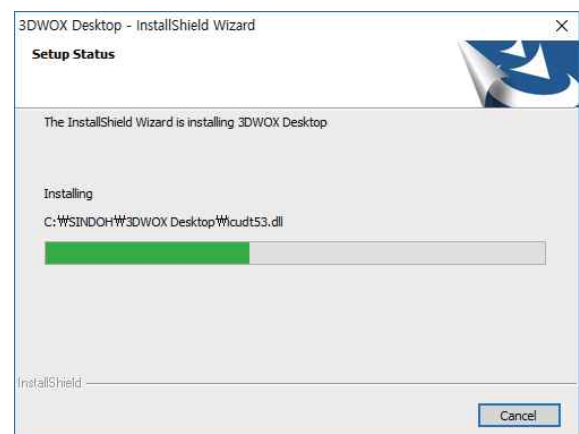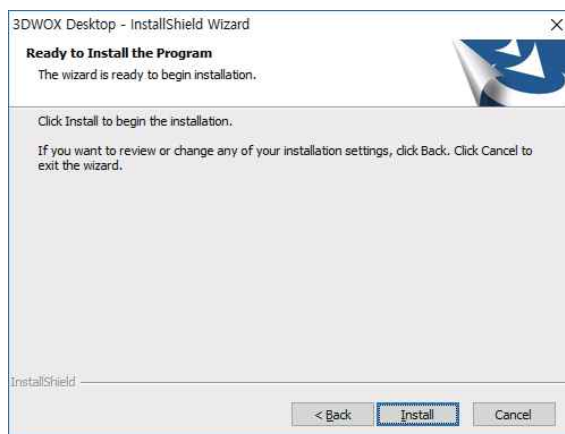

1 Preparations for Machine Operation

- 6 After all installation is complete, you can see that the “**3DWOX Desktop**” created on the desktop of your computer.



**1X Series
USER MANUAL**

UI Menu Function

2

1. UI Menu Function description

CARTRIDGE	LOAD		
	UNLOAD		
	UNLOCK		
SETTING	X Y Z		
	EXTRUDER		
	BED LEVELING		
	Z OFFSET		
	NOZZLE CLEANING		
	CLEANING CASE		
	NETWORK	WIRELESS	WIRELESS
			NETWORK SELECT
			DHCP / STATIC
			SSID DELETE
		WIRED	DHCP / STATIC
		SETTING	
	BED LOWERING		
	TEST PRINT		
	ACTIVE LEVELING		
	SECURITY		
	VOICE GUIDE		
	BEEP SOUND		
	LANGUAGE		
	E-MAIL		
	UNIT		
	TIME SETTING		
	TIME ZONE		
	POWER SAVIG MODE		
	LAMP		
	WEB		
	SOFTWARE UPDATE		
	NOZZLE REPLACEMENT		
	CLOUD		
	OPEN MATERIAL		

Information	NAME
	CHANGE NAME & PW
	MODEL NAME
	SERIAL NO.
	VERSION
	GUI VER.
	WIRED IP
	WIRED MAC IP
	WIRELESS IP
	WIRELESS MAC IP
	WEB SITE
	GUIDE
	HISTORY


1.1 CARTRIDGE

CARTRIDGE	LOAD
	UNLOAD
	UNLOCK


LOAD

This function automatically loads filament to the Nozzle.



- 1 From the HOME screen press **[CARTRIDGE]**.

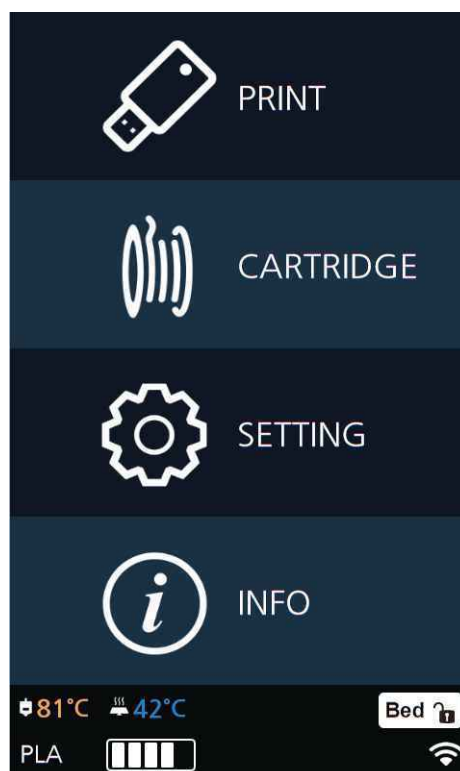

- 2 Press [LOAD] to activate Cartridge load.

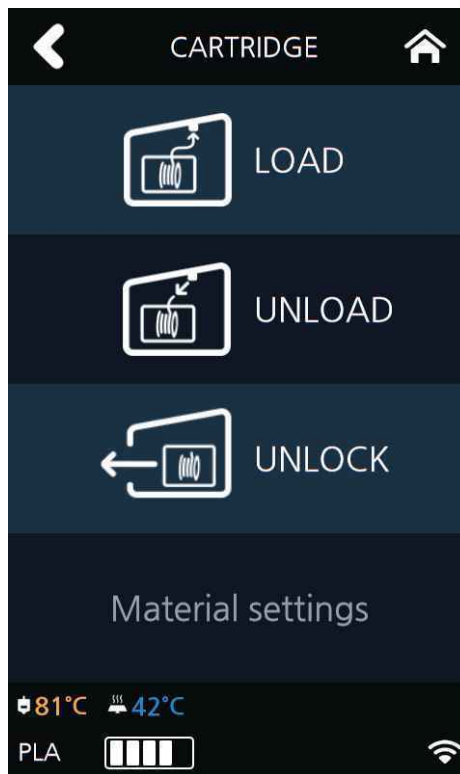


- 3 When [OK] is pressed at the cartridge load confirming message, cartridge load will automatically proceed. The filament reaches to the nozzle and it is heated up to the specified temperature. Then the filament is inserted into the heated nozzle. After the process has finished, screen will automatically return to the [HOME] screen.

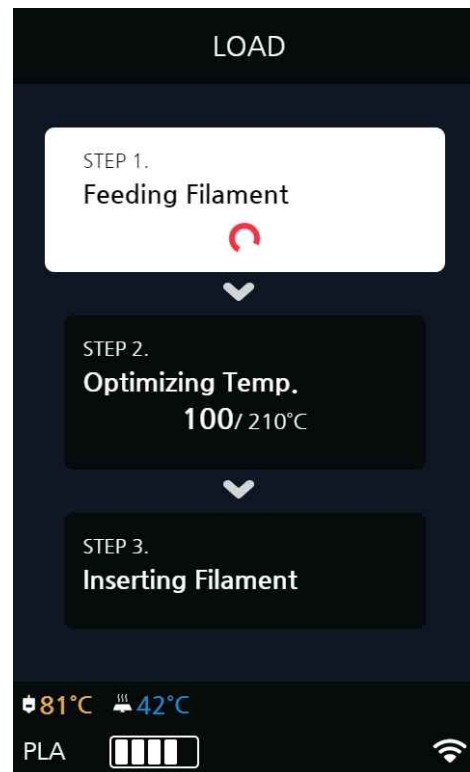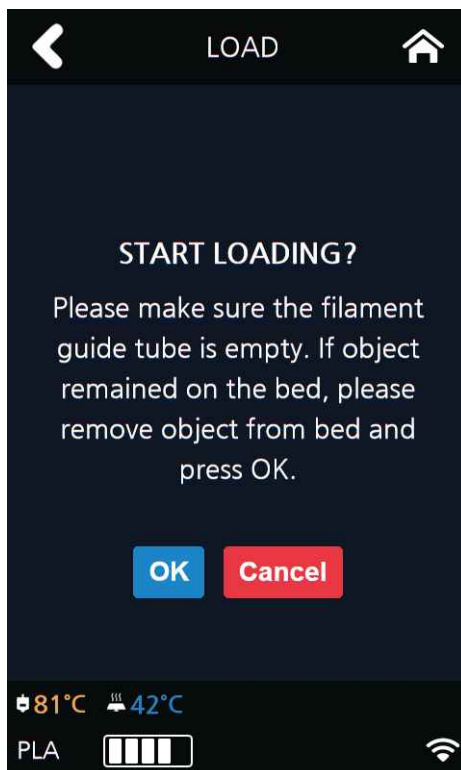


UNLOAD

This function automatically unloads filament from the nozzle.

- 1 From the HOME screen press **[CARTRIDGE]**.

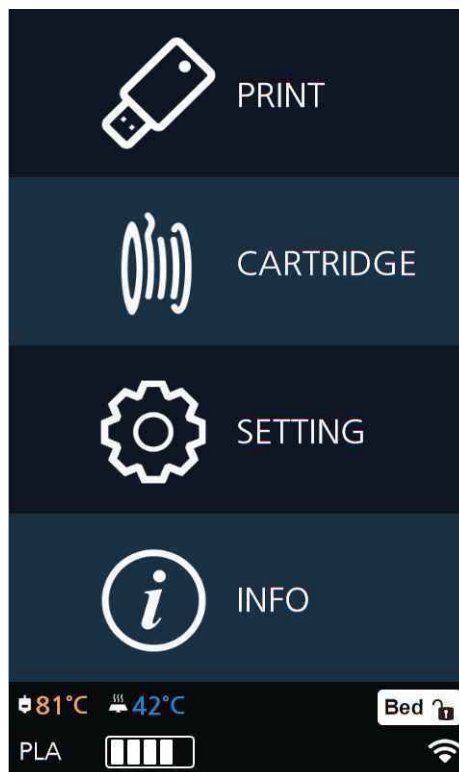


- 2 Press **[UNLOAD]** to activate Cartridge unloading.

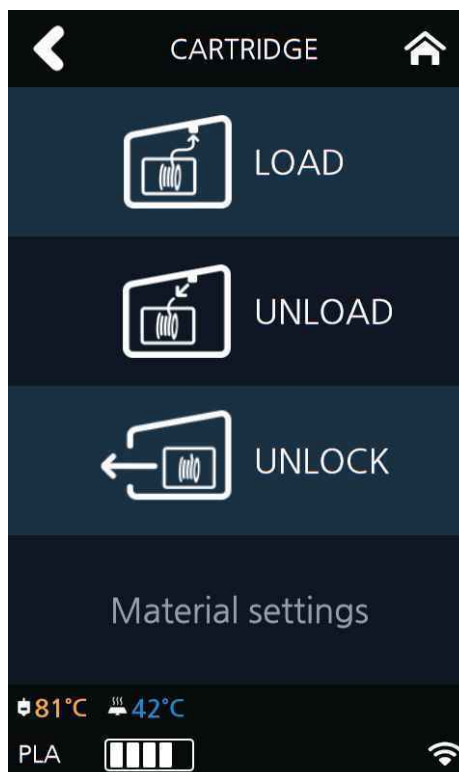

- 3 When [OK] is pressed at the cartridge unload confirming message, cartridge unloading will automatically proceed. To remove filament, the nozzle is heated up to the specified temperature and the filament unload starts.


After the filament has been removed, the screen will automatically turn to the [UNLOCK] screen to let the user remove the cartridge.

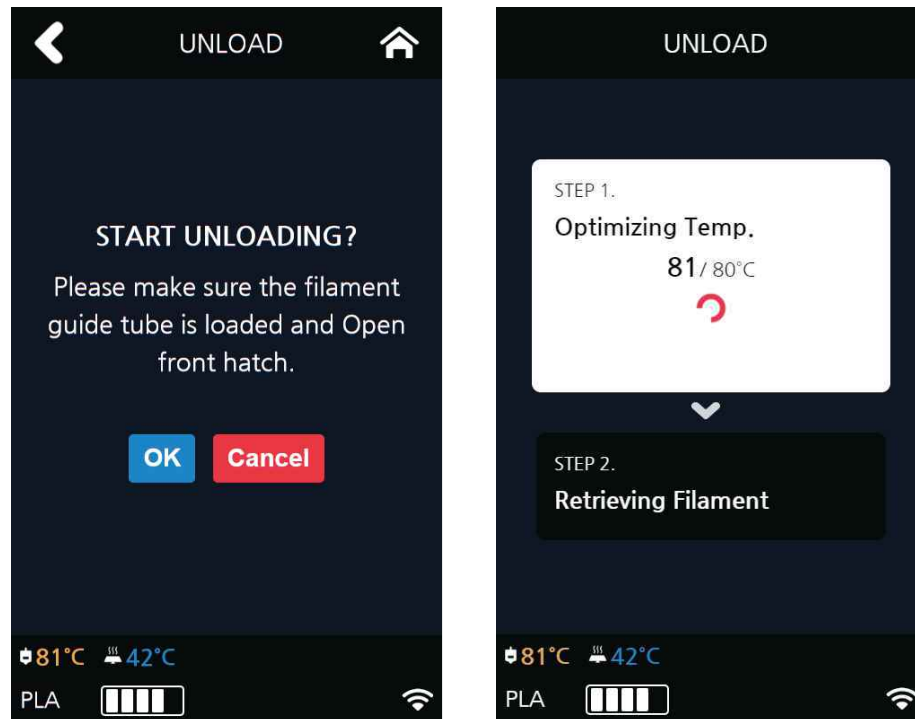


❖ Unload Flexible Filament.

Follow the instructions when you unload soft-materials such as Flexible.



- 1 From the HOME screen press [CARTRIDGE].

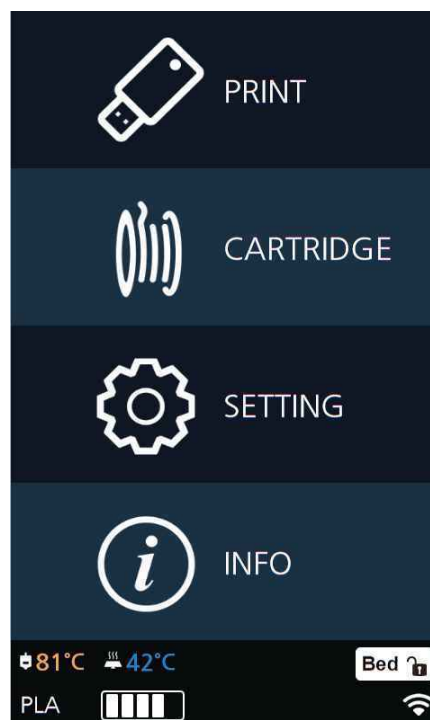



- 2** Press **[UNLOAD]** to activate Cartridge unloading.

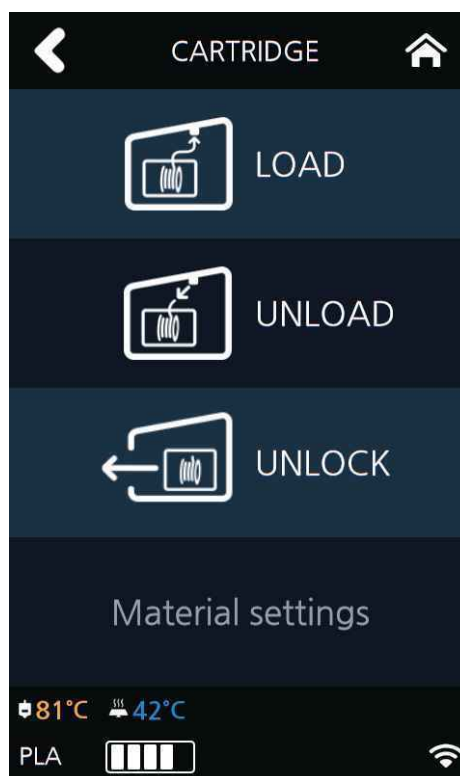


- 3** Remove the snap ring and tube from the nozzle as shown in the following UI screen, and press the **[OK]** button.

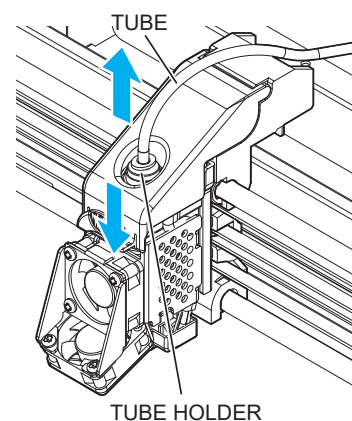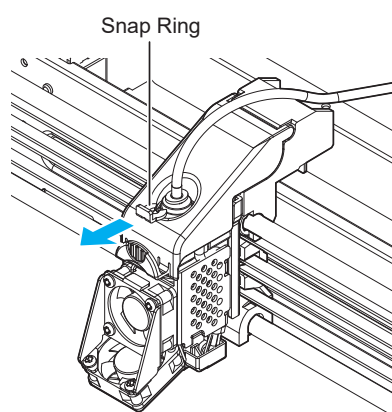


- 4 Cut the filament that came out of the tube as shown below and press the [OK] button.

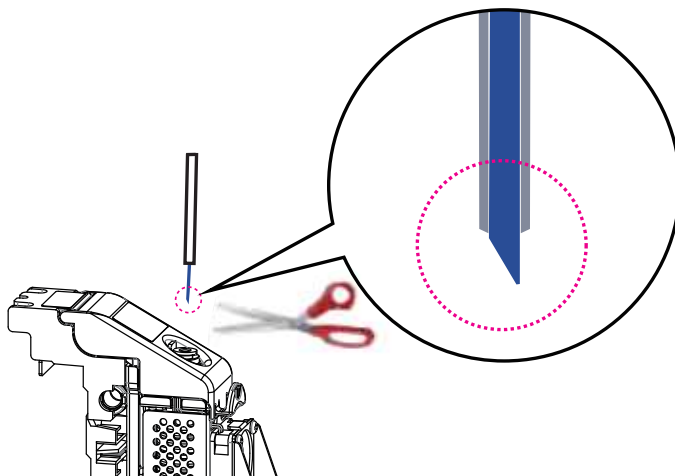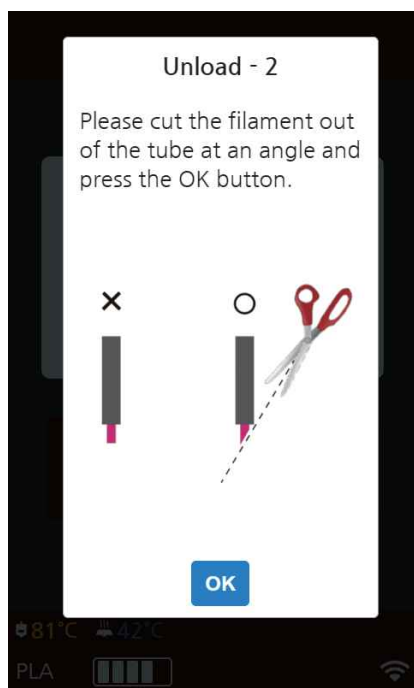

- 5 Reinsert the tube into the nozzle and assemble the snap ring. Push the tube back toward the nozzle again and press the [OK] button.

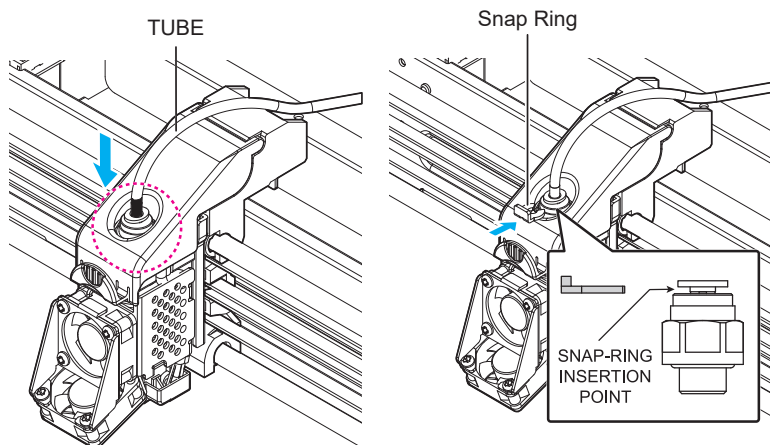

- 6 After the filament has been removed, the screen will automatically turn to the [UNLOCK] screen to let the user remove the cartridge.

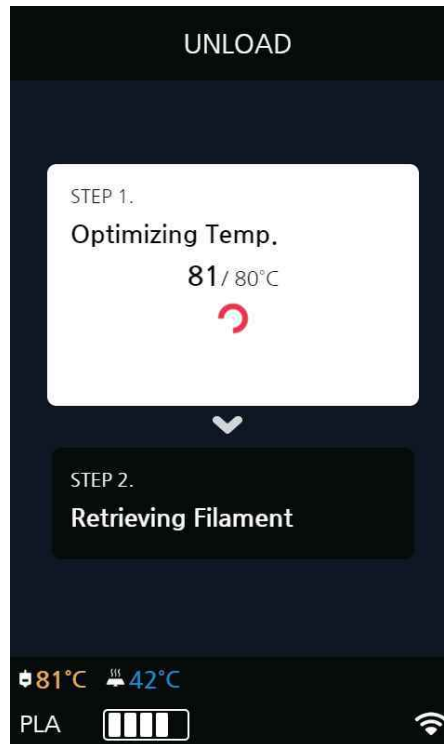

UNLOCK


This Function is to remove the cartridge out of the printer. Cartridge unlock automatically initiates when filament unload is finished. Cartridge unlock can also be manually done by the user.

❖ When unlock screen automatically appears after cartridge unload.

- 1 For 10 seconds **[LOCK]** state is deactivated and the user can detach cartridge from printer. If the cartridge can't be pulled out even after "unlock", gently push it forward and then try to pull out again.




- 2 After 10 seconds printer will automatically change to **[LOCK]** state and **[UNLOCK]** appears.

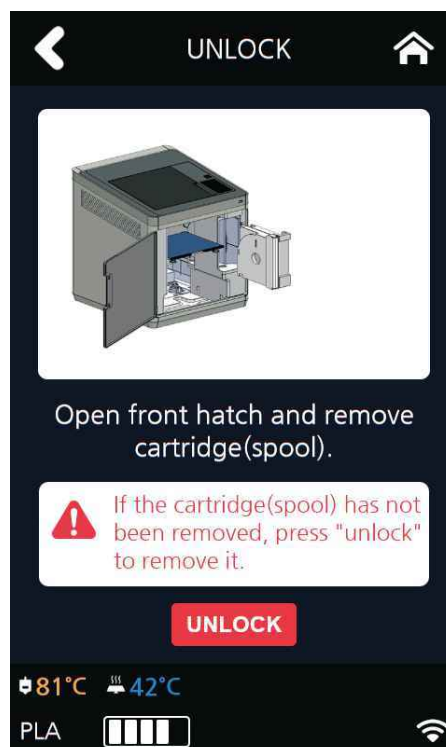


❖ To manually unlock later.

1 From home screen press [CARTRIDGE].

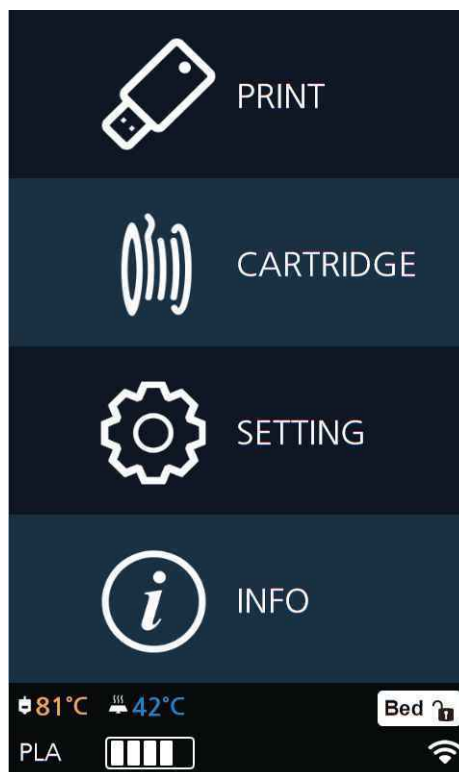


2 Press [UNLOCK] to activate UNLOCK function.

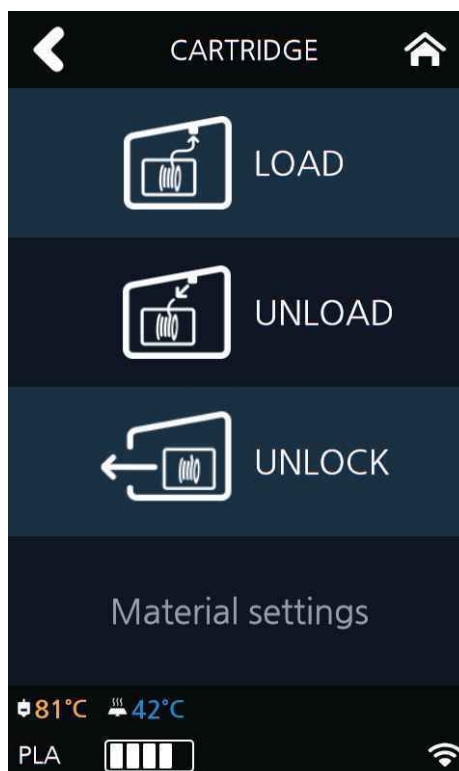

- 3 For 10 seconds **[LOCK]** state is deactivated and the user can detach cartridge from printer.
If the cartridge can't be pulled out even after "unlock", gently push it forward and then try to pull out again.



- 4 After 10 seconds printer will automatically change to **[LOCK]** state and **[UNLOCK]** appears.

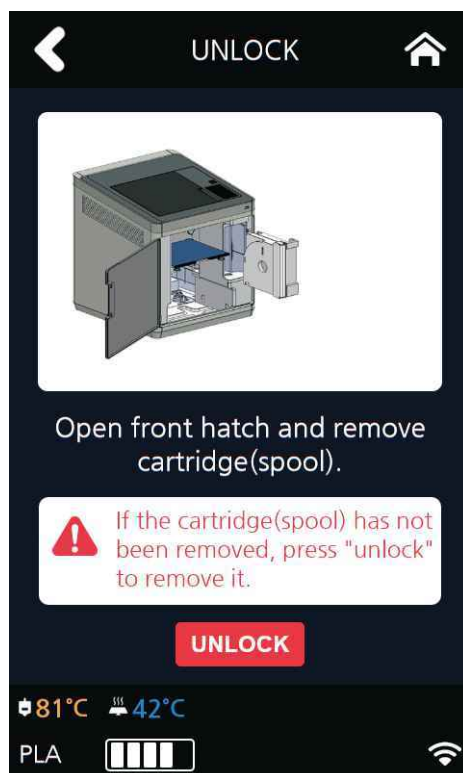


1.2 Settings

SETTING	X Y Z		
	EXTRUDER		
	BED LEVELING		
	Z OFFSET		
	NOZZLE CLEANING		
	CLEANING CASE		
	NETWORK	WIRELESS	WIRELESS
			NETWORK SELECT
			DHCP / STATIC
			SSID DELETE
		WIRED	DHCP / STATIC
		SETTING	
	BED LOWERING		
	TEST PRINT		
	ACTIVE LEVELING		
	SECURITY		
	VOICE GUIDE		
	BEEP SOUND		
	LANGUAGE		
	E-MAIL		
	UNIT		
	TIME SETTING		
	TIME ZONE		
	POWER SAVIG MODE		
	LAMP		
	WEB		
	SOFTWARE UPDATE		
	NOZZLE REPLACEMENT		
	CLOUD		
	OPEN MATERIAL		


X, Y, Z

Use to change the positions of the X axis of Nozzle, and the Y, Z axes of Bed.


- 1 From home screen press [SETTING].

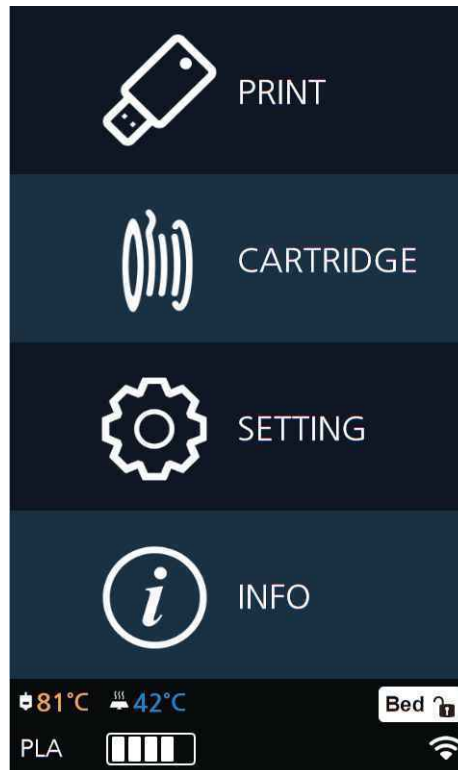

- 2 Press the [X,Y,Z] button to enter X, Y, Z.

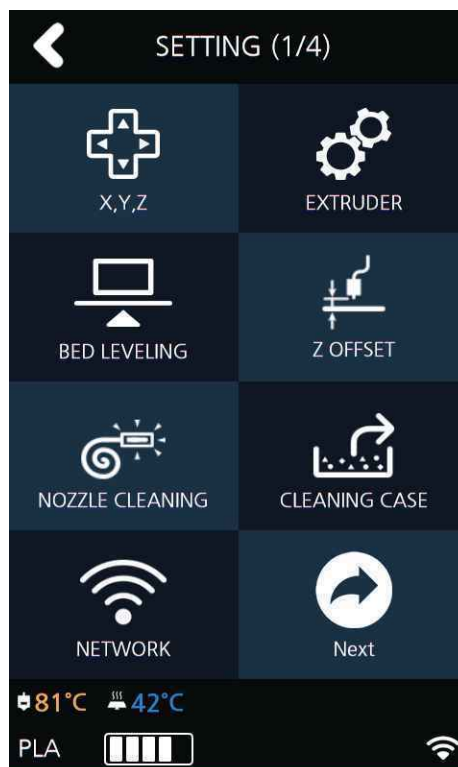


- 3** Press either **[0.1]**, **[1]**, **[10]**, or **[100]** to select the length of transfer, and press the arrows to move the Bed and the Nozzle in the respective position.
- To move to each axis' home location, press **[All]**, **[X]**, **[Y]** or **[Z]**.

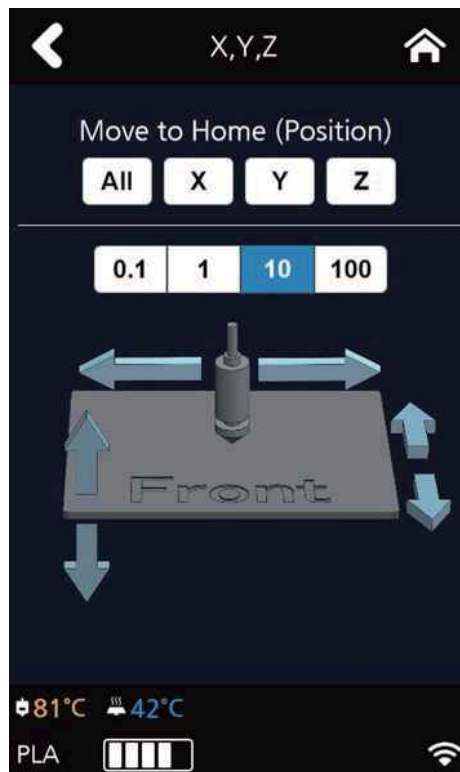

EXTRUDER


This function is used to fine control the filament to its position.

- 1** From home screen press **[SETTING]**.

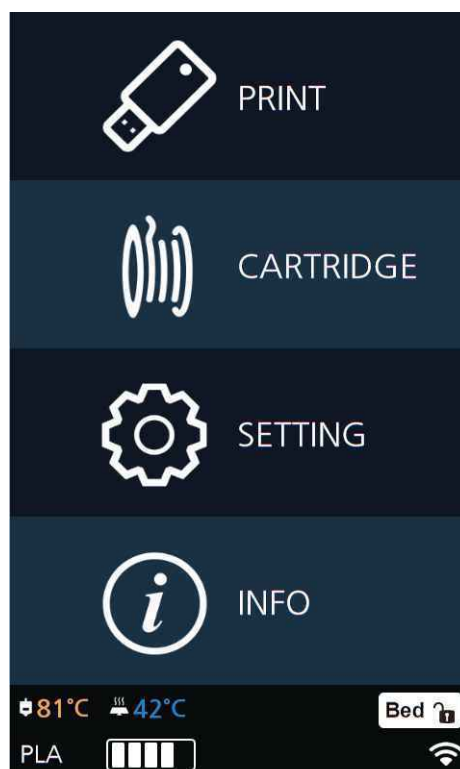


2 UI Menu Function

- 2 Press [EXTRUDER] to enter EXTRUDER settings.


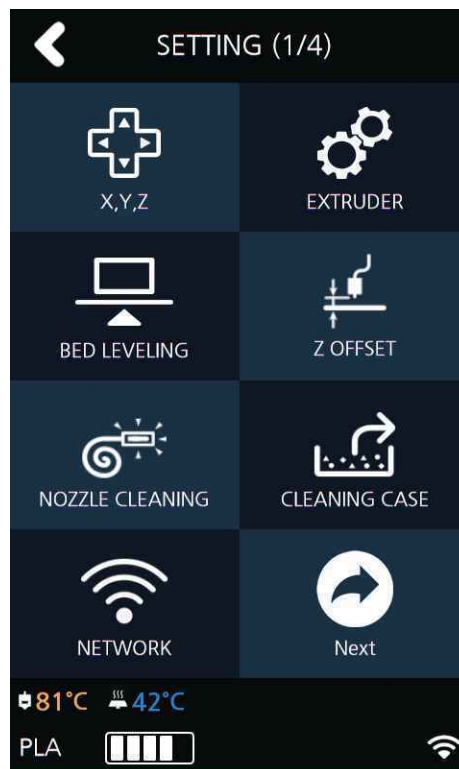


- 3 To Control [EXTRUDER], Nozzle temperature needs to be raised.

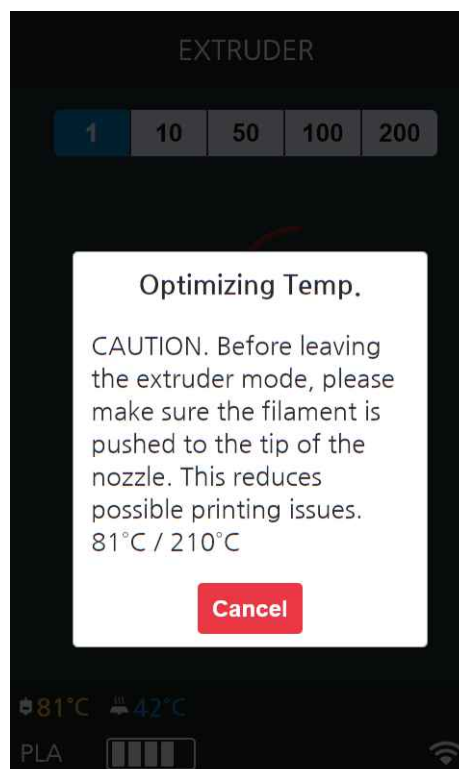

- 4** Press **[1]**, **[10]**, **[50]**, **[100]**, **[200]** to select an amount.


In the image shown below, press the direction to move the filament.

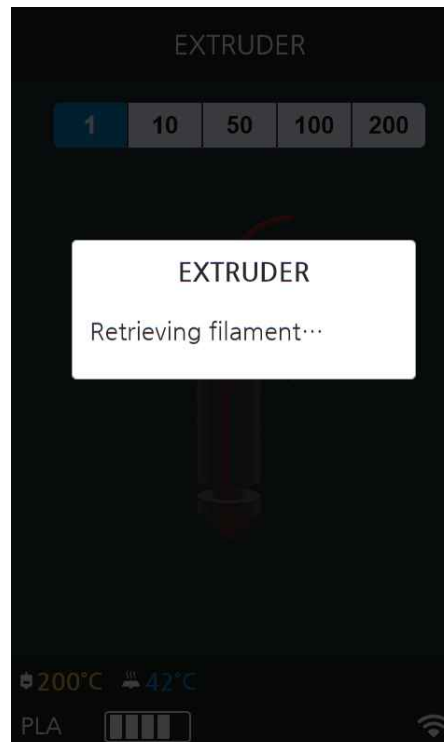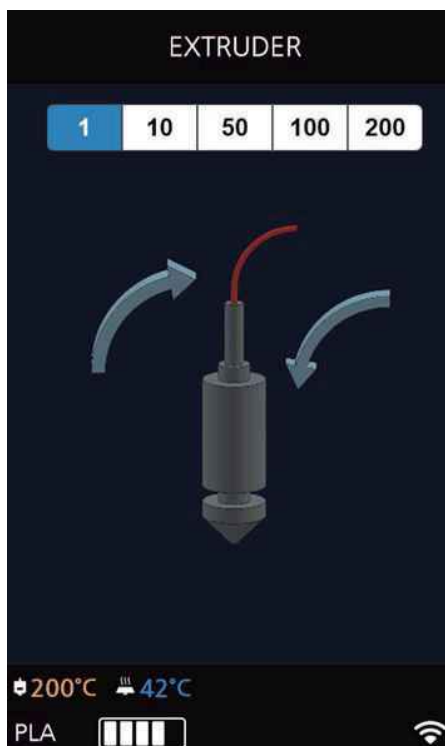

BED LEVELING



This function is used to perform the leveling of the bed.

- 1** From home screen press **[SETTING]**.


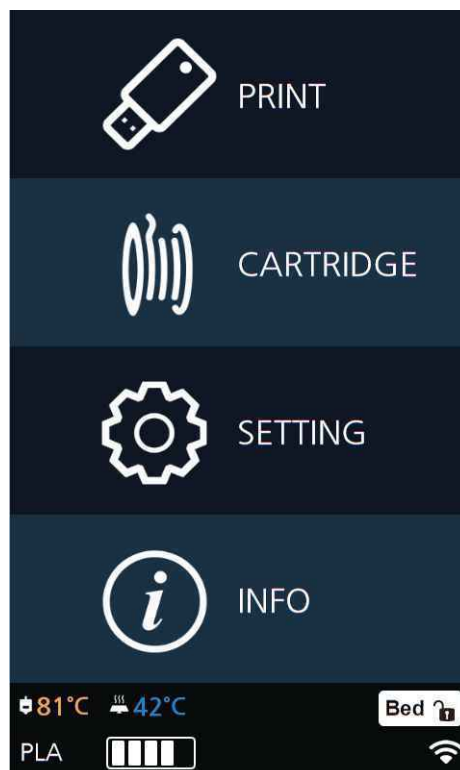


- 2 Press the **[BED LEVELING]** button to enter BED LEVELING settings.

If the current Nozzle temperature is too high, process for cooling down the Nozzle temperature is added.

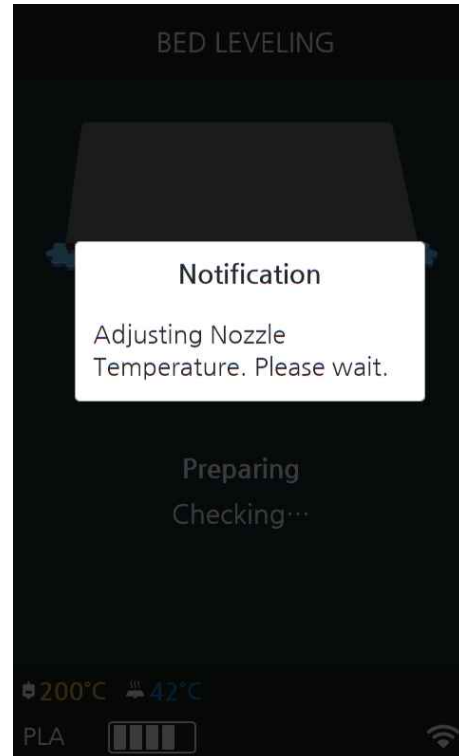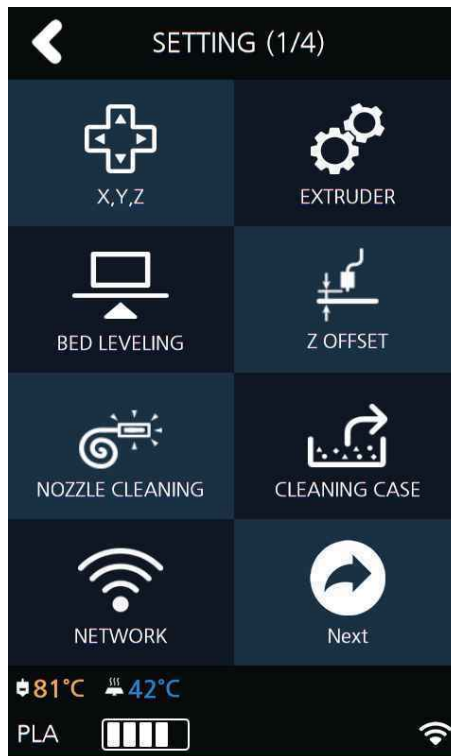


- 3 On the SETTING page, user is able to perform bed leveling. The bed leveling process consists of 3 steps. From the center, the top side is measured first, and then both sides of the bottom level are measured. If the height of the bed is perfect then levelling process will be finished but if the height of the bed and nozzle does not match, screws will appear informing user the direction and the number of screw rotation.

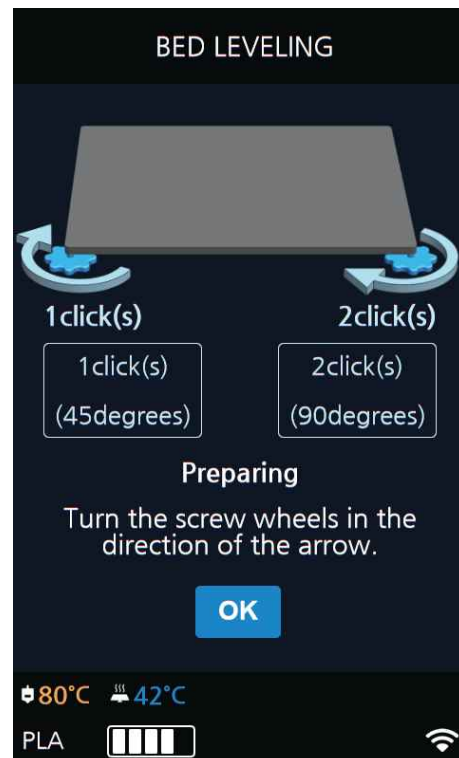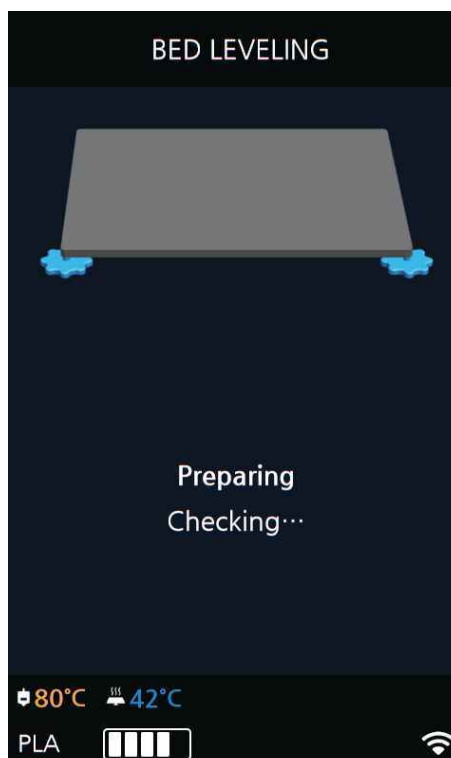

- 4 If you turn the screw and press [OK], the measuring is performed and the value to fix appears again.



- 5 When all settings are done the program returns to the previous screen.

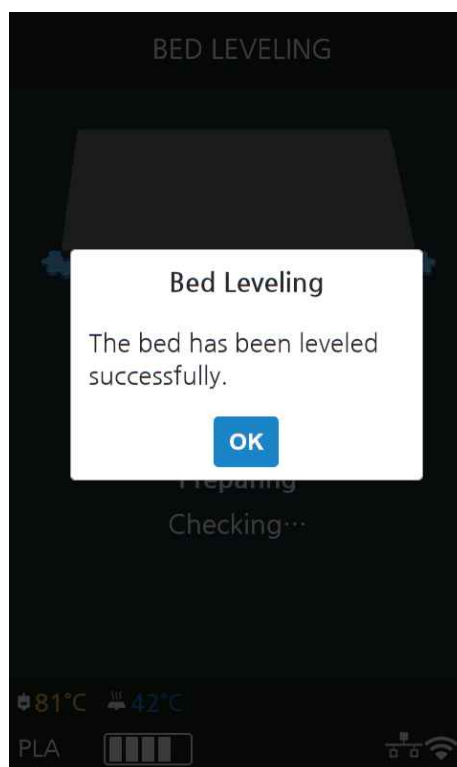

Z OFFSET


※After bed leveling, it is highly recommended to check the z-offset.

This Menu allows user to control the GAP in between Nozzle and BED. Standard is 0.25mm and can be customized. **[+]** button widens the GAP, **[-]** button shortens the GAP.


※For higher adhesive strength between the print output and the bed, shorten the distance of the z-offset.

For less adhesive strength, widen the distance of the z-offset.


1 From home screen press **[SETTING]**.

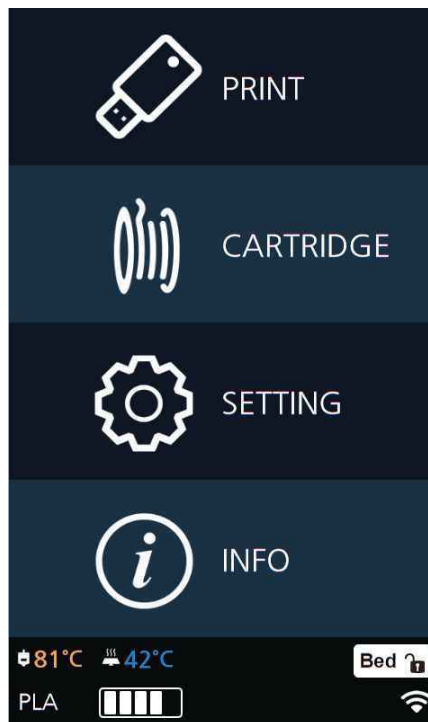



2 Press the **[Z OFFSET]** button to access Z Offset screen.

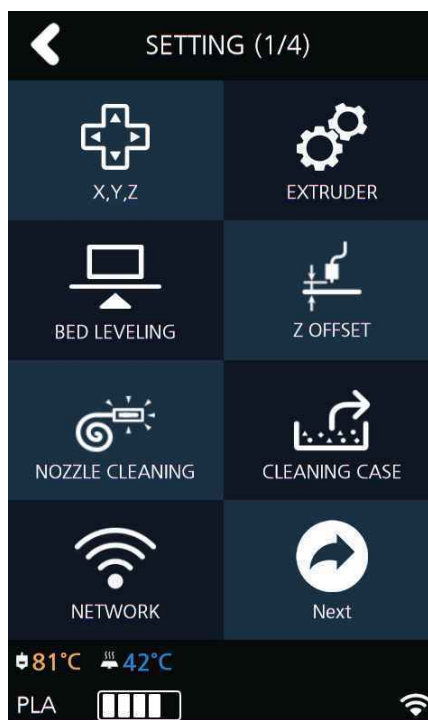

- 3** Select the nozzle that you will use to adjust the gap. Default value is 0.25mm, Use [+], [-] buttons to move in 0.05 mm unit.

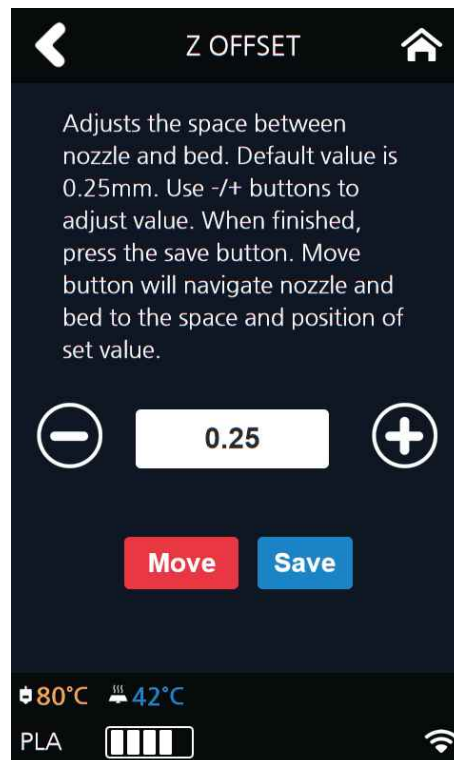


- 4** Use the [MOVE] and [SAVE] buttons to adjust the gap and to save the setting.
The saved value is applied when next time the print starts.
These values will be reset if bed leveling is initiated.

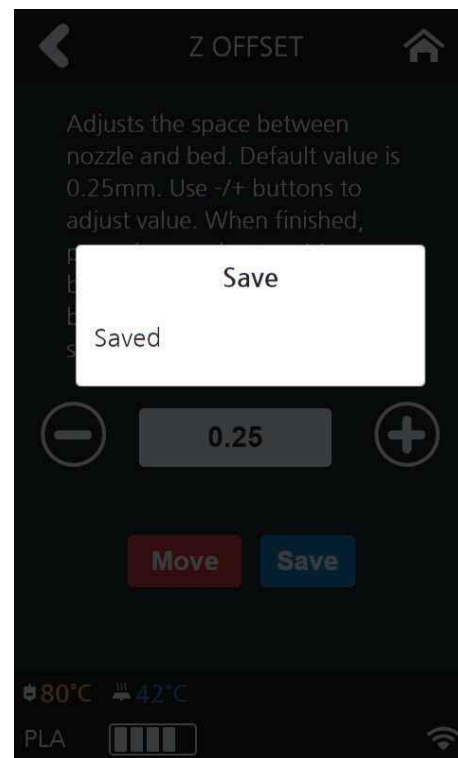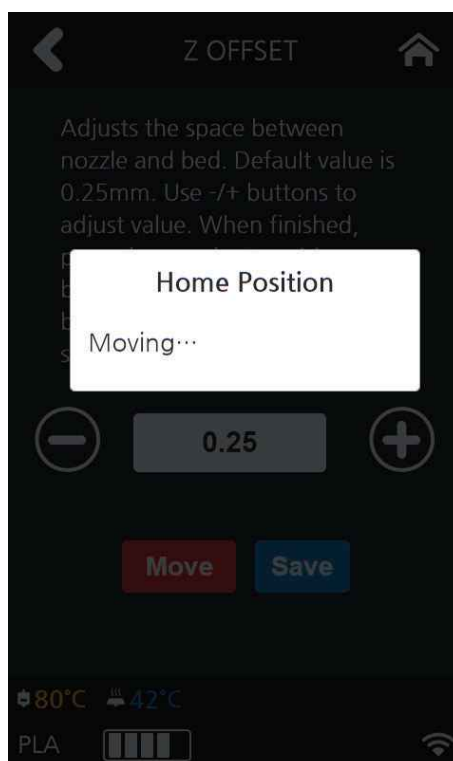


NOZZLE CLEANING

Function used when nozzle needs cleaning of left over filament residue.


- 1 From home screen press **[SETTING]**.

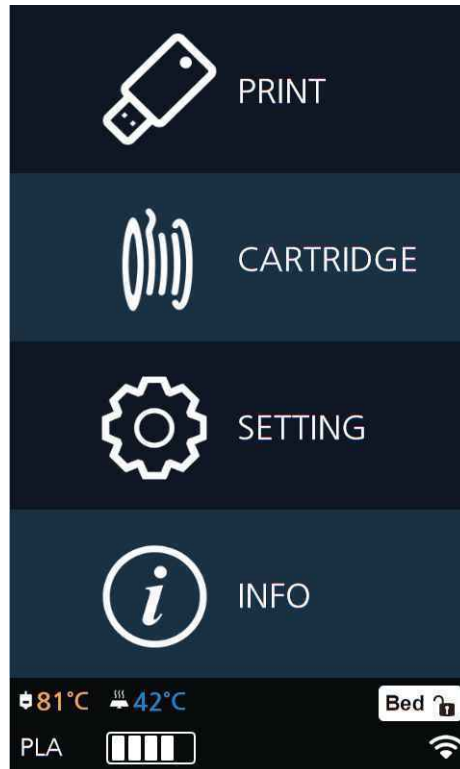

- 2 Press the **[NOZZLE CLEANING]** button to access nozzle cleaning settings.

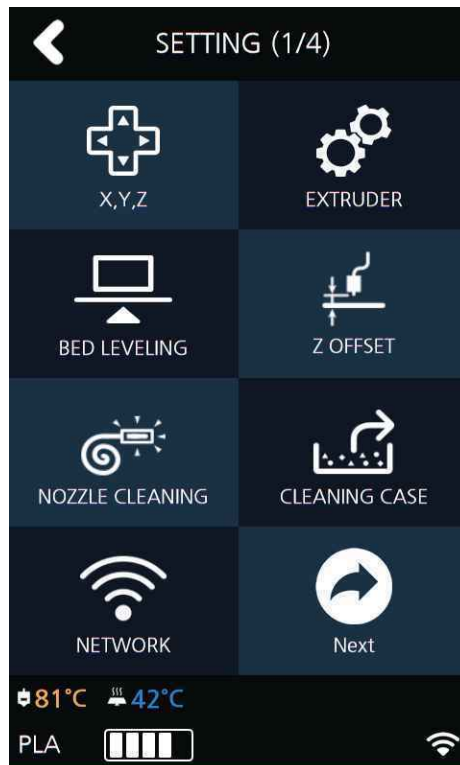


- 3** In order to get rid of filament residue, the nozzle needs to be heated.
 When the specified temperature is reached, it moves on to the next step to remove filament residue.
 Once finished message will appear press **[OK]**, printer will return to the settings screen.

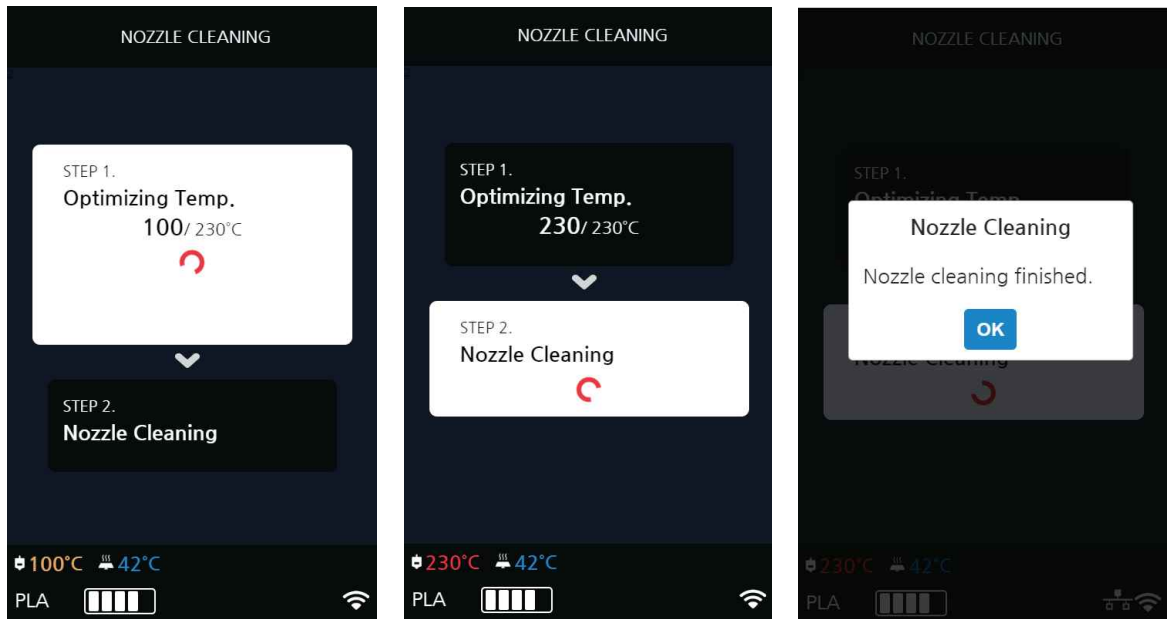


CLEANING CASE

Function used to clean out the case for the collected filament residue.



- 1** From home screen press **[SETTING]**.

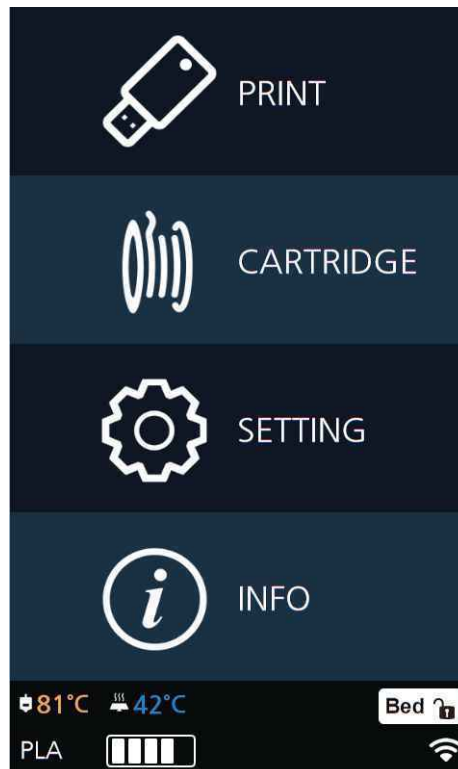

- 2 Press the [CLEANING CASE] button to enter CLEANING CASE settings.

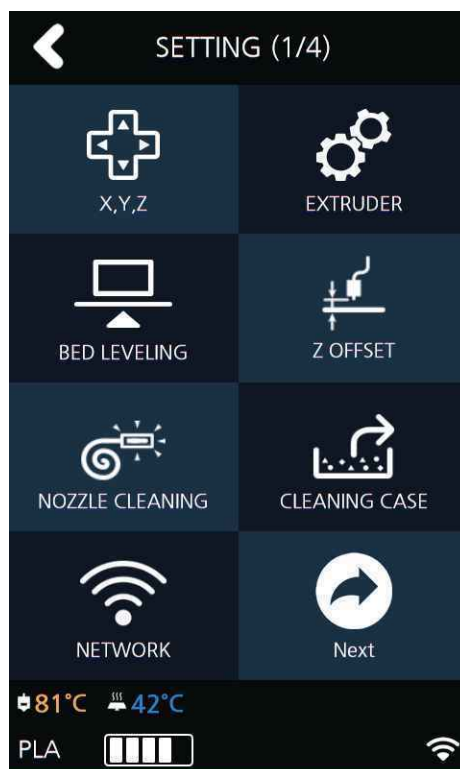


- 3 Entering Cleaning Case, the nozzle will automatically position itself to the right side to be visible and accessible. Like shown in the image, empty the CASE, press [OK] when done and user will be returned to the home screen.

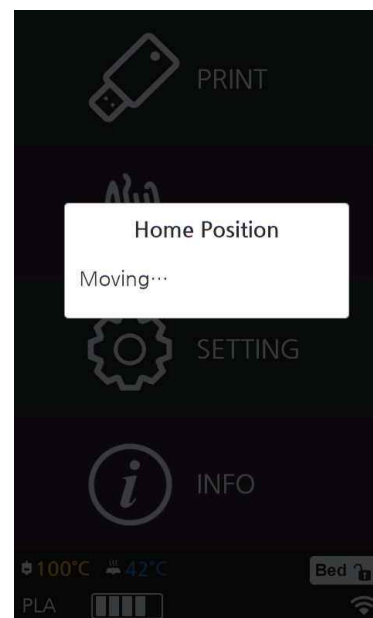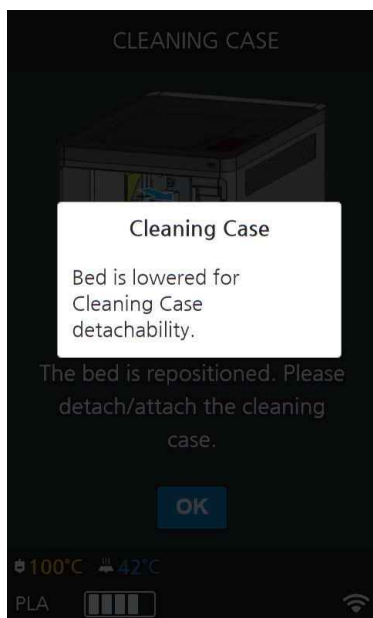


NETWORK

This is a menu to configure users network setting. IP address can be set up manually or automatically via DHCP setting. Wifi network is also supported.

- 1 From home screen press **[SETTING]**.

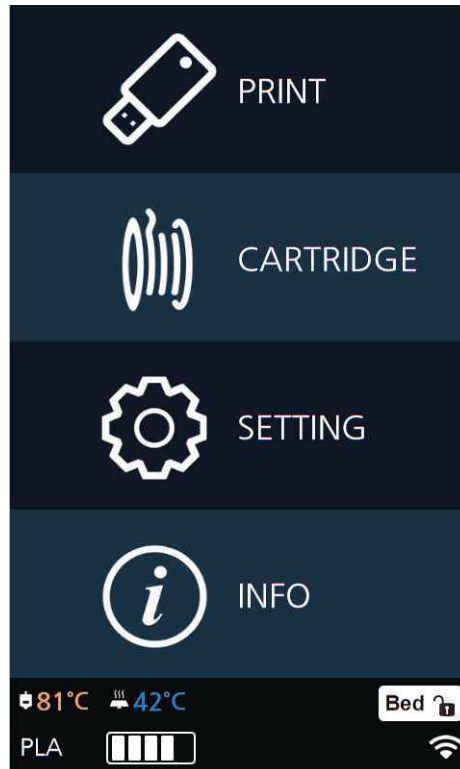


- 2 Press the **[NETWORK]** button to access network configuration screen.

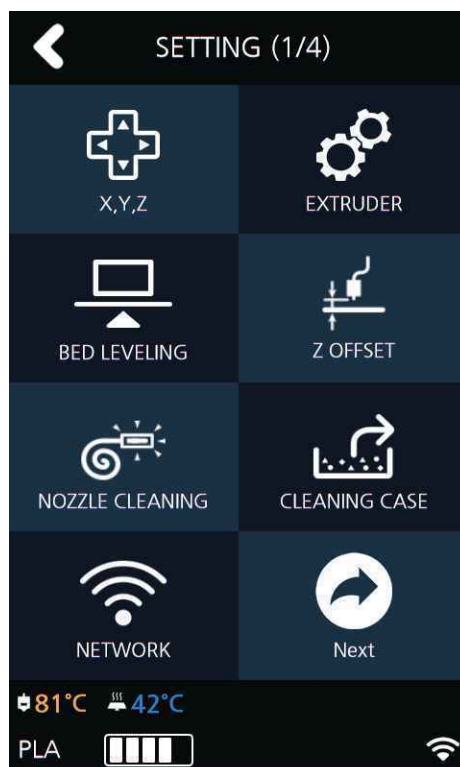

2 UI Menu Function


- 3 The default network setting is Wired (connection using LAN line).
Press **[DHCP]** for automatic IP address setup. To manually input a fixed IP address press **[Static]** and enter an IP address. Press **[Connect]** to save the changes.

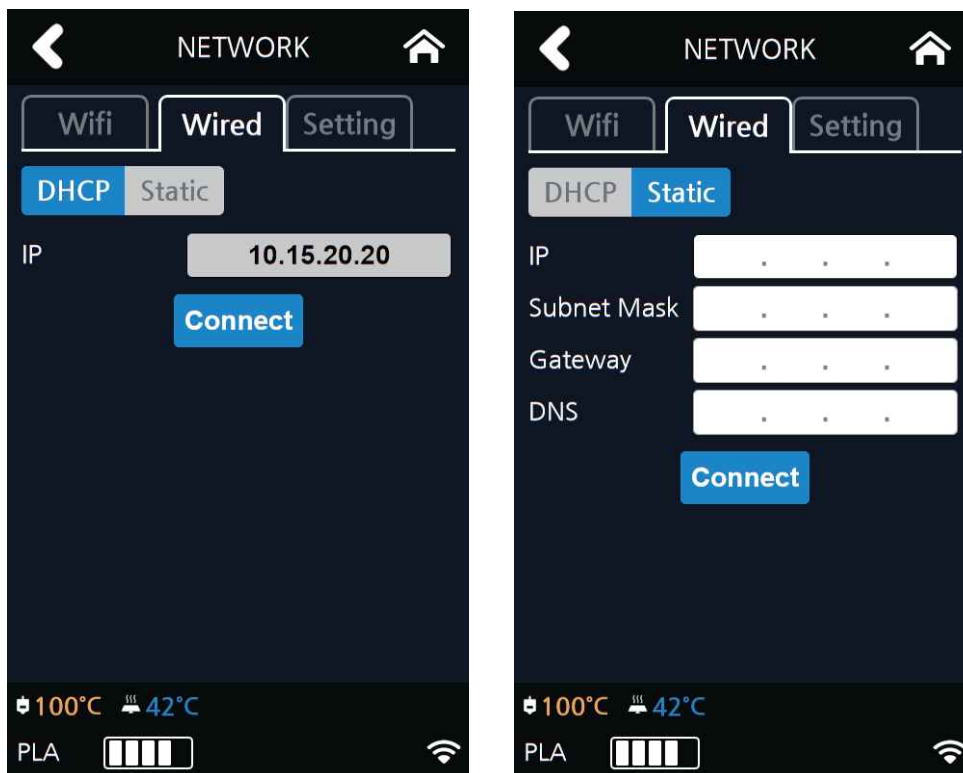



- 4 In any case to use Wifi press the **[Wifi]** tab.
Wifi setting can be turned **ON** or **OFF**.



- 5 To select a Wifi network, click **[Choose a network...]** and the printer shows all available Wifi connections.

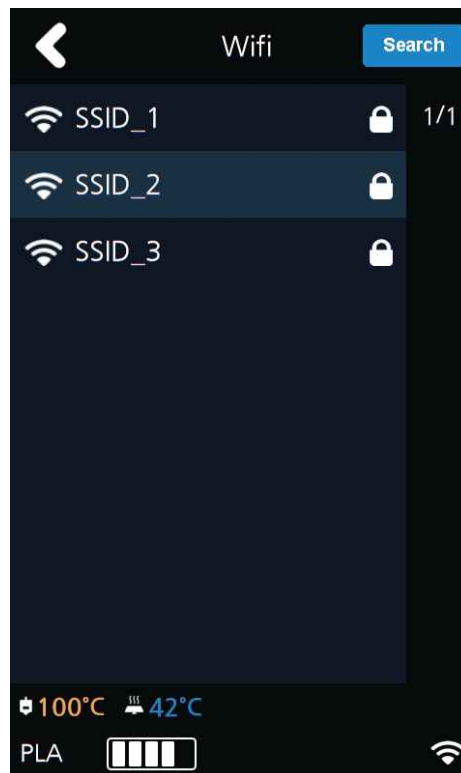

- 6 Select a wireless network from the list to connect to the network. For a password-protected network, a dialog pops up and asks for the password. You can refresh the network list by clicking **[Search]**.

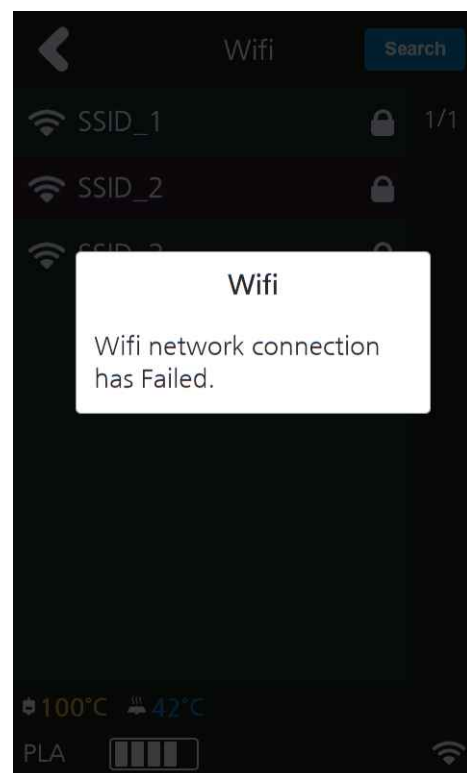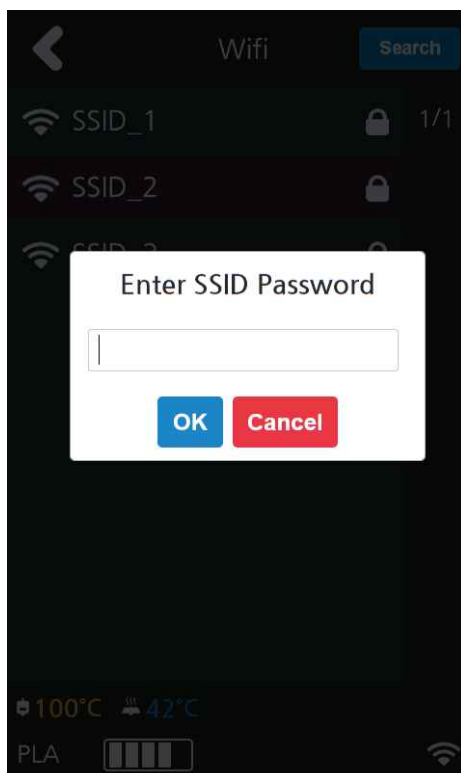


- 7 After successful connection printer may ask for **[DHCP]**, **[Static]** similar to the WIRED setting. When all settings are finalized press **[Connect]** to save settings.



BED LOWERING

Use this function, in times of moving printer to a different location.
Bed will be lowered to the bottom and will be locked into position.


- 1 Press **[SETTING]** from the home screen.

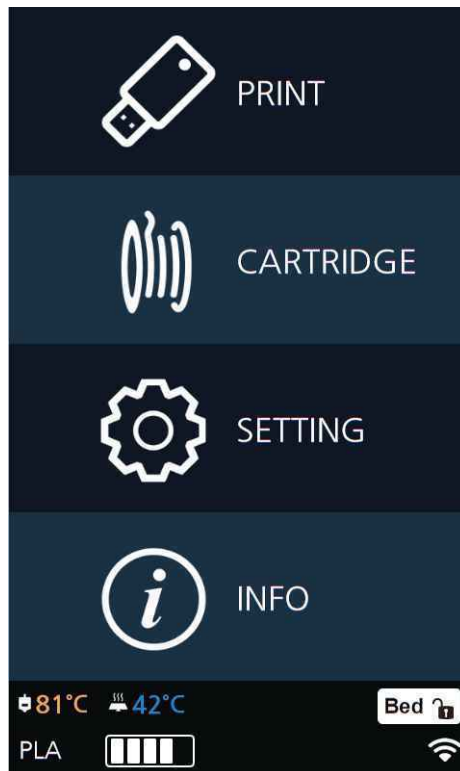

- 2 Press **[Next]** to move to next page, where the **[BED LOWERING]** button is located.

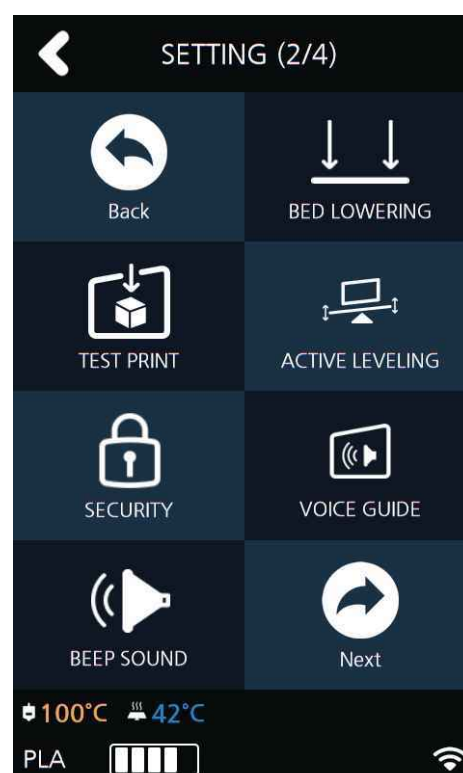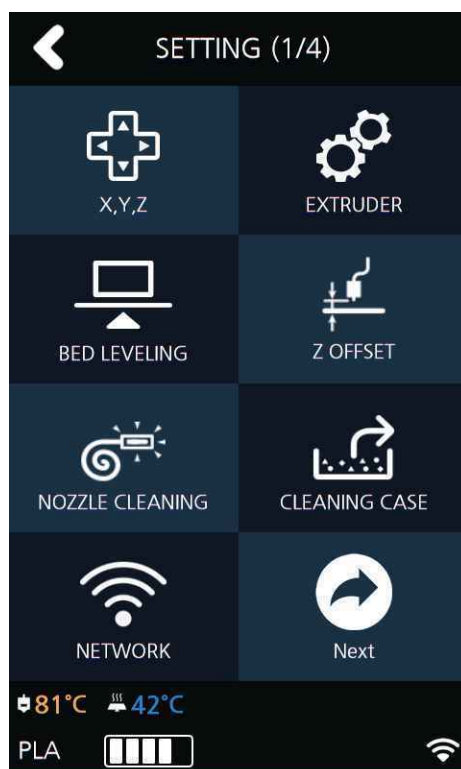


- 3** Upon selection, the bed will automatically be lowered.

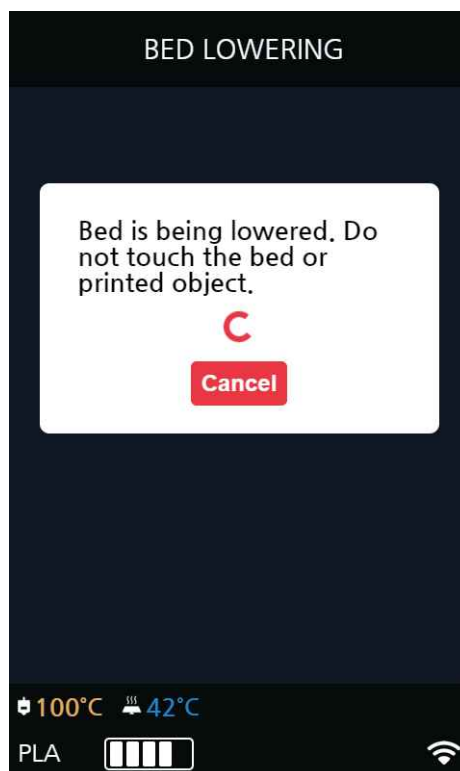


TEST PRINT

This function allows the user to test print a sample model already saved in the printer.


- 1** From home screen press [SETTING].

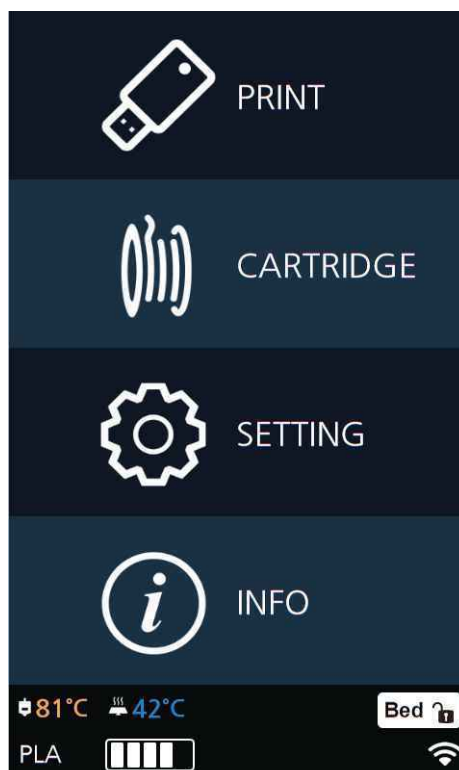

- 2 Press [Next] button to move to the next page and press [TEST PRINT].

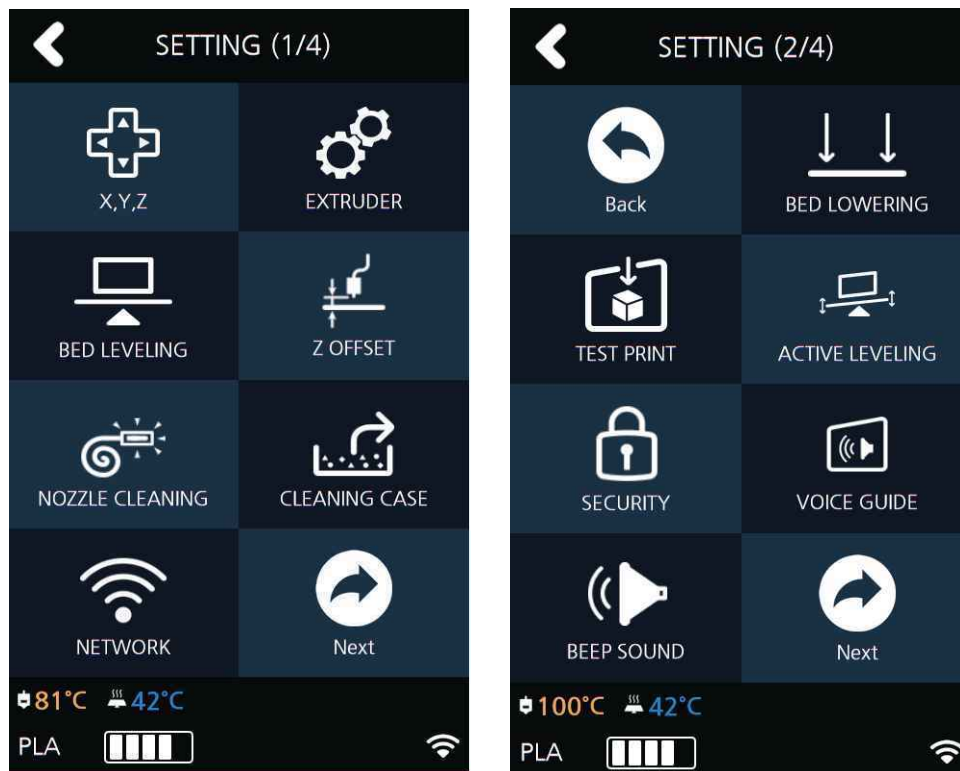


- 3 Select the test file to print.

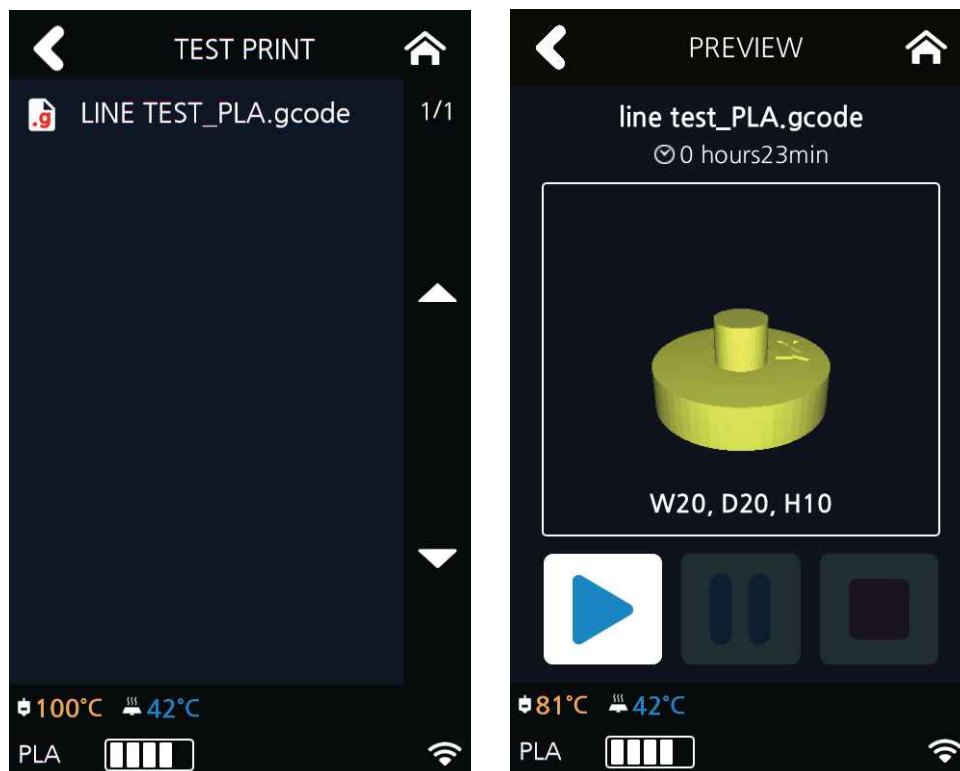



ACTIVE LEVELING

This function executes Bed leveling before printing starts and offset the bed leveling by moving the bed in the direction the Z-axis during the printing.


- 1 From home screen press [SETTING].

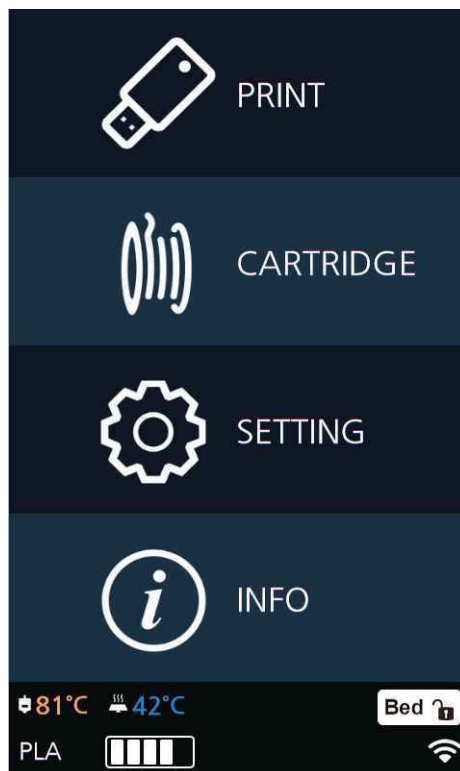

- 2 Press the [Next] button to access [ACTIVE LEVELING].

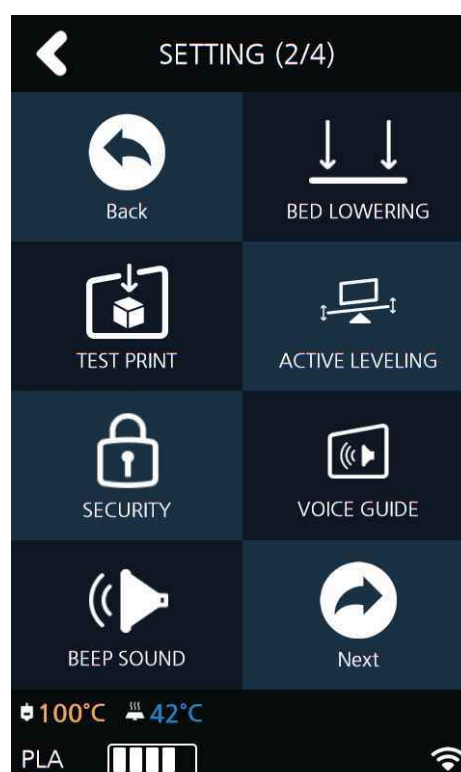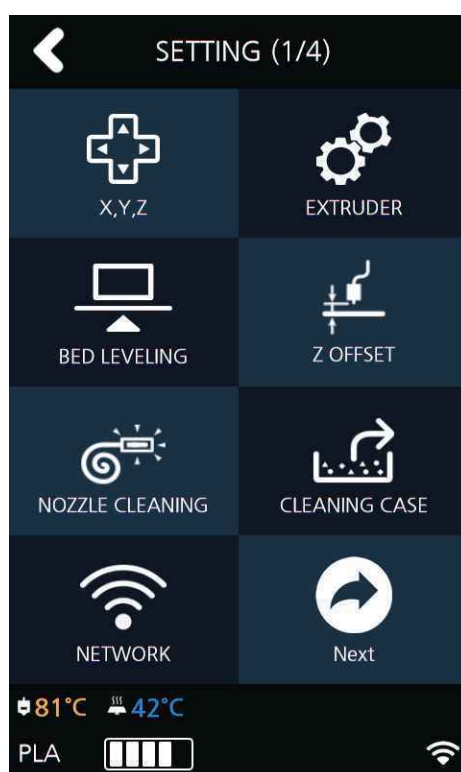


- 3 After setting **[On/Off]** of the Active Leveling, and then press the **[OK]** button.

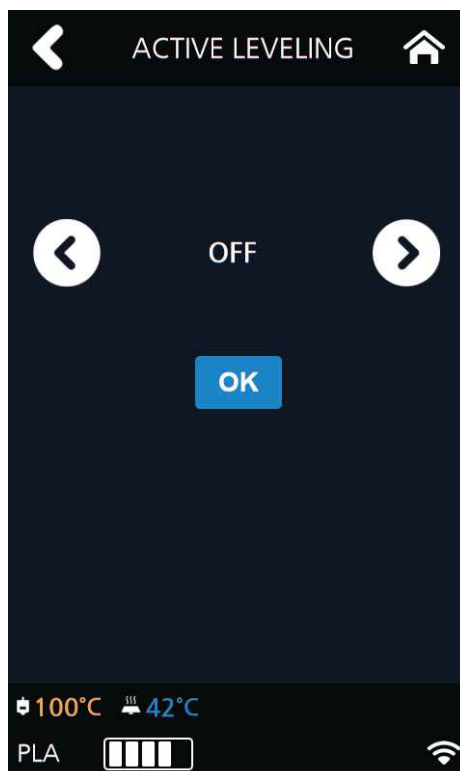


SECURITY

This menu enables you to set up the Security menu whether to use the 3D printer or not.


- 1 From home screen press **[SETTING]**.

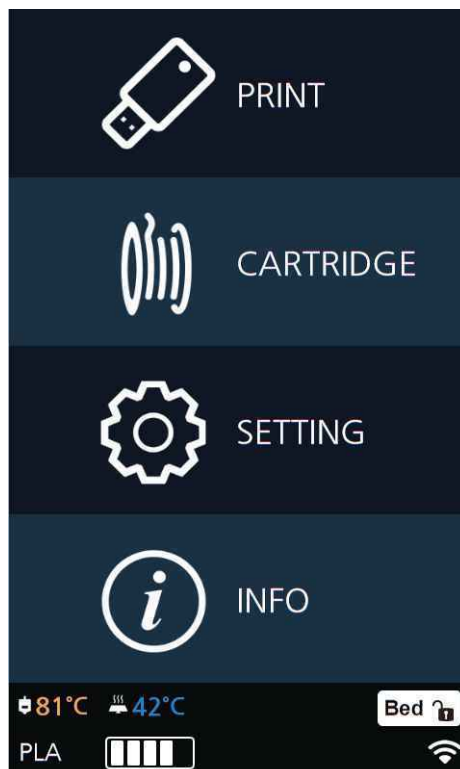

- 2 Press the **[Next]** button to access the **[SECURITY]** Screen.

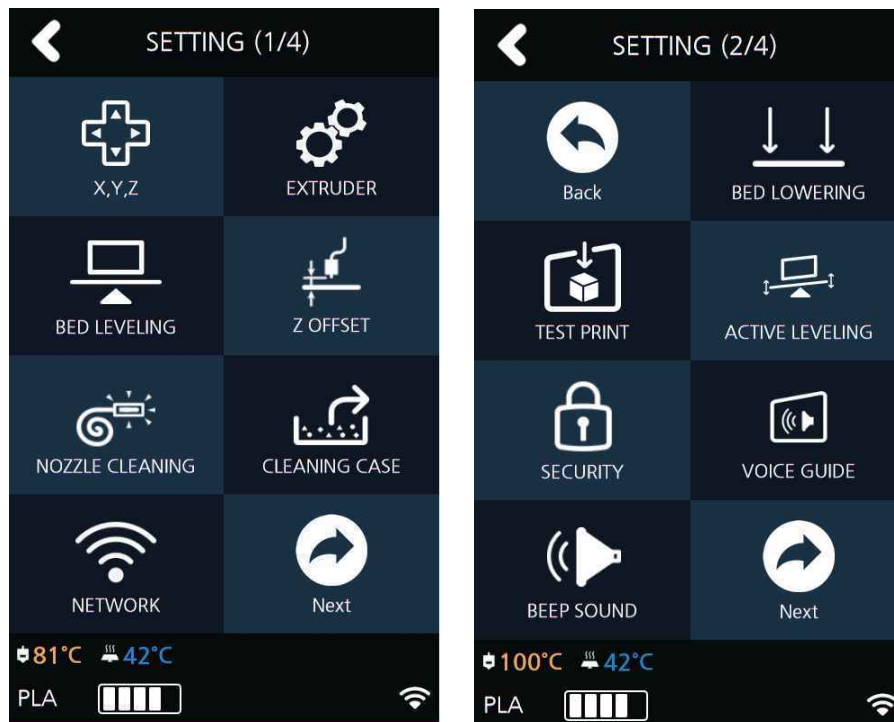

- 3 After setting **[On/Off]** of the Security, and then press the **[OK]** button.

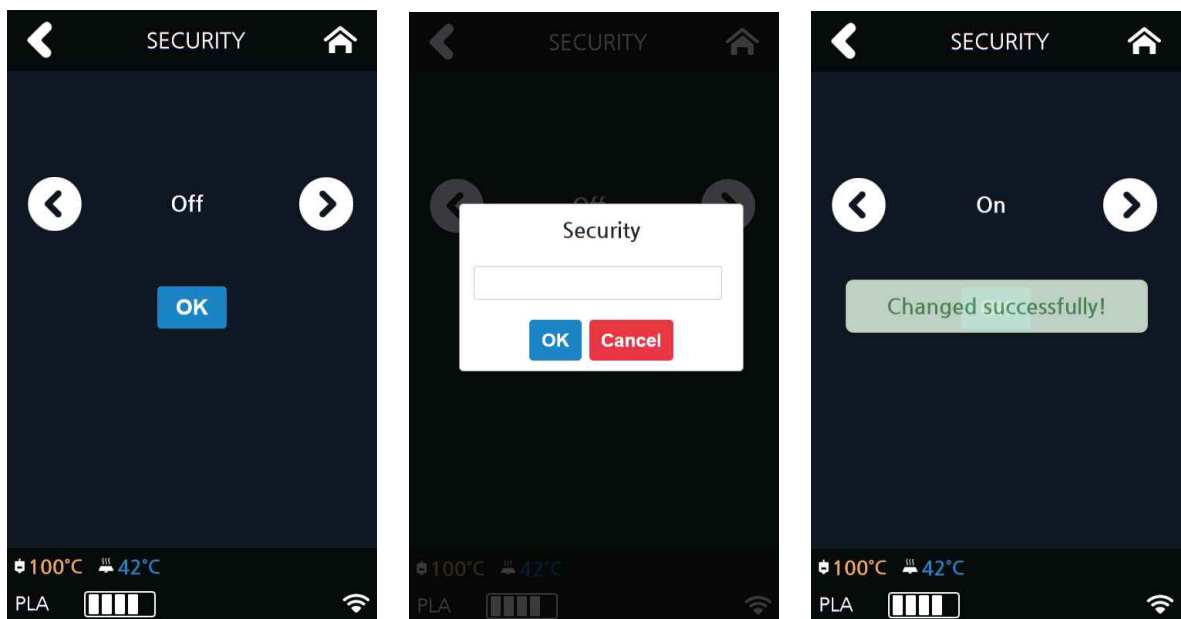


Reference

- *Initial password is '0000'.
- For how to reset the password, see page 2-58.



VOICE GUIDE

This menu enables you to configure the sound of Voice Guide in the machine.


- 1 From home screen press **[SETTING]**.

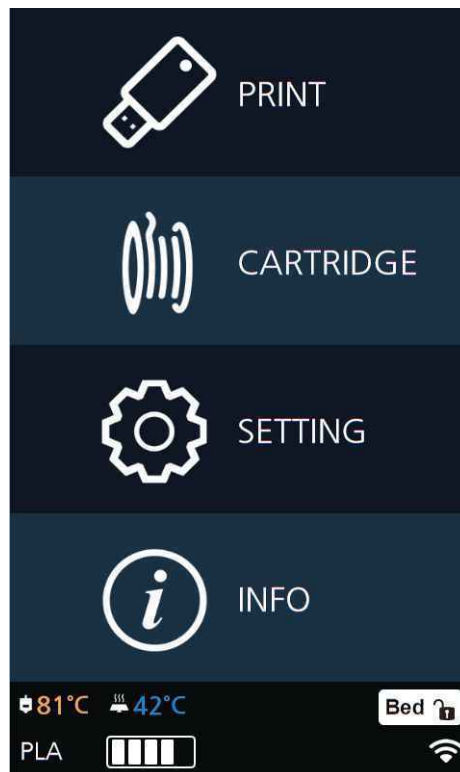

- 2 Press the **[Next]** button to access the **[VOICE GUIDE]** screen.

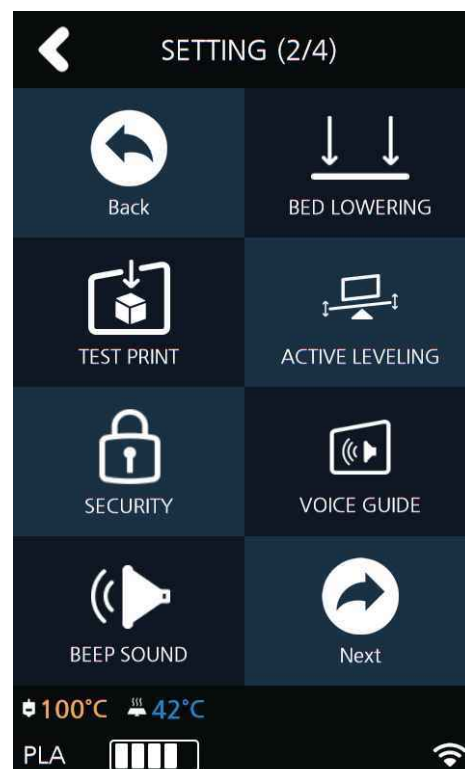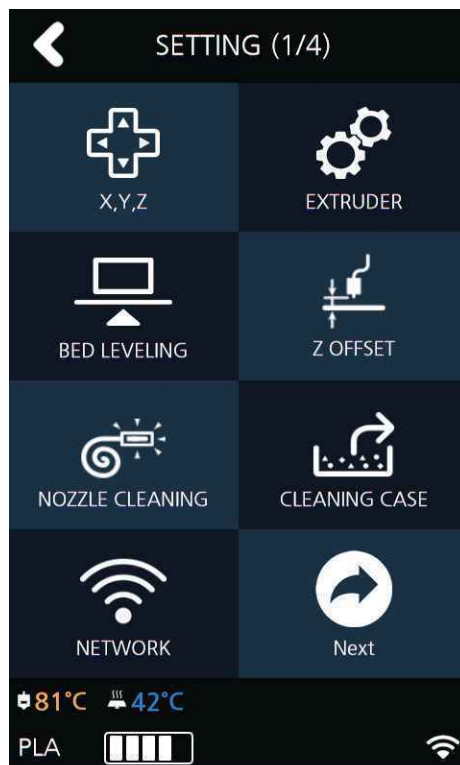


- 3** After setting your printer's speech, volume, and speed, press the **[OK]** button.

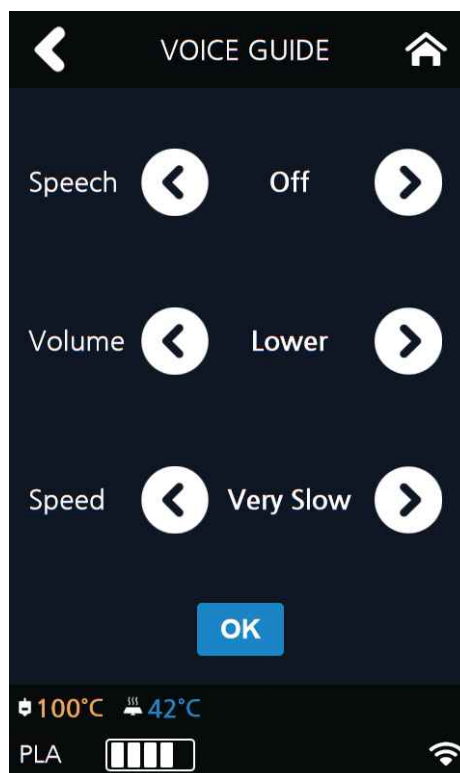

BEEP SOUND

The volume level of beep sound can be adjusted using this menu.


- 1** Press **[SETTING]** button from the home screen.

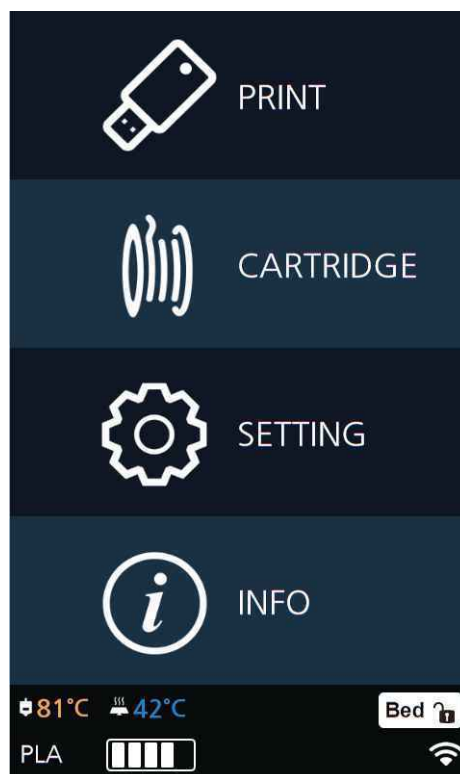

- 2 Tap on the **[Next]** button to move to next page, and press **[BEEP SOUND]**




- 3 Currently available sound settings are Low, Middle, High and Off.
Select the desired setting and press the **[OK]** button to save settings.

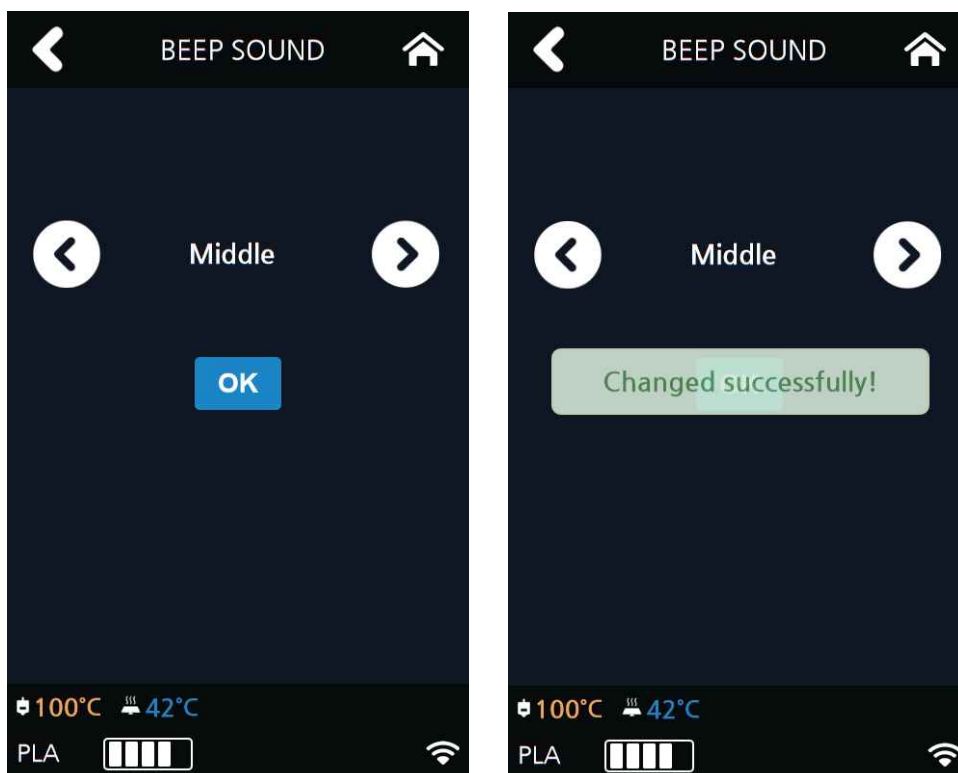




LANGUAGE

Menu to set language for machine.


- 1 From home screen press **[SETTING]**.

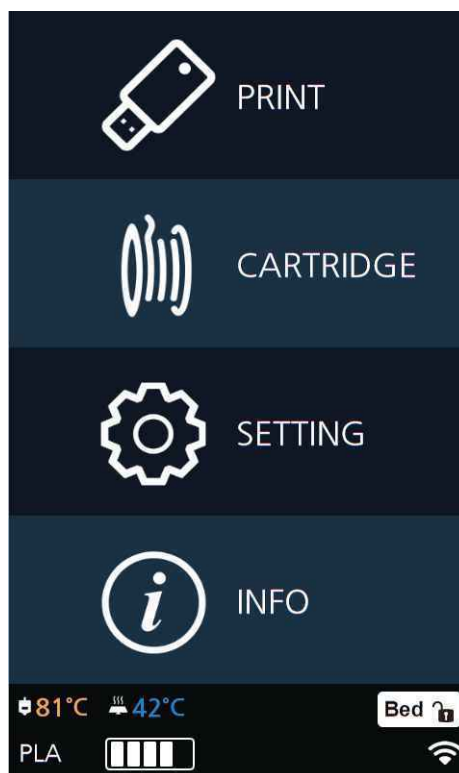

- 2 Press **[Next]** 2 times to go to the screen where the **[LANGUAGE]** menu is.

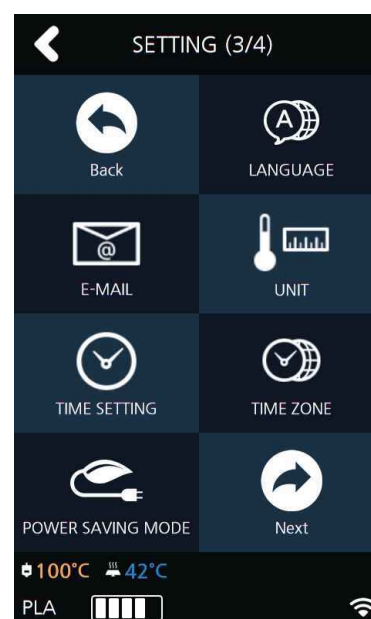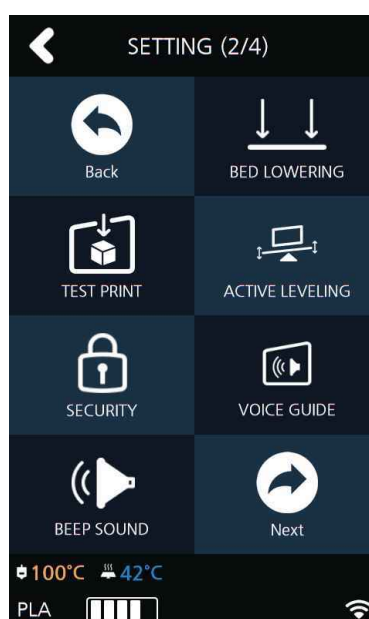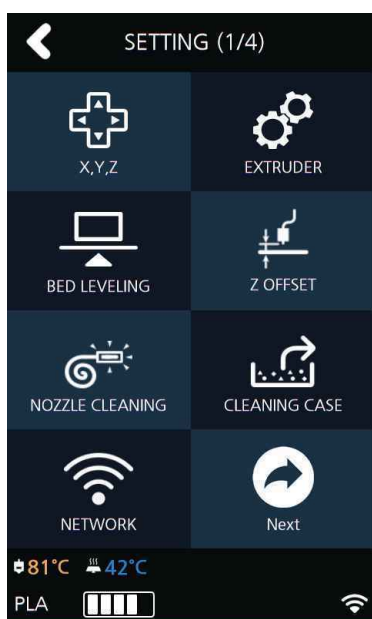

- 3 Using the arrows select a language and press [OK].

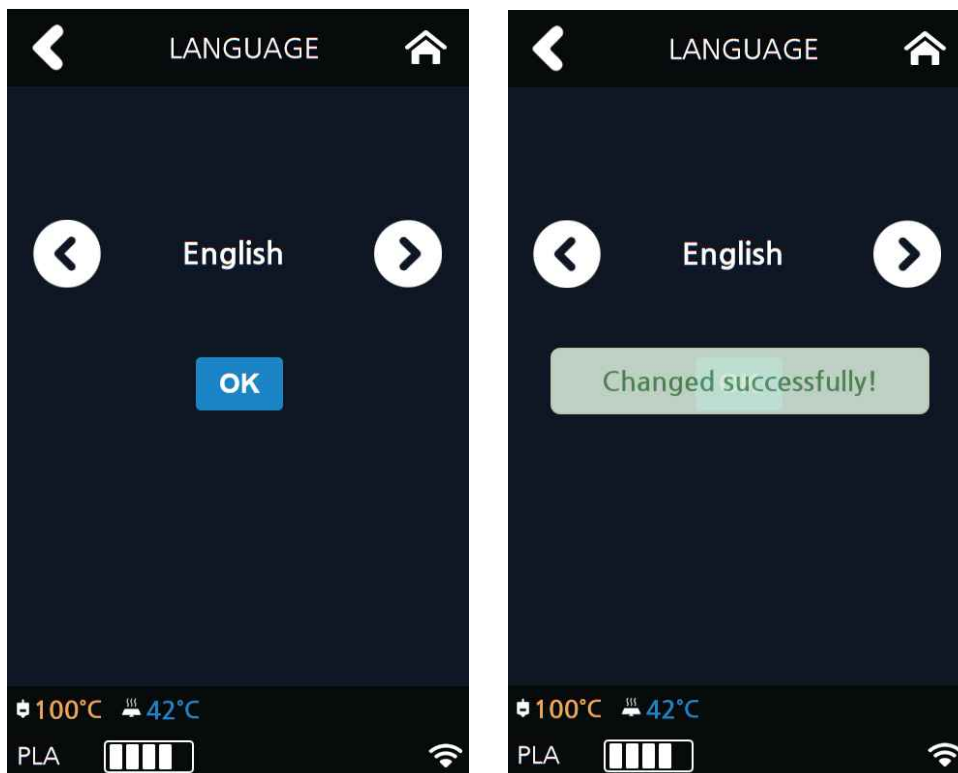


E-MAIL


The printer takes an image of the current printing status and sends the information to the email address specified.

Printer will send information of completion (%) based on the PC program standard settings. Maximum of 10 emails can be sent.


- 1 From the home screen, press [SETTING].

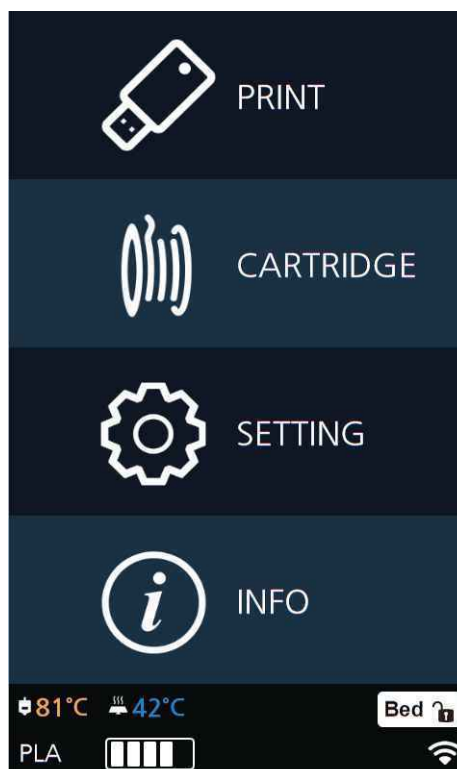

- 2 Press the **[Next]** 2 times and select **[E-MAIL]**.

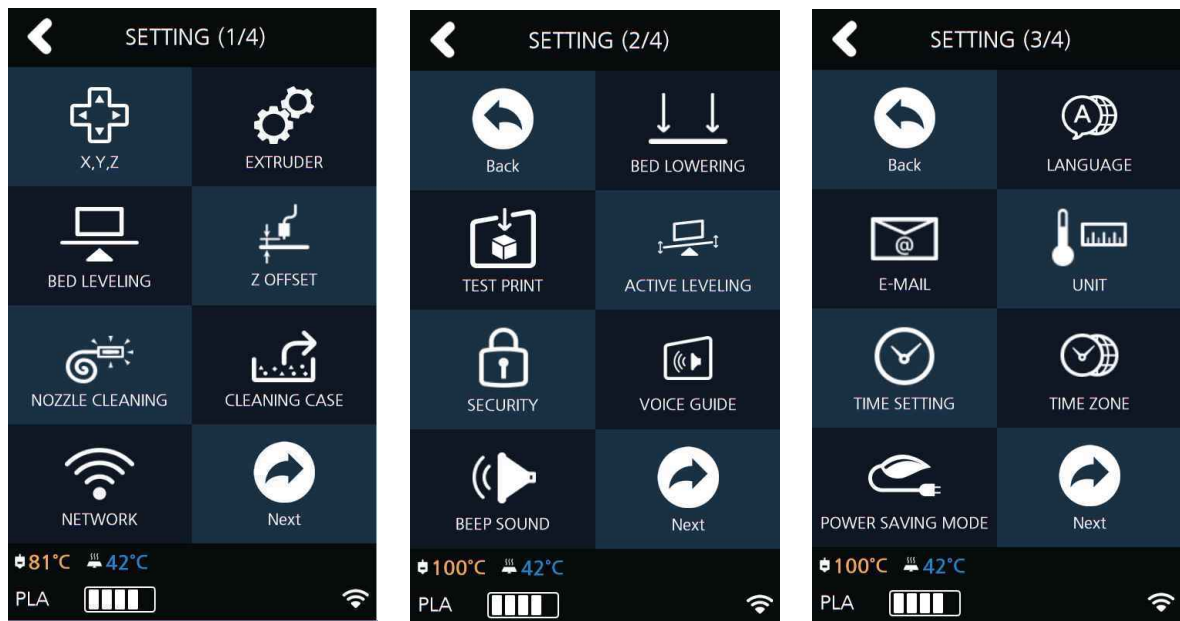

- 3 Configure the setting for email notification to be sent out from the device.
Only the information that is required for sending the email is set up from the printer and the recipient information has to be configured in the Slicer program.

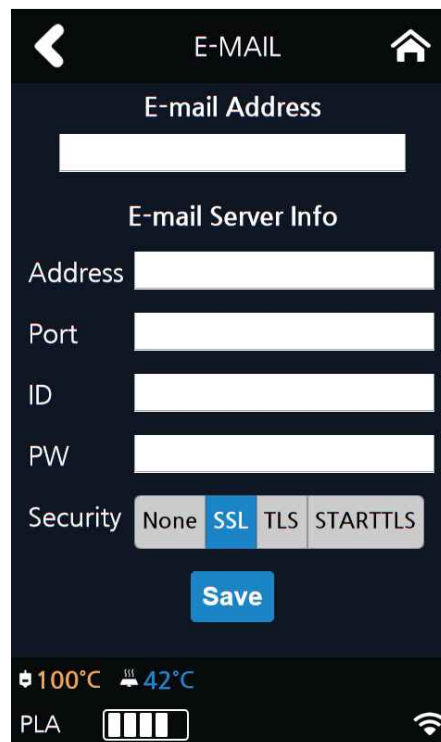

Catgory	Description
E-mail Address	The sender info to be seen by the recipient(e.g. sender@domain.com) The recipient can reply to this email address
Address	SMTP server address (e.g. smtp.domain.com) - This is the server address of the email service (xxxx@gmail.com)

Port	SMTP Server Port (e.g. 25) - Normally the port number 25, 587 or 465 is used. Due to the increased security, some service providers do not allow the use of port number 465. If port number 465 is not available, please use 25, 587 or the port number that the service provider recommends.
ID	SMTP server login ID (e.g. sender) - Enter the ID for your email. - Depending on the service provider, a full email address may be requested. Please contact server administrator or email service provider for more information.
PW	SMTP server login password (e.g. *****) - Enter the password for your email
Security	Security method used when sending mail to SMTP server -The default value is [None]. For further details, contact your server hosting company or mail service provider.

Inquire your email server administrator or services provider for detailed information of the input information on each category. Especially for SMTP server log in ID, it may be needed to enter the entire email address which includes the domain name.

This setting is for the SMTP (Simple Mail Transfer Protocol) server to be used for sending emails. The SMTP setting may have to be enabled depending on the system.

To check the detailed setting values, please refer to the setup information from your email service provider.

For the set up to use the outgoing email service, please find information by internet search or your email service provider's instructions.

A certain amount of interval time may be required after setting up the SMTP service before using.

For more details, please inquire your email provider for the service policies.

4 Configure the recipient email information from the 3DWOX slicer program.

Under **[E-mail]**, input the recipient email address(es) and select the number times that you wish to send the notification emails.

Additional recipient addresses can be added by using semicolon.

e.g. recipient1@test.com; recipient2@test.com; recipient3@test.com

The maximum number of notification emails that can be sent is 10.

Regardless of the number entered for the email notification, an email will be sent out for the user to see if the initial email notification is working properly by default. e-mail will be sent out one more time than the number that the user entered. However, the total number of e-mail that is sent will not exceed 10 times.


(When user selects 10 times, the notification e-mail will be sent out 10 times)

❖ **In the case of using a Google email account.**


According to Gmail policies, the following settings have to be met.

■ **Google account setting**


- 1 Log into your Google account that you are planning to use.
- 2 Click on the apps button on the top right hand corner.
After click on **"My Account"**

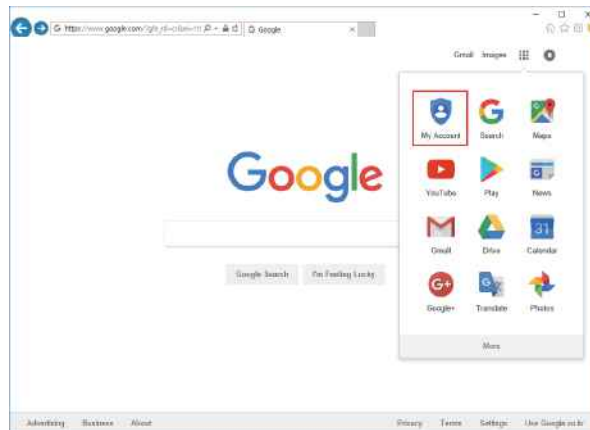

- 3 Under **"Sign-In&Security"** click **"Device activity & notifications"**

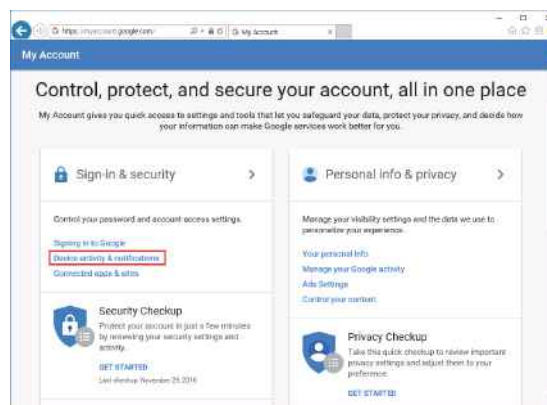

- 4 Scroll down and there is a "Allow less secure apps" criteria. Set it to **"On"** to enable the option.

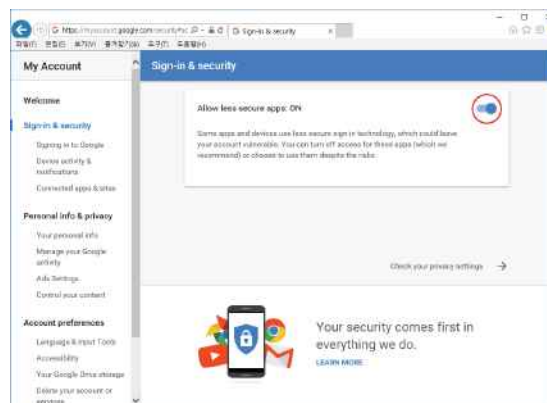

■ Printer Setting

1 Set "smtp.google.com" for the settings of the email address.

2 For Google, 25 and 587 ports are compatible.


⚠ Caution

- According to the service provider, the email address and port number may be changed. For more information please contact service administrator.


UNIT

Settings for the units of measurements displayed on the printer.


1 From the home screen, press [SETTING].

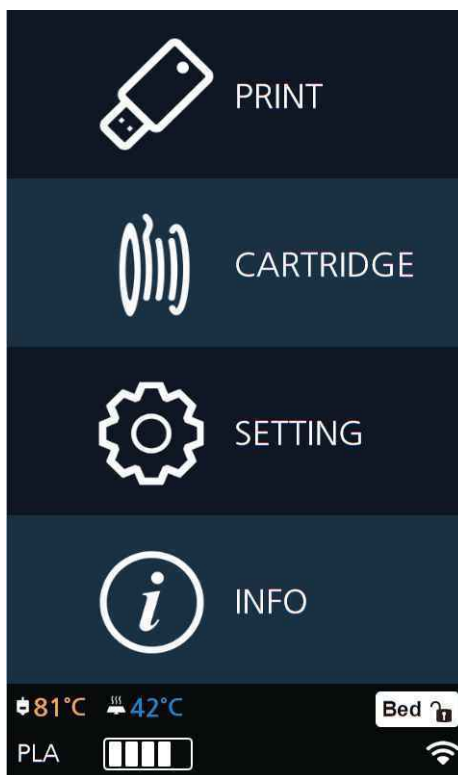

- 2 Press [Next] 2 times and select [UNIT].

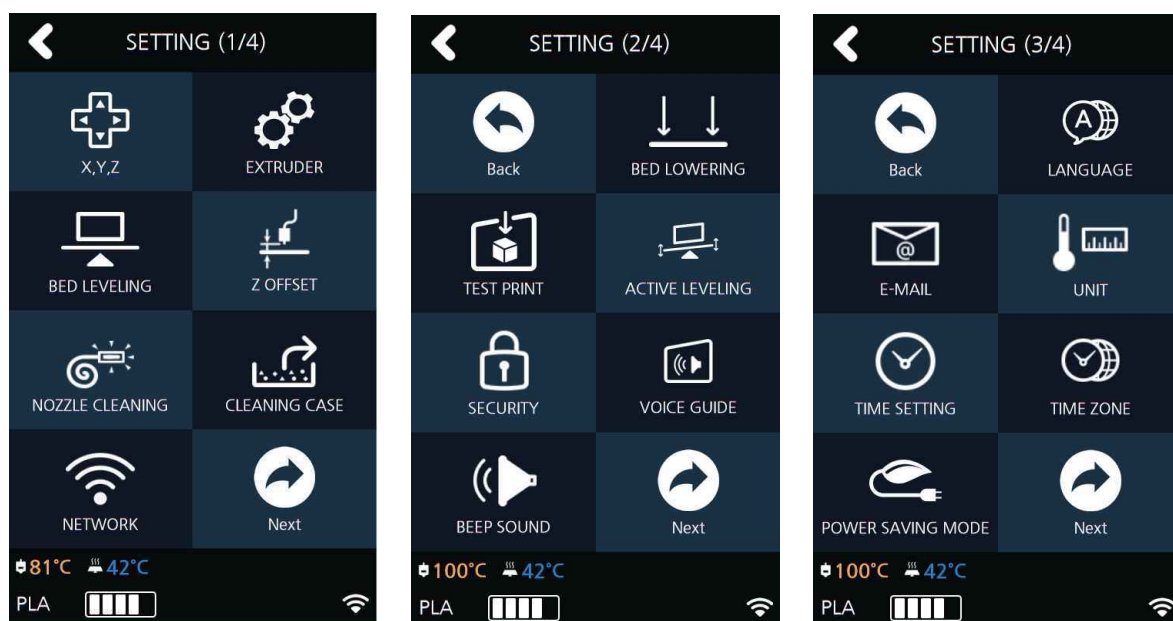


- 3 The units for temperature and length can be changed.

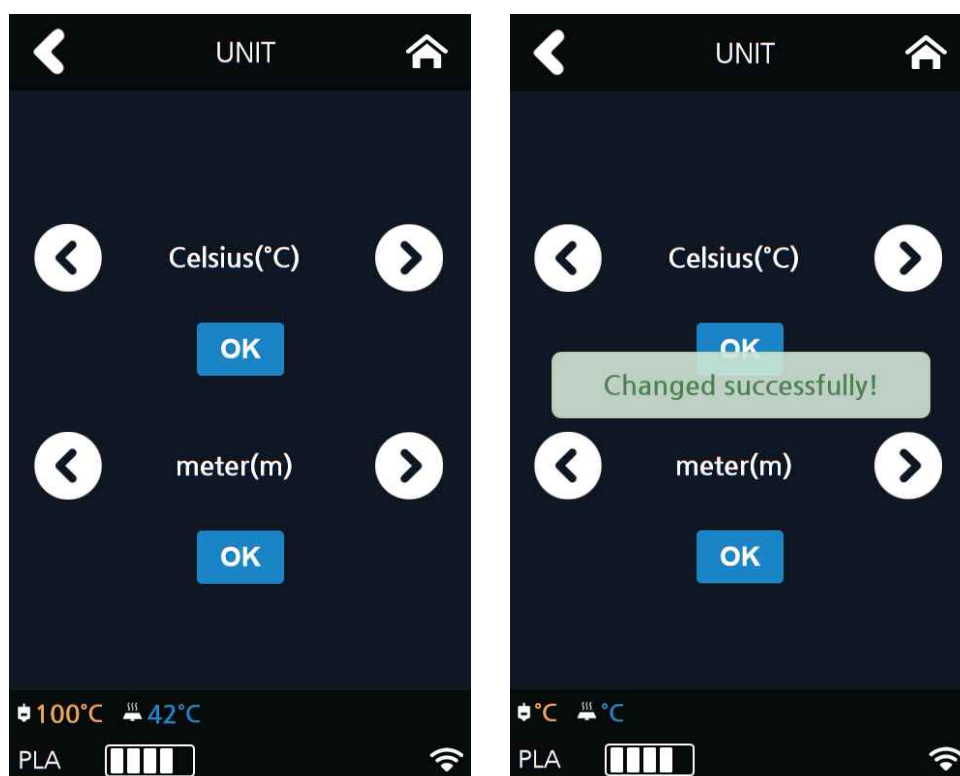




TIME SETTING

You can view or change the time setting.


- 1 From the home screen, press [SETTING].

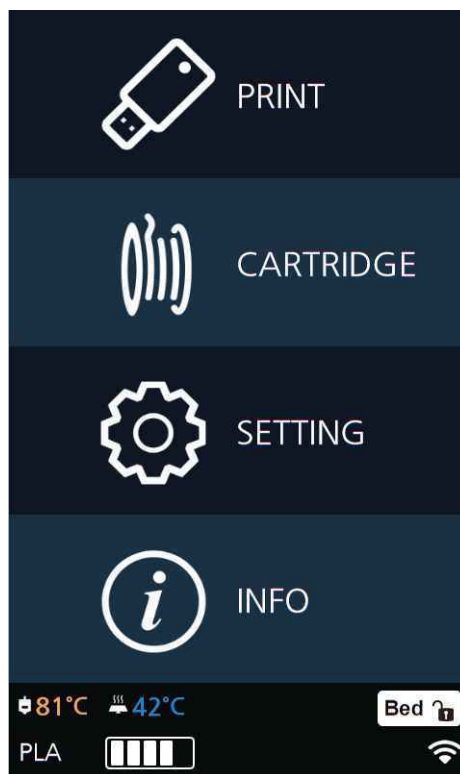

- 1 Press [Next] 2 times and select [TIME SETTING].

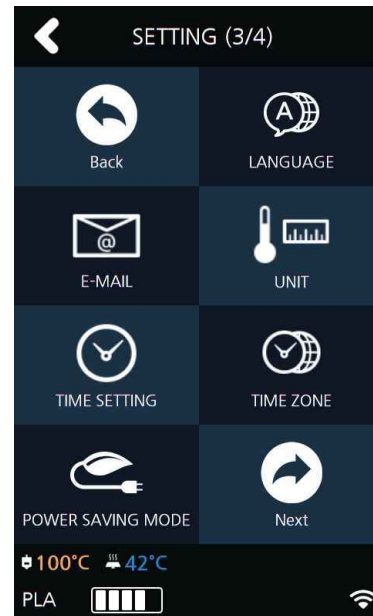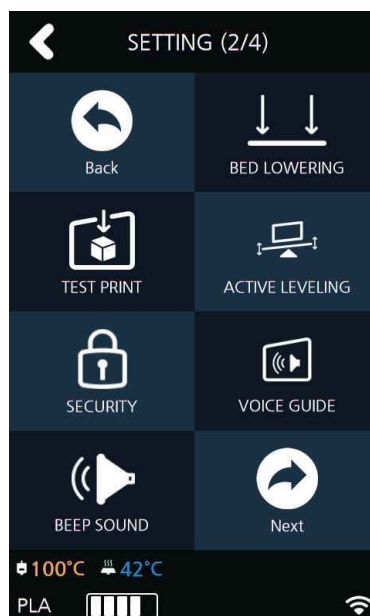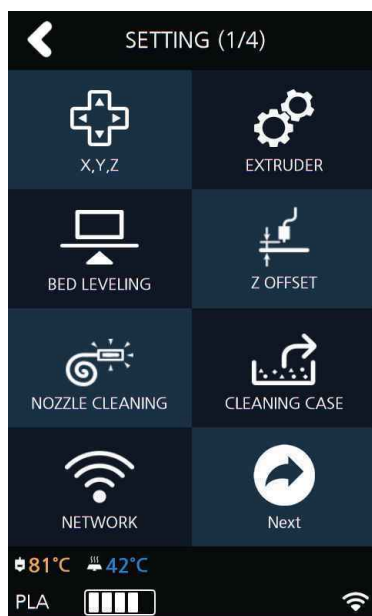


- 3** The time setting can be changed in this screen.

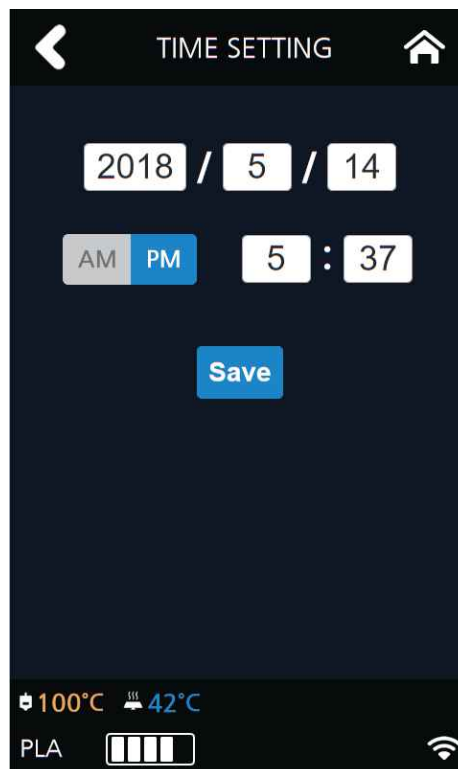


TIME ZONE

You can view or change the time zone setting.


- 1** From the home screen, press [SETTING].

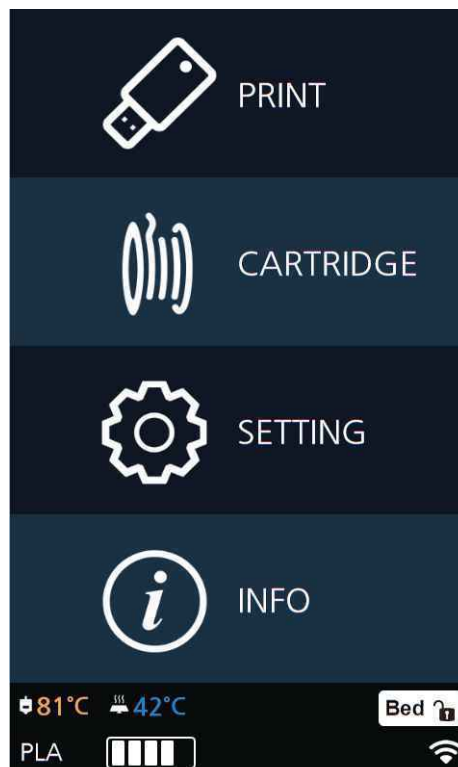

- 2 Press [Next] 2 times and select [TIME ZONE].

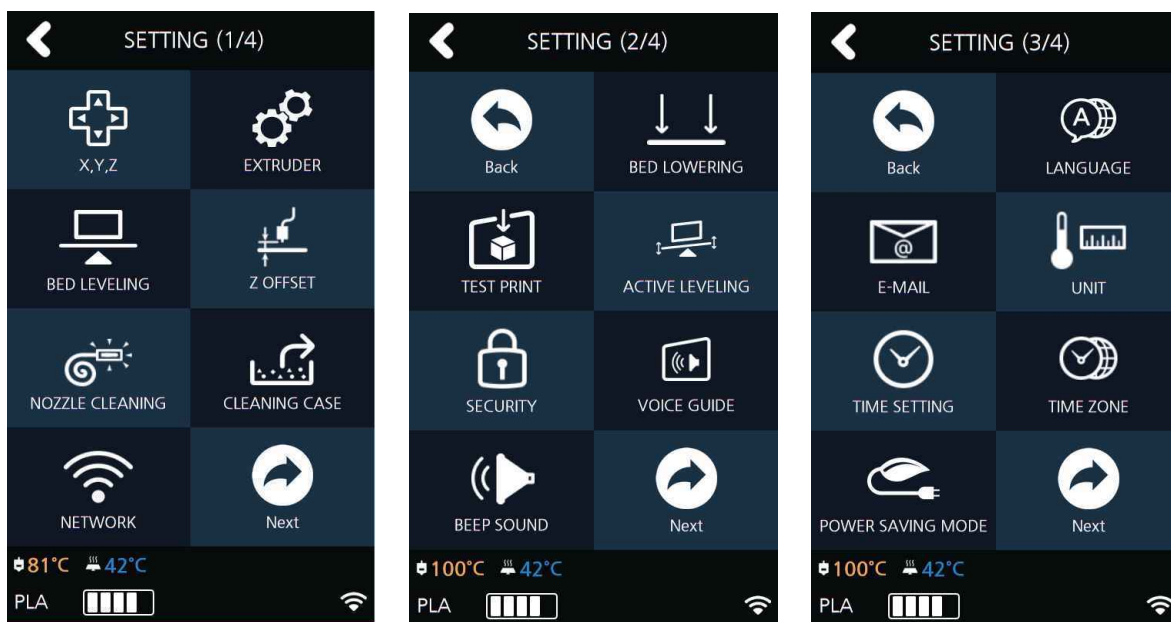


- 3 A preferred time zone can be selected from the time zone list.
Once Time Zone has been set, the printer will restart to apply the new settings.

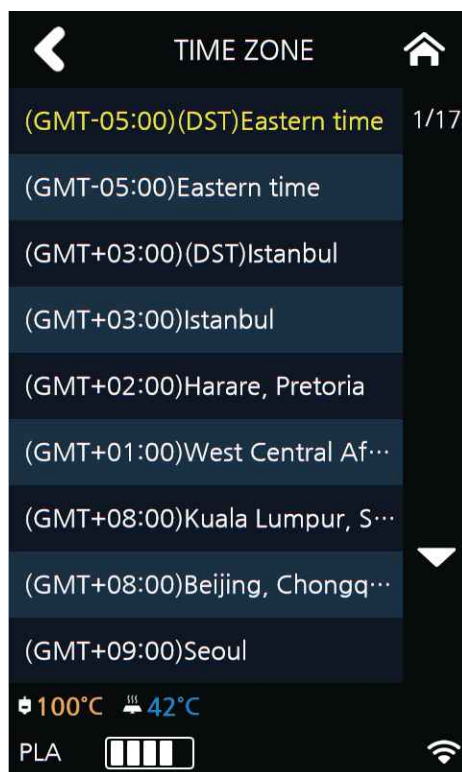




POWER SAVING MODE

Function to set timer for printer energy saver mode.

- 1 From home screen press **[SETTING]**.

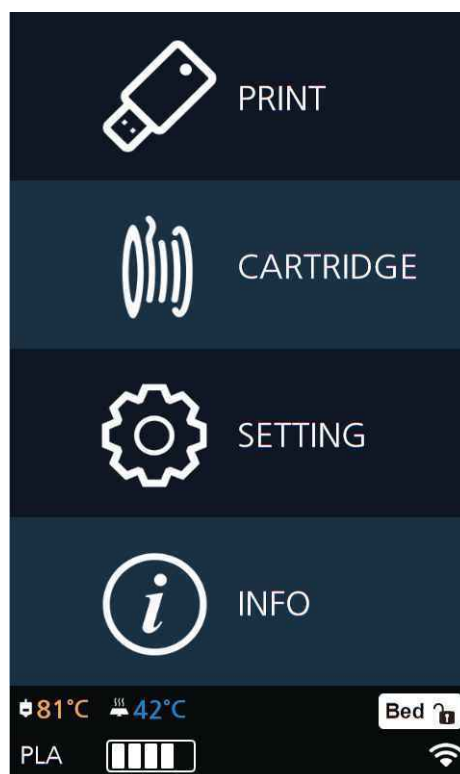


- 2 Press **[Next]** button to move to the next page and press **[POWER SAVING MODE]**.

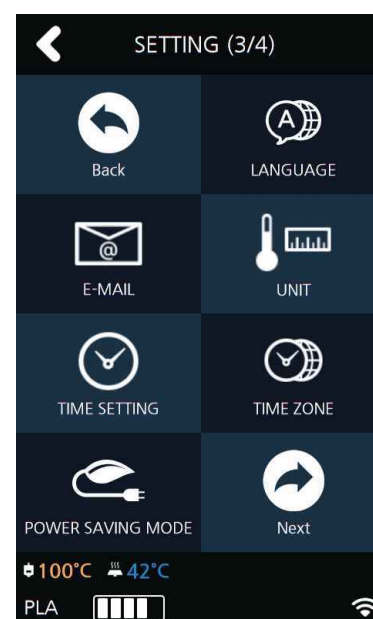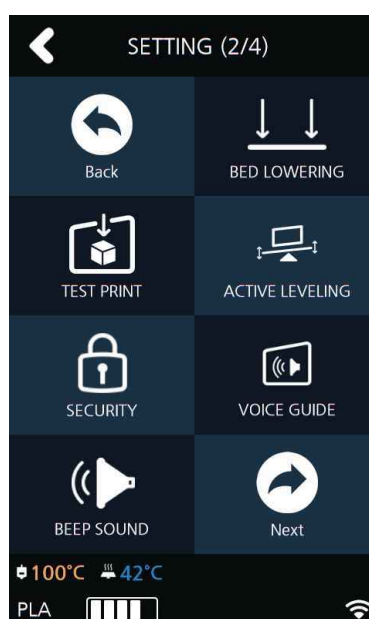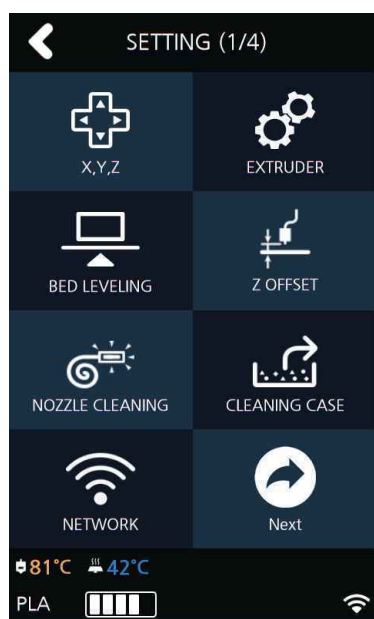

2 UI Menu Function

3 The adjustable values of energy savor mode are [0 ~ 100 min]. The time can be adjusted in 5 min unit, select the desired time using the [+, -] then press [OK] button to save changes.


- 0 Min : Do not use Energy Saving Mode
- 5~100Min : Energy Saving Mode in 5 ~ 100 Min. of Inactivity.

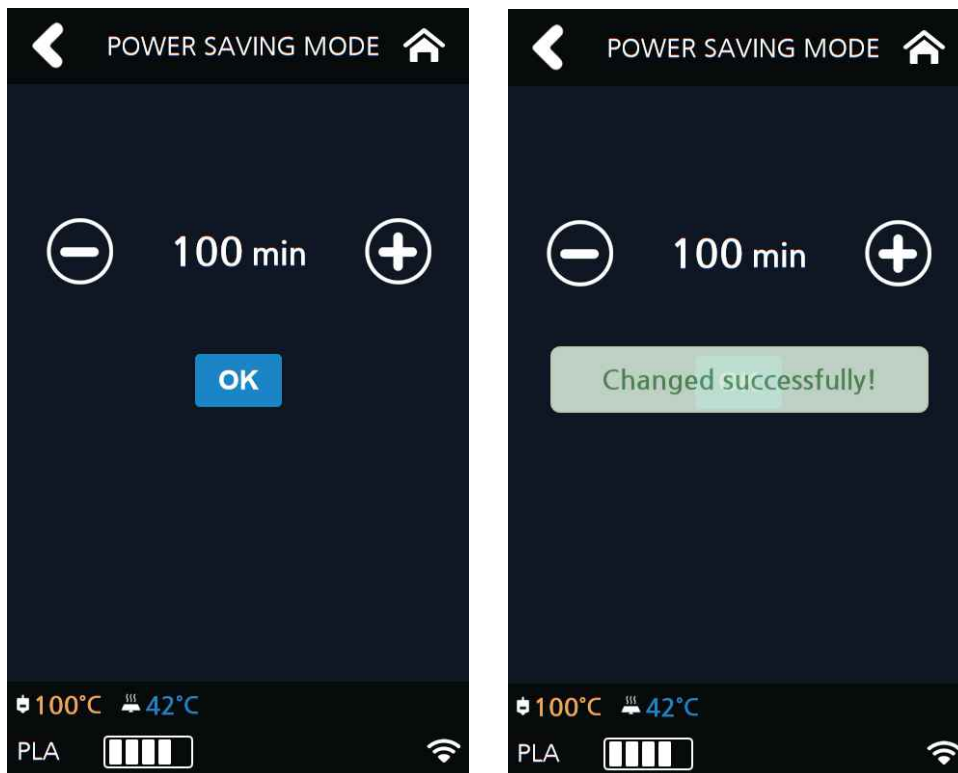


LAMP

Menu to configure settings for machine lamp.


1 From home screen press [SETTING].

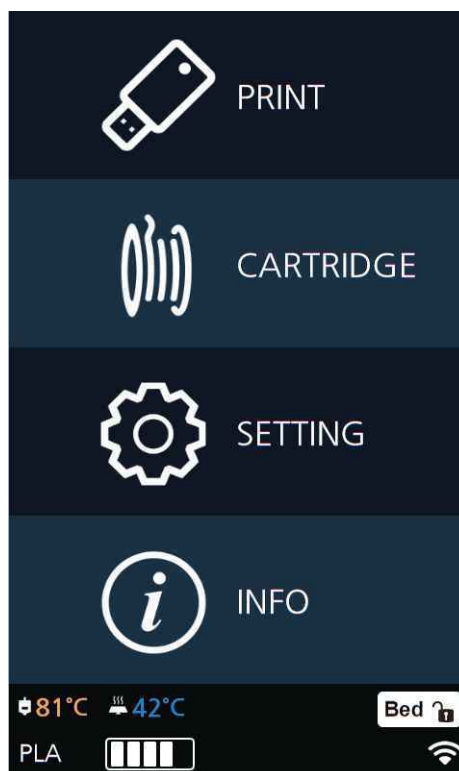

2 Press **[Next]** to enter **[LAMP]** setting screen.

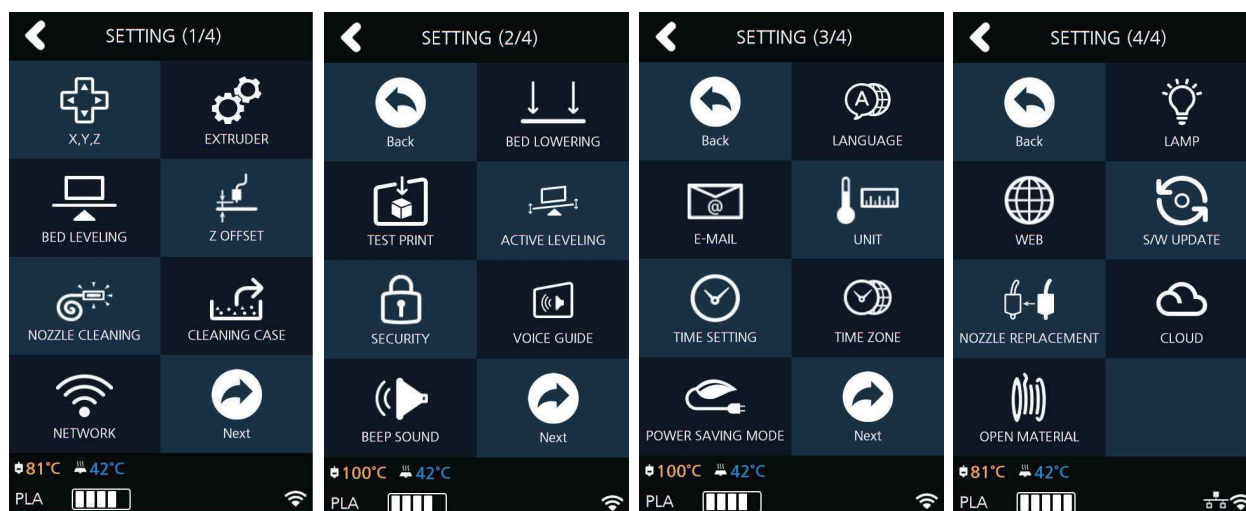

3 Settings available for **[LAMP]** are **[Always On]**, **[Always Off]**, and **[On only in printing]**. Use arrow buttons to select an option and press **[OK]**.

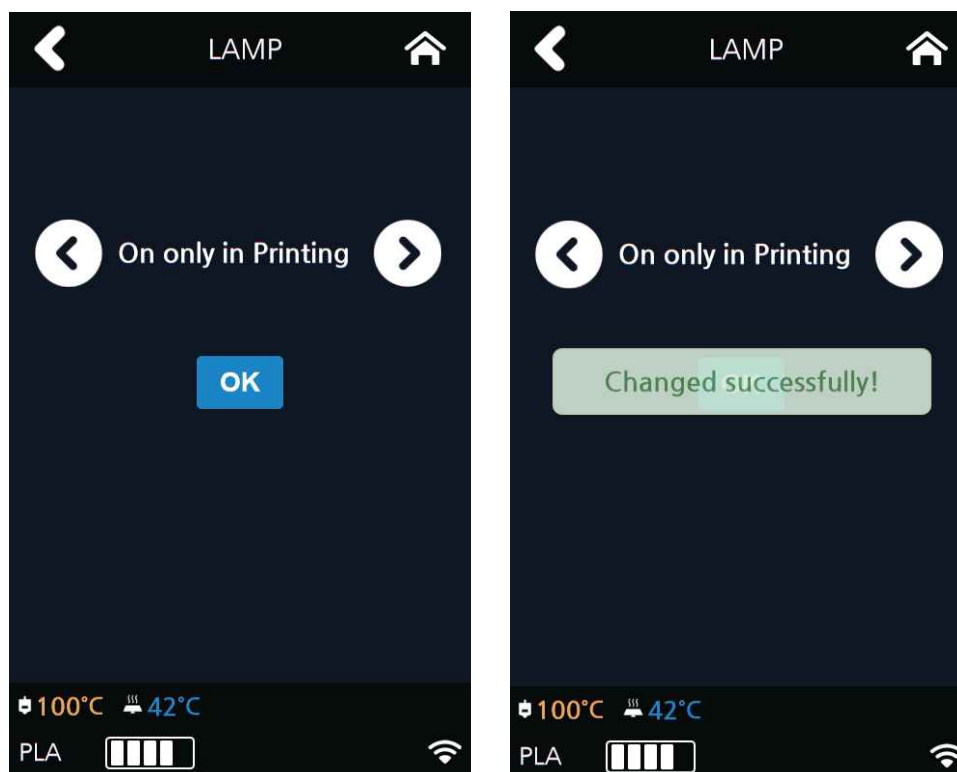


Note

- Lamp will be activated as connecting the Web Monitor.


WEB

While network is connected, I can open the internet browser tab in the Firmware to load 3D Printer homepage.


- 1 From the home screen, enter the settings menus by pressing the **[SETTING]** button.

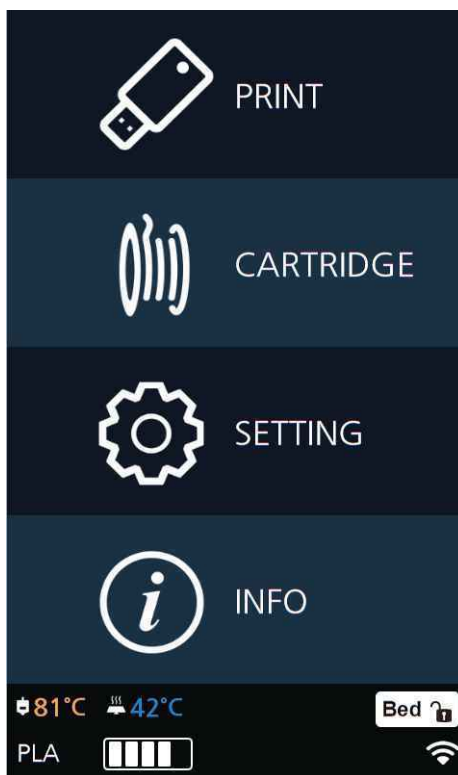

- 2 Press the **[Next]** and enter the **[WEB]** menu.

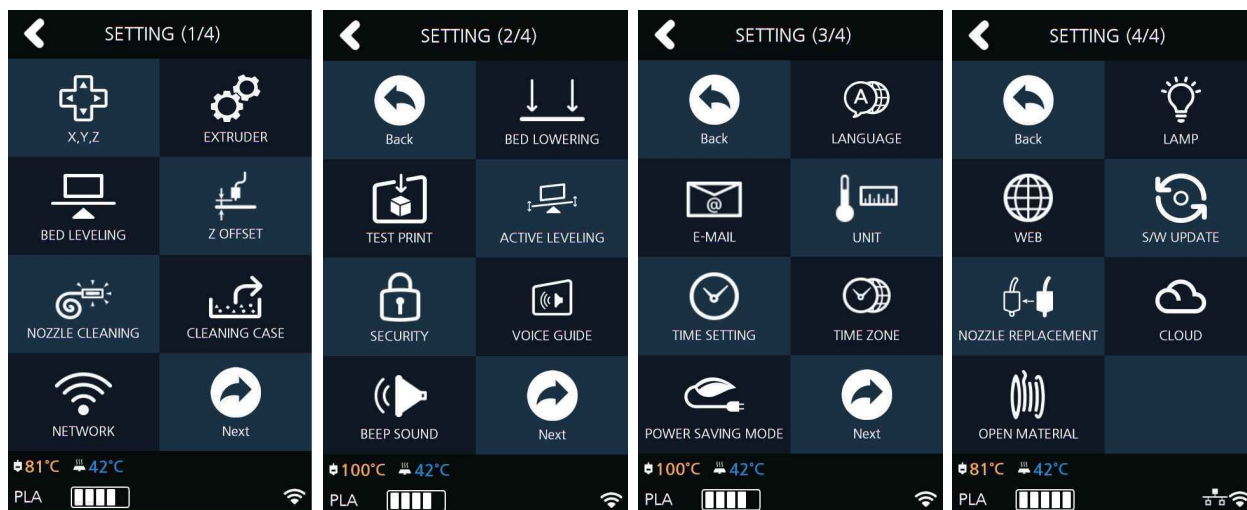


- 3** The 3dprinter homepage will be opened and user can view the information of user preference.
The website address is <http://3dprinter.sindoh.com/>

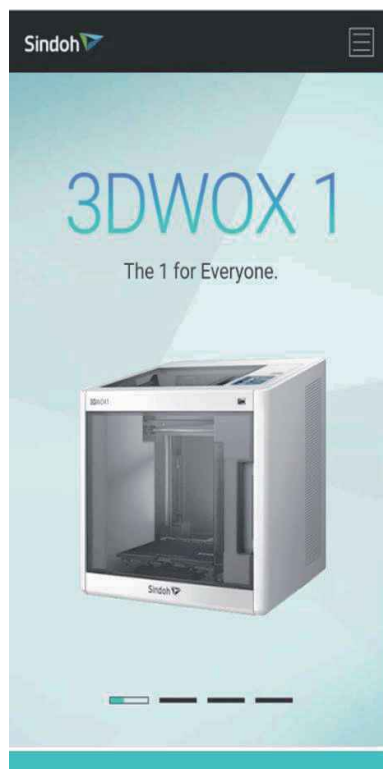

S/W UPDATE


With the printer connected to the internet user is able to download the latest software.

- 1** From the home screen, press **[SETTING]**.

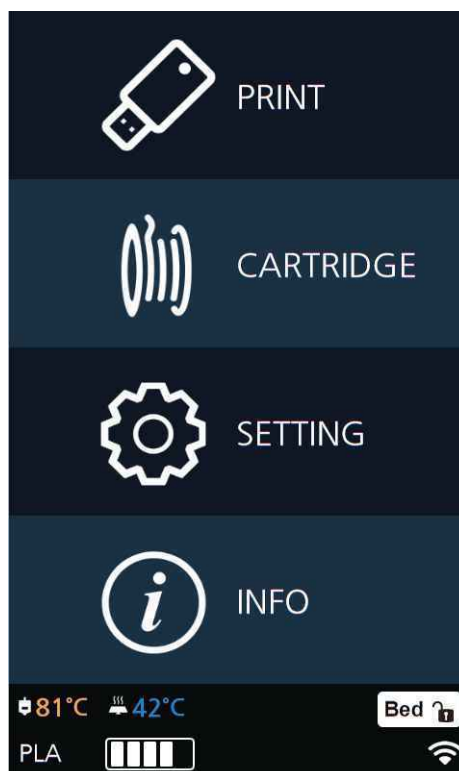


2 UI Menu Function

2 Press [Next] 2 times and select [S/W UPDATE].

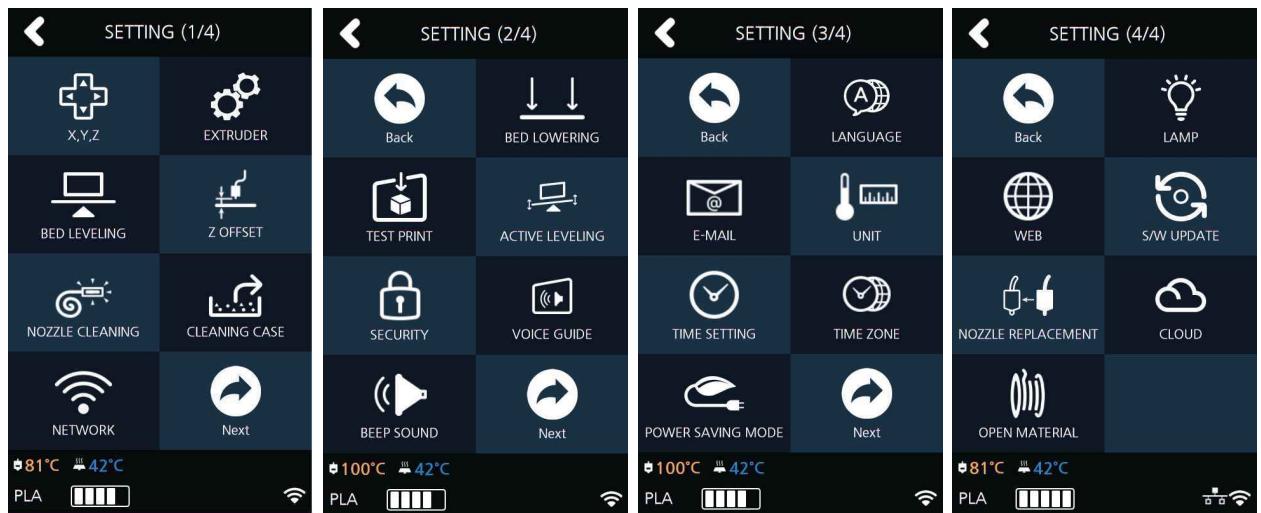


3 Press the [Start Update] button, and printer will start updating. After it has finished, restart the printer and updates will be applied.

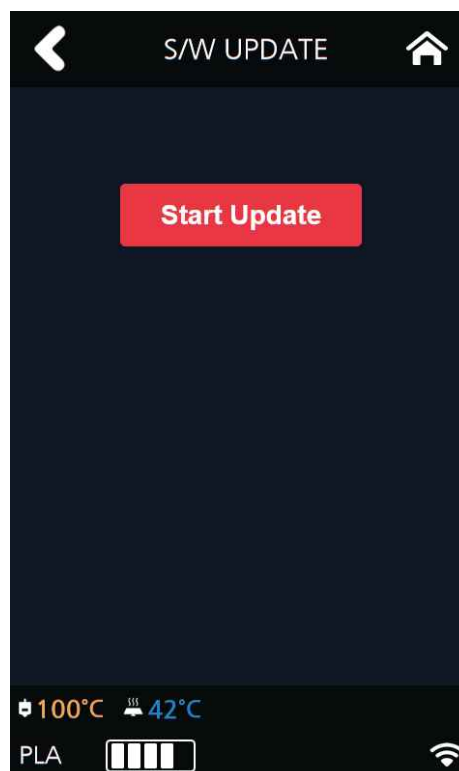


NOZZLE REPLACEMENT

This function is used to replace the nozzle of the machine.

- 1 From home screen press **[SETTING]**.

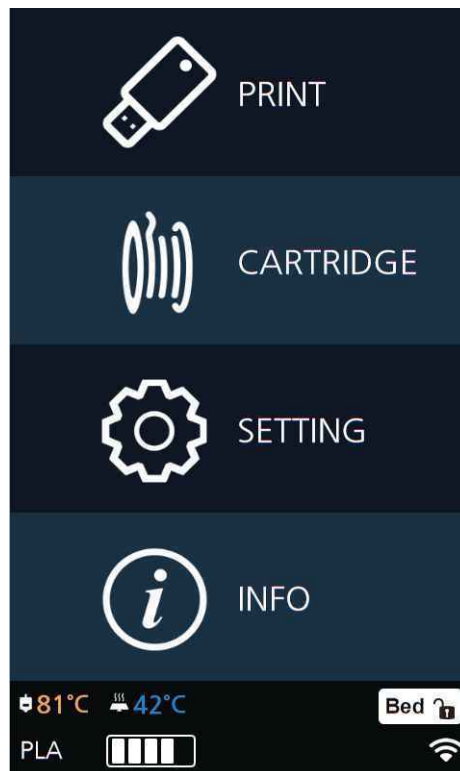


- 2 Press **[NOZZLE REPLACEMENT]** to enter Nozzle Replacement settings.

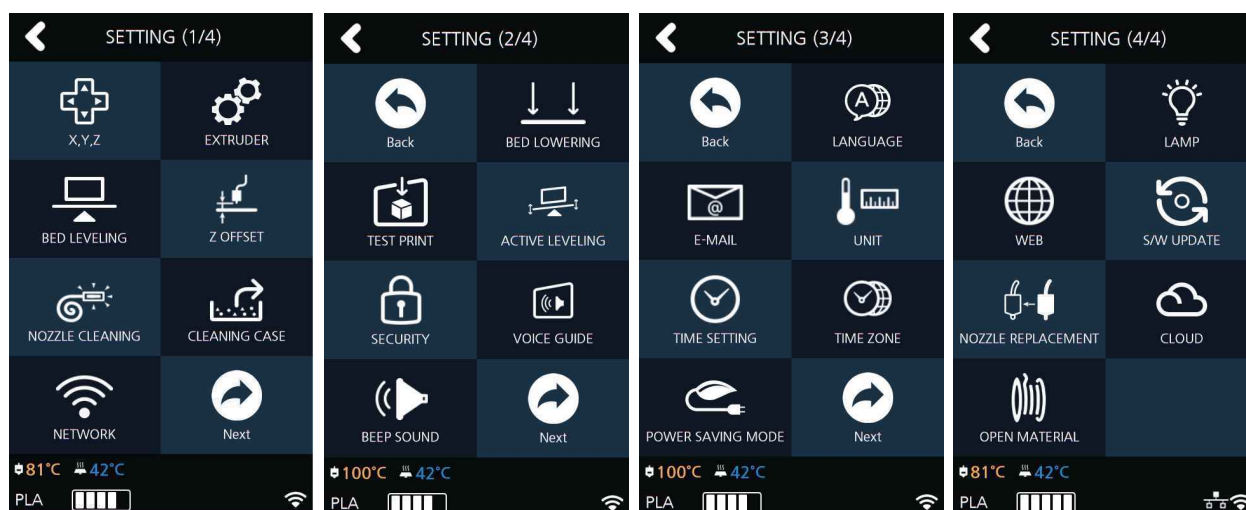


- 3 Press [OK] and perform nozzle replacement.

※ Please proceed unload first.

Nozzle replacement is possible after the filament is unloaded. (See unload 2-5)

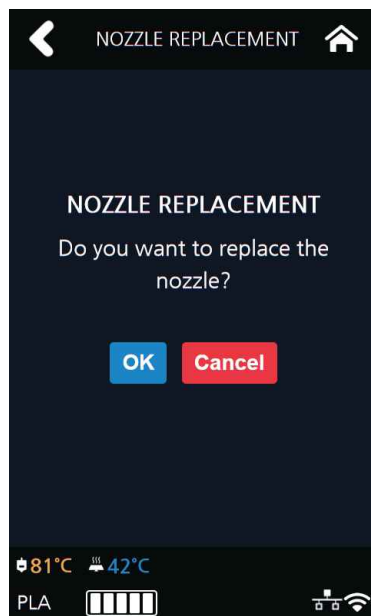


- 4 After completing nozzle replacement, press [OK].

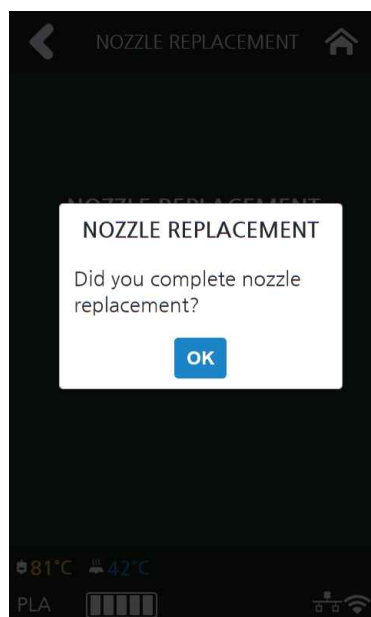


CLOUD

This menu enables you to set up the Cloud menu whether to use the 3D printer or not. The machine will automatically reboot once the Cloud function setting is changed.


- 1 From the home screen, press [SETTING].

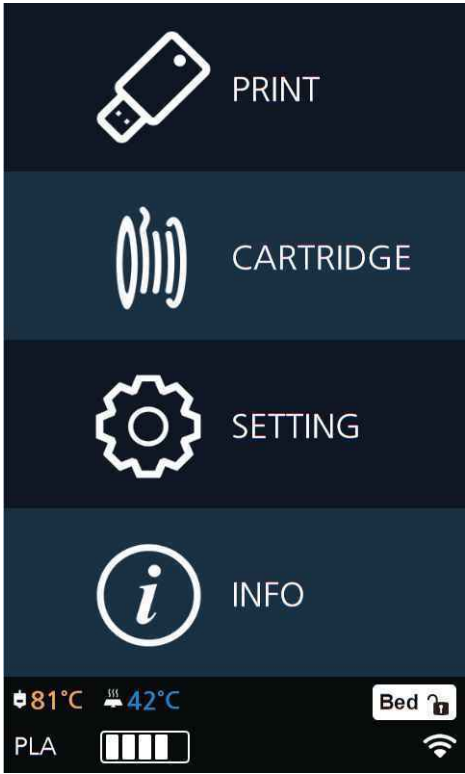

- 2 Press [Next] 3 times and select [CLOUD].

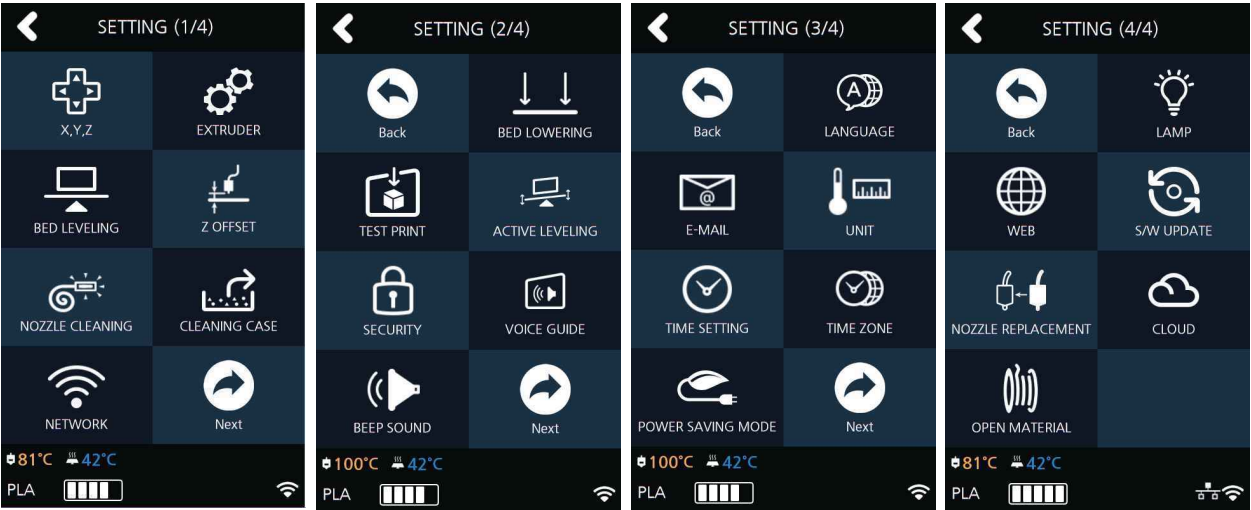

- 3 Select whether to add or remove the function by using the arrow key and then press [OK] to save.

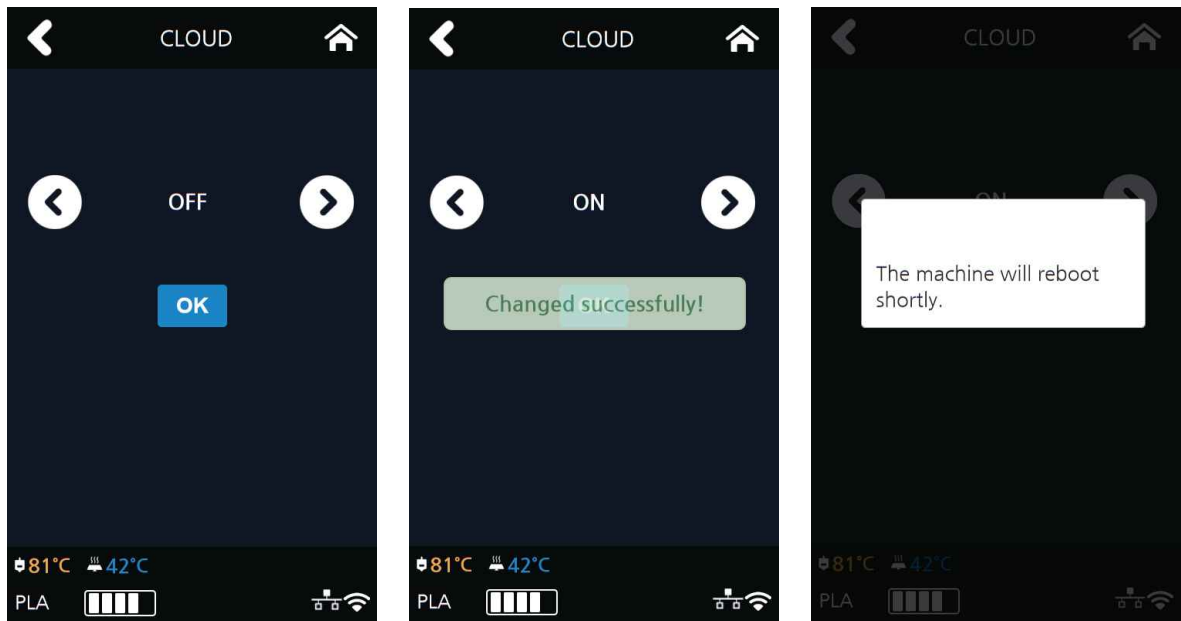

OPEN MATERIAL

The OPEN MATERIAL enables the usage of a third-party filament without any cartridge and smart chip.

In the cartridge mode, the filament is automatically loaded and unloaded in optimal conditions, with our filament and smart chip.

On the other hand, the OPEN MATERIAL requires some manual operations by users for loading and unloading the filament.


Instead, it has the advantage of being able to use a third-party filament.

To use the OPEN MATERIAL, change the machine settings in the following procedure.


Then, follow the UI guide to load the filament.

For “**how to use the slicer in the OPEN MATERIAL**,” refer to the slicer manual in the memory stick.


- 1 Press the [SETTING] button on the Home screen to access settings.

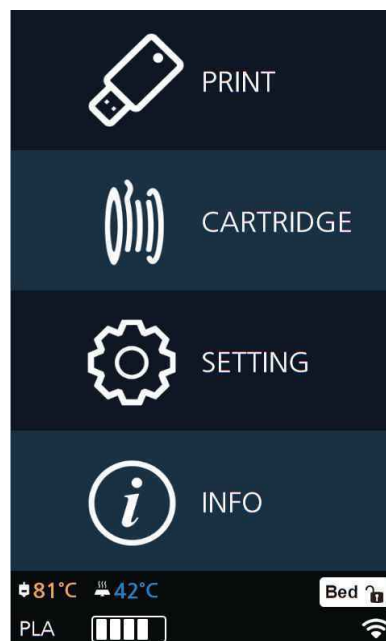


2 Press the **[Next]** button to access the **[OPEN MATERIAL]** screen.

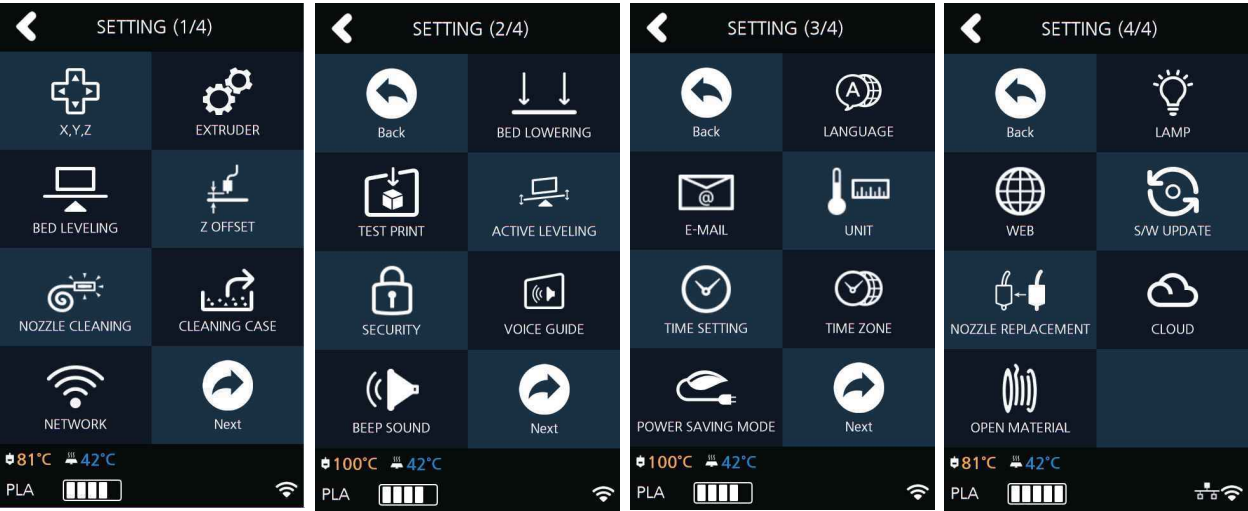

3 Press the arrow to change it to “Done” state and then press the **[OK]** button.

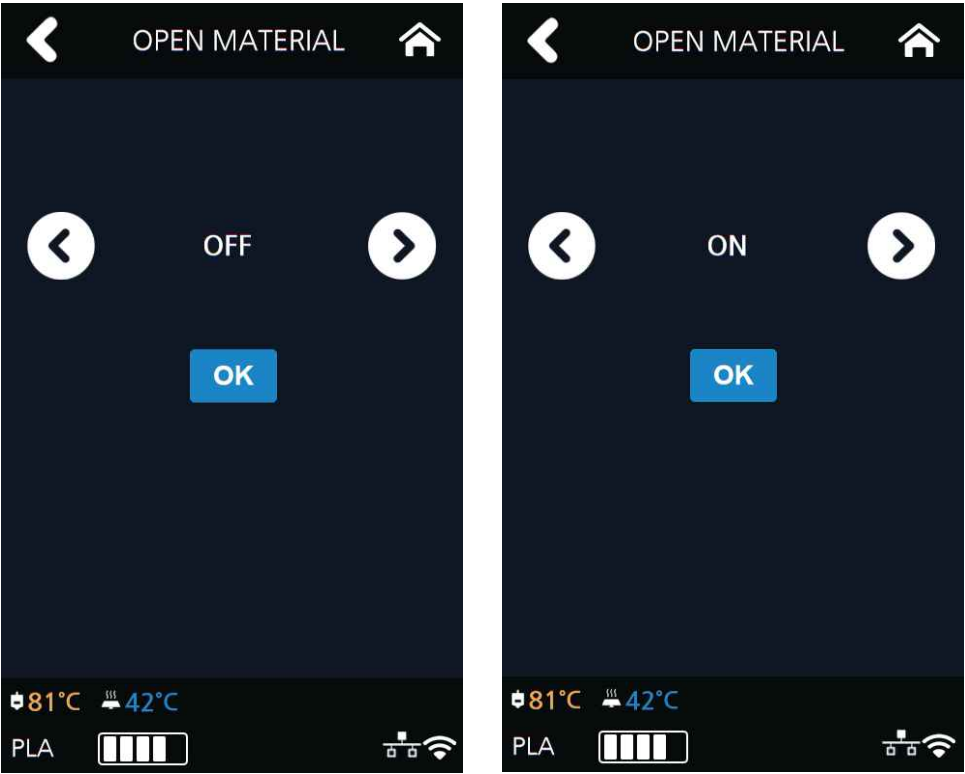


- 4 Read the OPEN MATERIAL guide pop-up and then press the [OK] button.

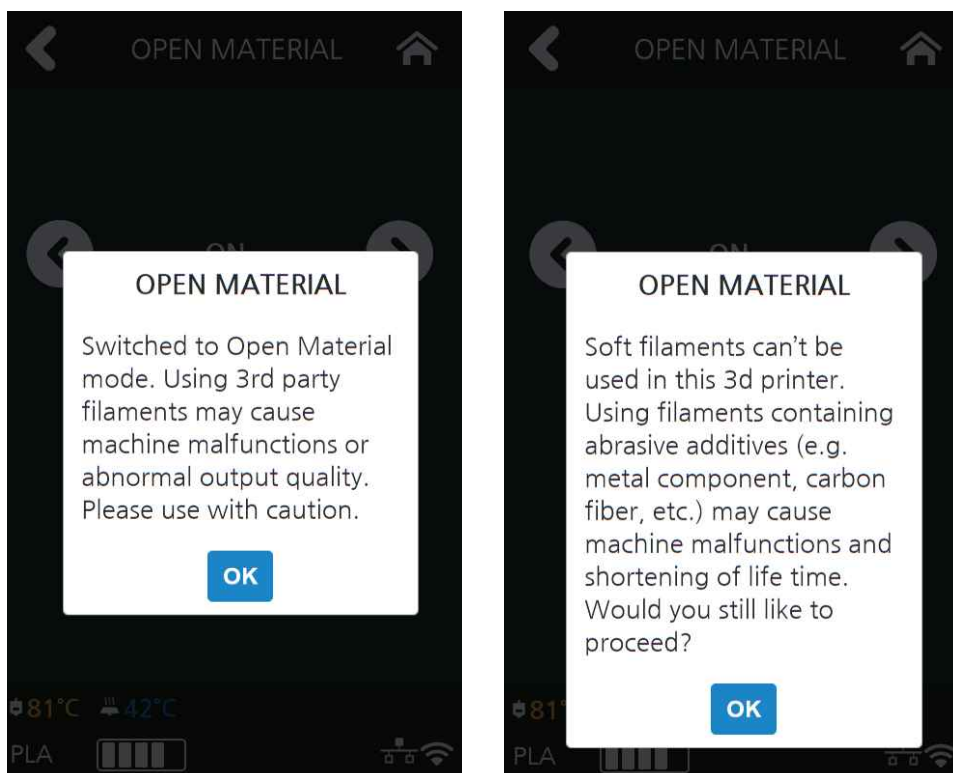

⚠ Caution

- Improper usage of a third-party filament may cause device failure and poor printing quality. Therefore, it is important to create a correct gcode and apply it to a device by fully understanding the characteristics of a third-party filament, including the recommended printing temperature and speed.
- As soft filament with shore hardness of 65 D or less (TPU, TPE, etc.) may cause transfer problem, it is not applicable.
A filament containing abrasive additives (metal component, carbon fiber) may cause transfer problem and reduce the service life of nozzles.
- If a third-party filament has a too large spool, it would not be usable with it inserted.
Make sure that the spool to be used has the width of 67 mm or less and an outer diameter of 213 mm or less.
- When 3rd Party Filament gets all consumed, the filament end sometimes gets stuck in the machine and this tends to cause the filament feeding problem (EC 401). If EC401 occurs, in order to continue printing, please load new filament spool after unloading the left-over filament previously used in the machine.

- 5 “OPEN MATERIAL” is displayed at the bottom of the main screen.

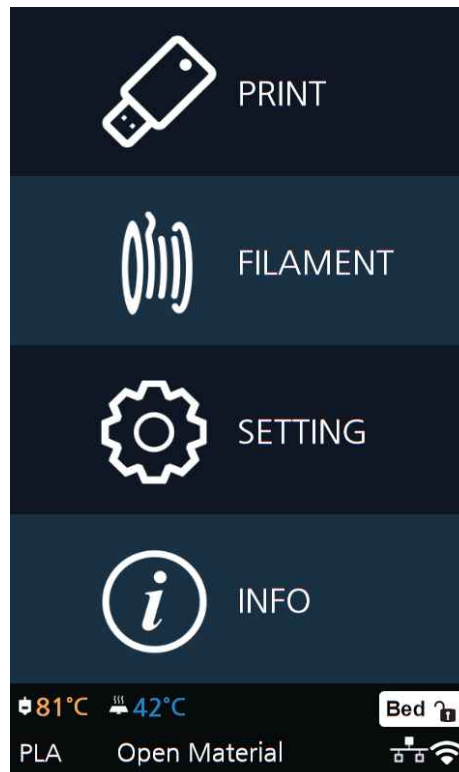

Although the supports open material mode, we recommend the use of Sindoh filament on the printer.

The filament available for use in Open Material Mode is shown below.


Filament	Bed Preparation	Recommended Nozzle Temp(°C)	Recommended Bed Temp(°C)	Remark
PLA	N/A	200	60	Sindoh / 3 rd party
ABS	N/A	230	90	Sindoh / 3 rd party
FLEX	N/A	240	60	Sindoh / 3 rd party
PETG	N/A	230-250	80	3 rd party
ASA	N/A	235-255	110	3 rd party

1.3 Information

INFORMATION	NAME
	CHANGE NAME & PW
	MODEL NAME
	SERIAL NO.
	VERSION
	GUI VER.
	WIRED IP
	WIRED MAC IP
	WIRELESS IP
	WIRELESS MAC IP
	WEB SITE
	GUIDE
	HISTORY

In this menu user is able to view the detail information of the printer, and set device name & password. In **[HISTORY]** screen, user is able to view all the records of past works.




- 1 From home screen, press **[INFO]**.

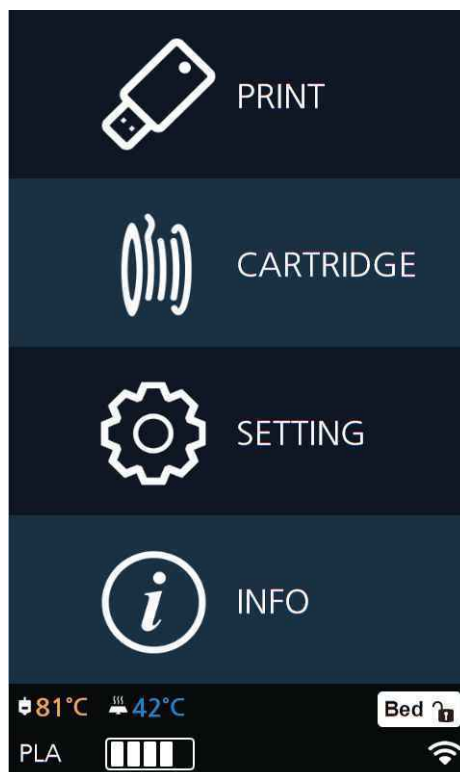

- 2 To set password and name for printer, select **[Change Name & PW]**.




- 3 By entering the password, you can edit name and set a new password. Pressing **[OK]** saves the changes.

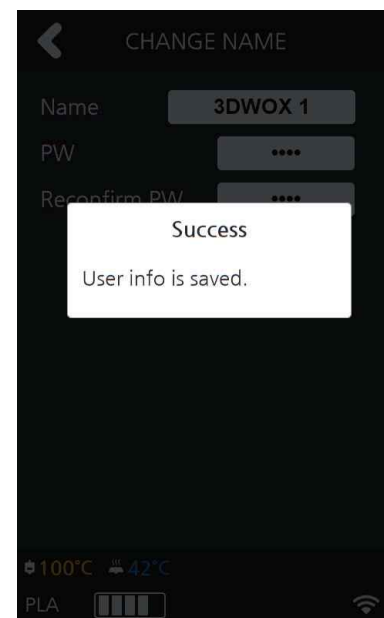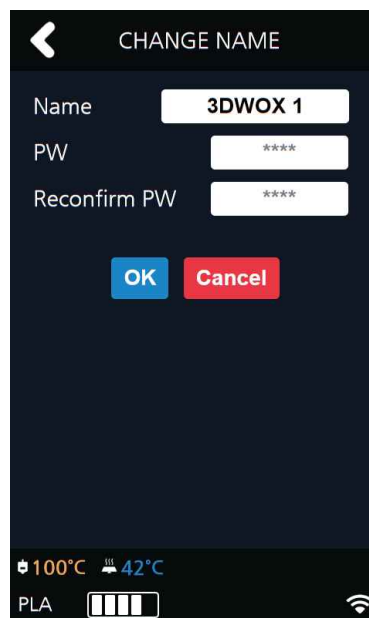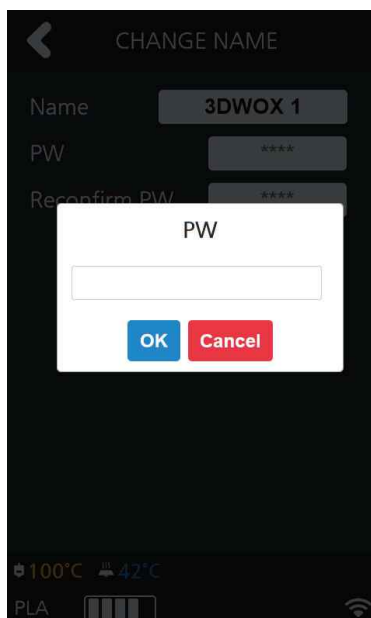

Reference

- *Initial password is '0000'.

- 4 In [INFO] screen, press [Guide] to access to the "Quick Guide" for the printer.

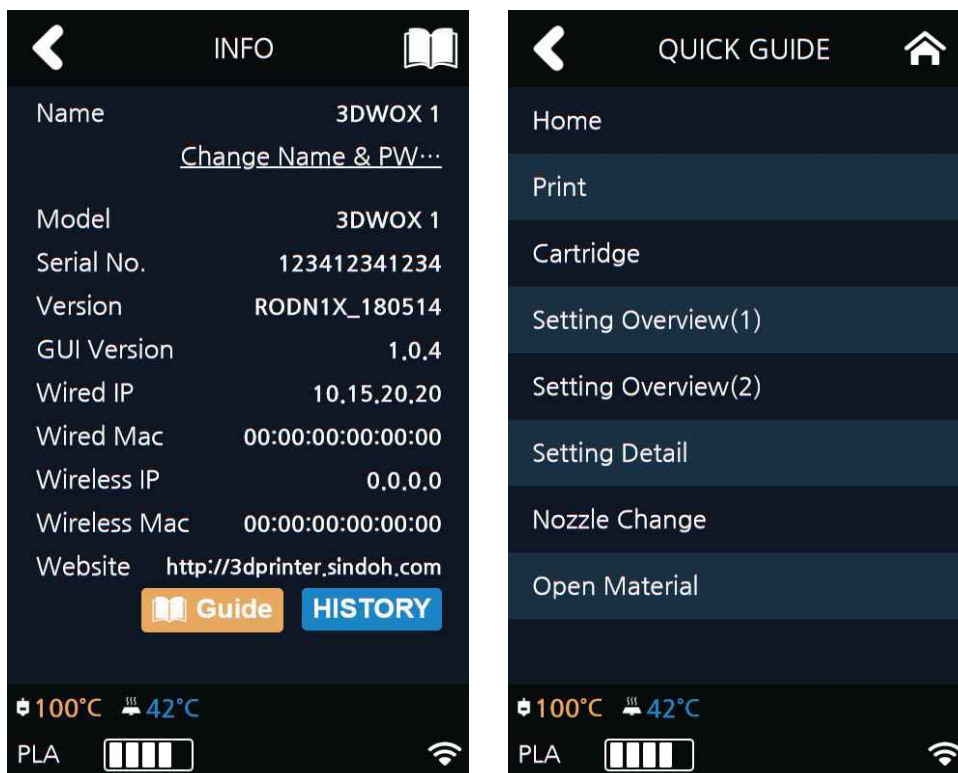

- 5 In addition, the [Info] screen allows you to view various other information such as the model name of the device and the model serial number.